



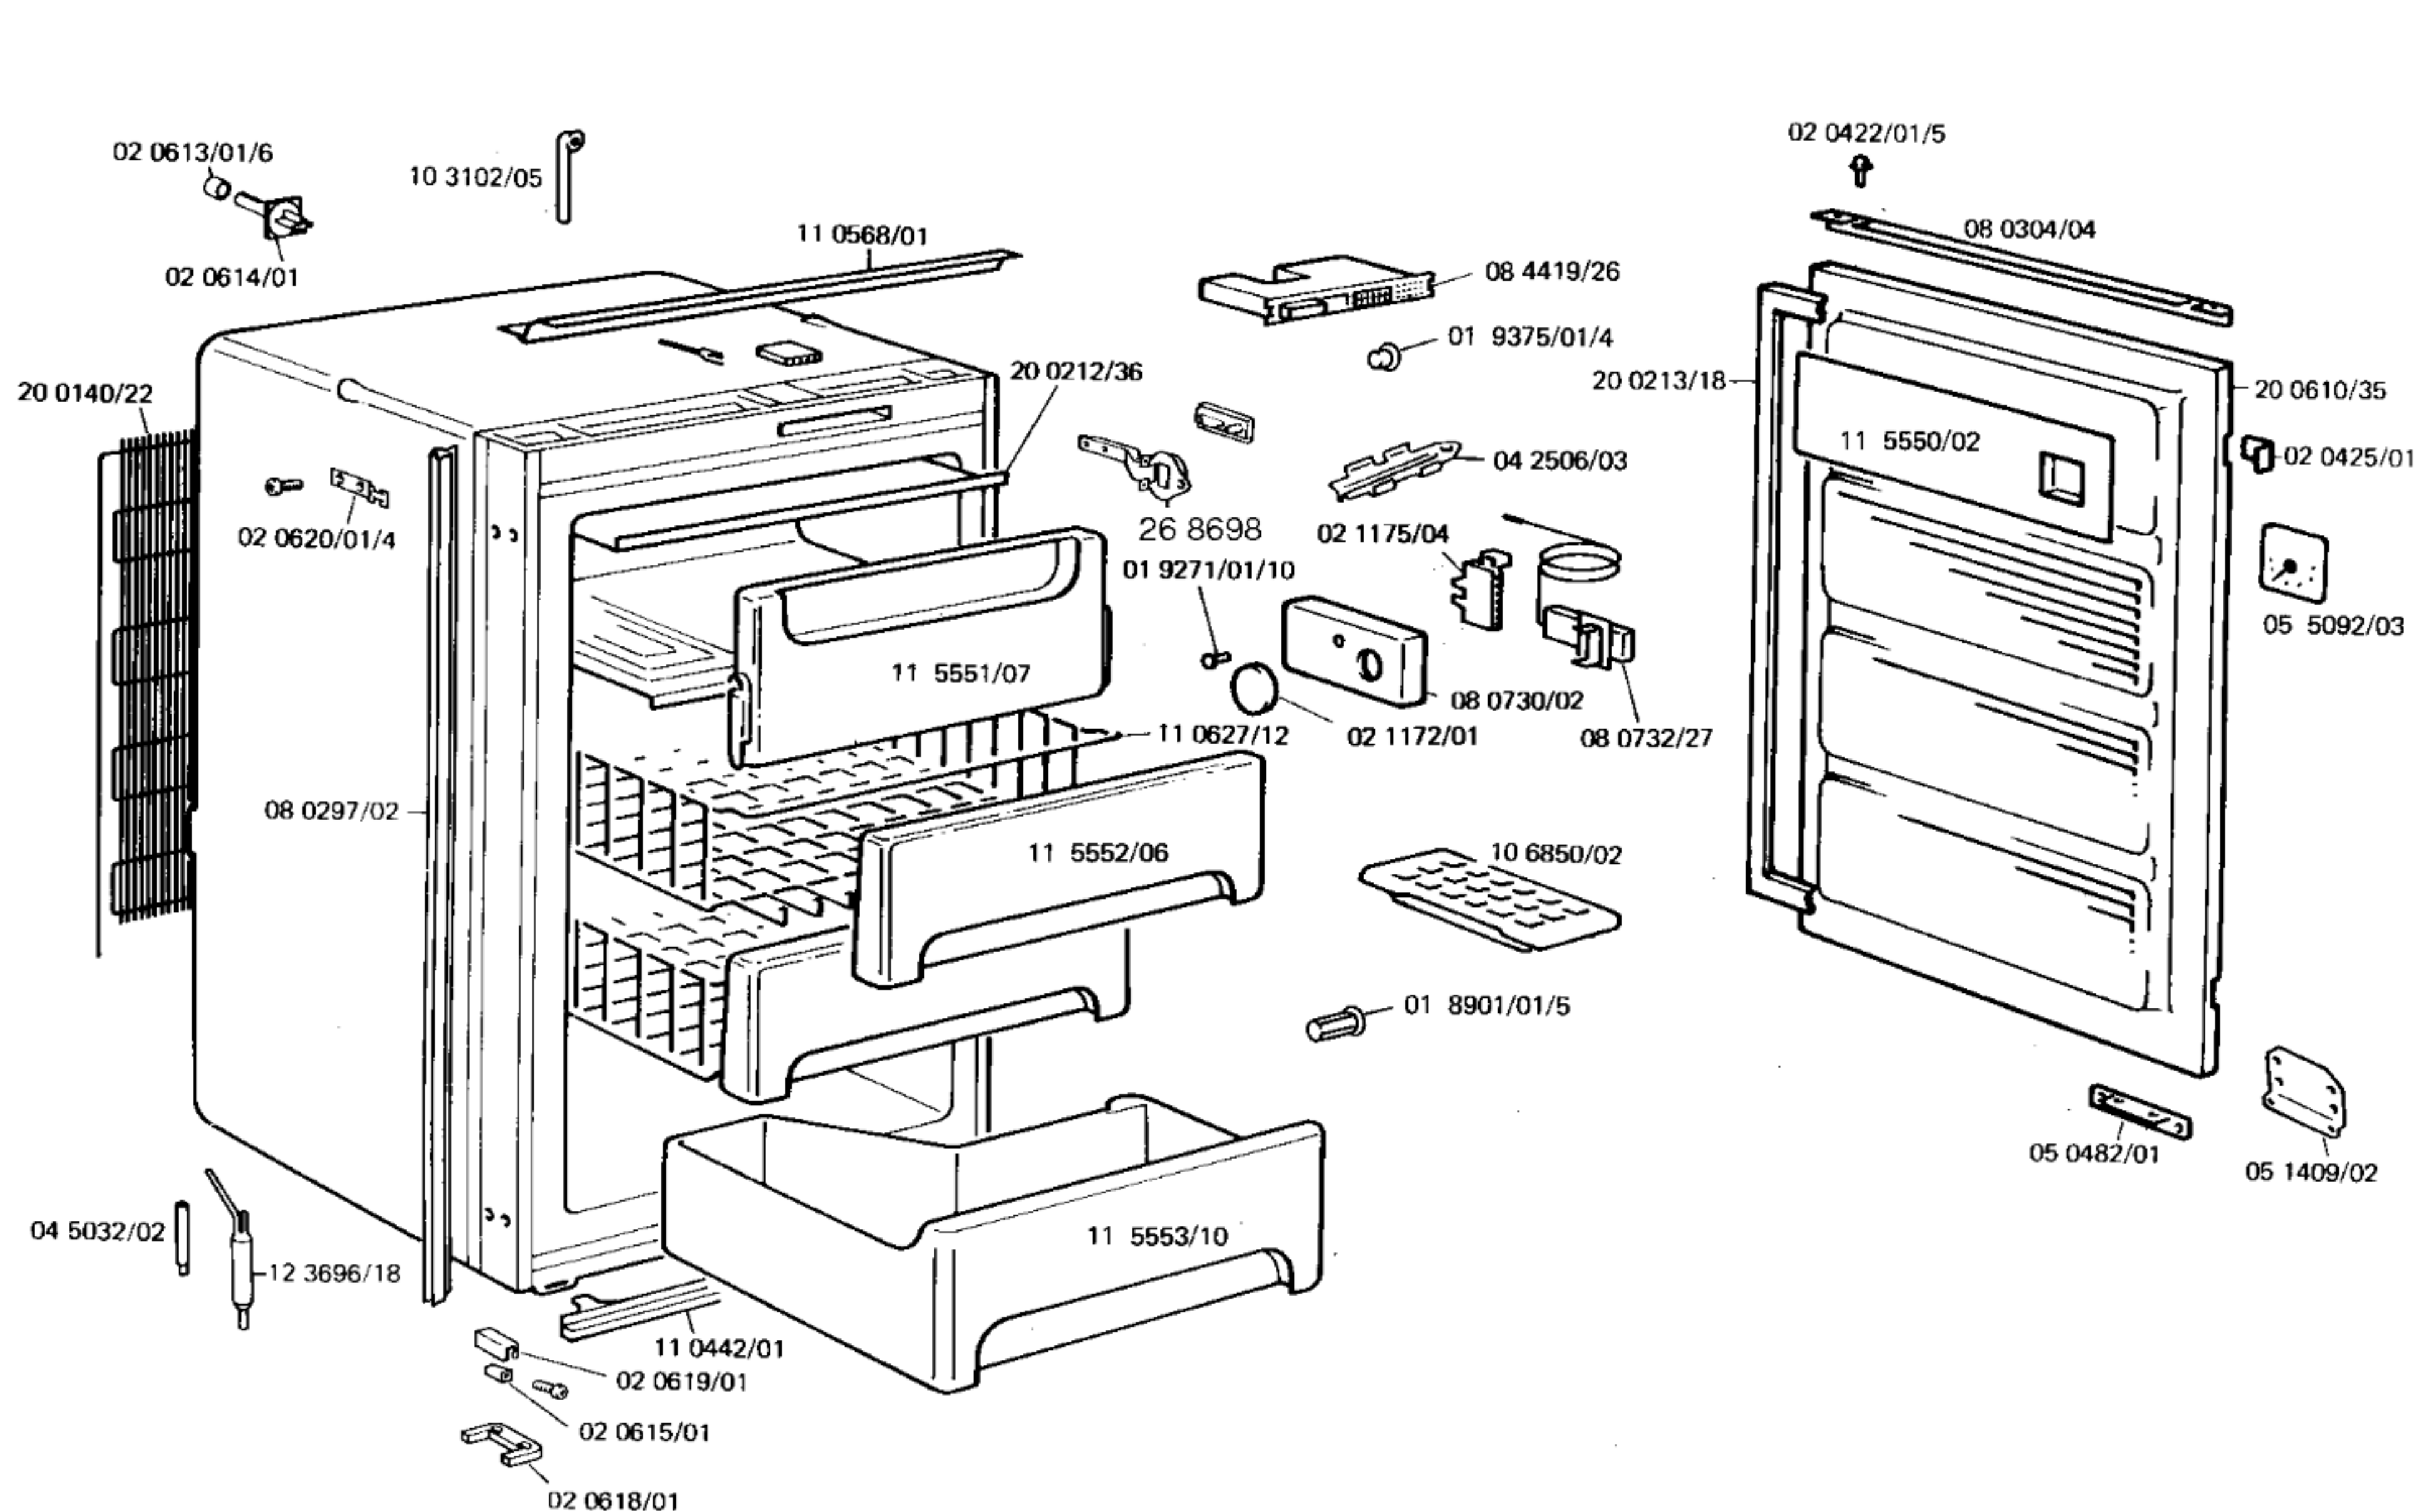

51 2320/00
D1
Aufstellanleitung
(D, G8, F, I, NL,
DK, N, S, SF, E)
51 2314/00
D1
Gebrauchsanweisung
(D)

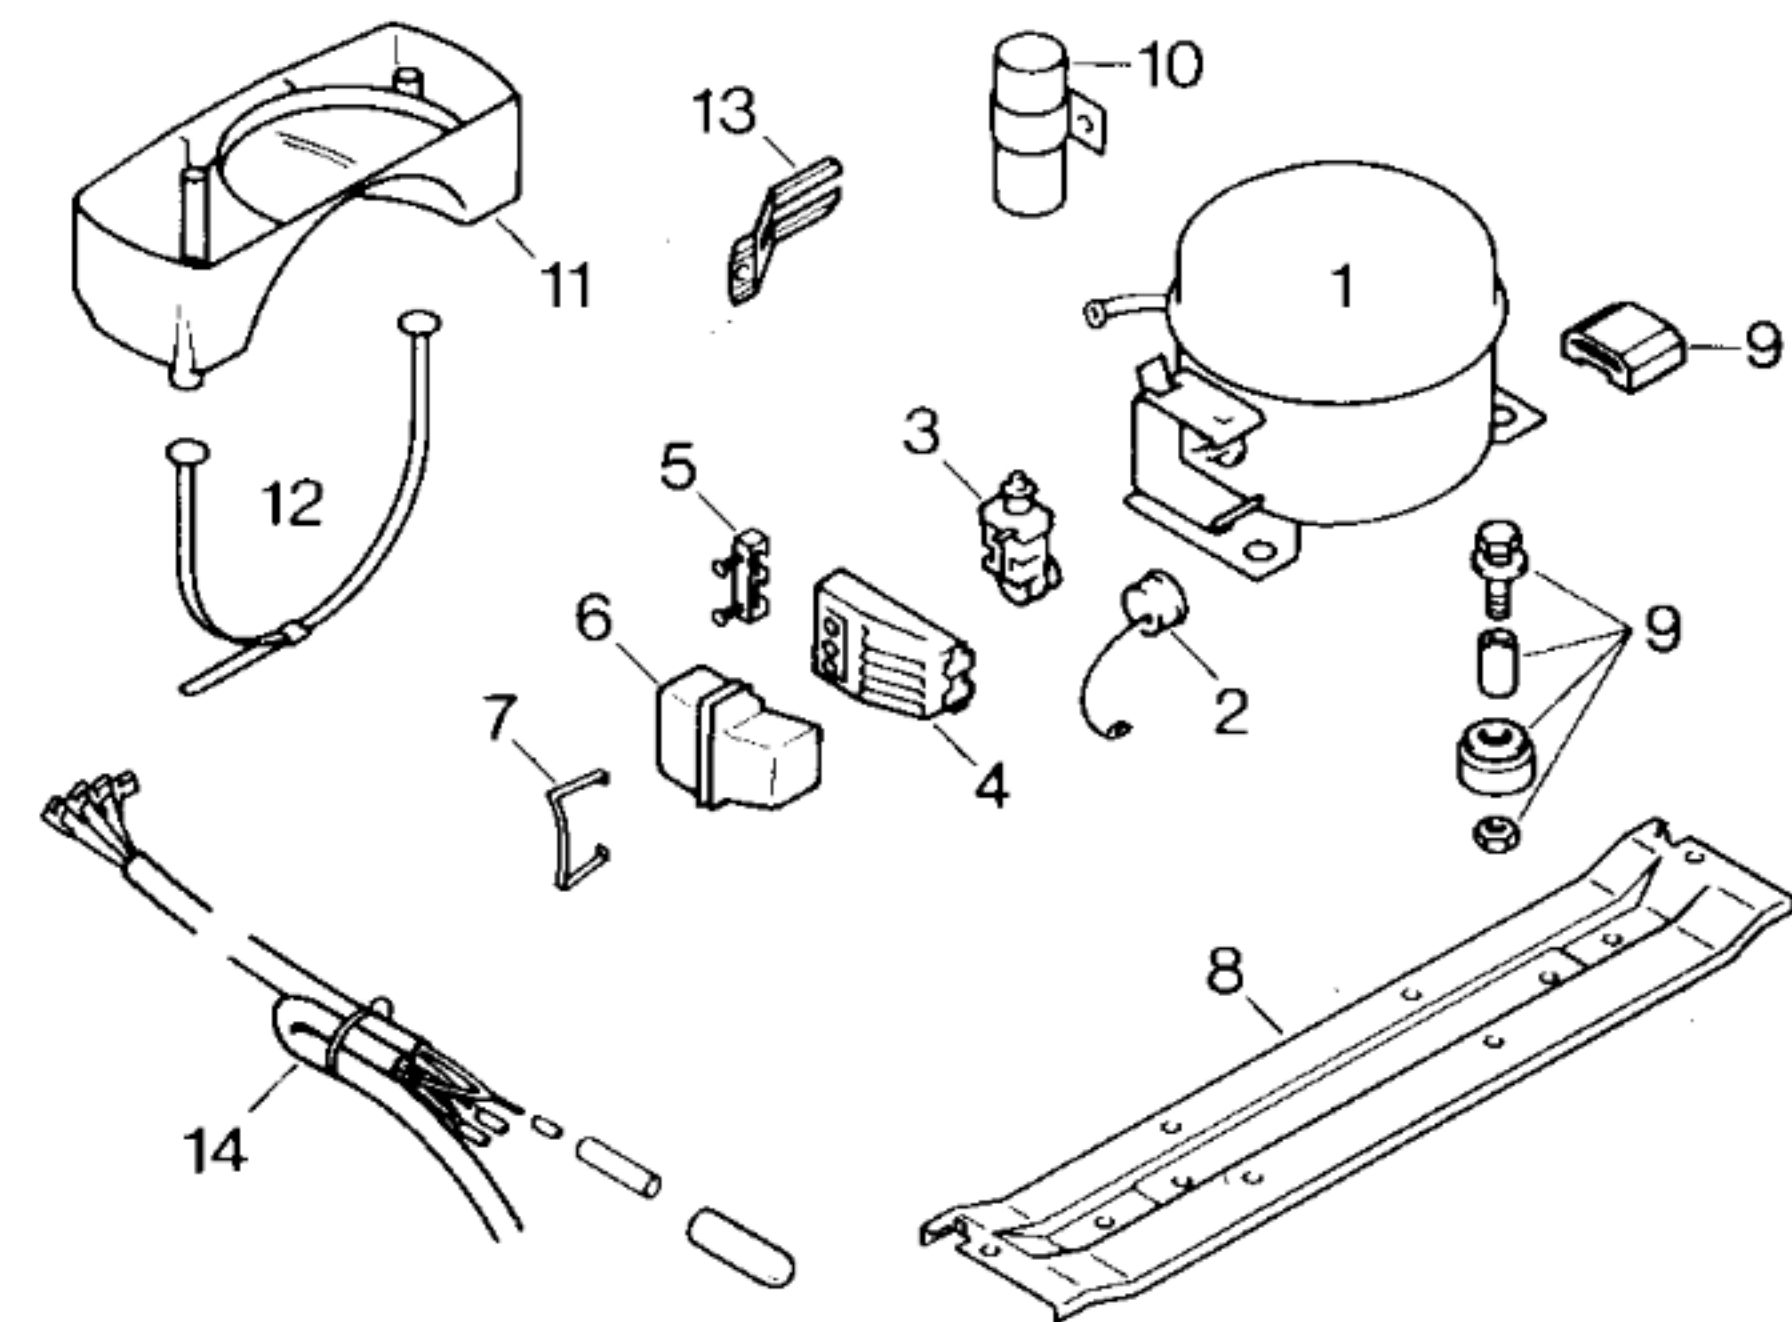

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 5		
Förderleistung/Delivery/Débit		V 920		
Anlaufstrom/Starting current/Cour. de démarrage		A 9,0		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω 15,7		
		Hi/aux Ω 18,8		
Temp.-Regler/Thermostat		M + J		
Typ/Type		TF 57 SF		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)		„ein“ $^{\circ}\text{C}$ - 28 - 19		
		„aus“ - 34 - 26		
		„alarm“ - 20 - 15		
Füllmenge/Fill.quantity/Charge		R12 g 90		
Anschlußwert/Conn.load/Puiss. connectée		W 120		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

Pos.	Danfoss			
1	14 0065/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				