


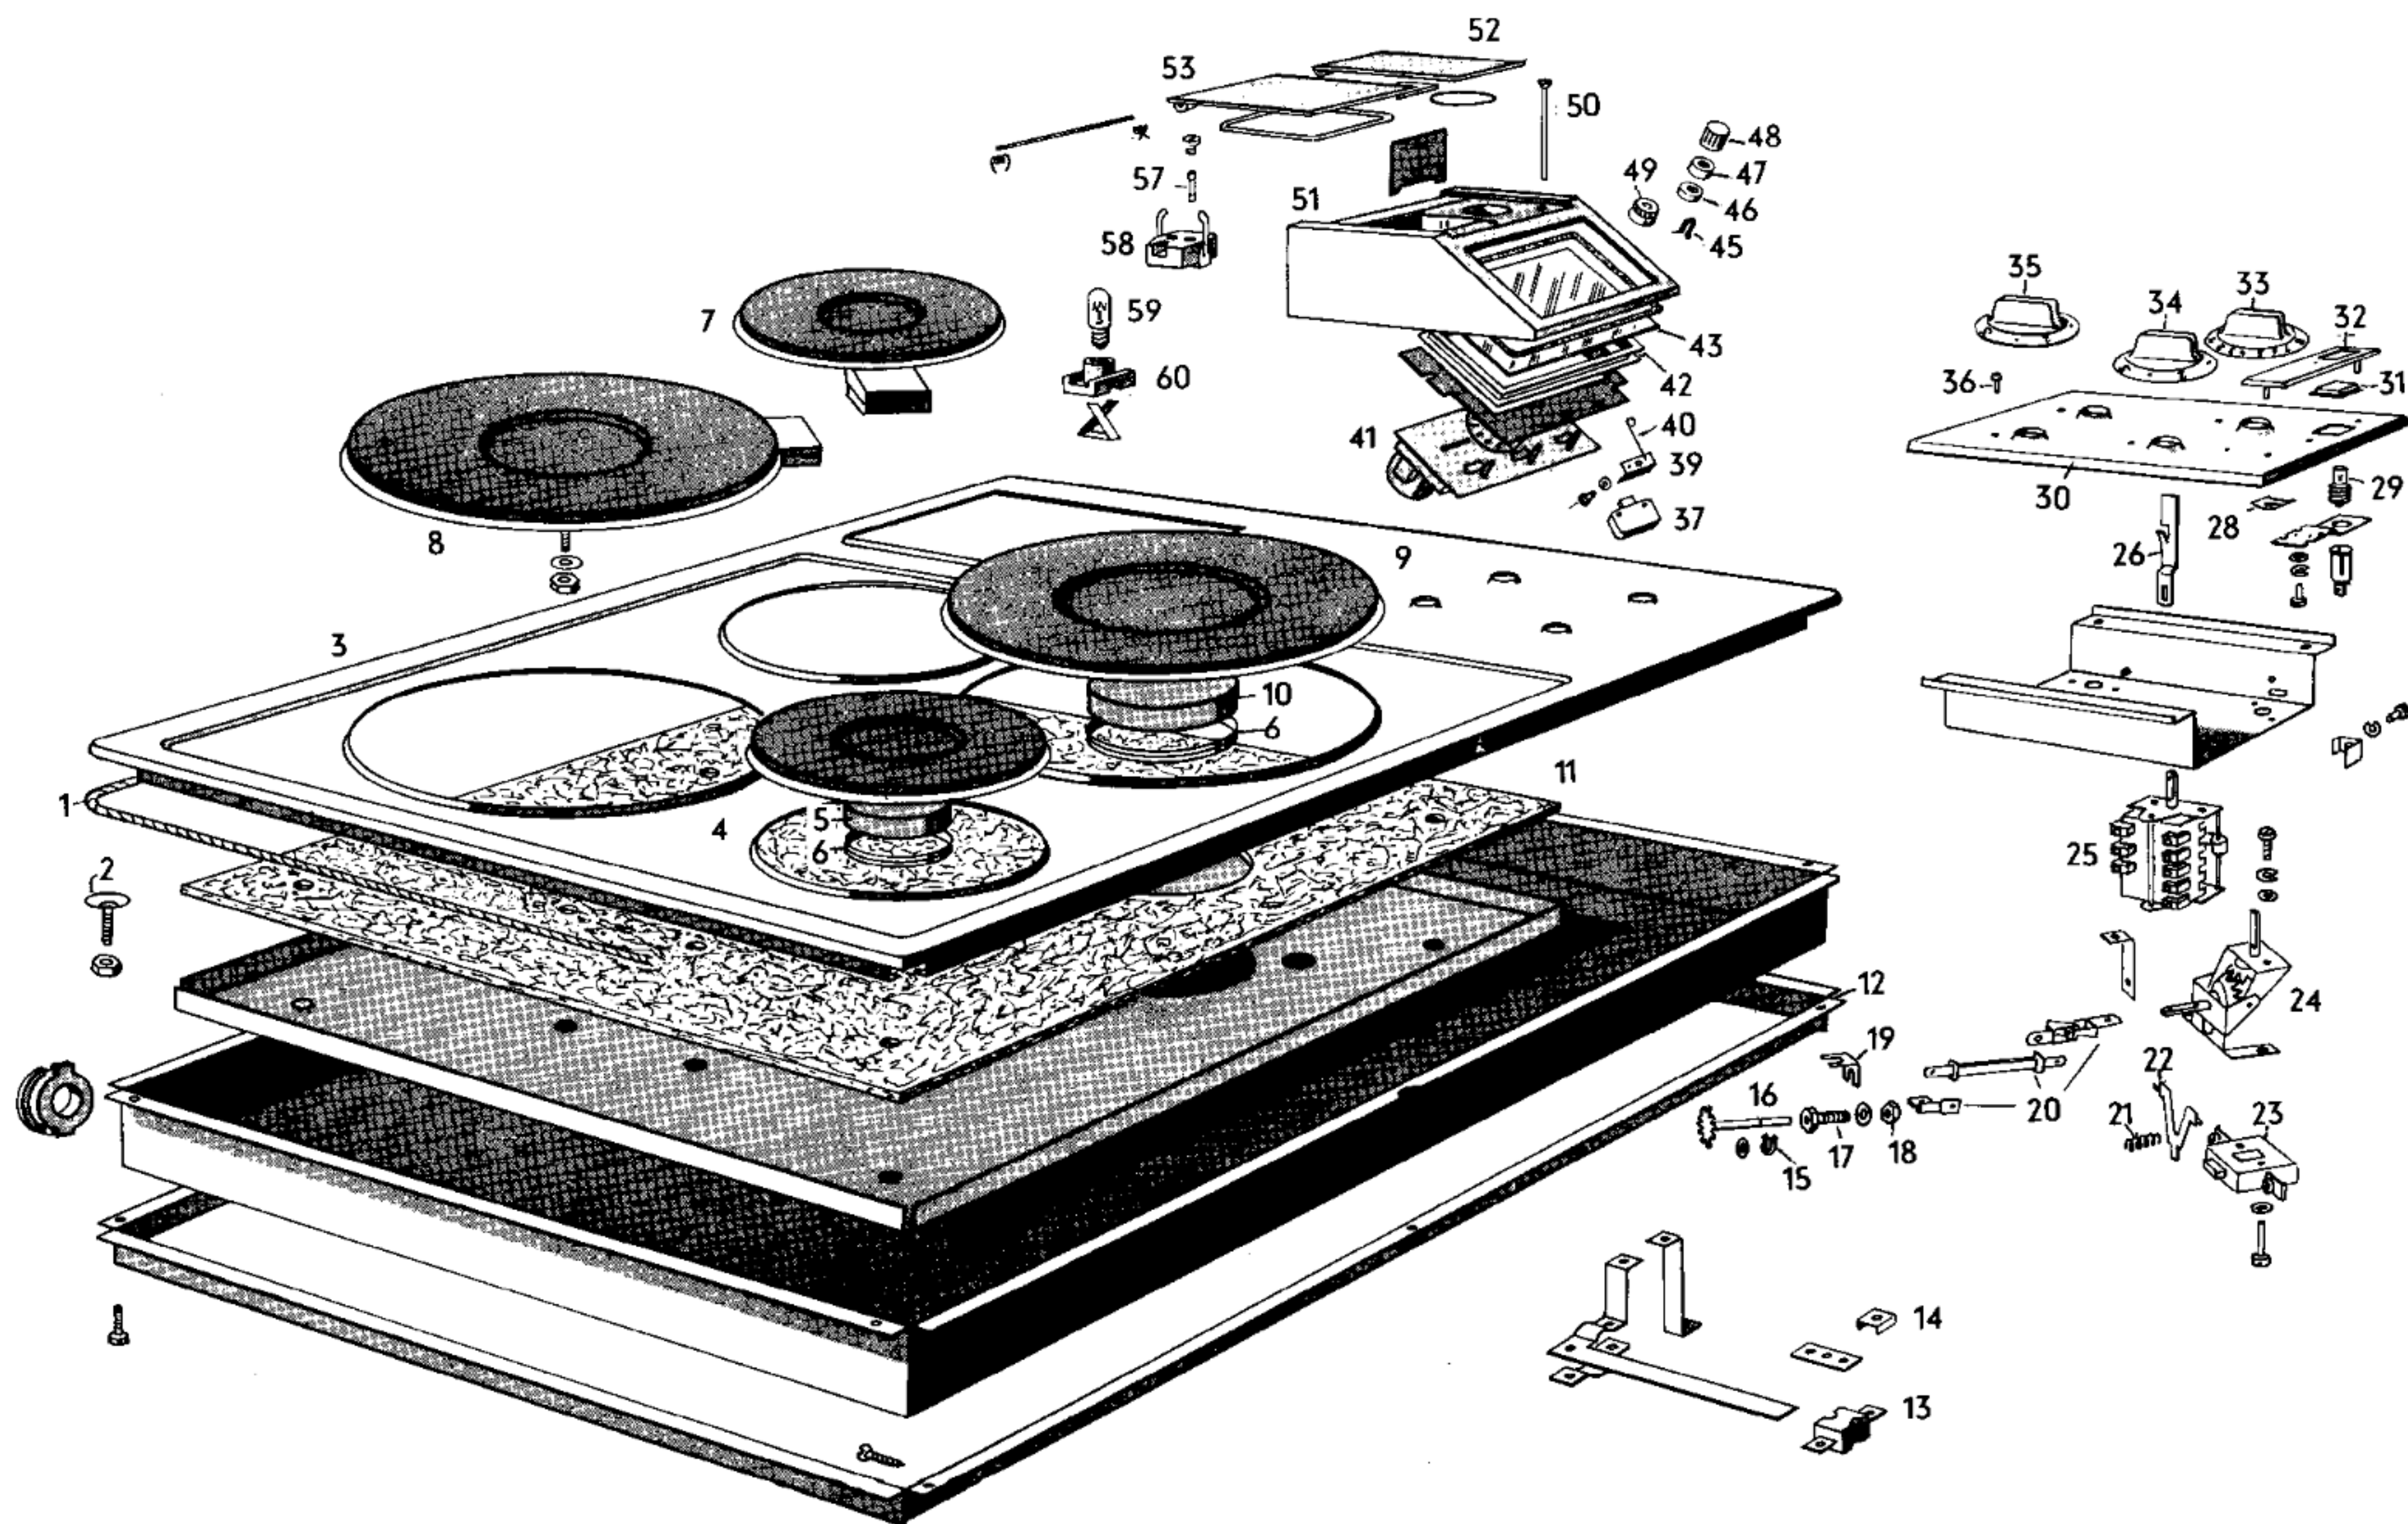

EM 7450 und EM 7464

1	04 2480/05	18	01 1520/06/20	49	04 2718/02
2	01 1517/12/6	19	04 1401/02/5		
3 a	19 0641/32 für EM 74 50	20 a	10 2126/10 zu Pos. 4	51	10 2125/27
b	19 0918/32 für EM 74 64	b	10 2128/12 zu Pos. 9 b	52	04 2486/10
4	07 1359/25 Regl.-Kochplatte (YH 1) 14,5 ϕ , 1500 W, 220 V für EM 74 64	21	01 1131/02/10	53	04 2485/09
5	07 1360/27 Kochpl.-Regler (YH 2)	22	01 1132/02/6		
6	04 0052/02/5	23	07 1048/05		
7	Kochplatte 14,5 ϕ , 1000 W	24 a	10 2122/16 zu Pos. 4		
a	07 0068/22 220 V	b	10 2124/16 zu Pos. 9 b	57	04 5043/02/2
		25	07 1374/19	58	07 1684/10
c	07 0070/24 380 V	26	10 2123/02/4 für EM 74 50 und 74 64	59	04 3834/05 7 W, 220 V
8	Kochplatte 18 ϕ , 1500 W	27	04 0035/04	59 b	04 5202/08 Signalleuchte gelb, 220 V
a	07 0071/25 220 V	28	04 1061/03/30	59 c	01 2019/04/10 Spannfeder
		29	07 0034/03		
c	07 0077/25 380 V	31	01 1503/04/5		
9 a	07 0087/28 Blitzkochplatte für EM 74 50 18 ϕ , 2000 W, 220 V	32	04 1380/02		
b	07 0198/25 Regl.-Kochplatte für EM 74 64 (YH 3) 18 ϕ , 2100 W, 220 V	34 a	04 4114/04 Schaltergriff mit roter 3		
c	10 1810/06 Abdeckung	34 b	04 3448/08/2 grau		
10	07 0184/32 Kochpl.-Regler (YH 4)	35	04 3447/08/2		
11 a	10 1081/05 für EM 74 50	Ersatzteile für EM 7464			
b	10 2121/08 für EM 74 64	37	07 1682/03		
12	19 0592/16	40	01 1835/02/5		
13	07 0058/07/6	41	07 2638/36 Zeitschaltuhr		
15	01 1518/07/100	42	10 1373/08		
16	04 0057/03	43	10 1466/06		
17	01 1519/02	45	01 2192/02/10		
		46	01 2028/03/10		
		48	04 1753/02/2		