





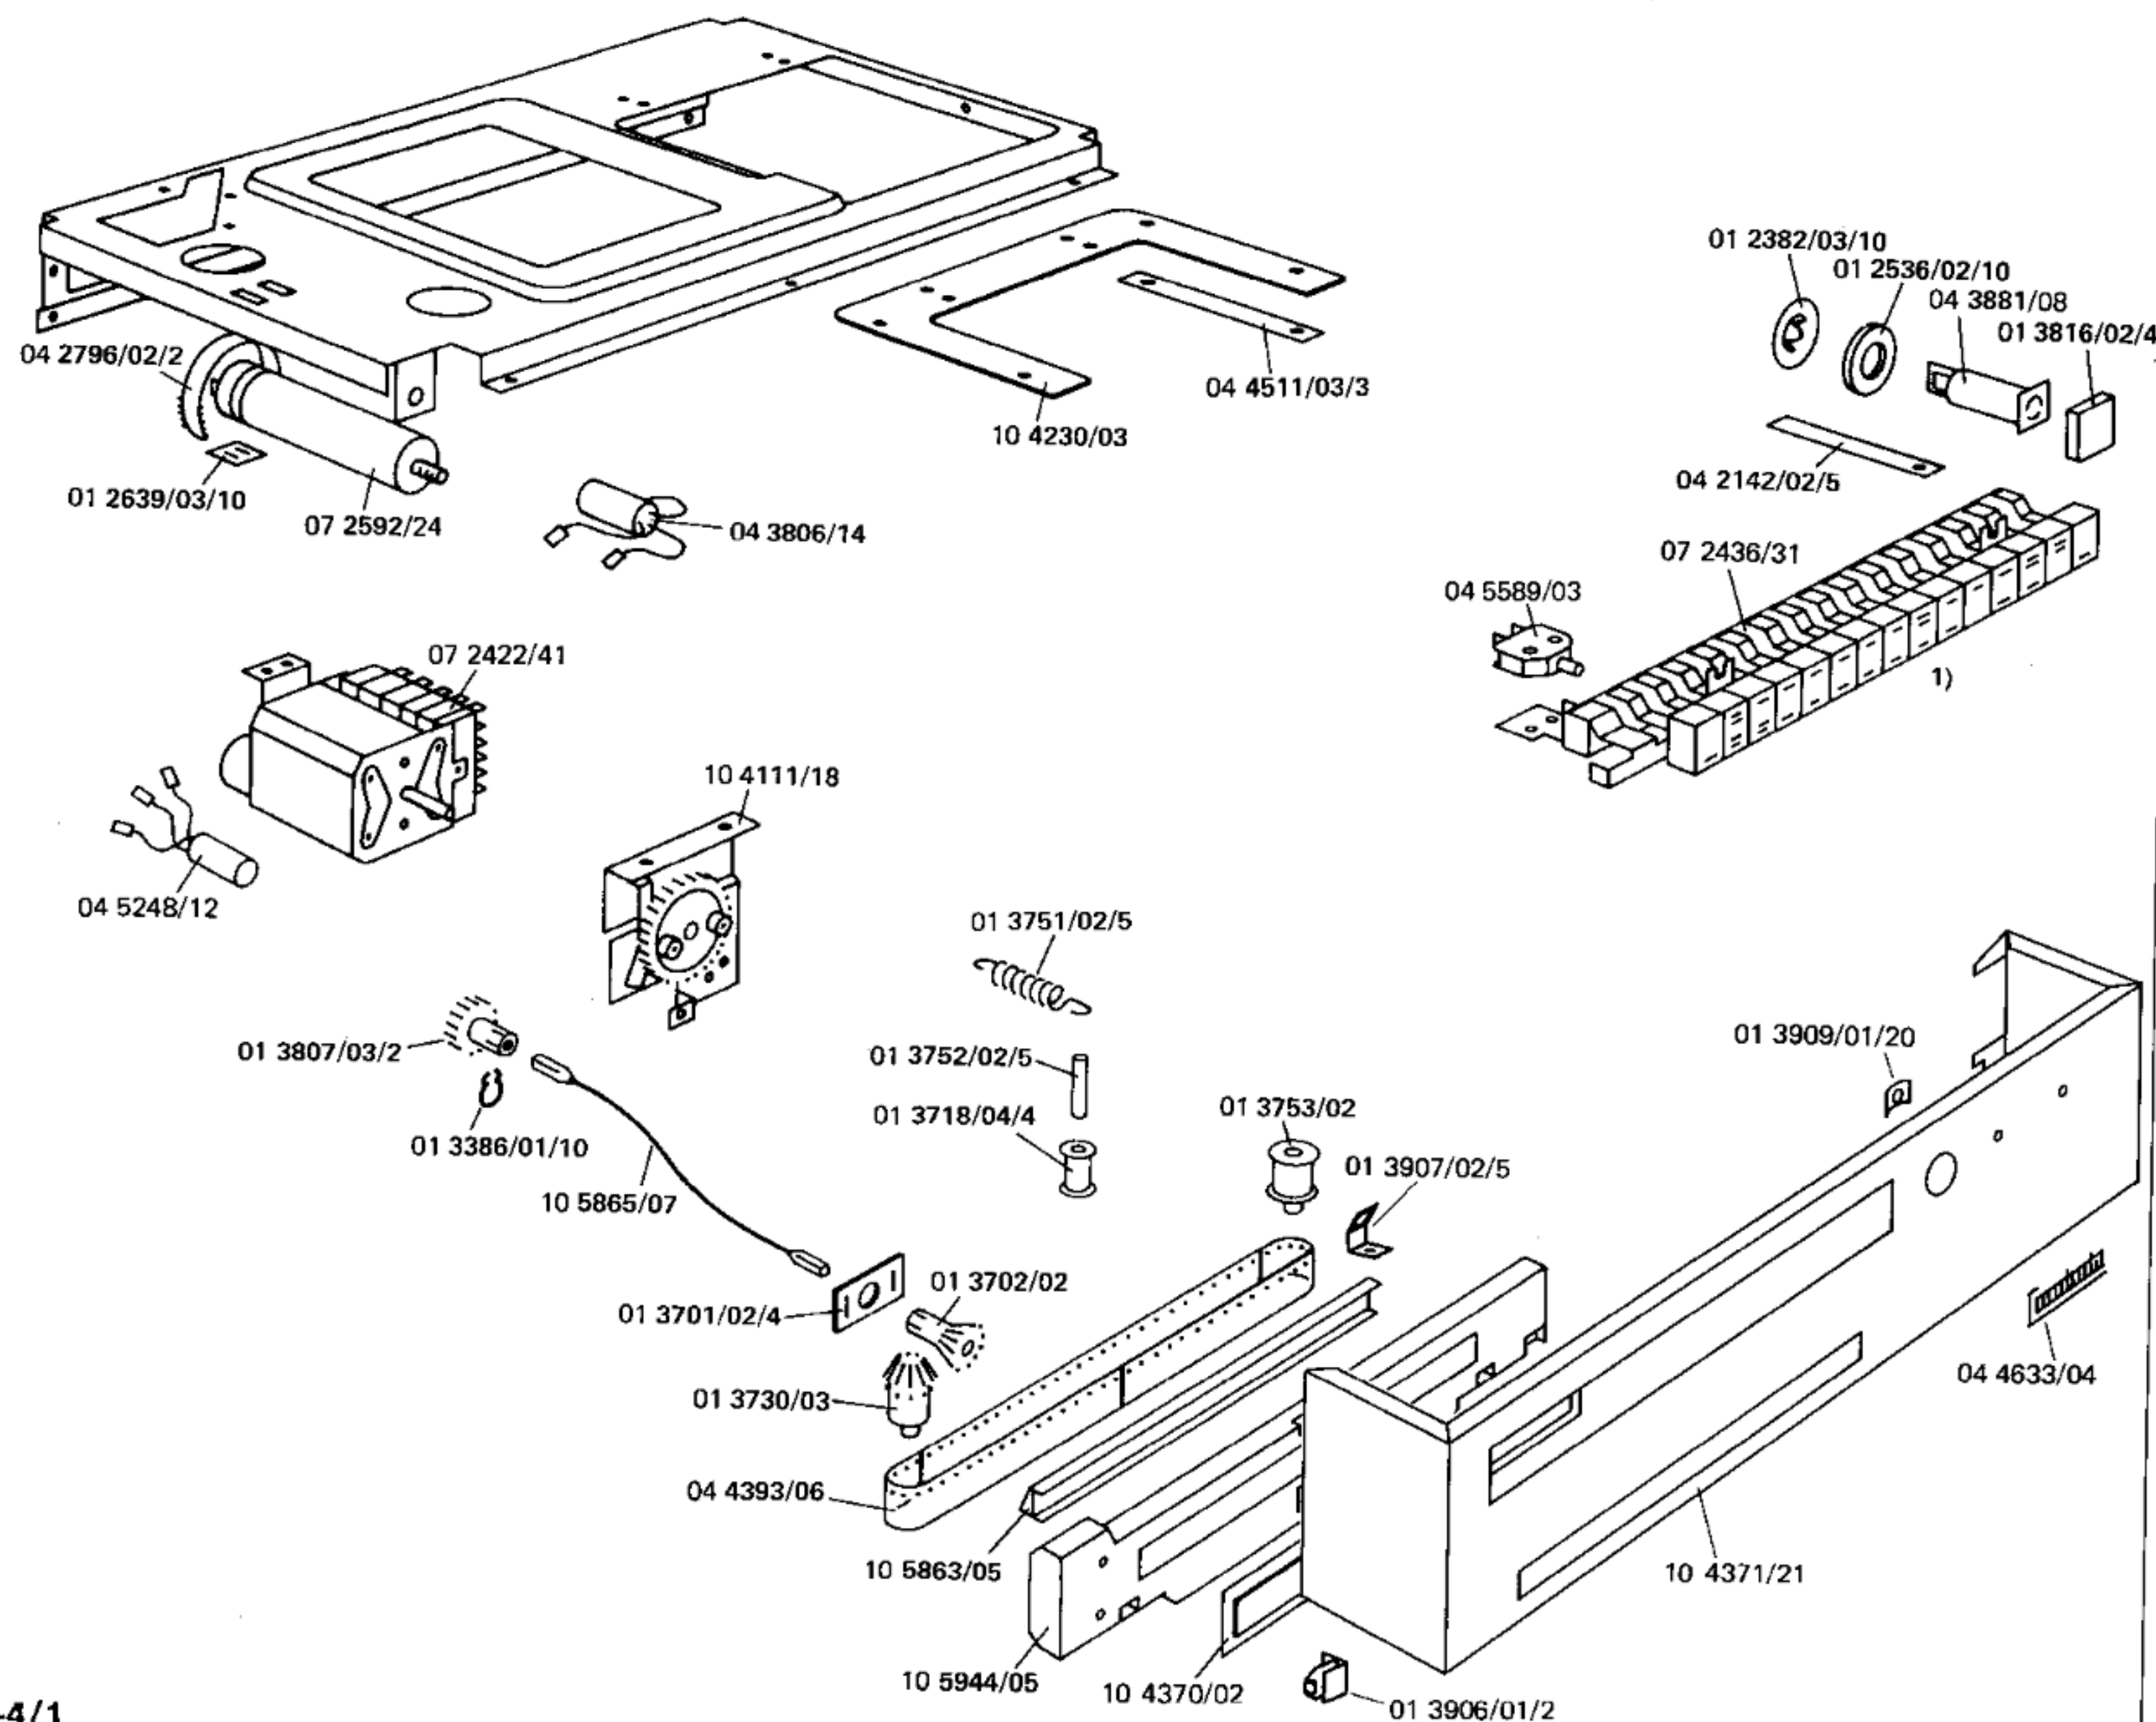

- 1) Kappen für Drucktasten
- 04 4958/02/2 Ein
 - 04 4960/02/2 Kochw. stark
 - 04 4962/02/2 Kochw.
 - 04 4964/02/2 Heißw.
 - 04 4966/02/2 Buntw.
 - 04 4968/02/2 Feinw.
 - 04 4970/02/2 Gardinen
 - 04 4972/02/2 Synthetic
 - 04 4974/02/2 Baumwolle
 - 04 4976/02/2 Wolle
 - 04 4978/02/2 Kaltw.
 - 04 4980/02/2 Sondervorw.
 - 04 4982/02/2 Weichspülen
 - 04 4984/02/2 Schleudern
 - 04 4986/02/2 Aus

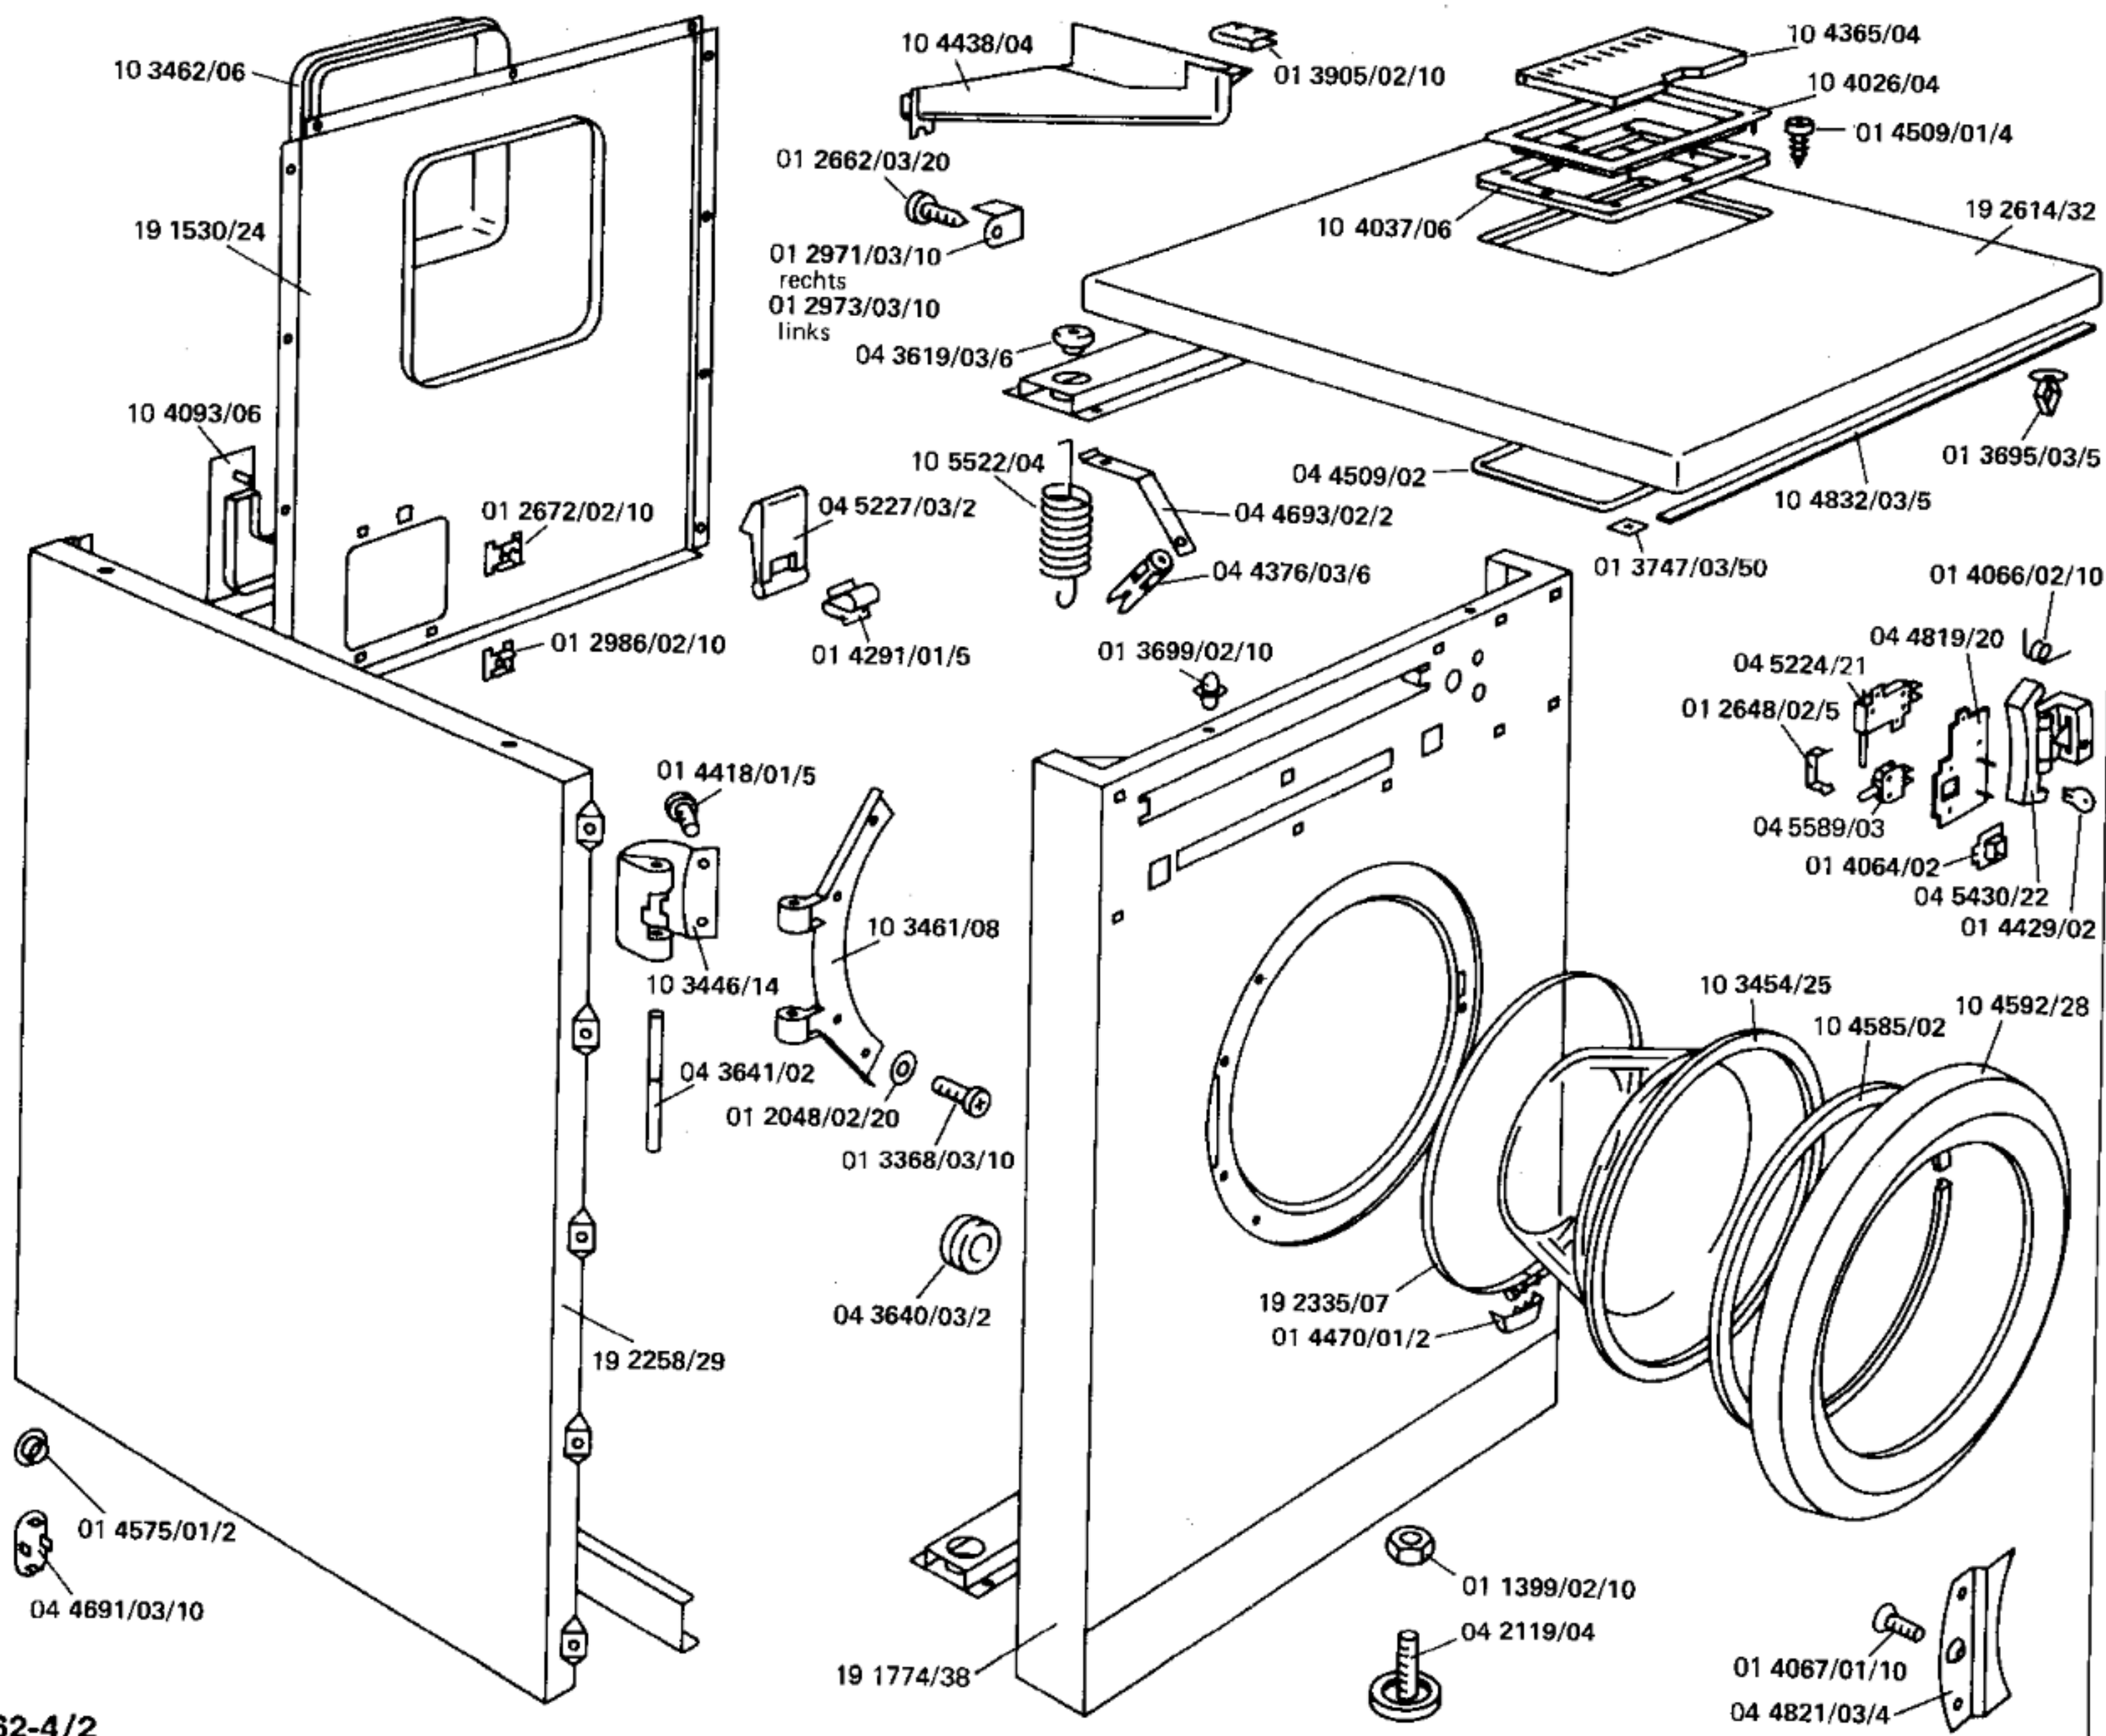

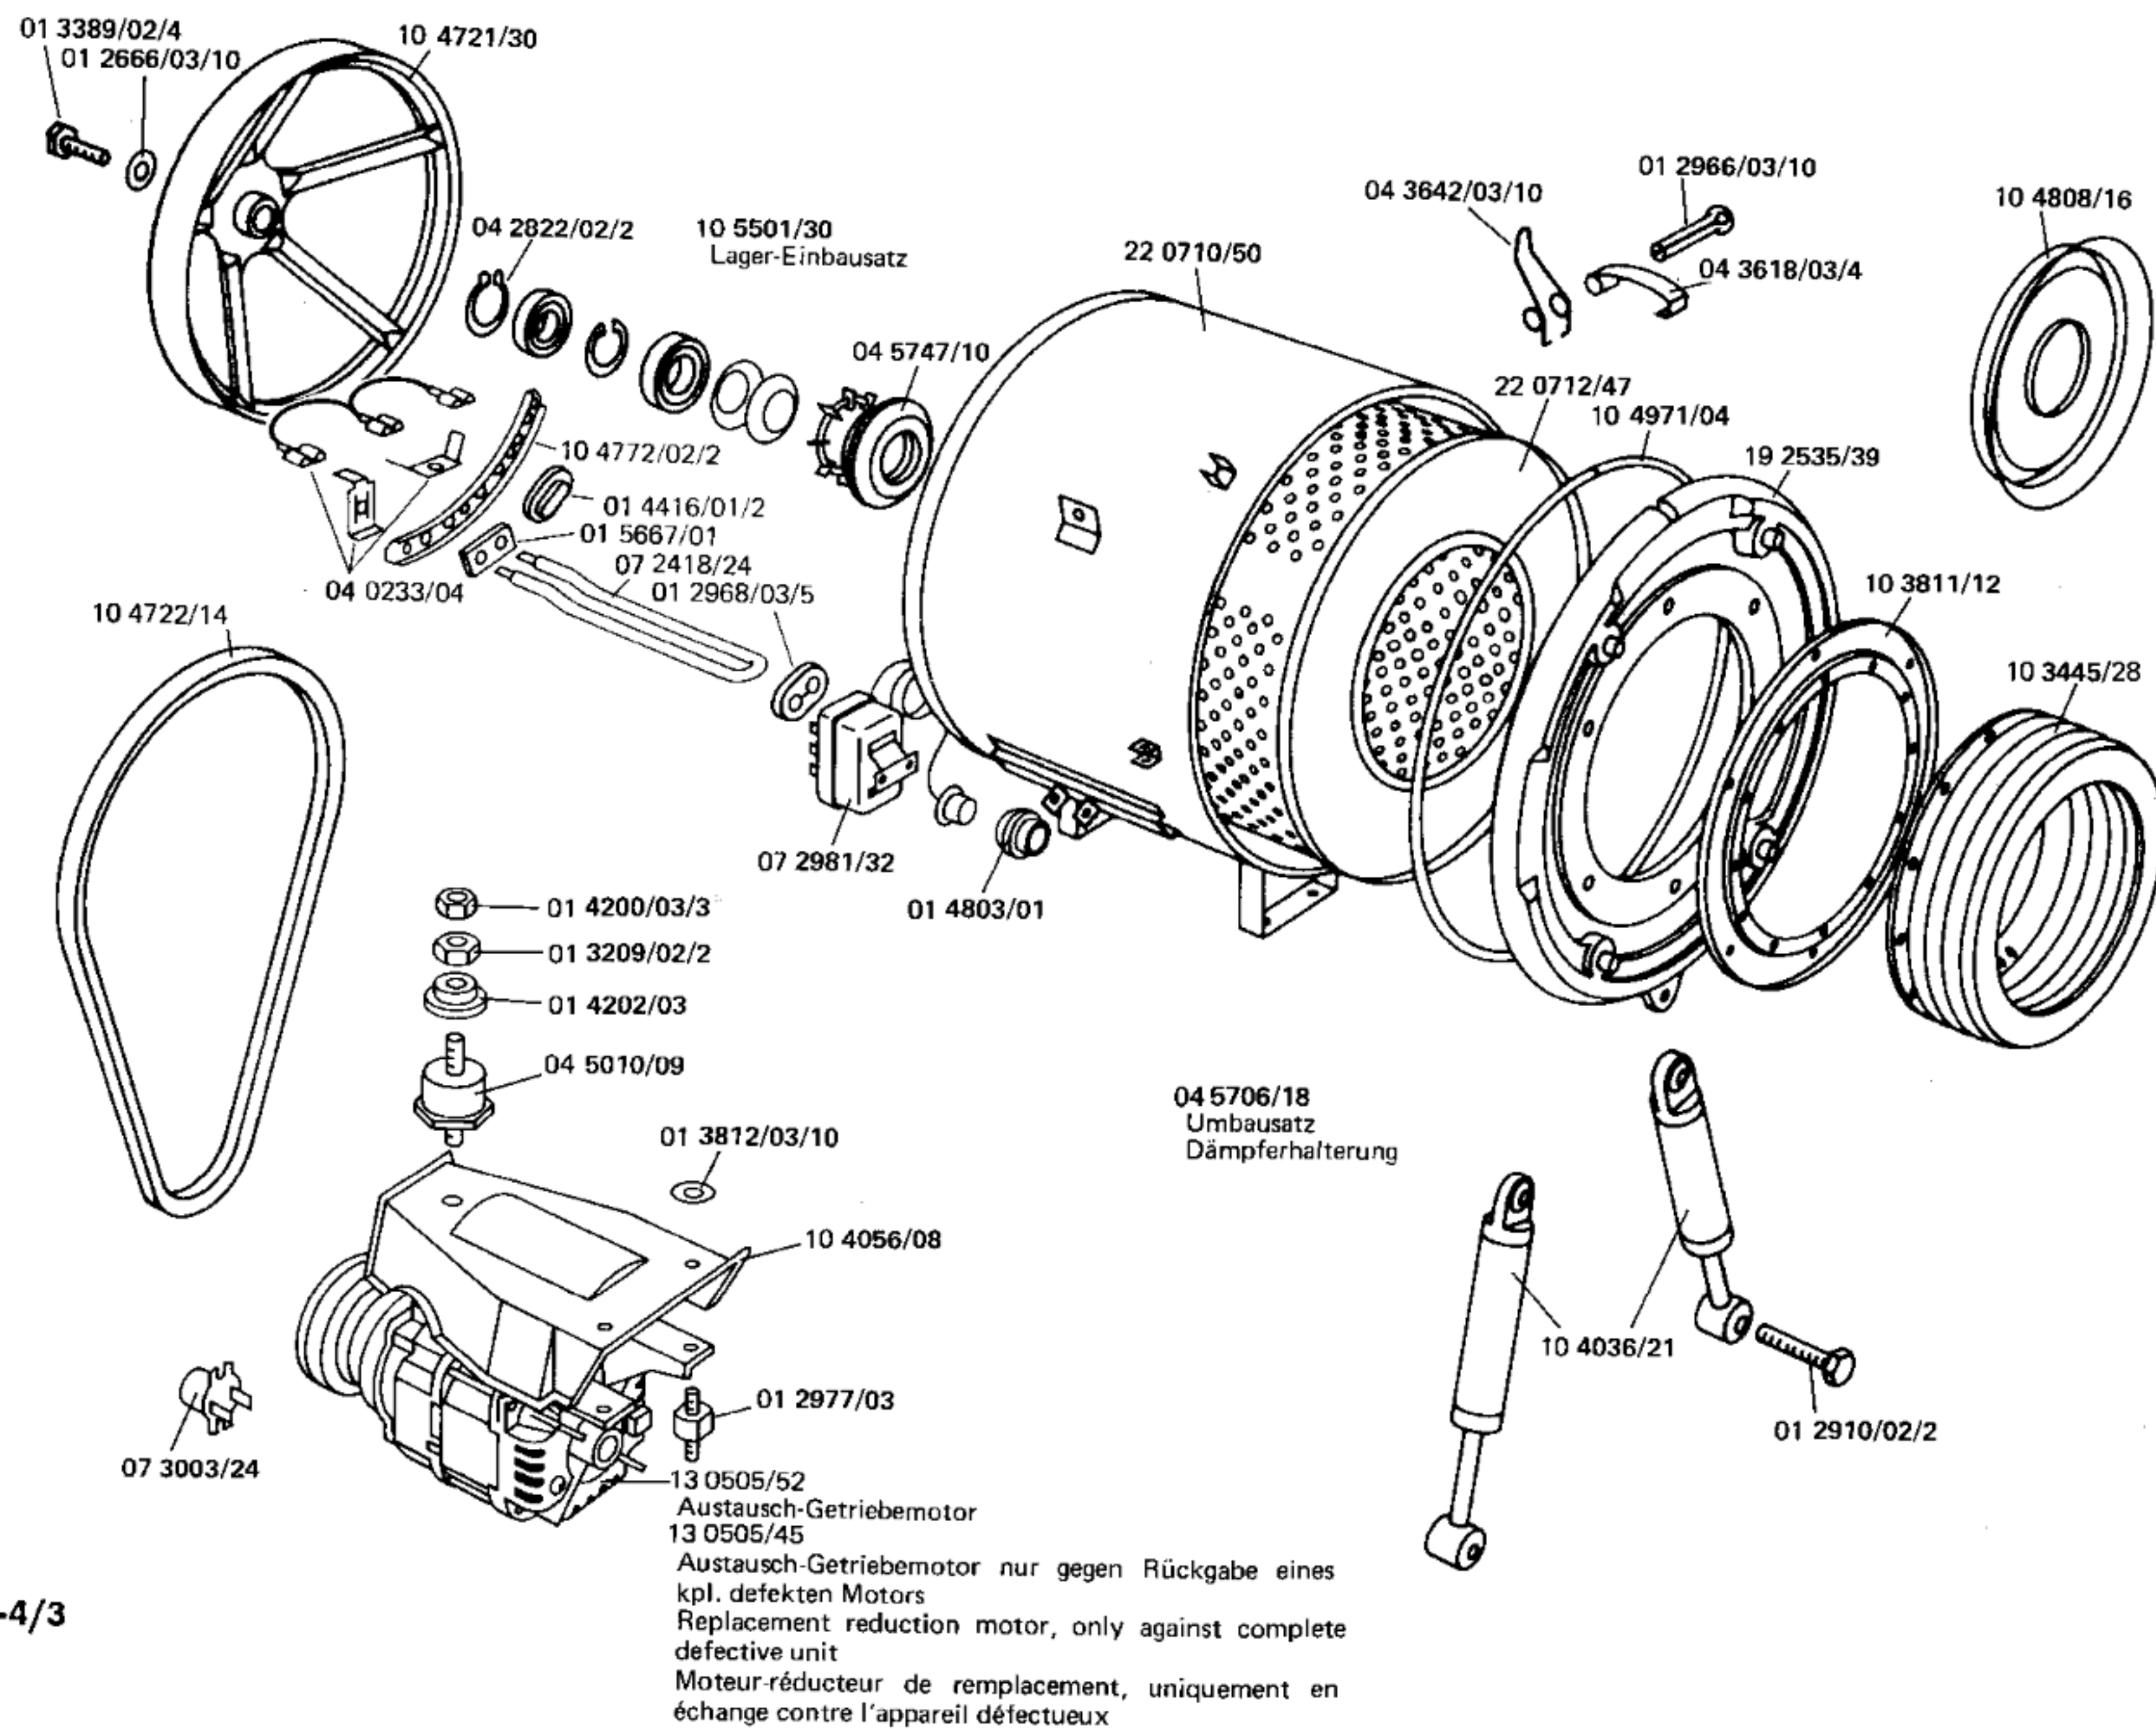

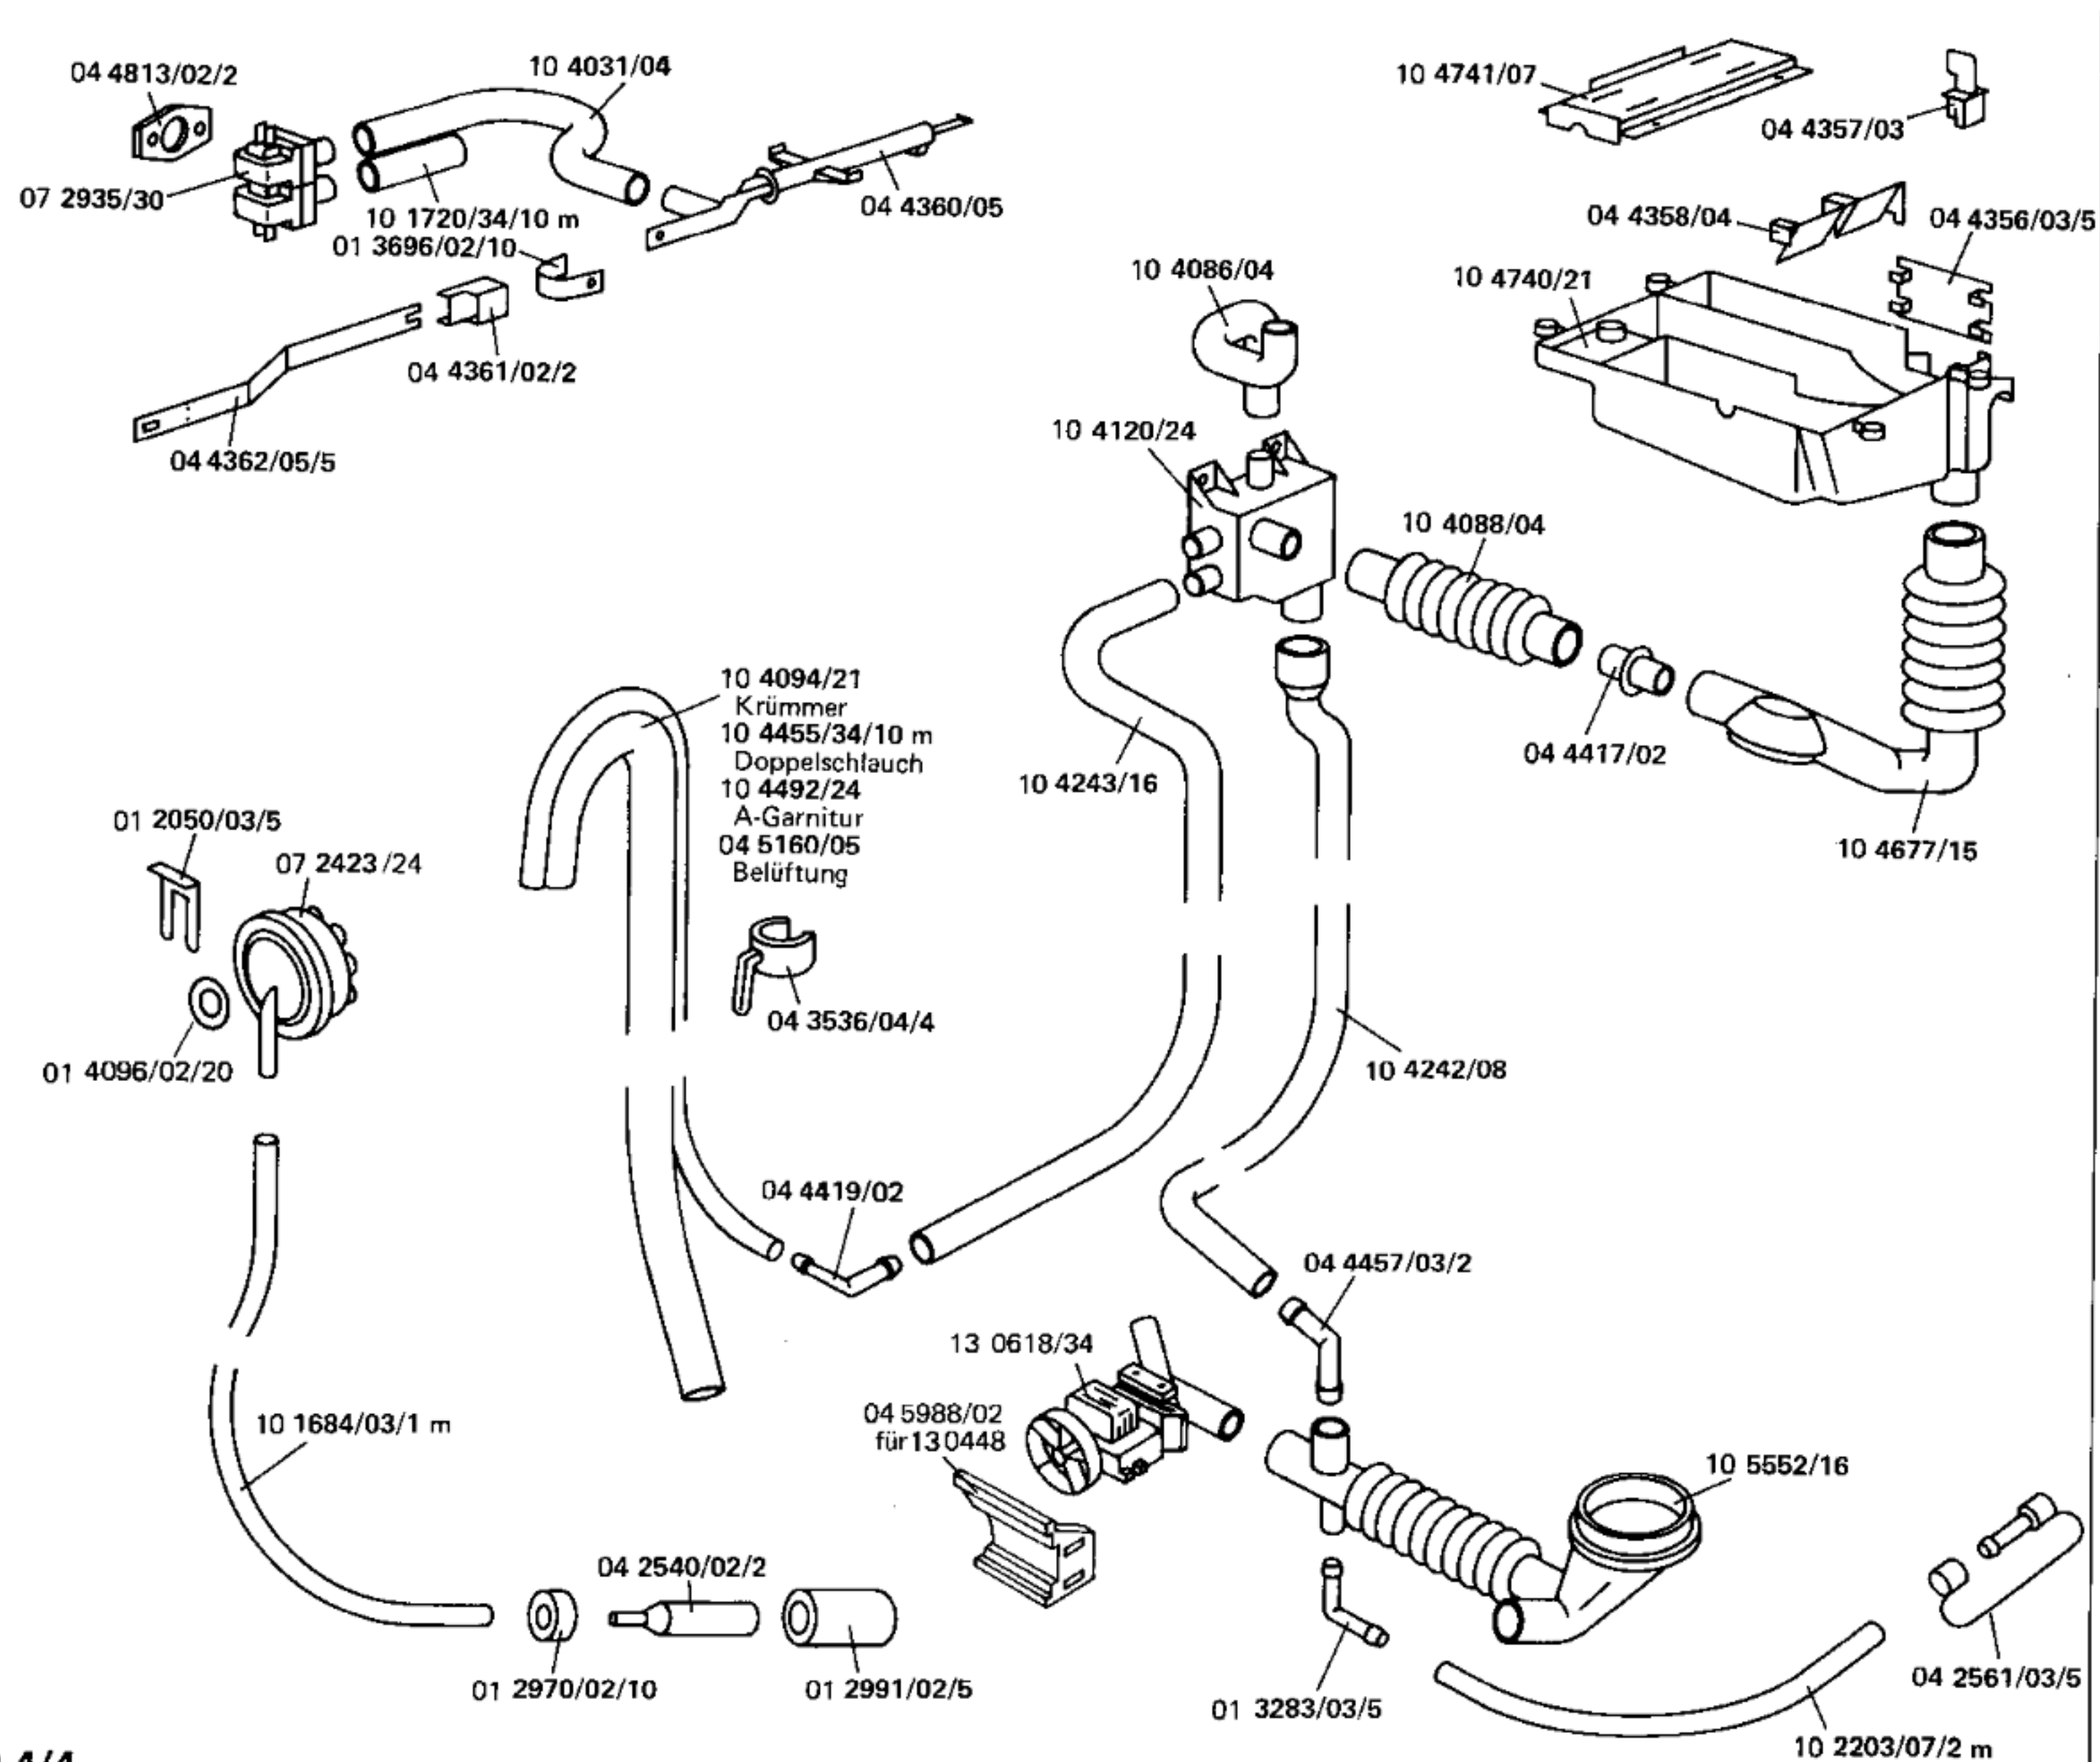

508401/00
Bed.-Anleitung
50 8387/00
Aufst.-Anleitung