




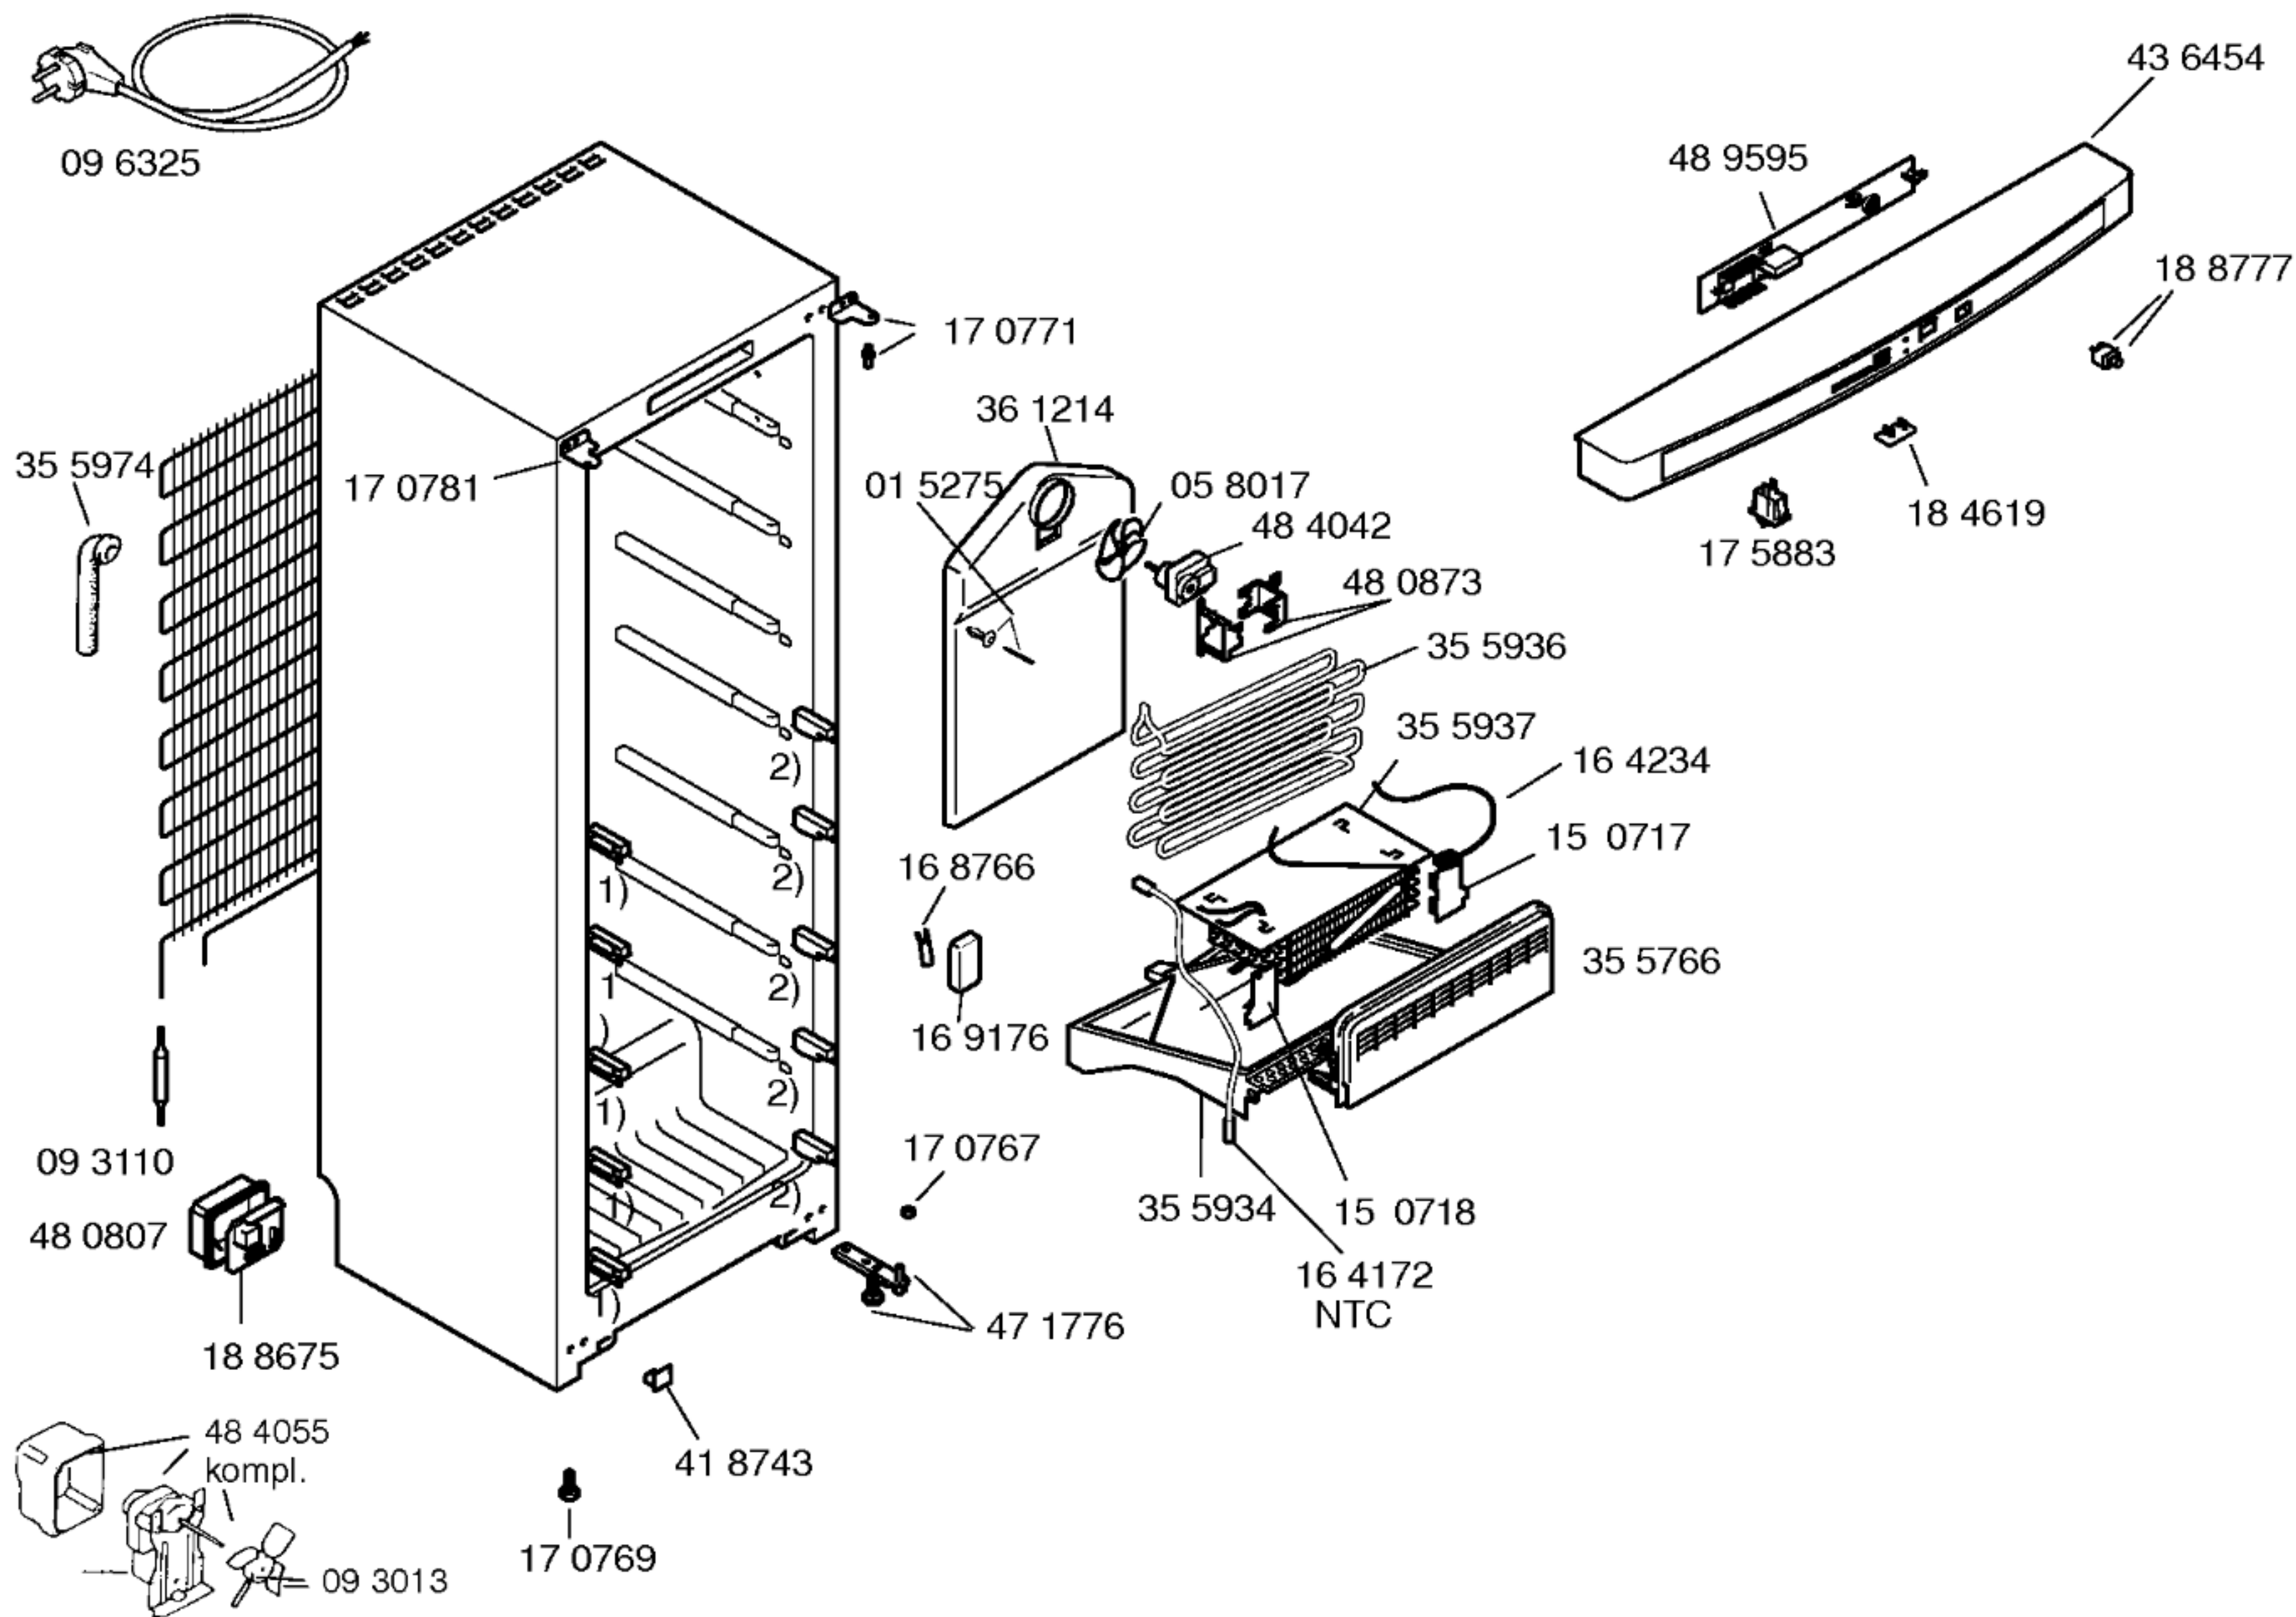



Mat. - Nr. -Konstante
3740

Gebrauchsanweisung
58 8341
(de,en,tr,sa,farsi)

Montageanleitung
58 0241
Beistellsatz
26 5627

1) 17 1455
2) 17 1454

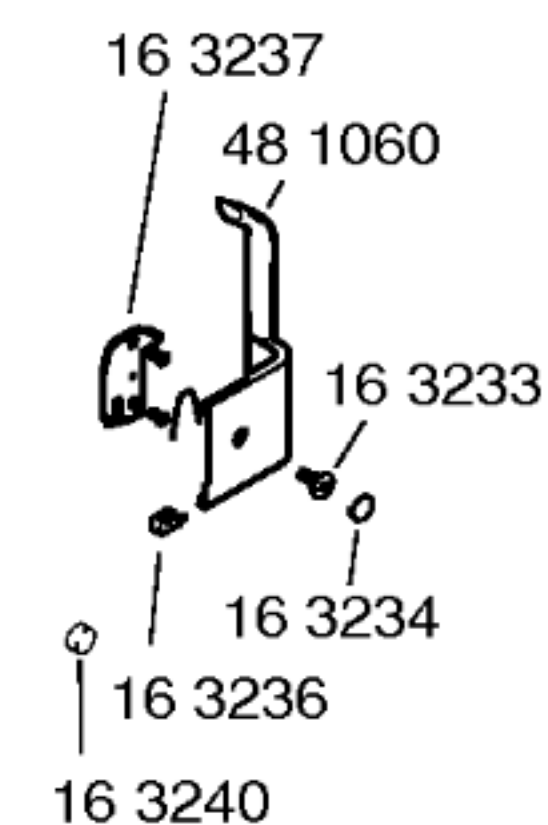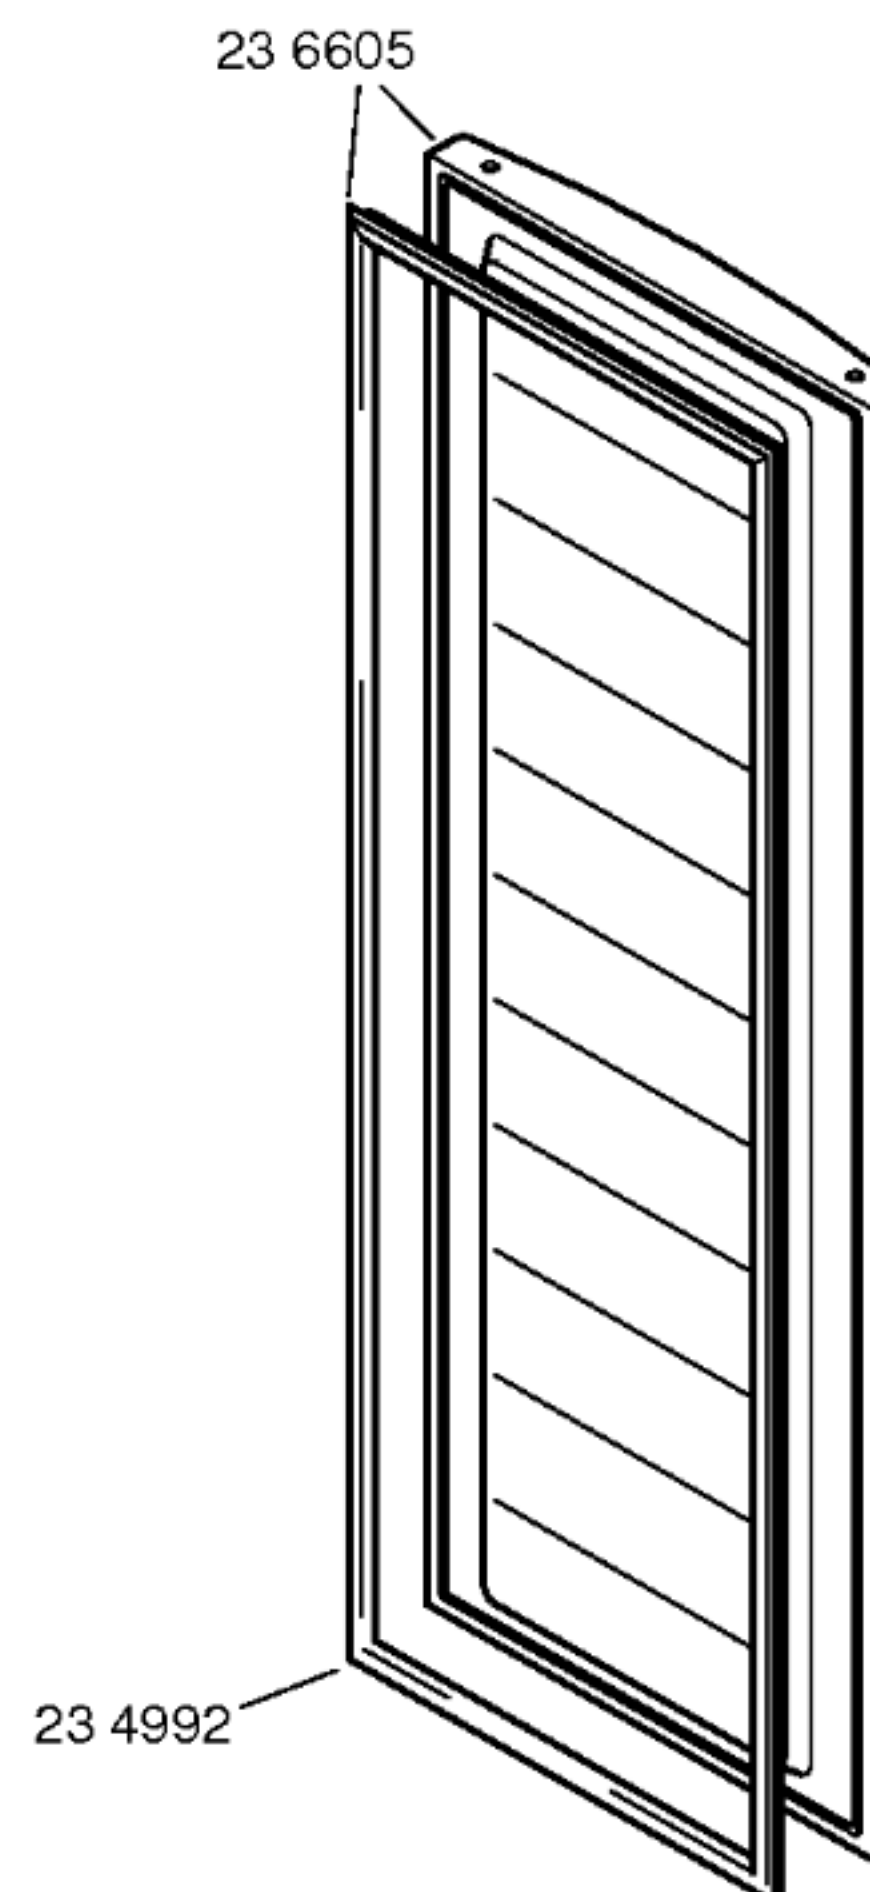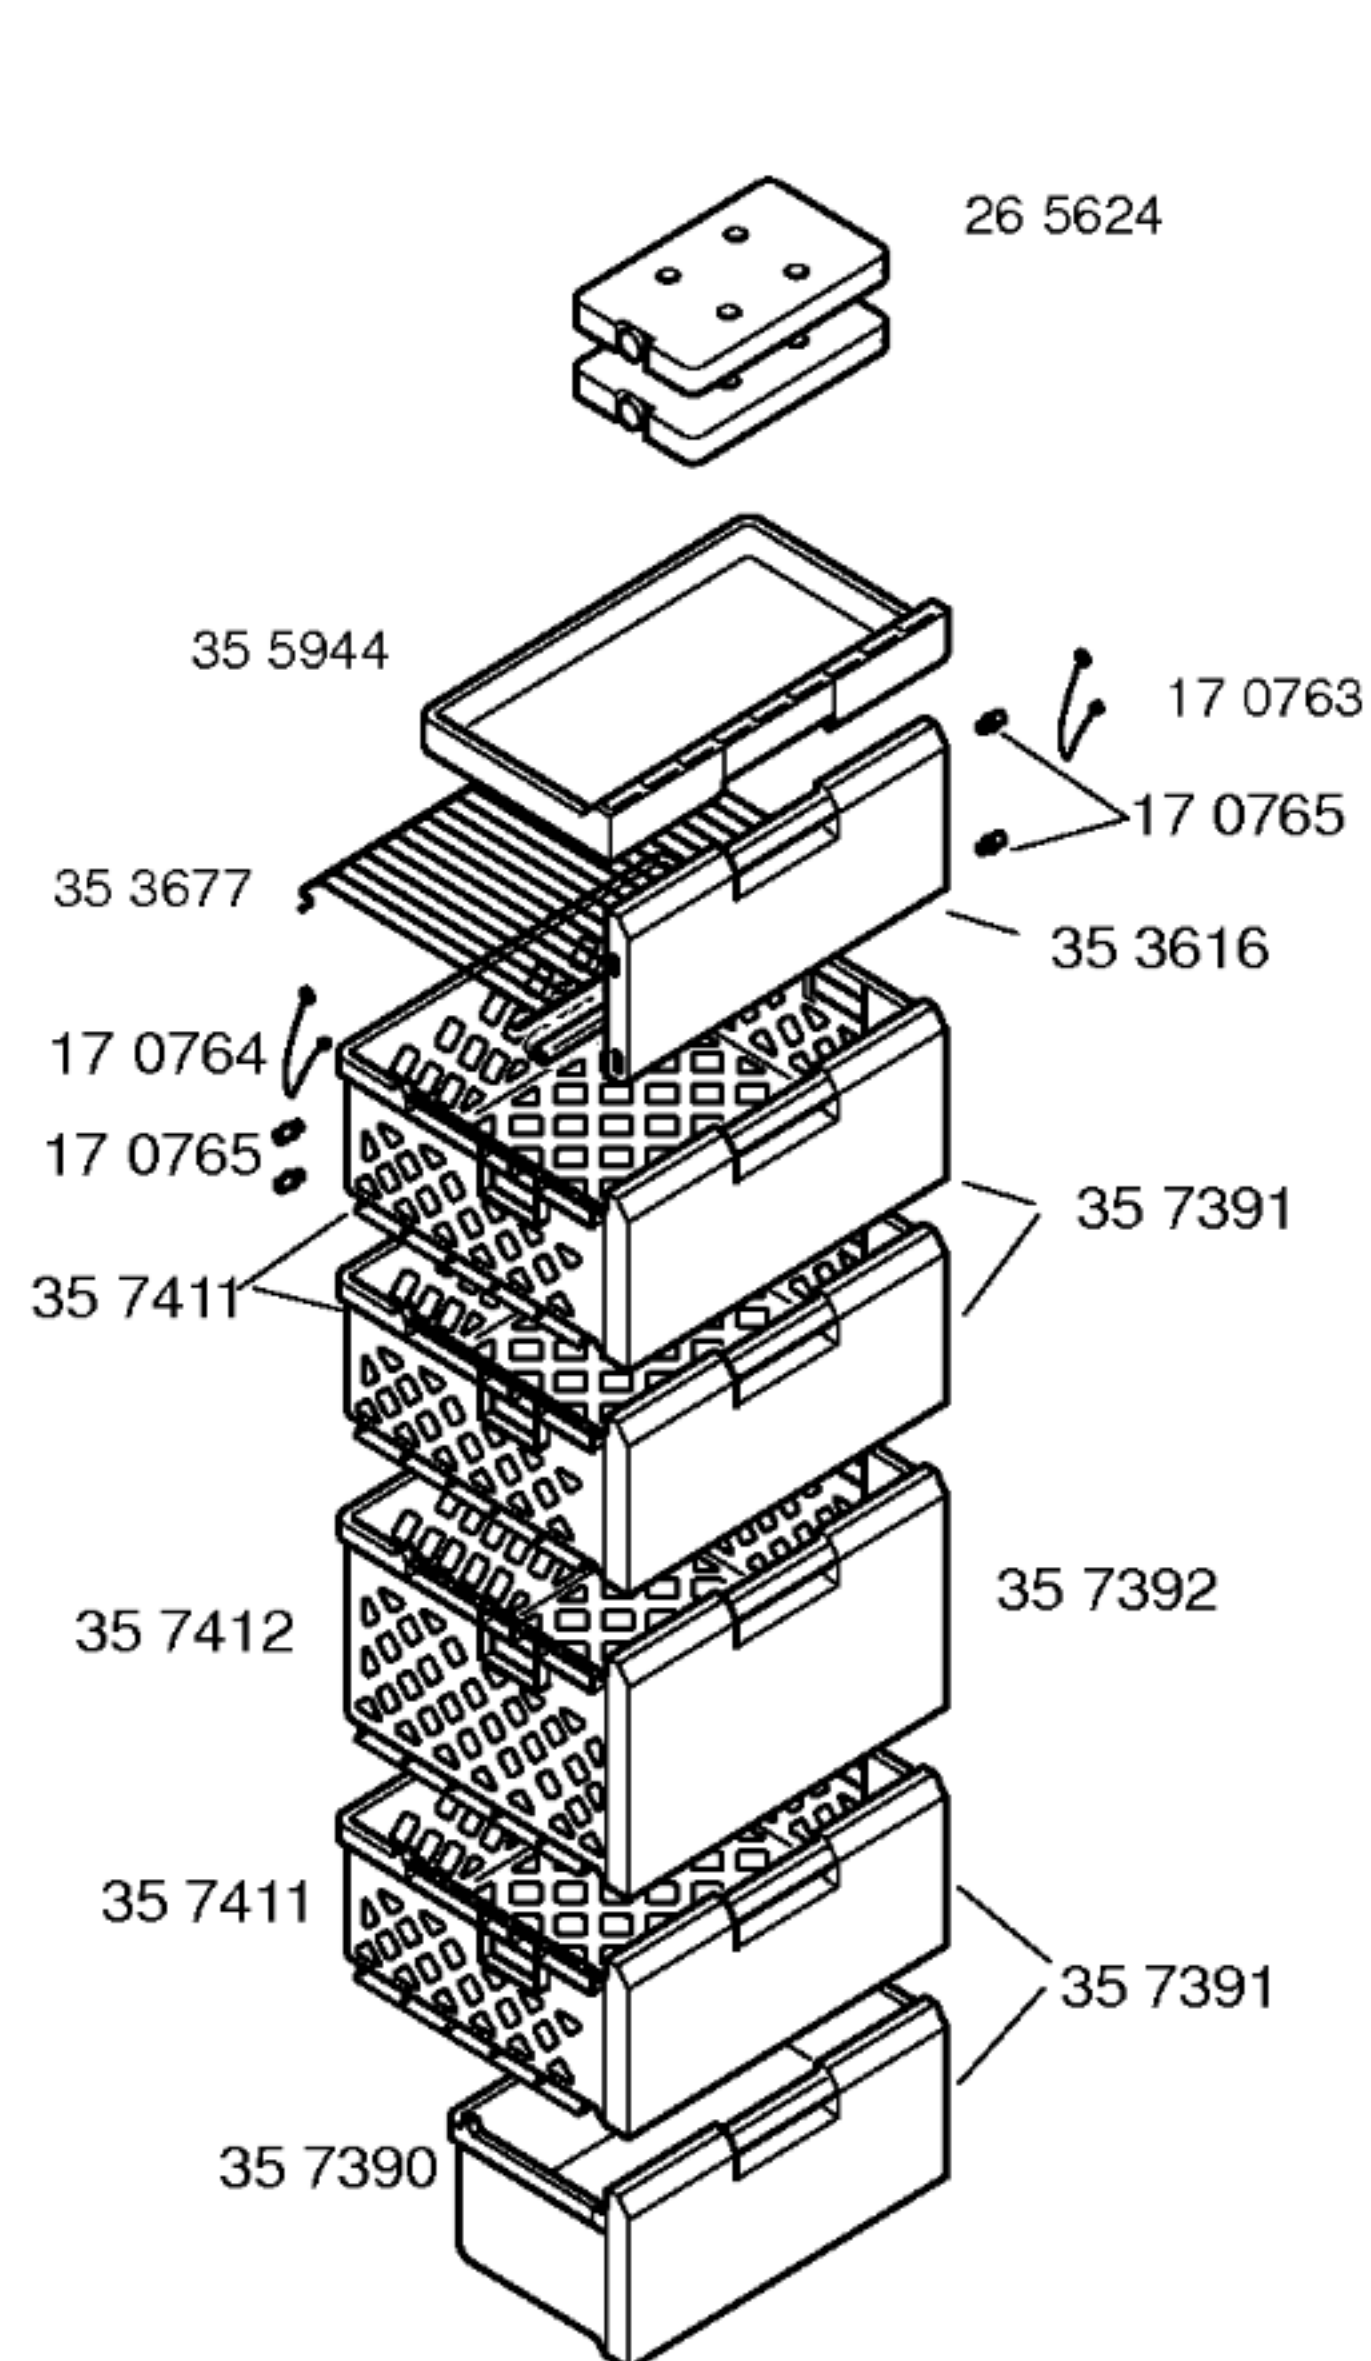

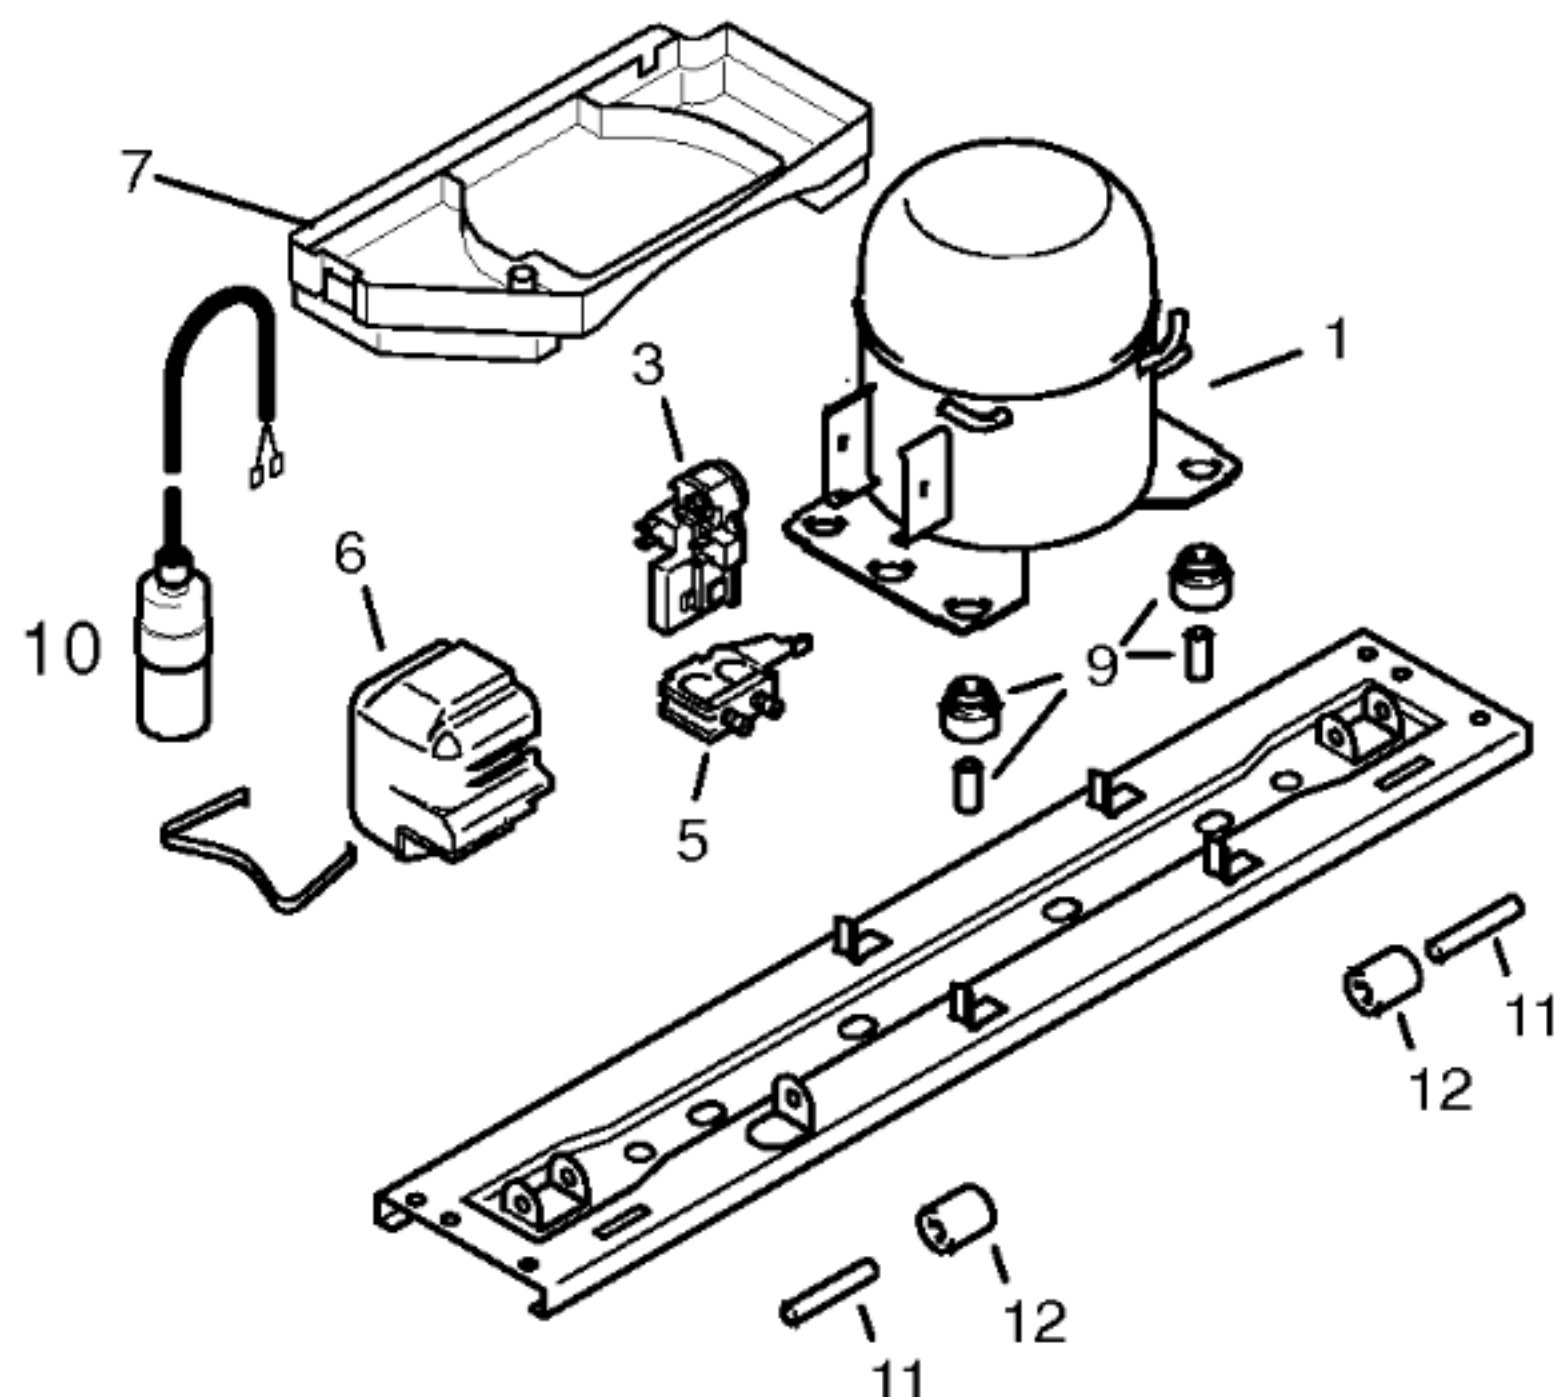Mat. – Nr. – Konstante
3740

	V01		
	Danfoss		
Pos.	NL10FT		
1	14 2357		
2			
3	18 8837		
4			
5	15 0760		
6	15 1072		
7	09 6212		
8			
9	05 0166		
10	09 4910		
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES					
Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NL 10FT			
Förderleistung/Delivery/Débit		l/h			
Anlaufstrom/Starting current/Cour de démarrage		A			
Widerstand/Resistance/Résistance		Ha/main/prin			
		Hi/aux			
		Ω			
Temp.-Regler/Thermostat		Elektronisch			
Typ/Type		EIN AUS			
Regelstellung/Position		-15 -16			
Schaltwerte/Switching values		"warm"			
Valeurs de commutation		"kalt"			
		-23 -24			
		-9 -14			
Füllmenge/Fill.quantity/Charge		R600a			
		*			
Anschlußwert/Conn.load/Puiss. connectée		W			
		217			
Heizung/Heater/Chauffage		Abtauheizung			
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
		288			
		200			
Ventilator/Blower/Ventilateur		560			
Widerstand/Resistance/Résistance		Ω			
Raumtemperaturfühler 2%		C K C k			
		+10 9,9 -18 43,3			
		+ 5 12,7 -22 54,6			
		+ 0 16,3 -26 69,4			
Widerstand NTC-Fühler 1%		°C kΩ °C kΩ °C kΩ			
		-1 17,3 -15 36,5 -20 48,6			
		-9 26,2 -16 38,8 -23 58,1			
		-14 34,5 -19 45,9 -24 61,6			
Magnetventil/Magnetic valve/Electrovanne		Ω			
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild