

Gebrauchsanweisung  
 51 6058  
 (D, GB, F, I, NL)


1) 03 1439  
 GB1, GB2, GB3  
 03 1438  
 GB4, GB5, GB6

Zubehör:


Einbaurahmen  
 Z6180W1  
 GB1, GB2, GB3  
 Z6180B1  
 GB4, GB5, GB6

Glaspfanne  
 Z6290X0

Alu-Backblech  
 Z6330X0

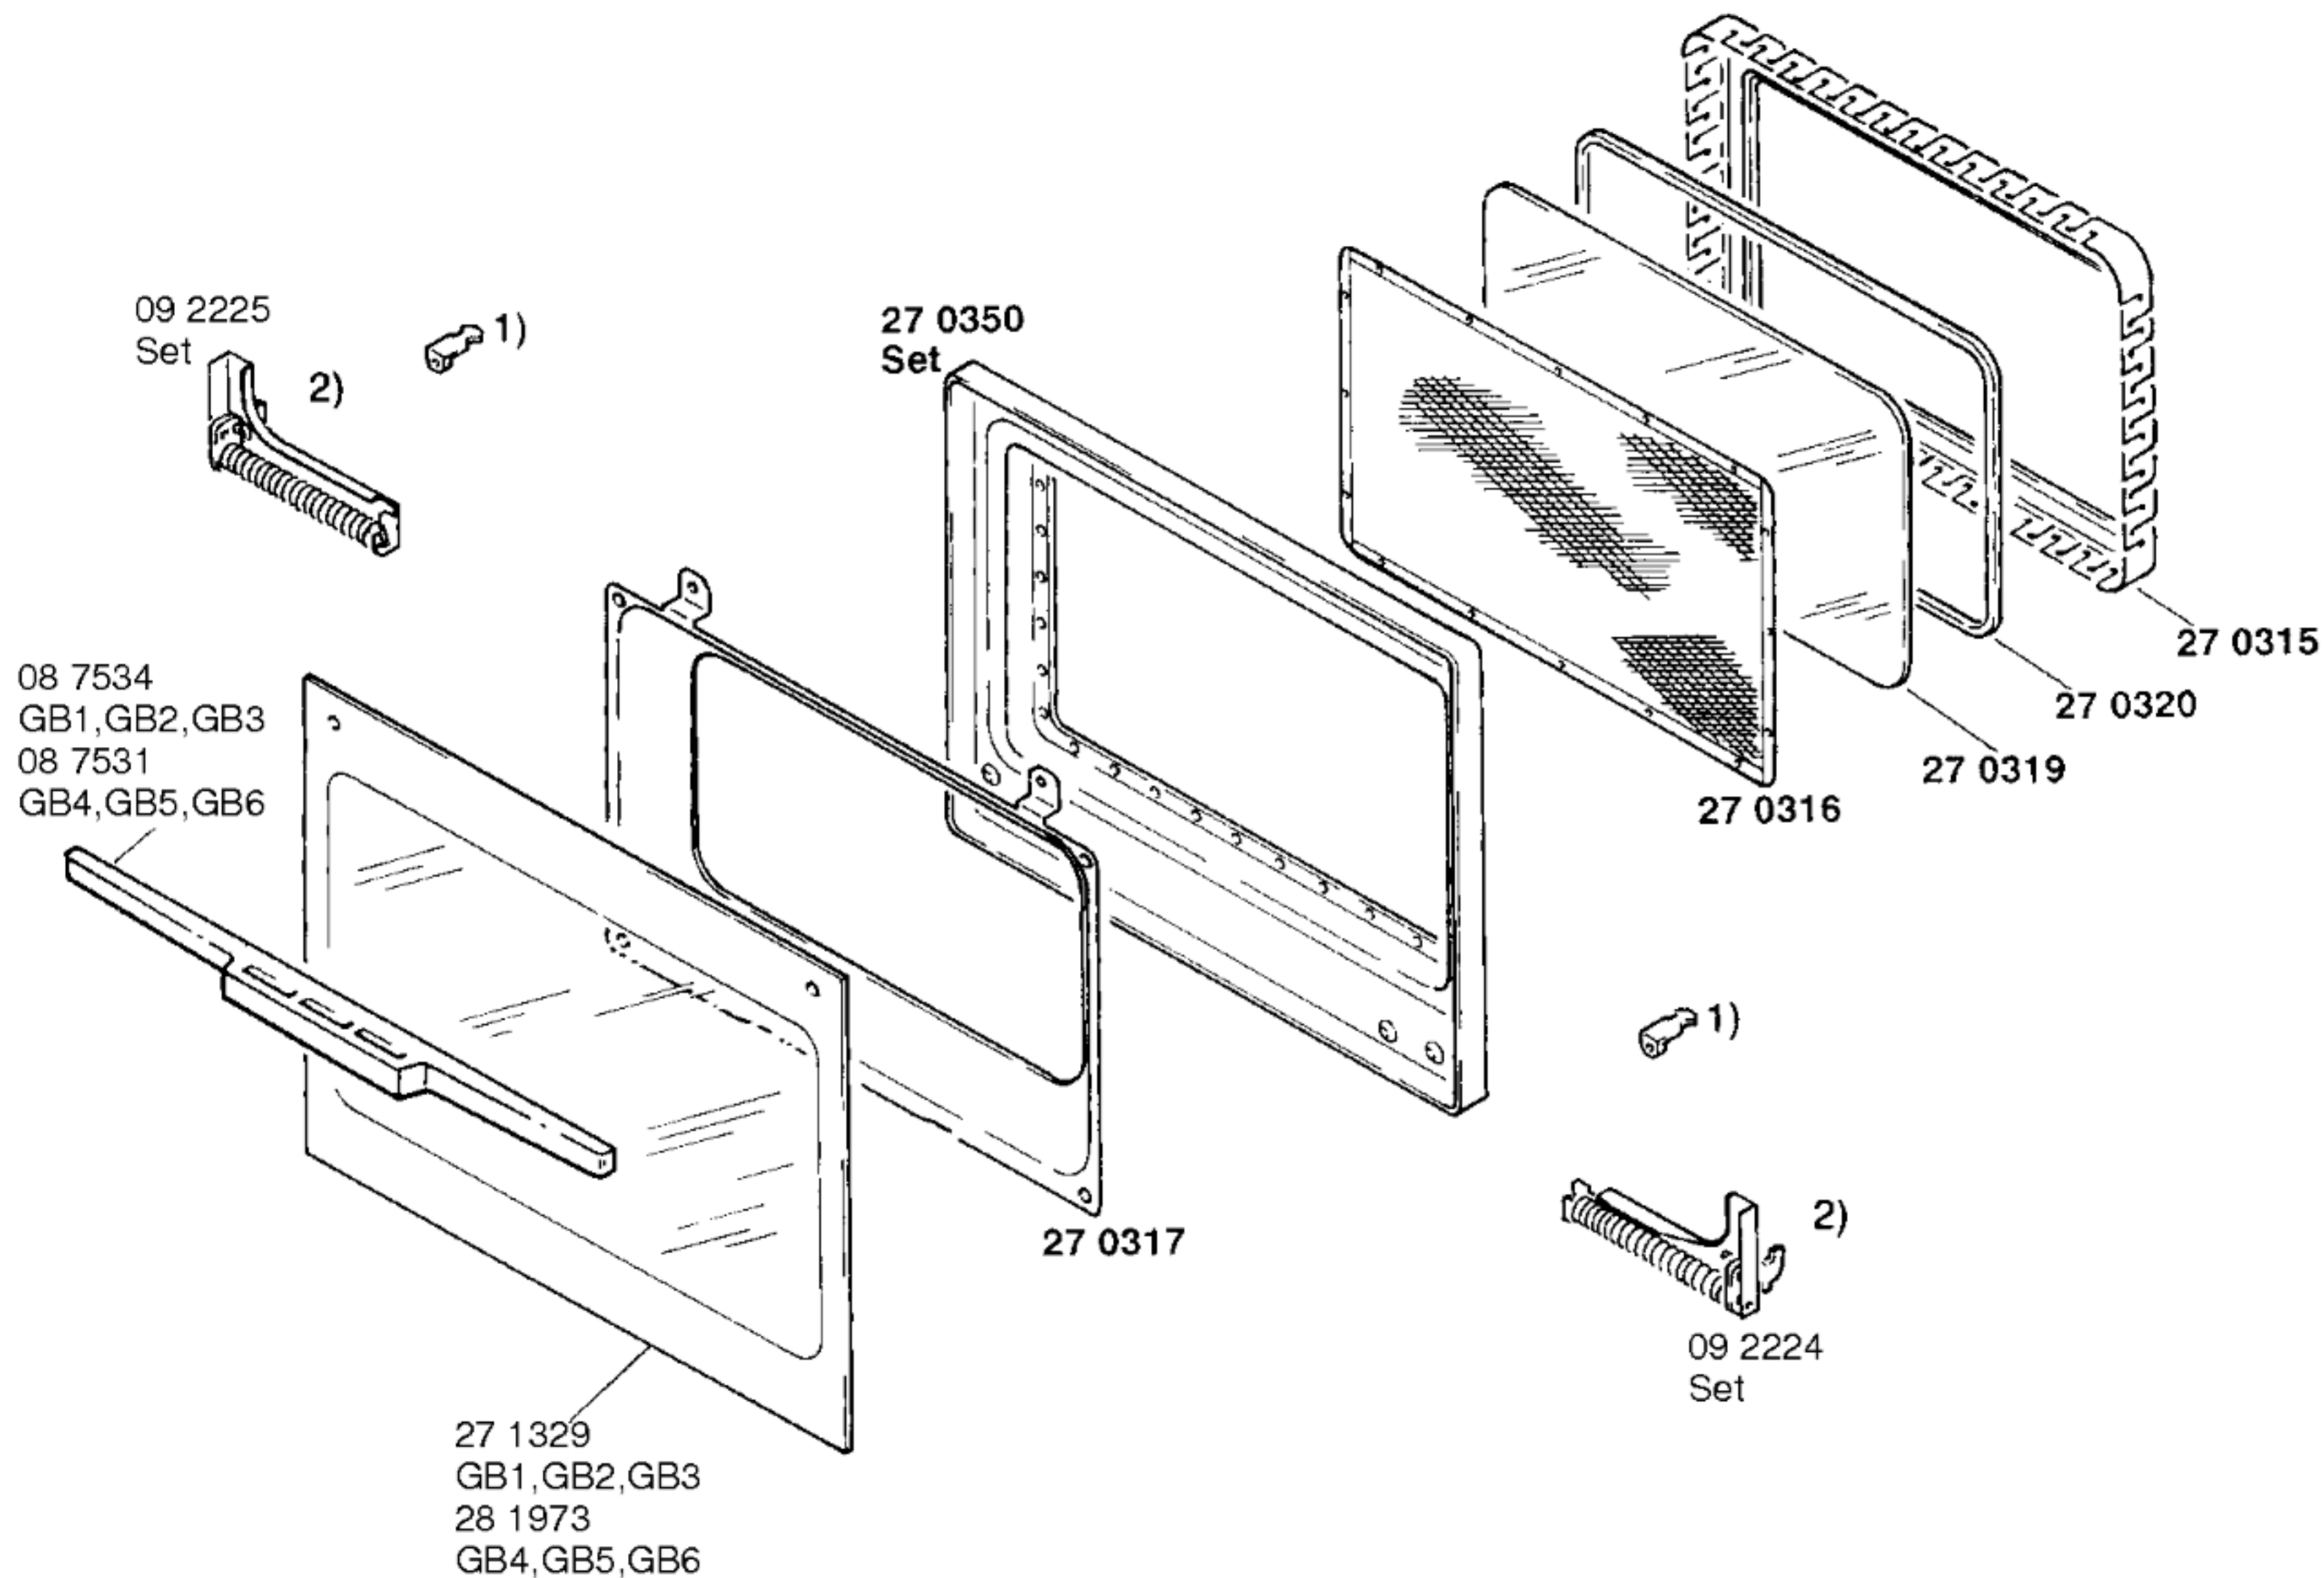


- 1) 03 0671
  - 2) 03 0813
- Arretierstifte

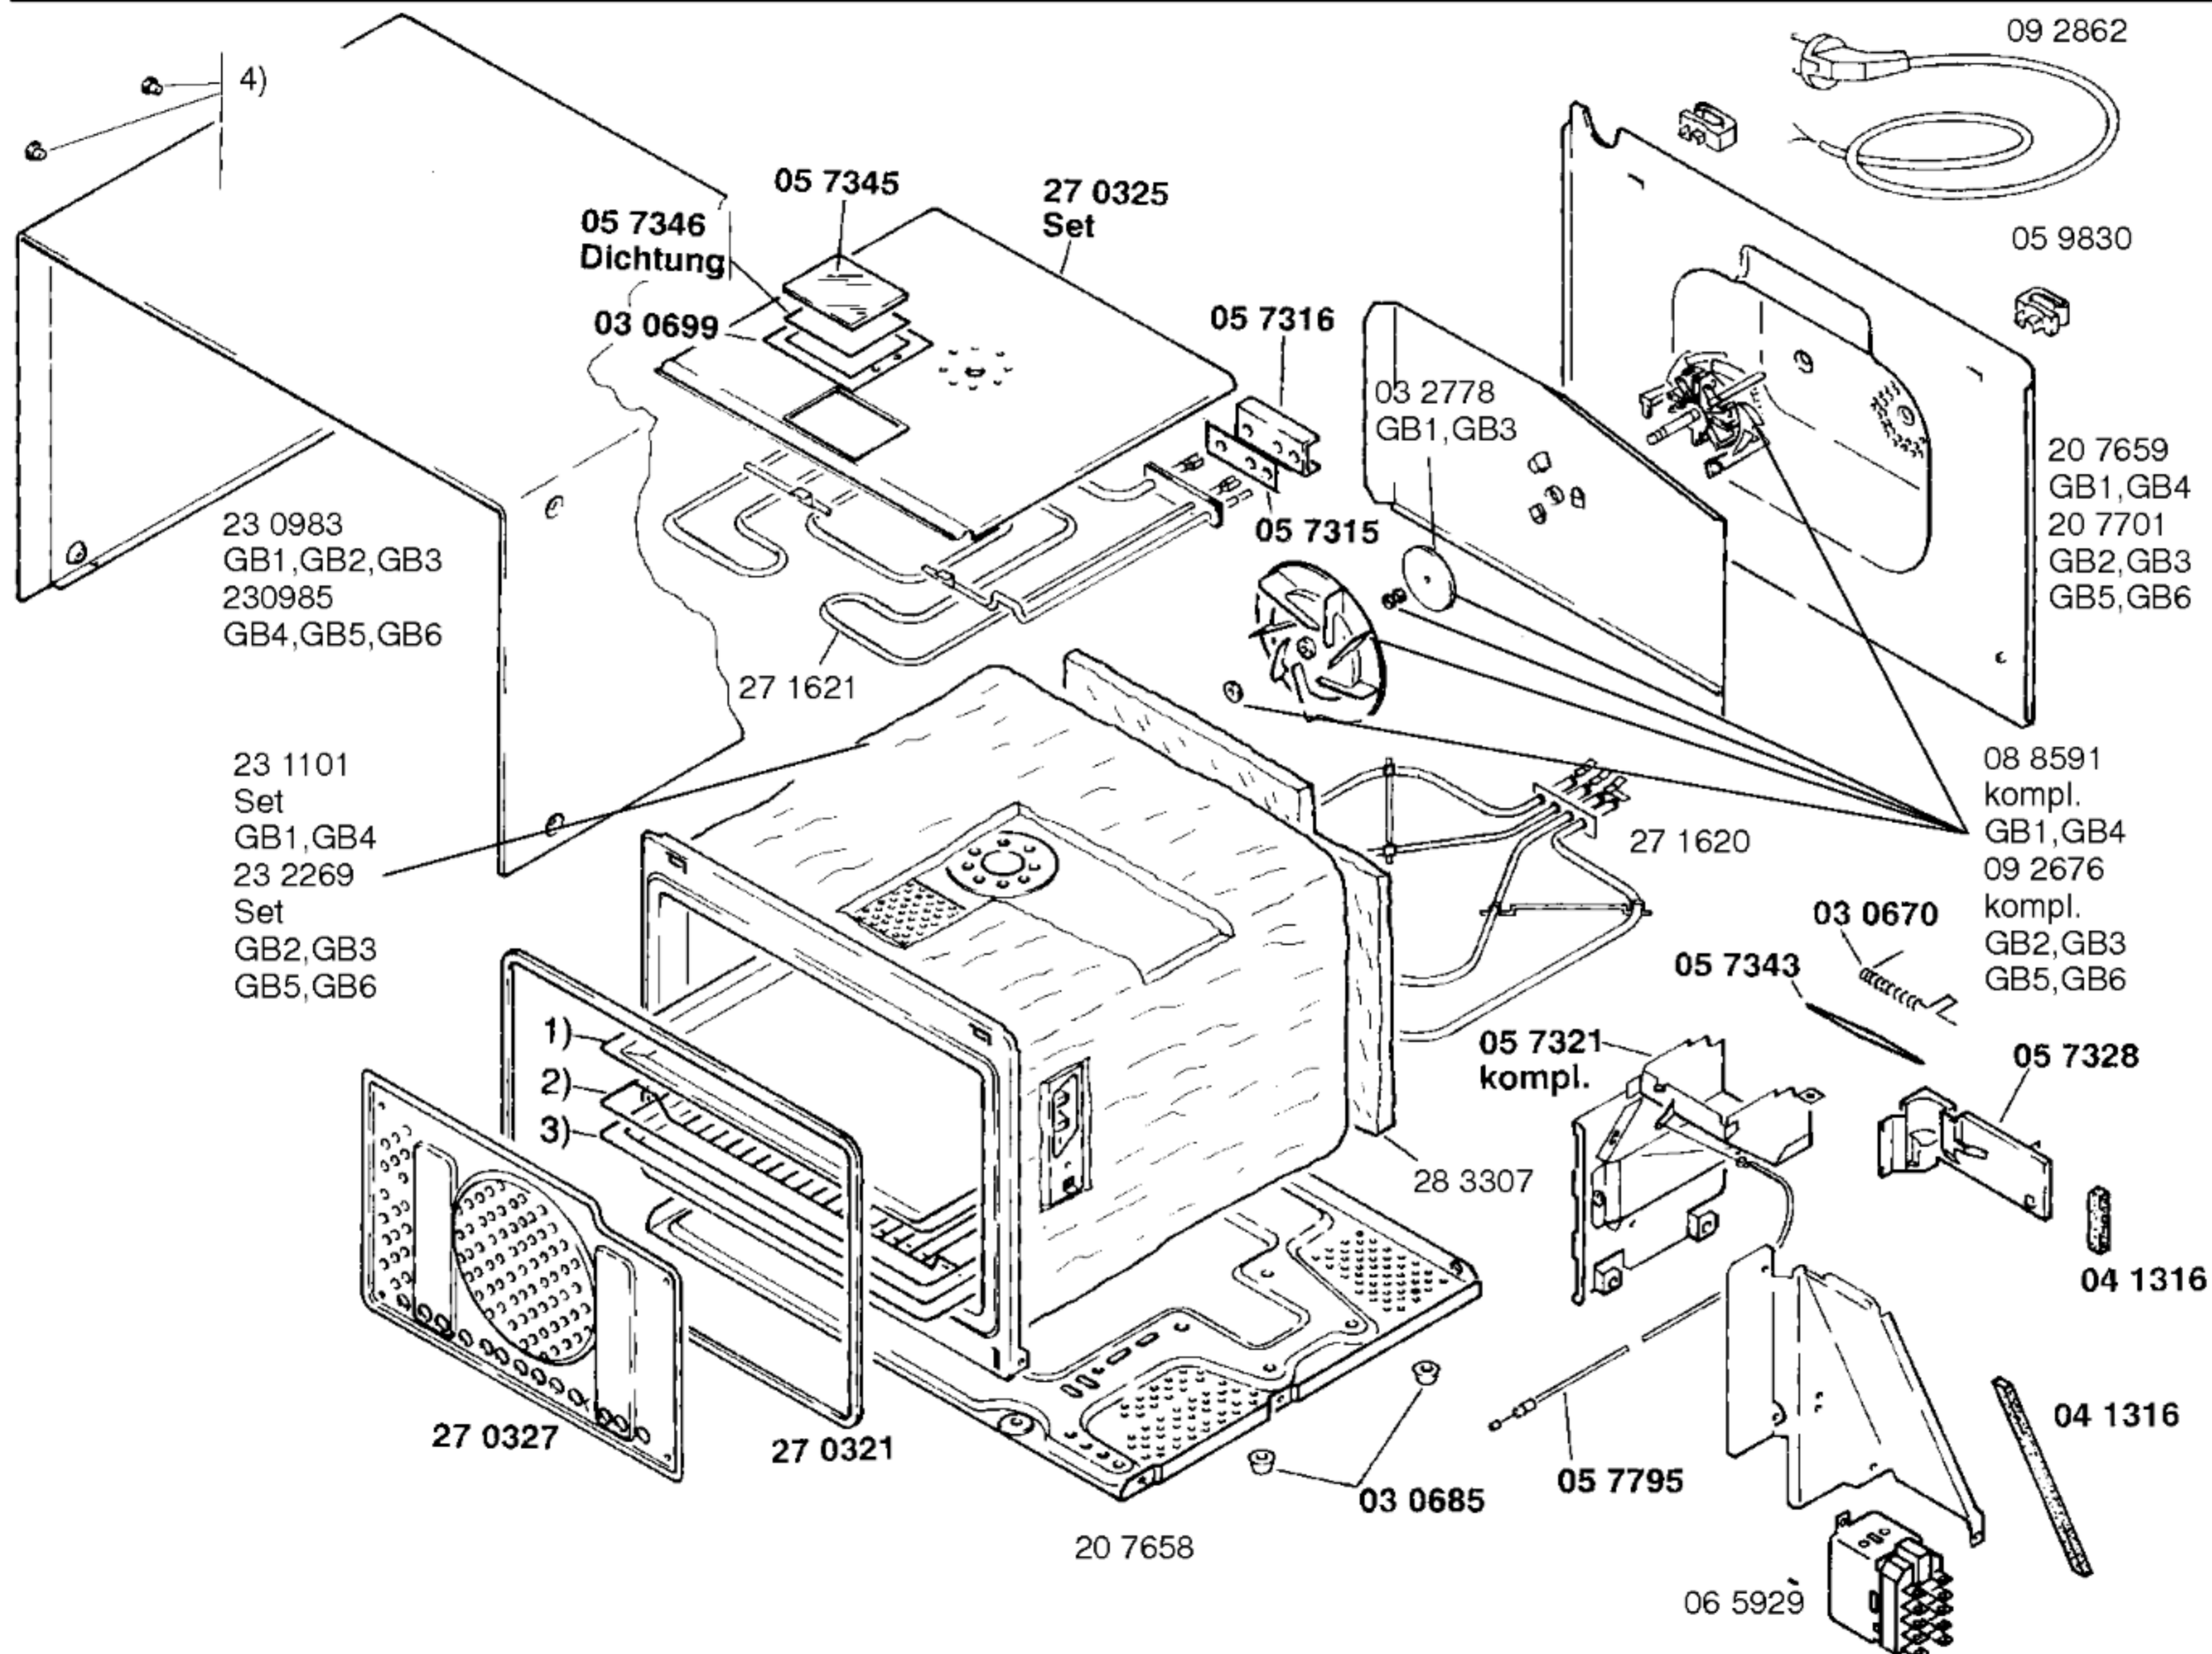

- 1) 11 4538 Backblech
- 2) 11 4539 Rost
- 3) 27 3844 Universalpfanne
- 4) 03 0688 GB1, GB2, GB3  
03 0694 Gb4, GB5, GB6

02 8732 Anschlag Backblech



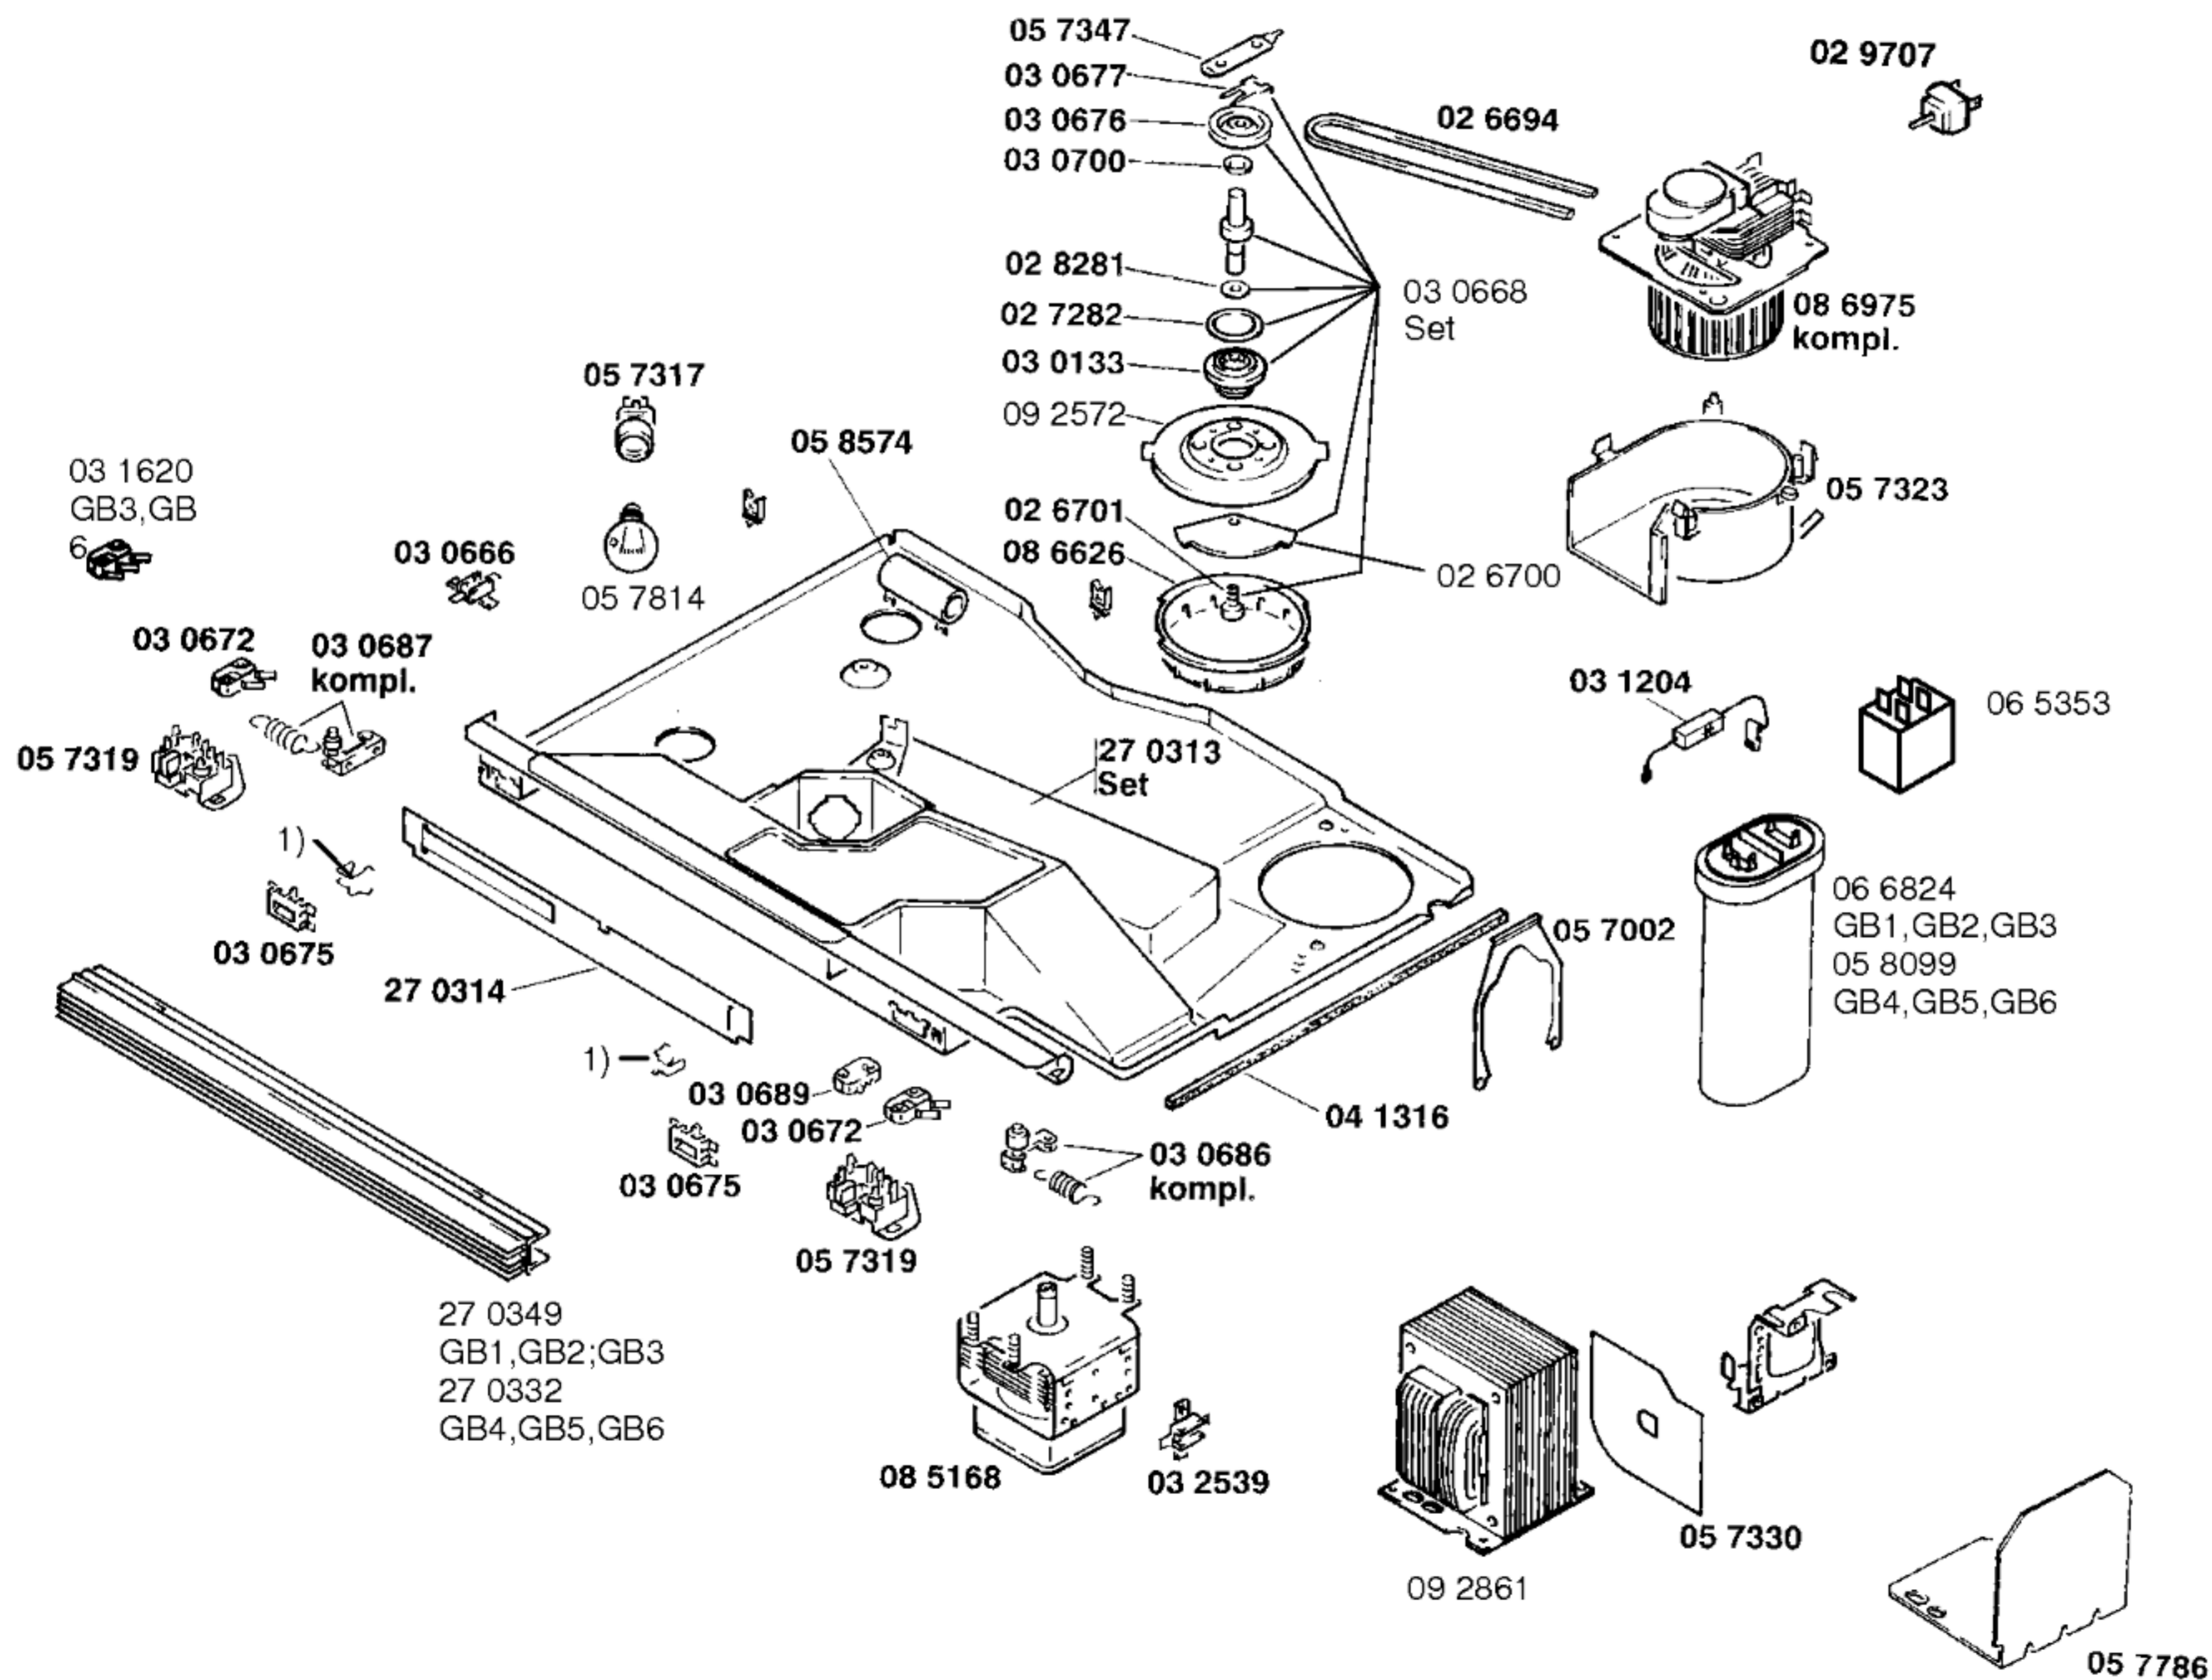

1) 03 0678  
 GB1,GB2,GB3