




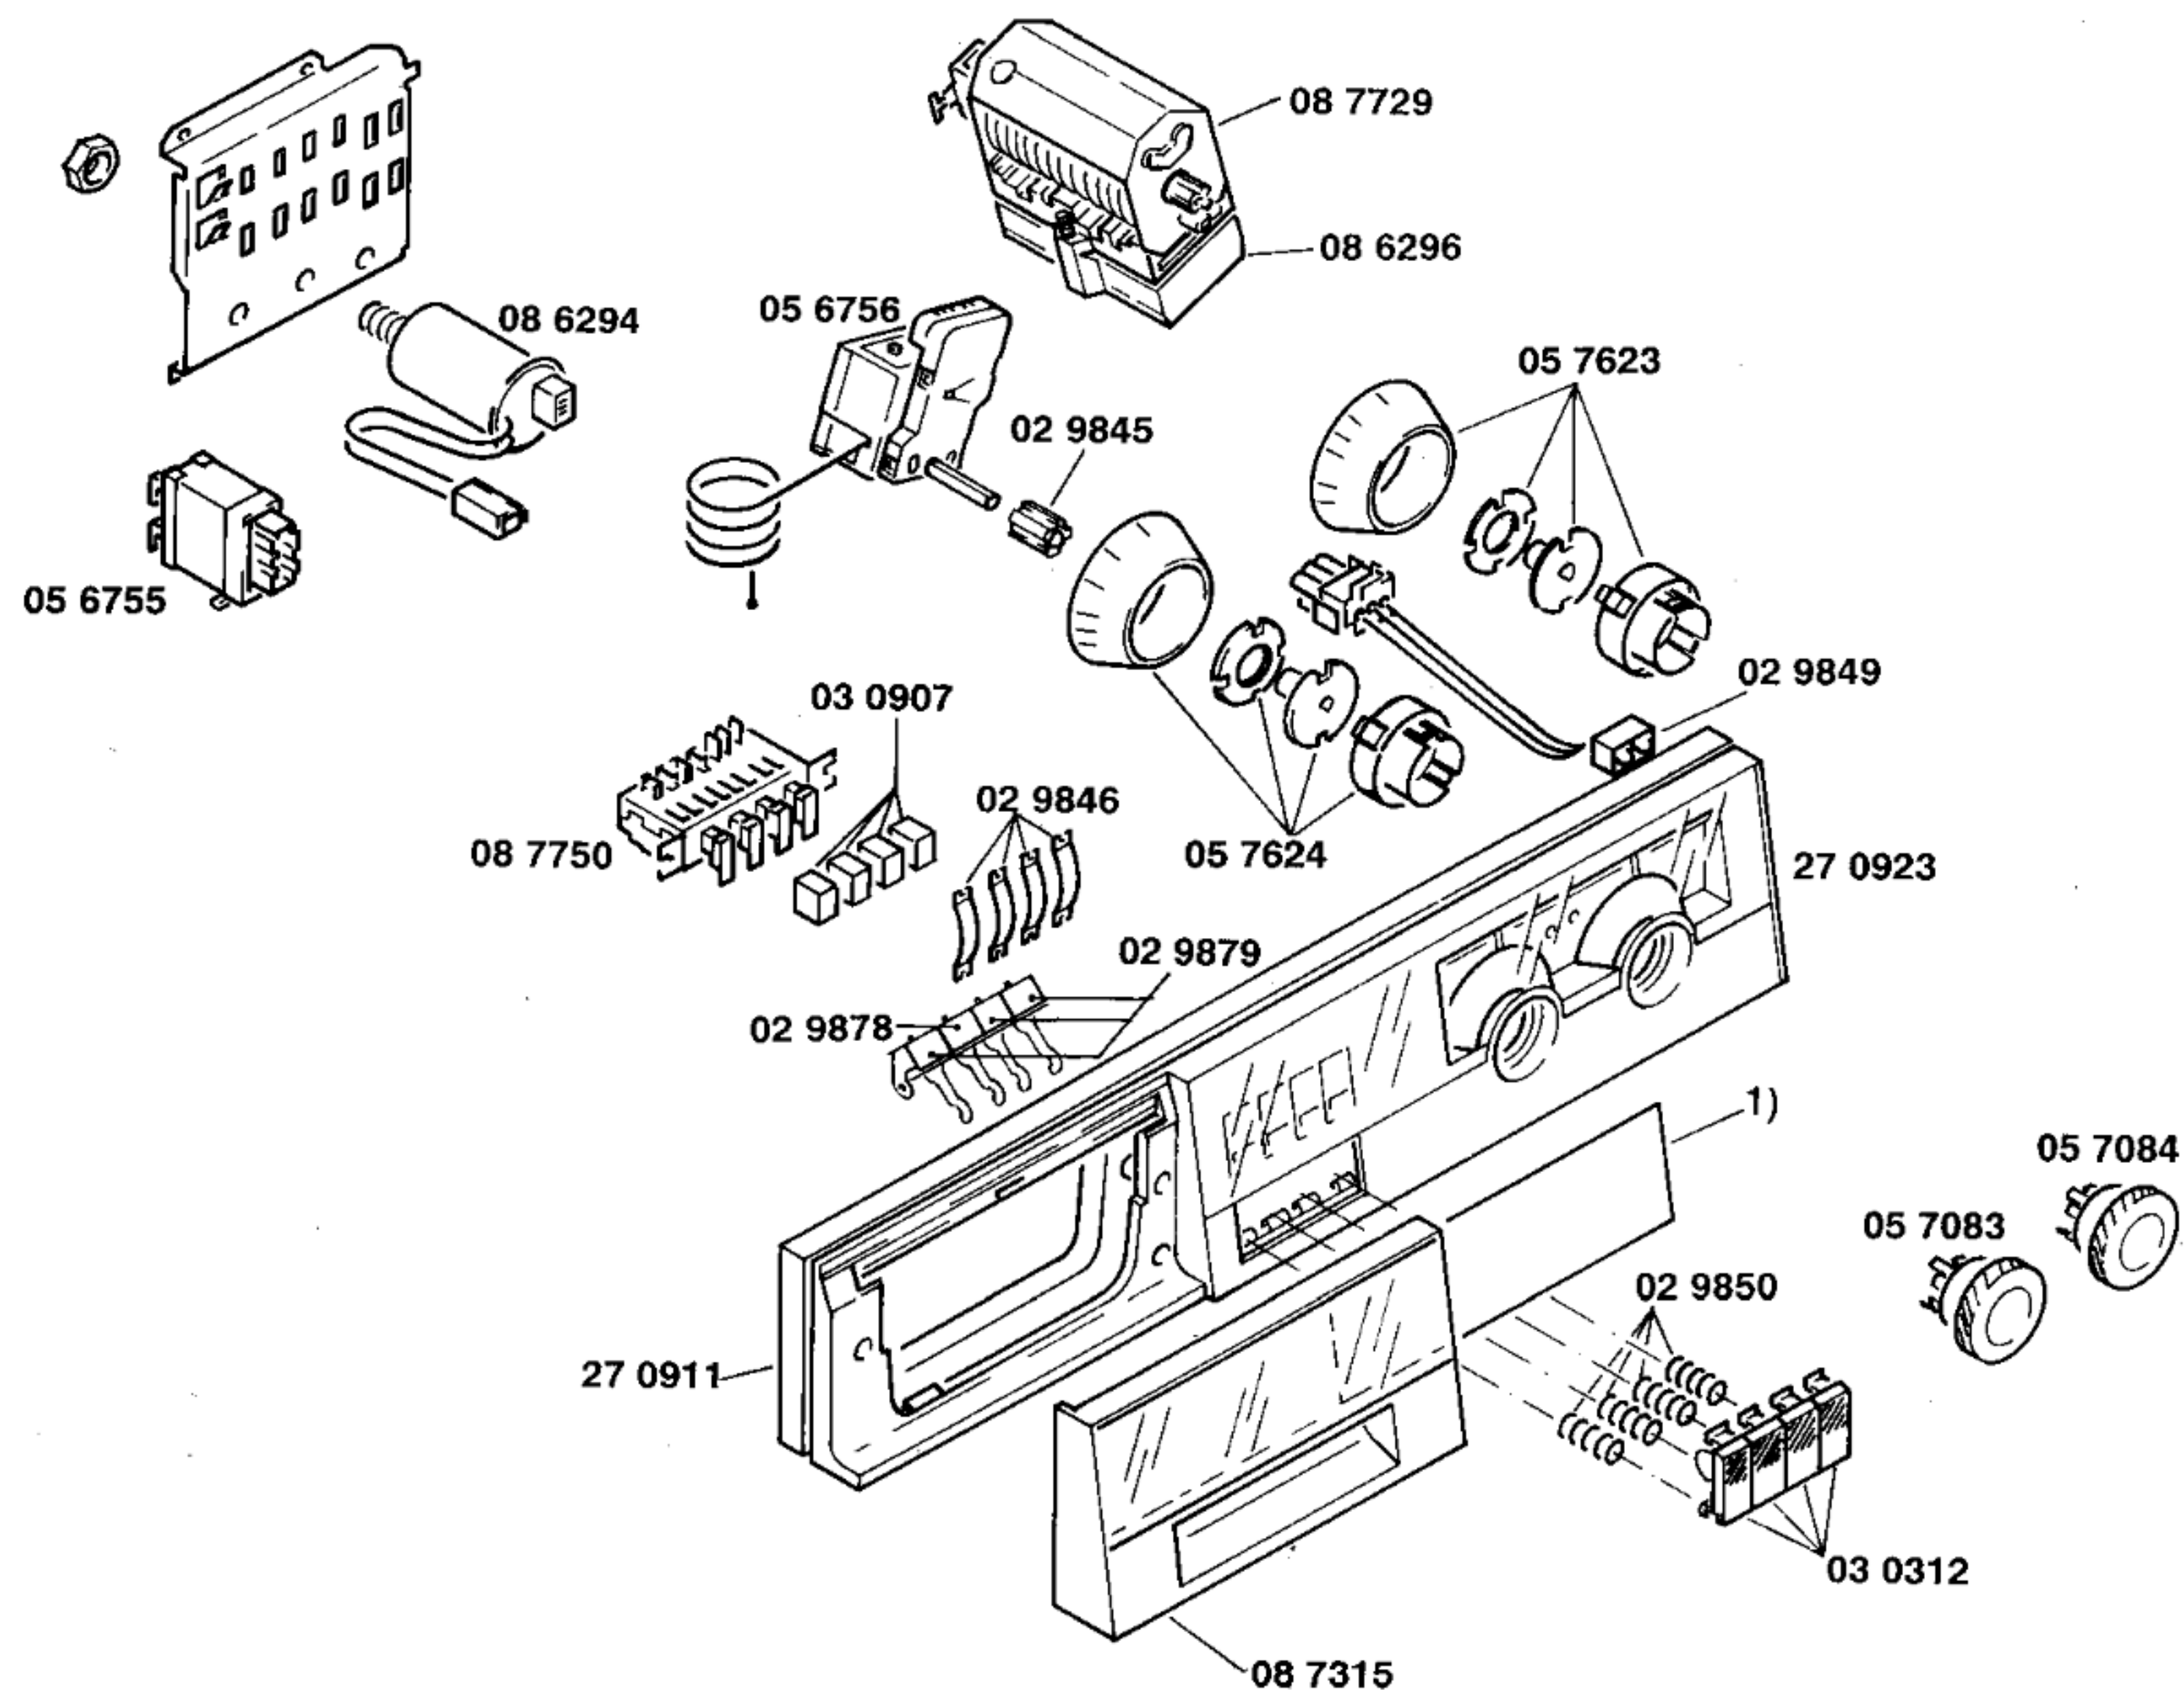


- 1) 08 6327
(D)
08 6328
(N)
08 6329
(E)
08 6330
(S)
08 6331
(DK)
08 6332
(F)
08 6333
(NL)
08 6334
(SF)
08 6687
(TR,YU,E,GB)
08 6689
(GB)
Gebrauchsanweisungen:
51 4127
(D)
Programmtabellen:
51 3552
(D)
51 3555
(NL,F,E,GB)
Aufstellanweisungen:
51 3965
(D)
51 3969
(NL,F,E,GB)

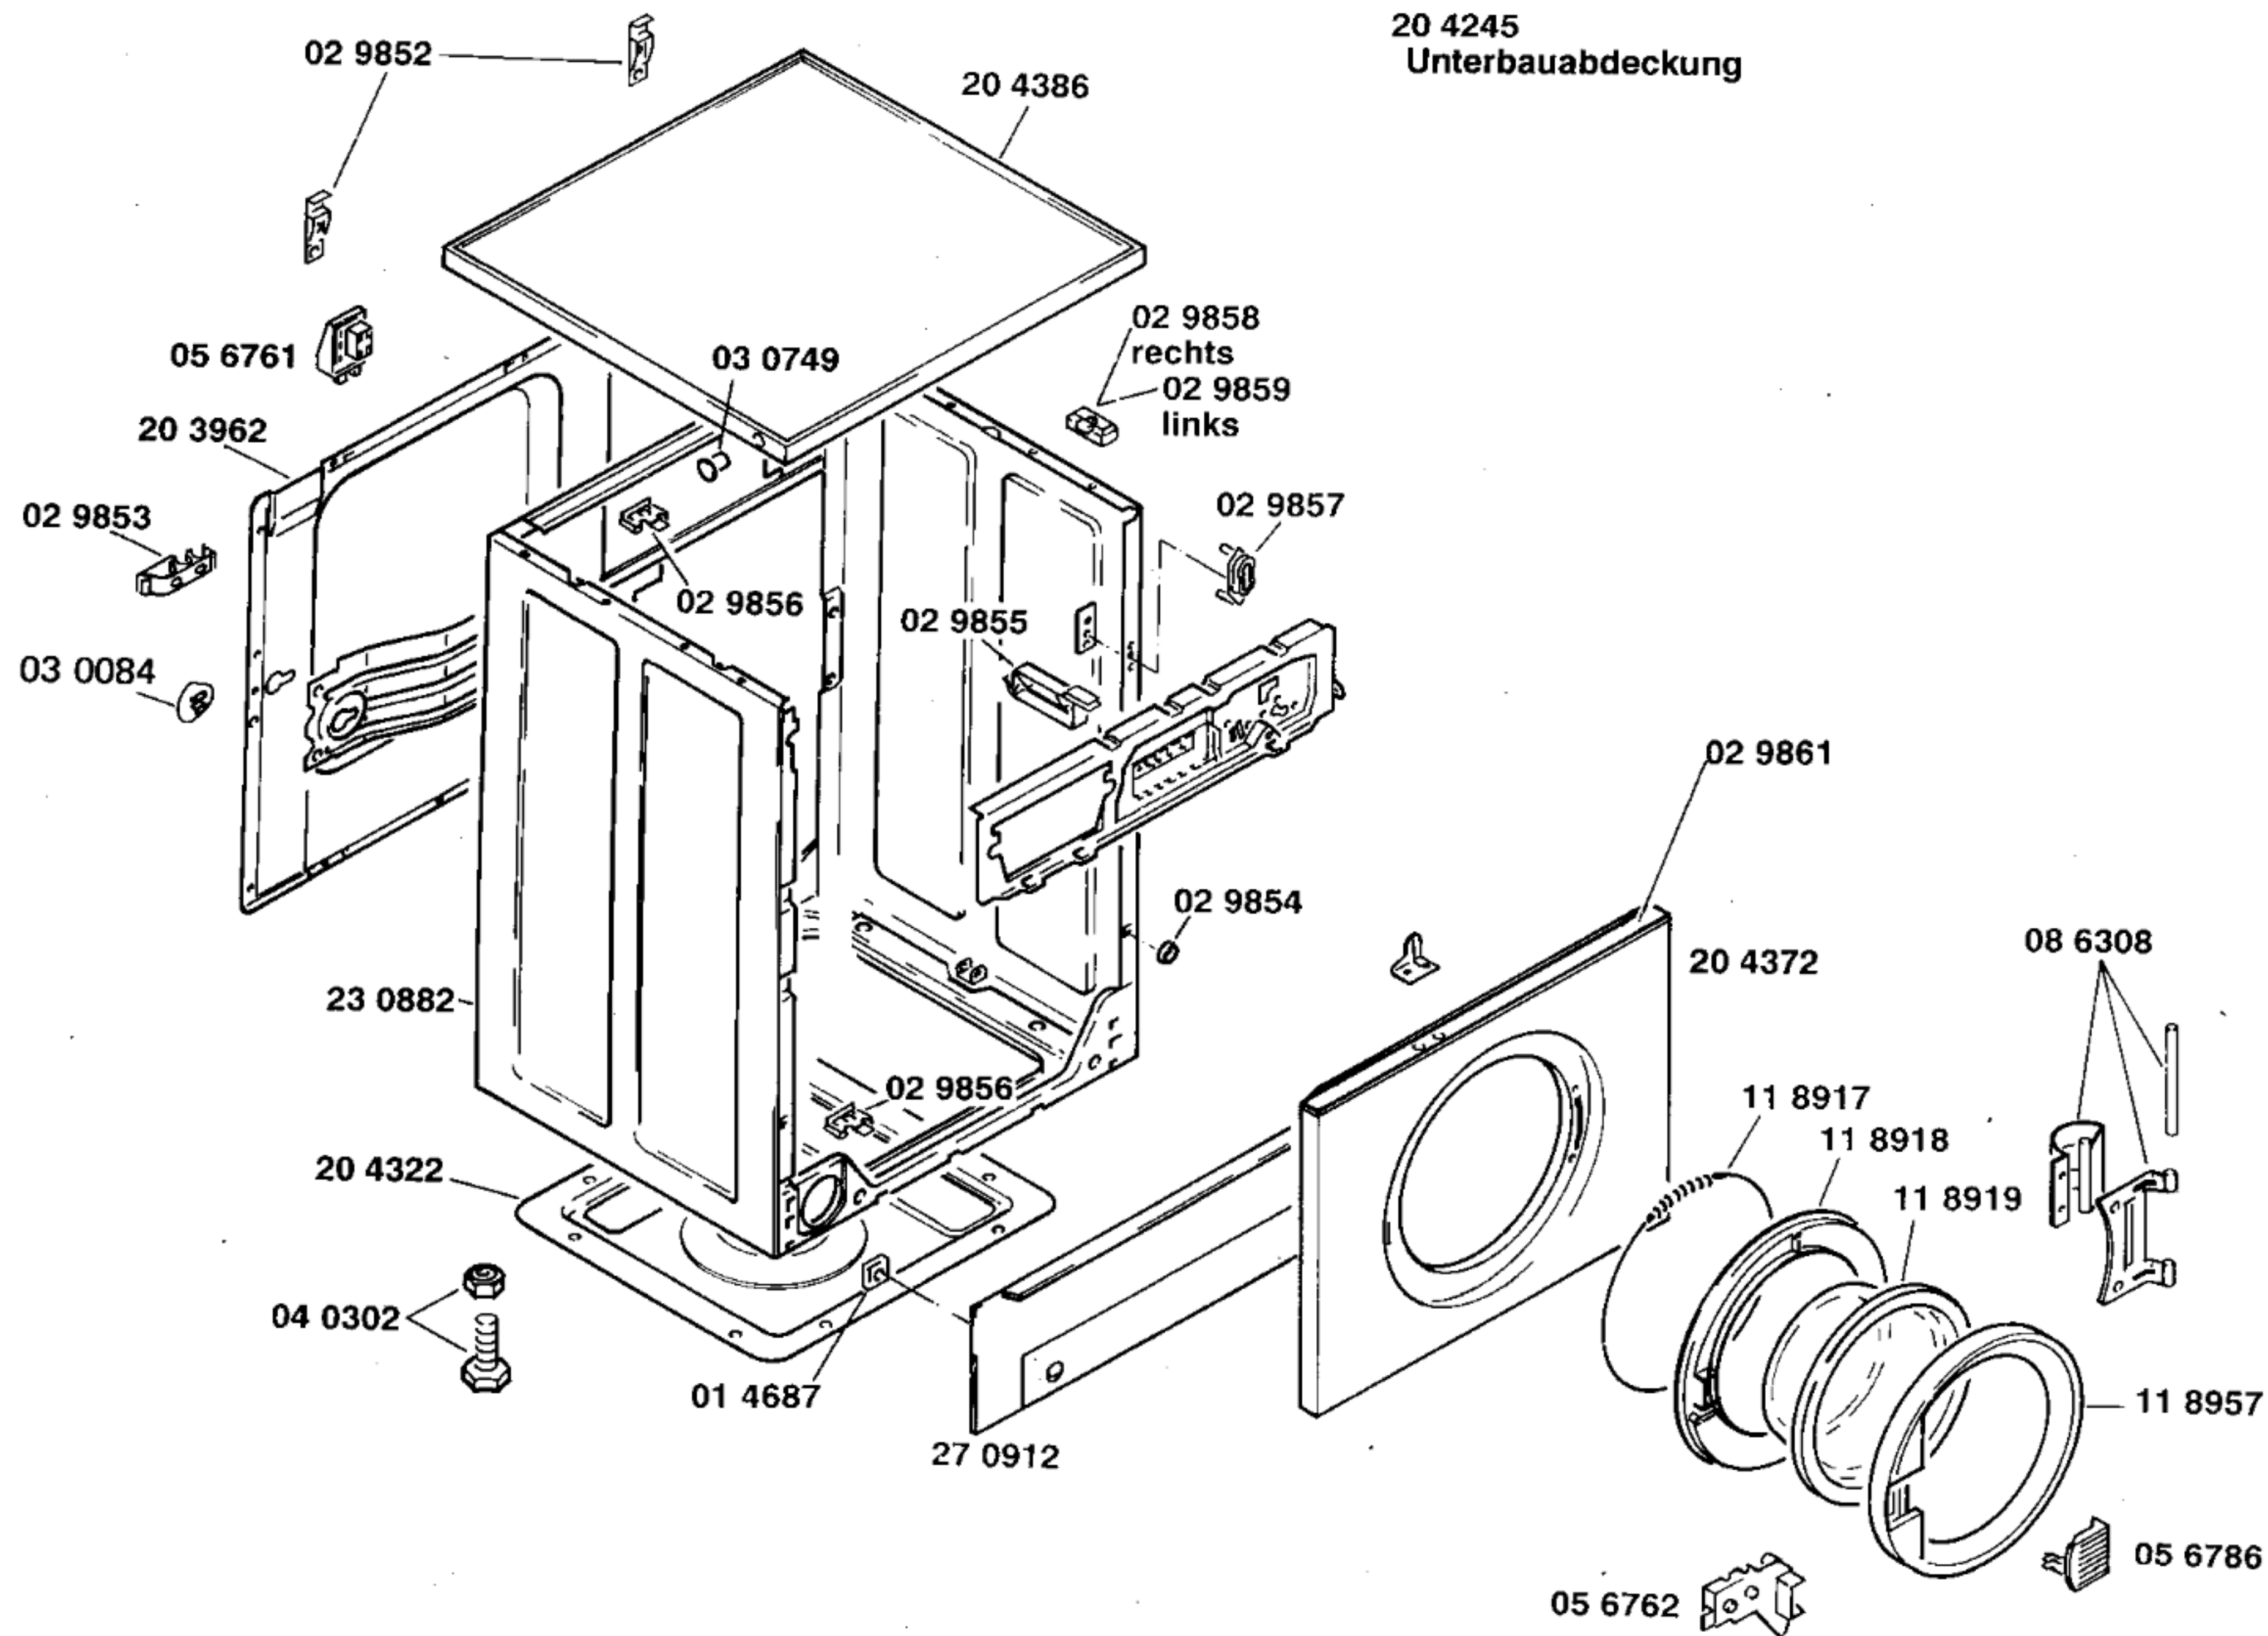

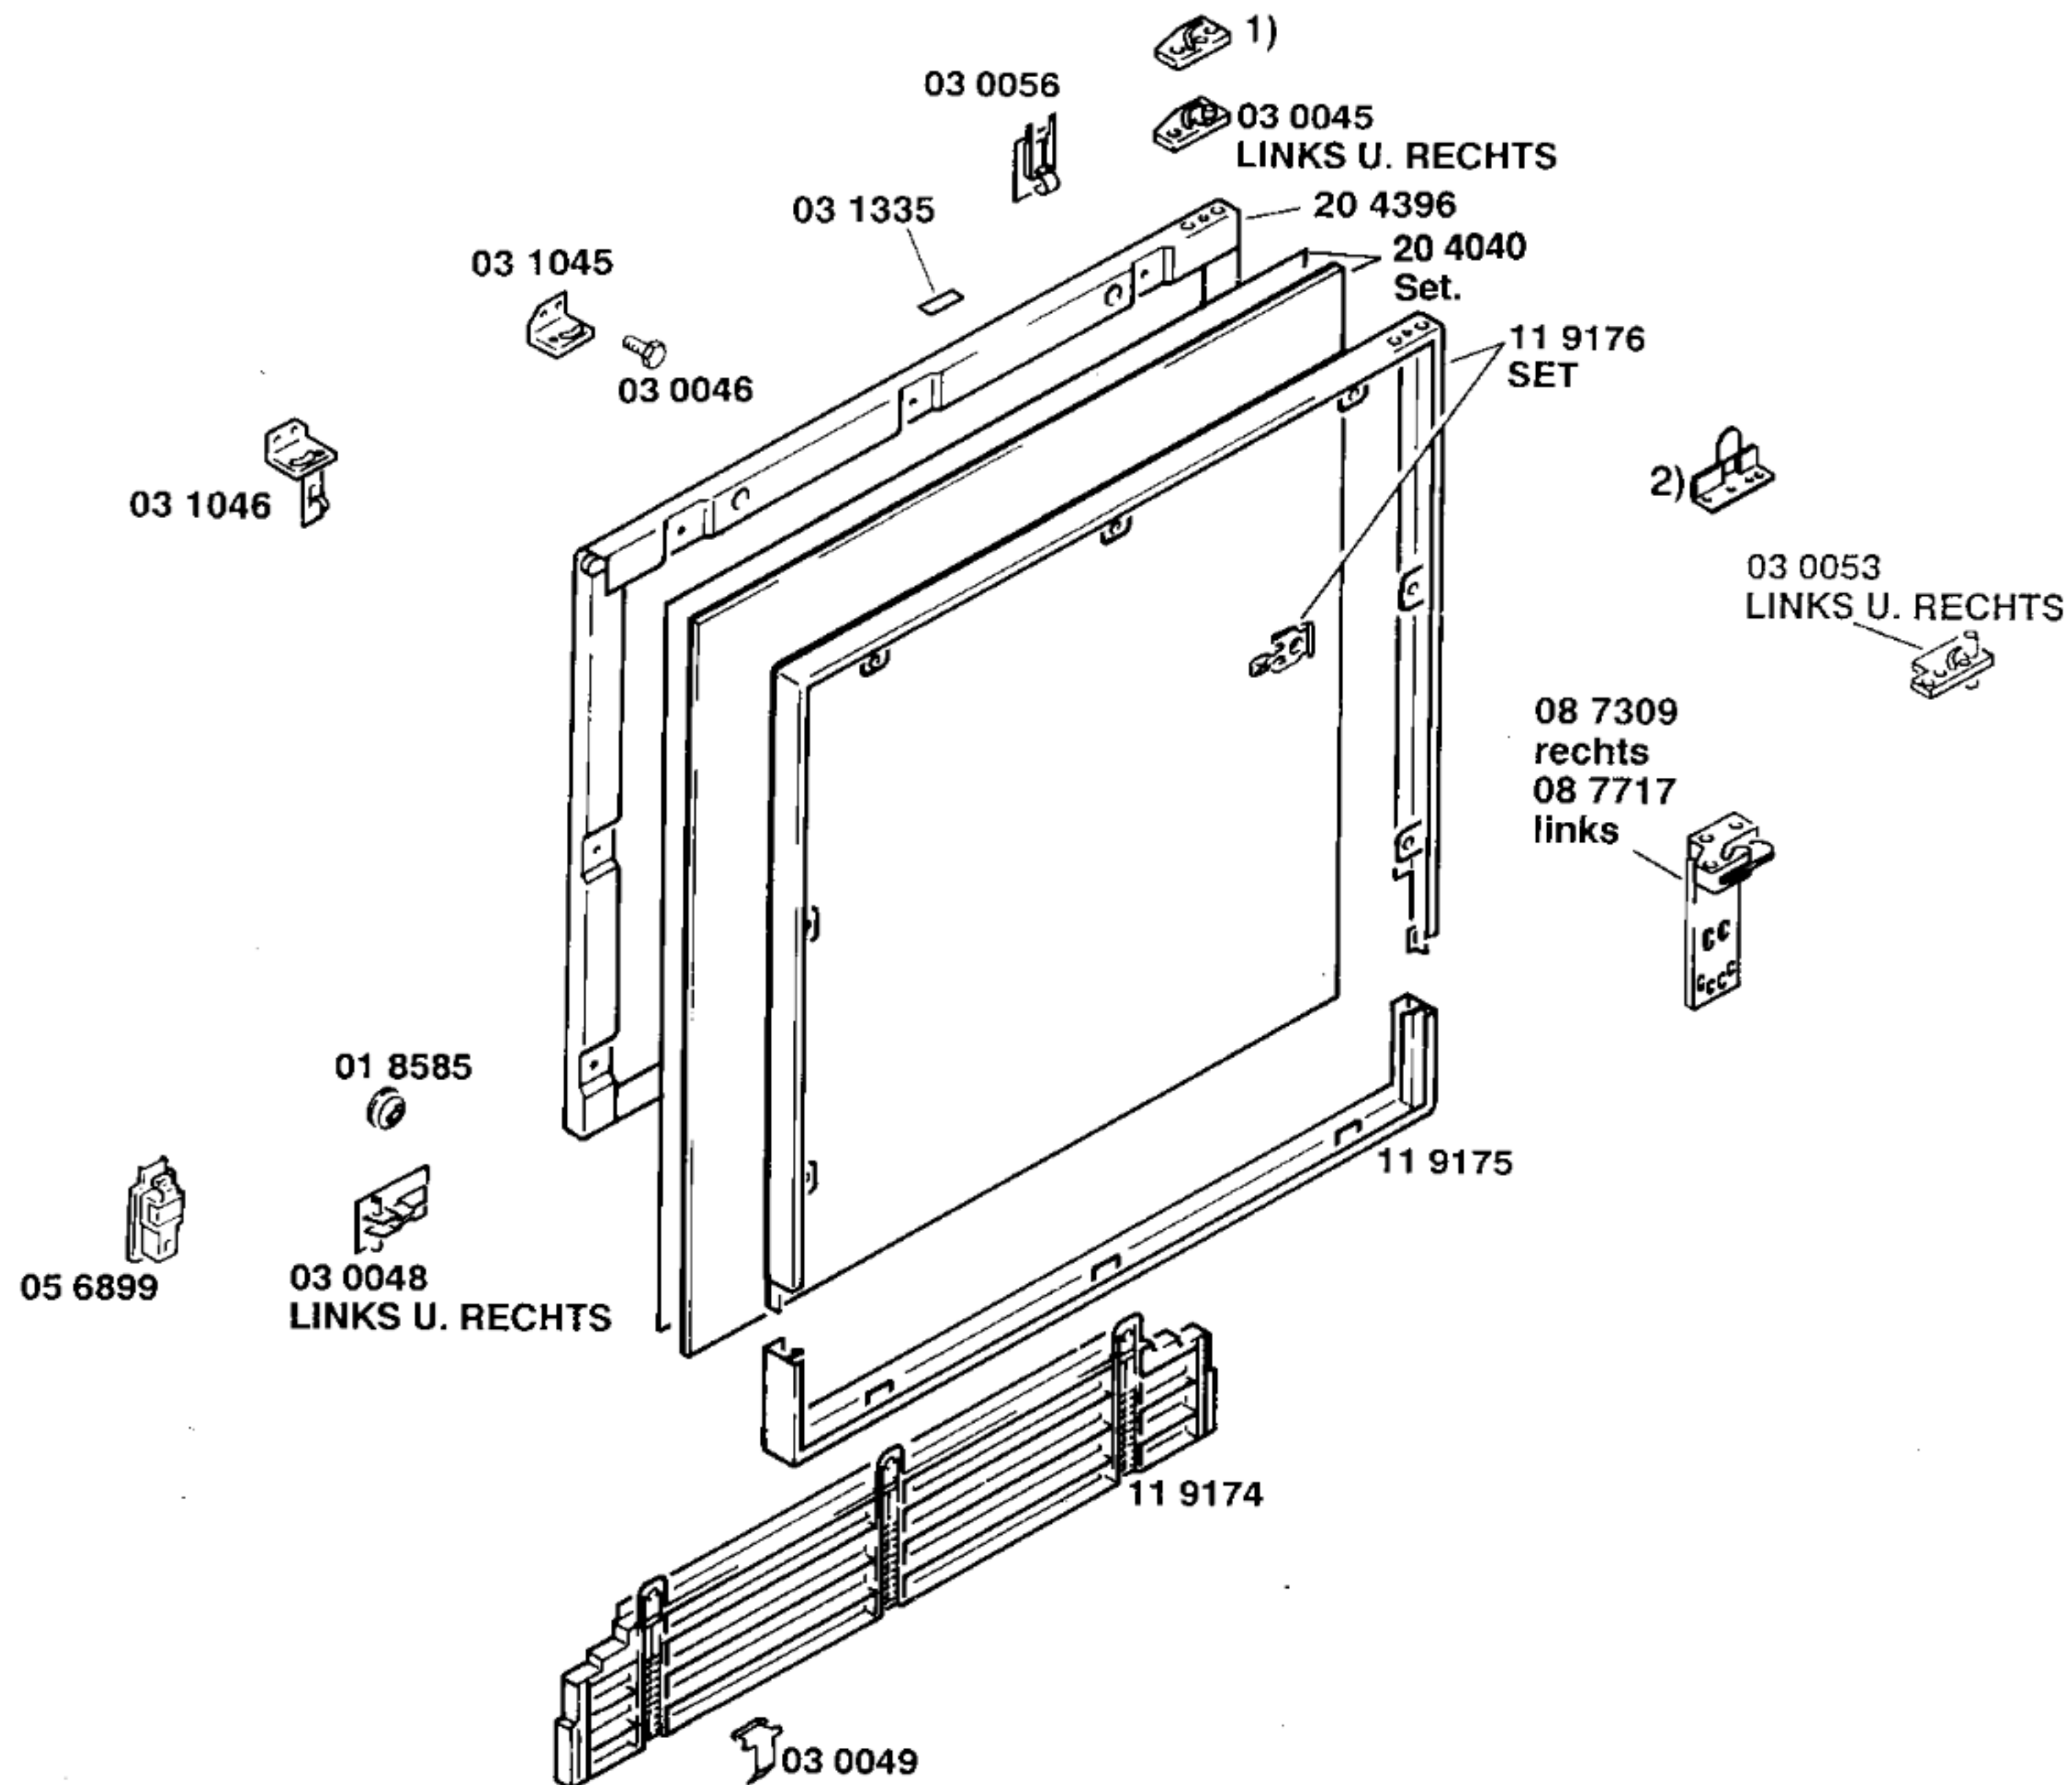

- 1) 03 0055
LINKS
03 0054
RECHTS
- 2) 03 0052
RECHTS
03 0051
LINKS

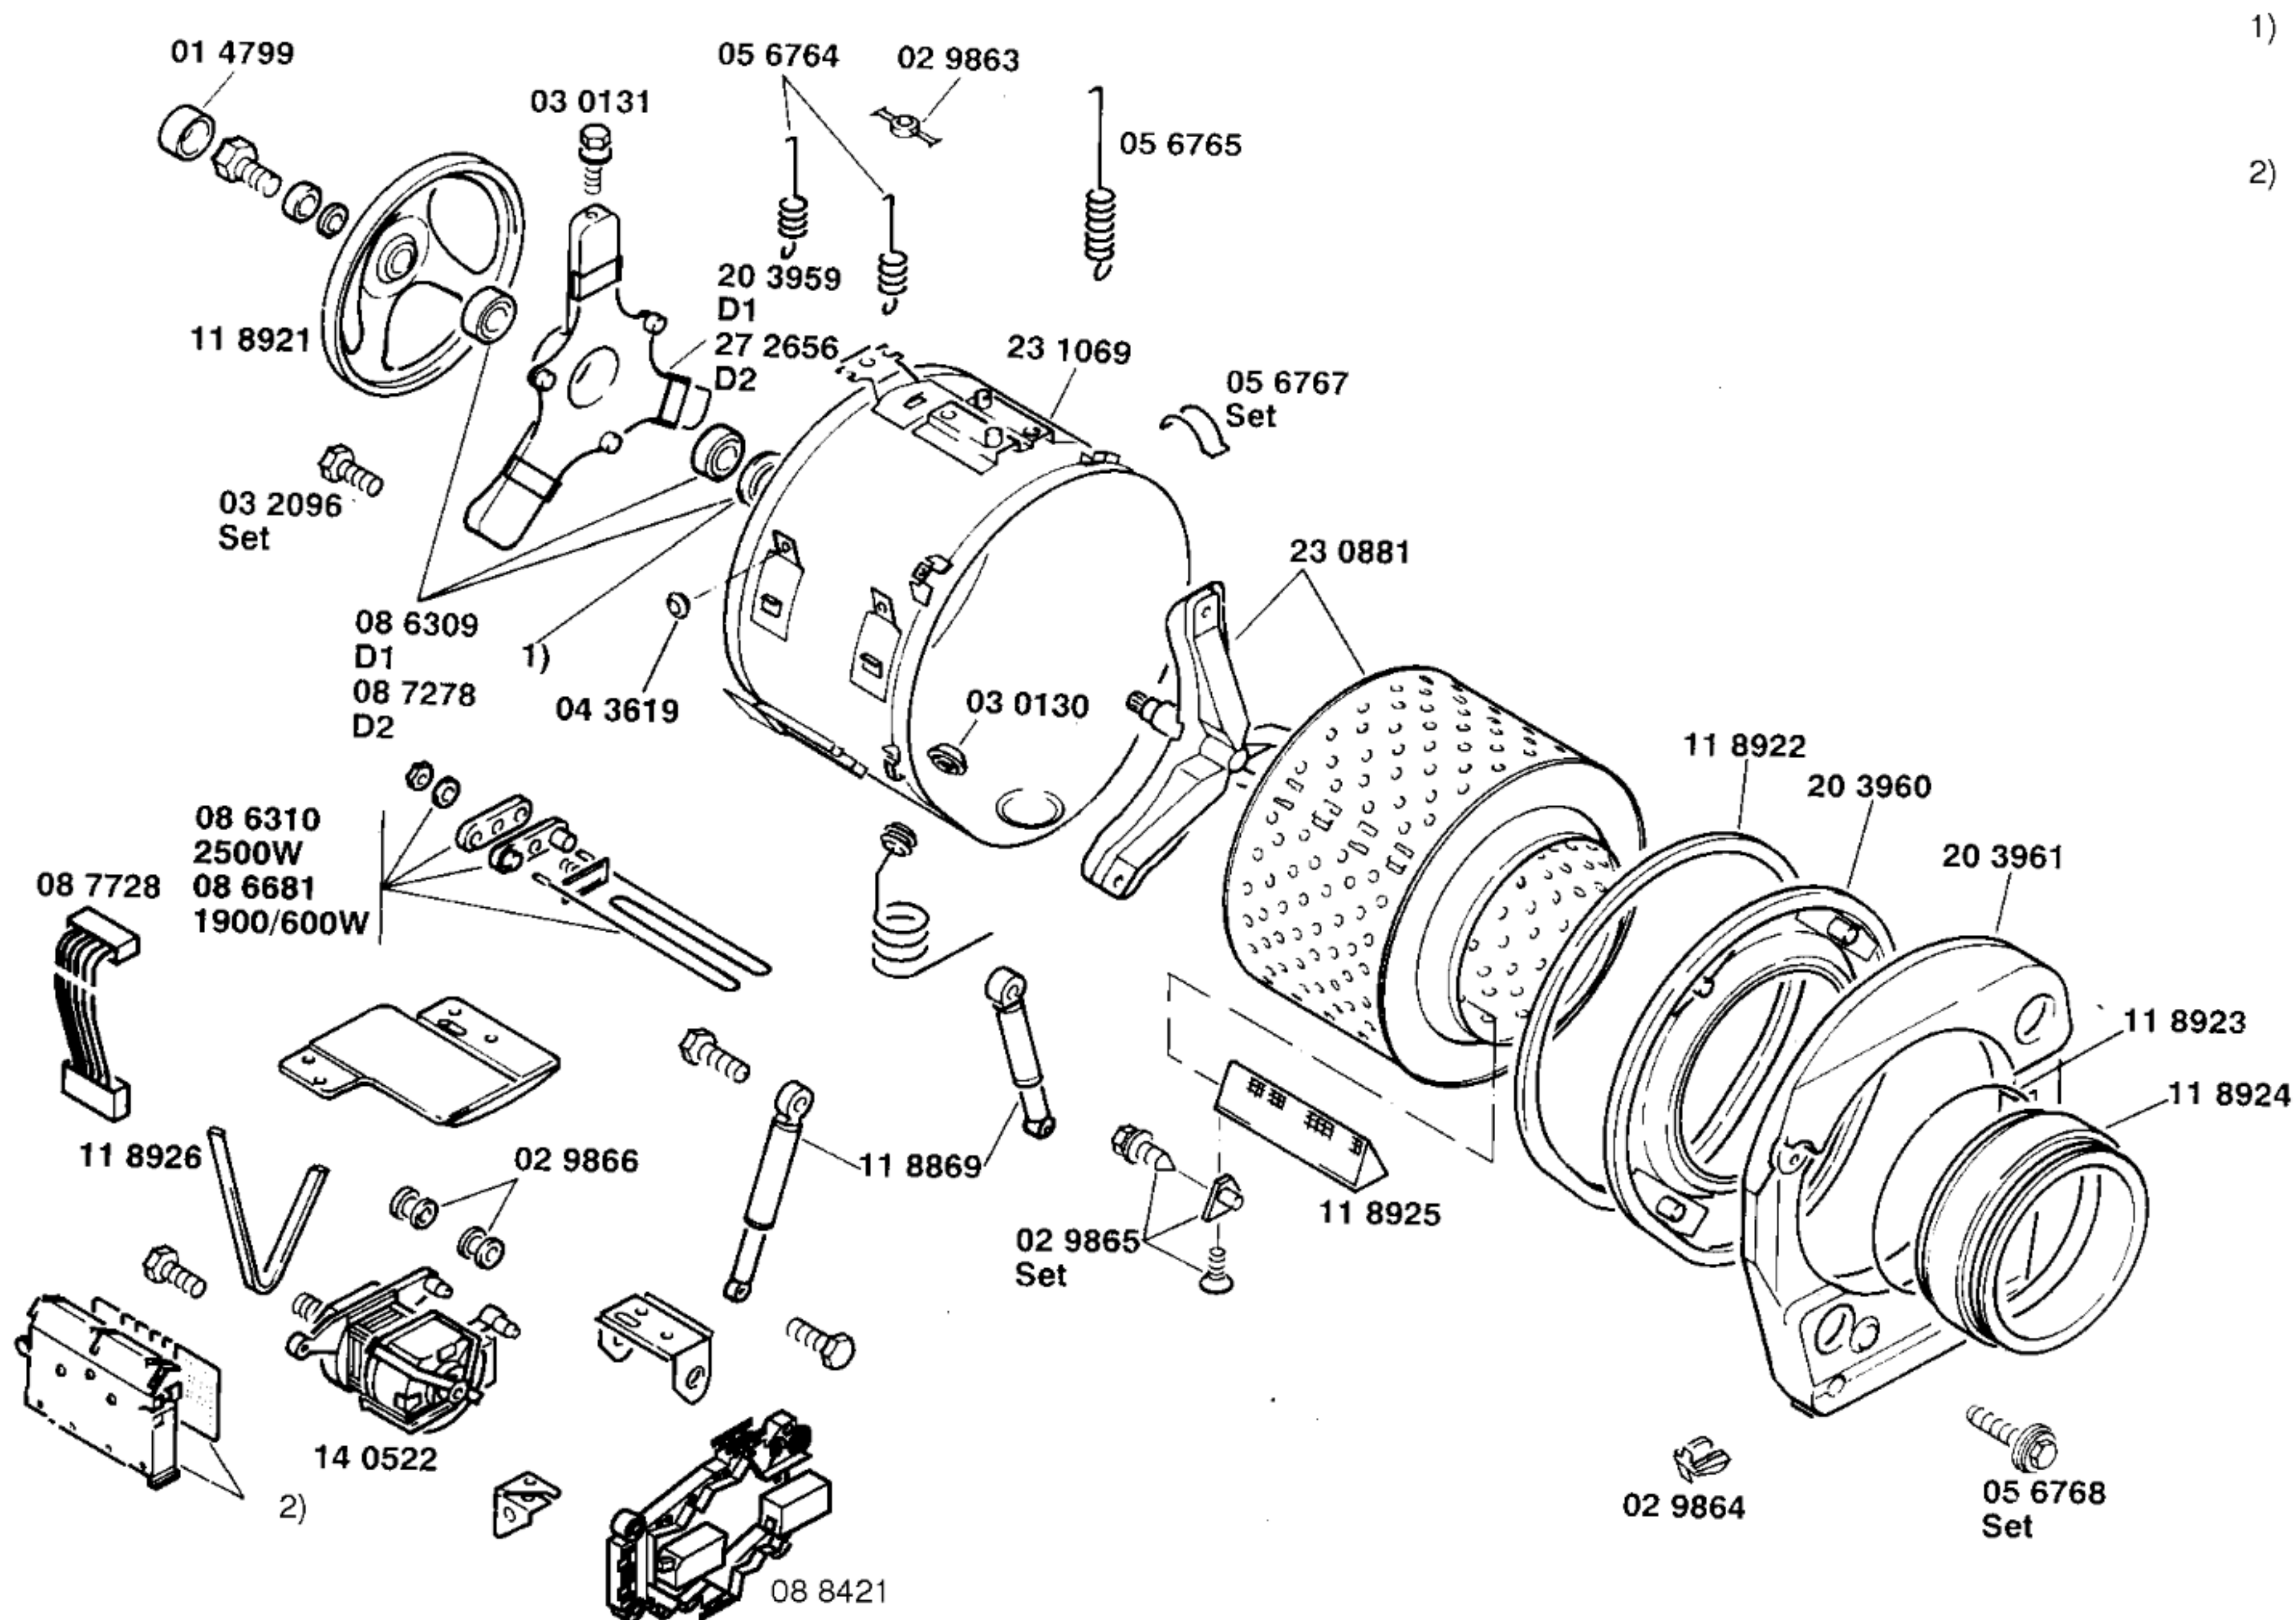

- 1) 05 6766
 D1
 05 8436
 D2
- 2) 27 1715
 15 5272
 Triac-Motorleistung

