 

 


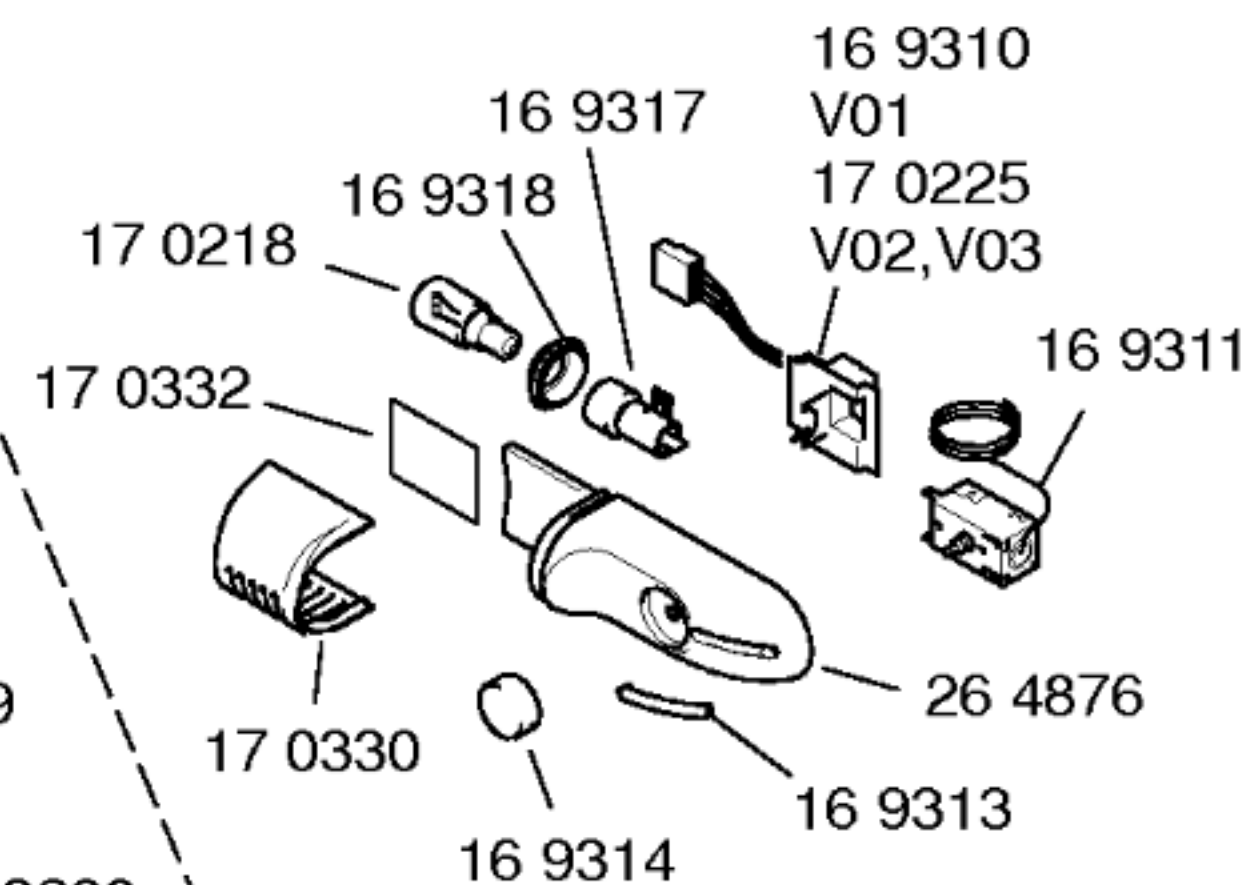

07 4445
V01,V02,V04,V06
09 6325
V03,V05

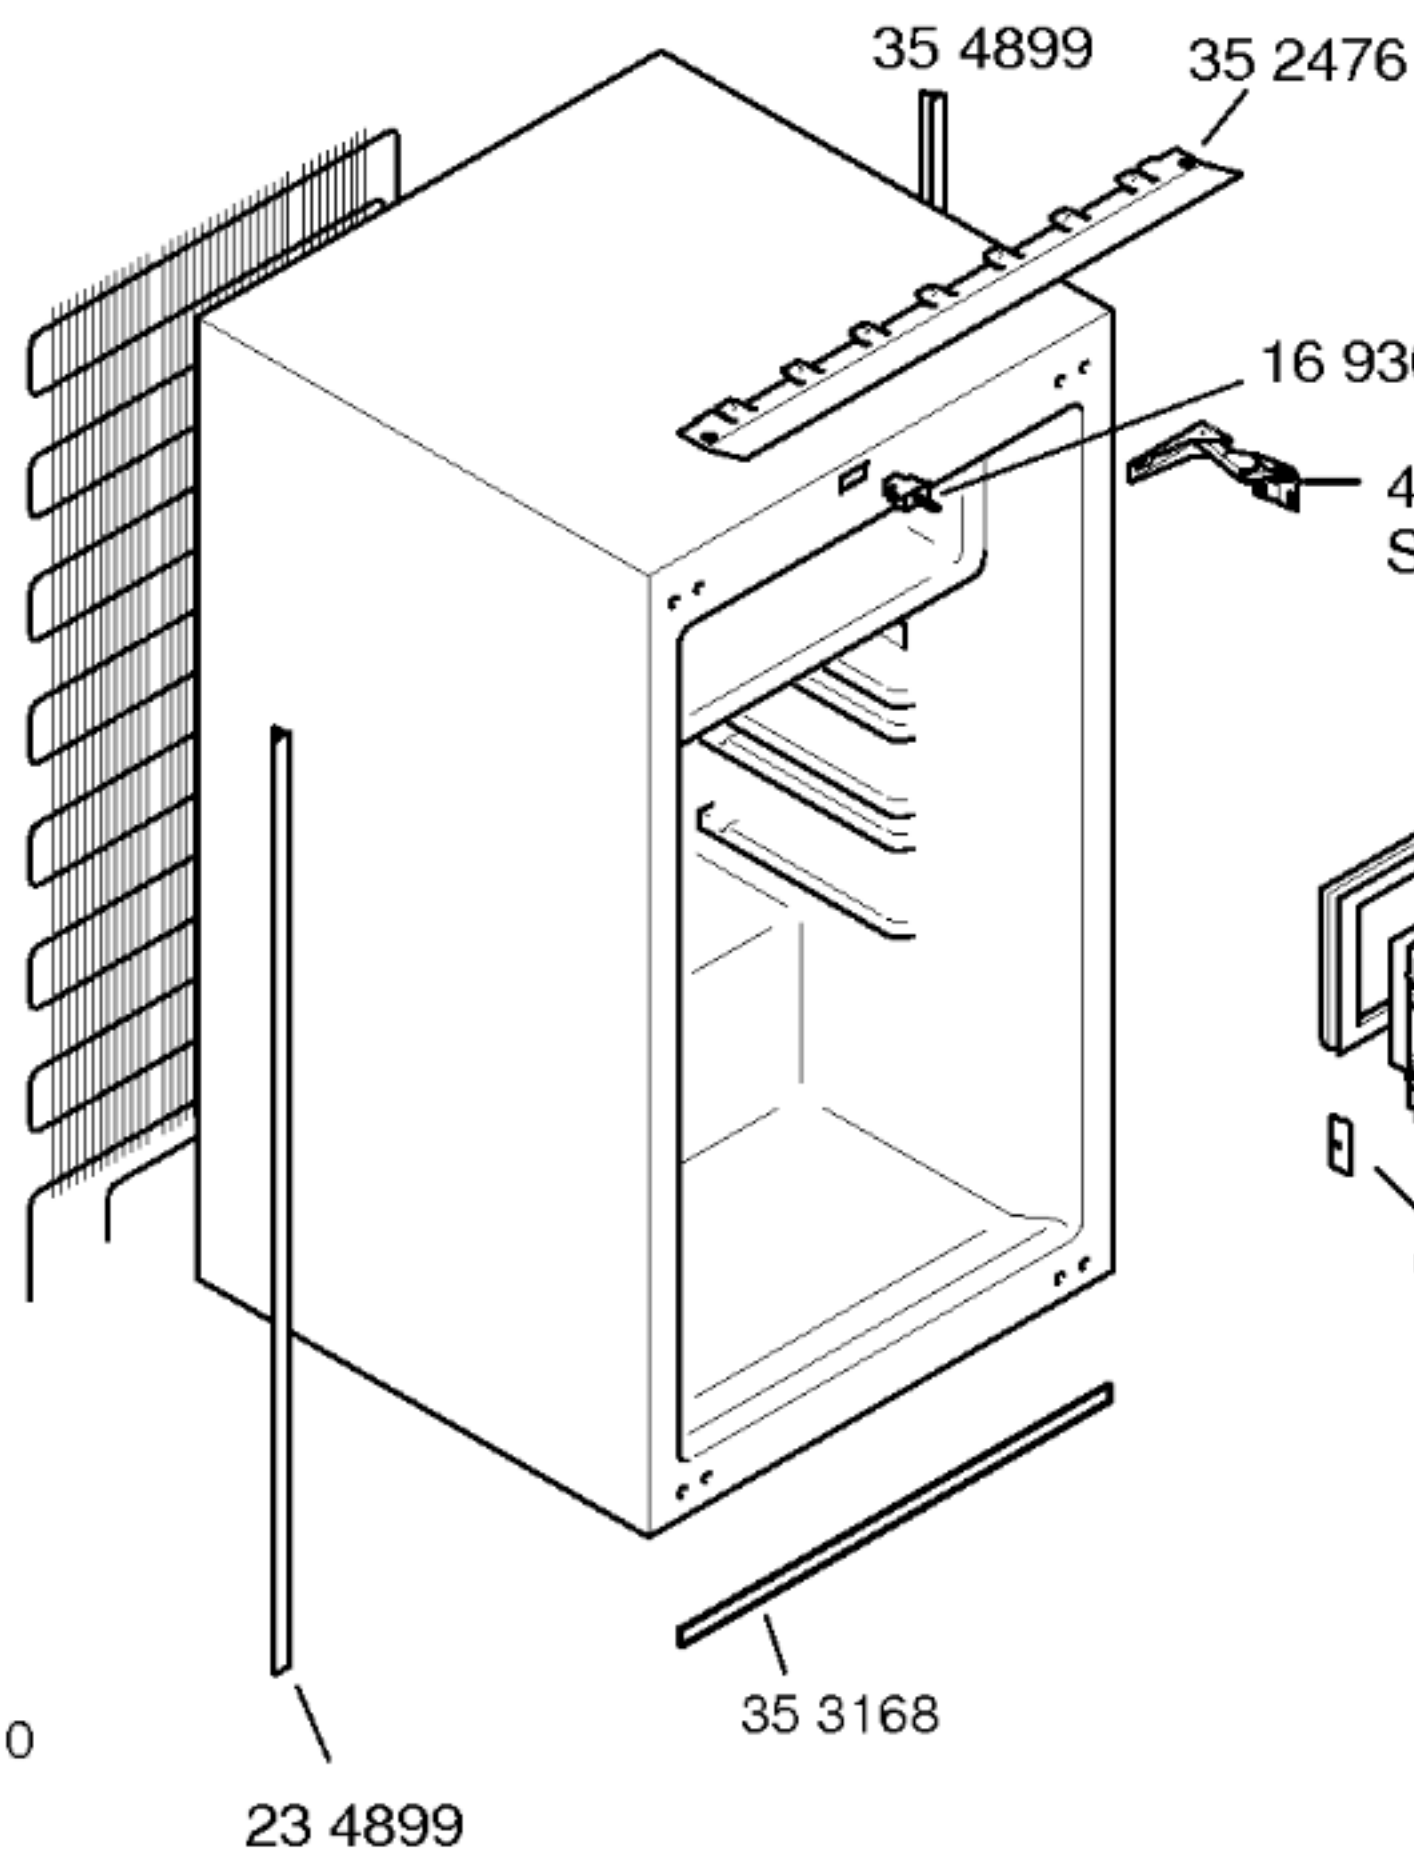

V01-V03

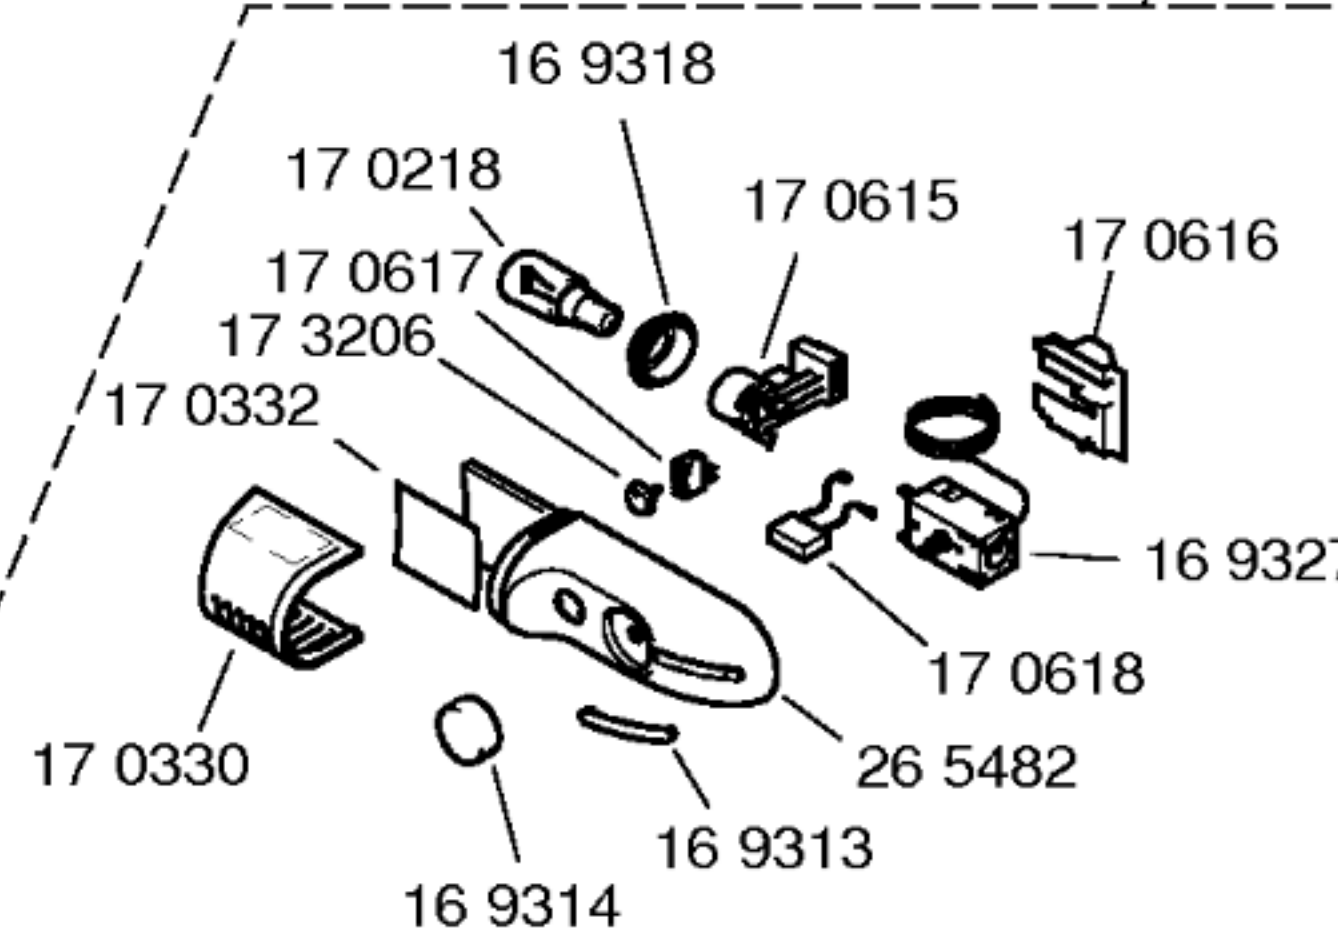



V04-V06

Gebrauchsanweisung
52 2548
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

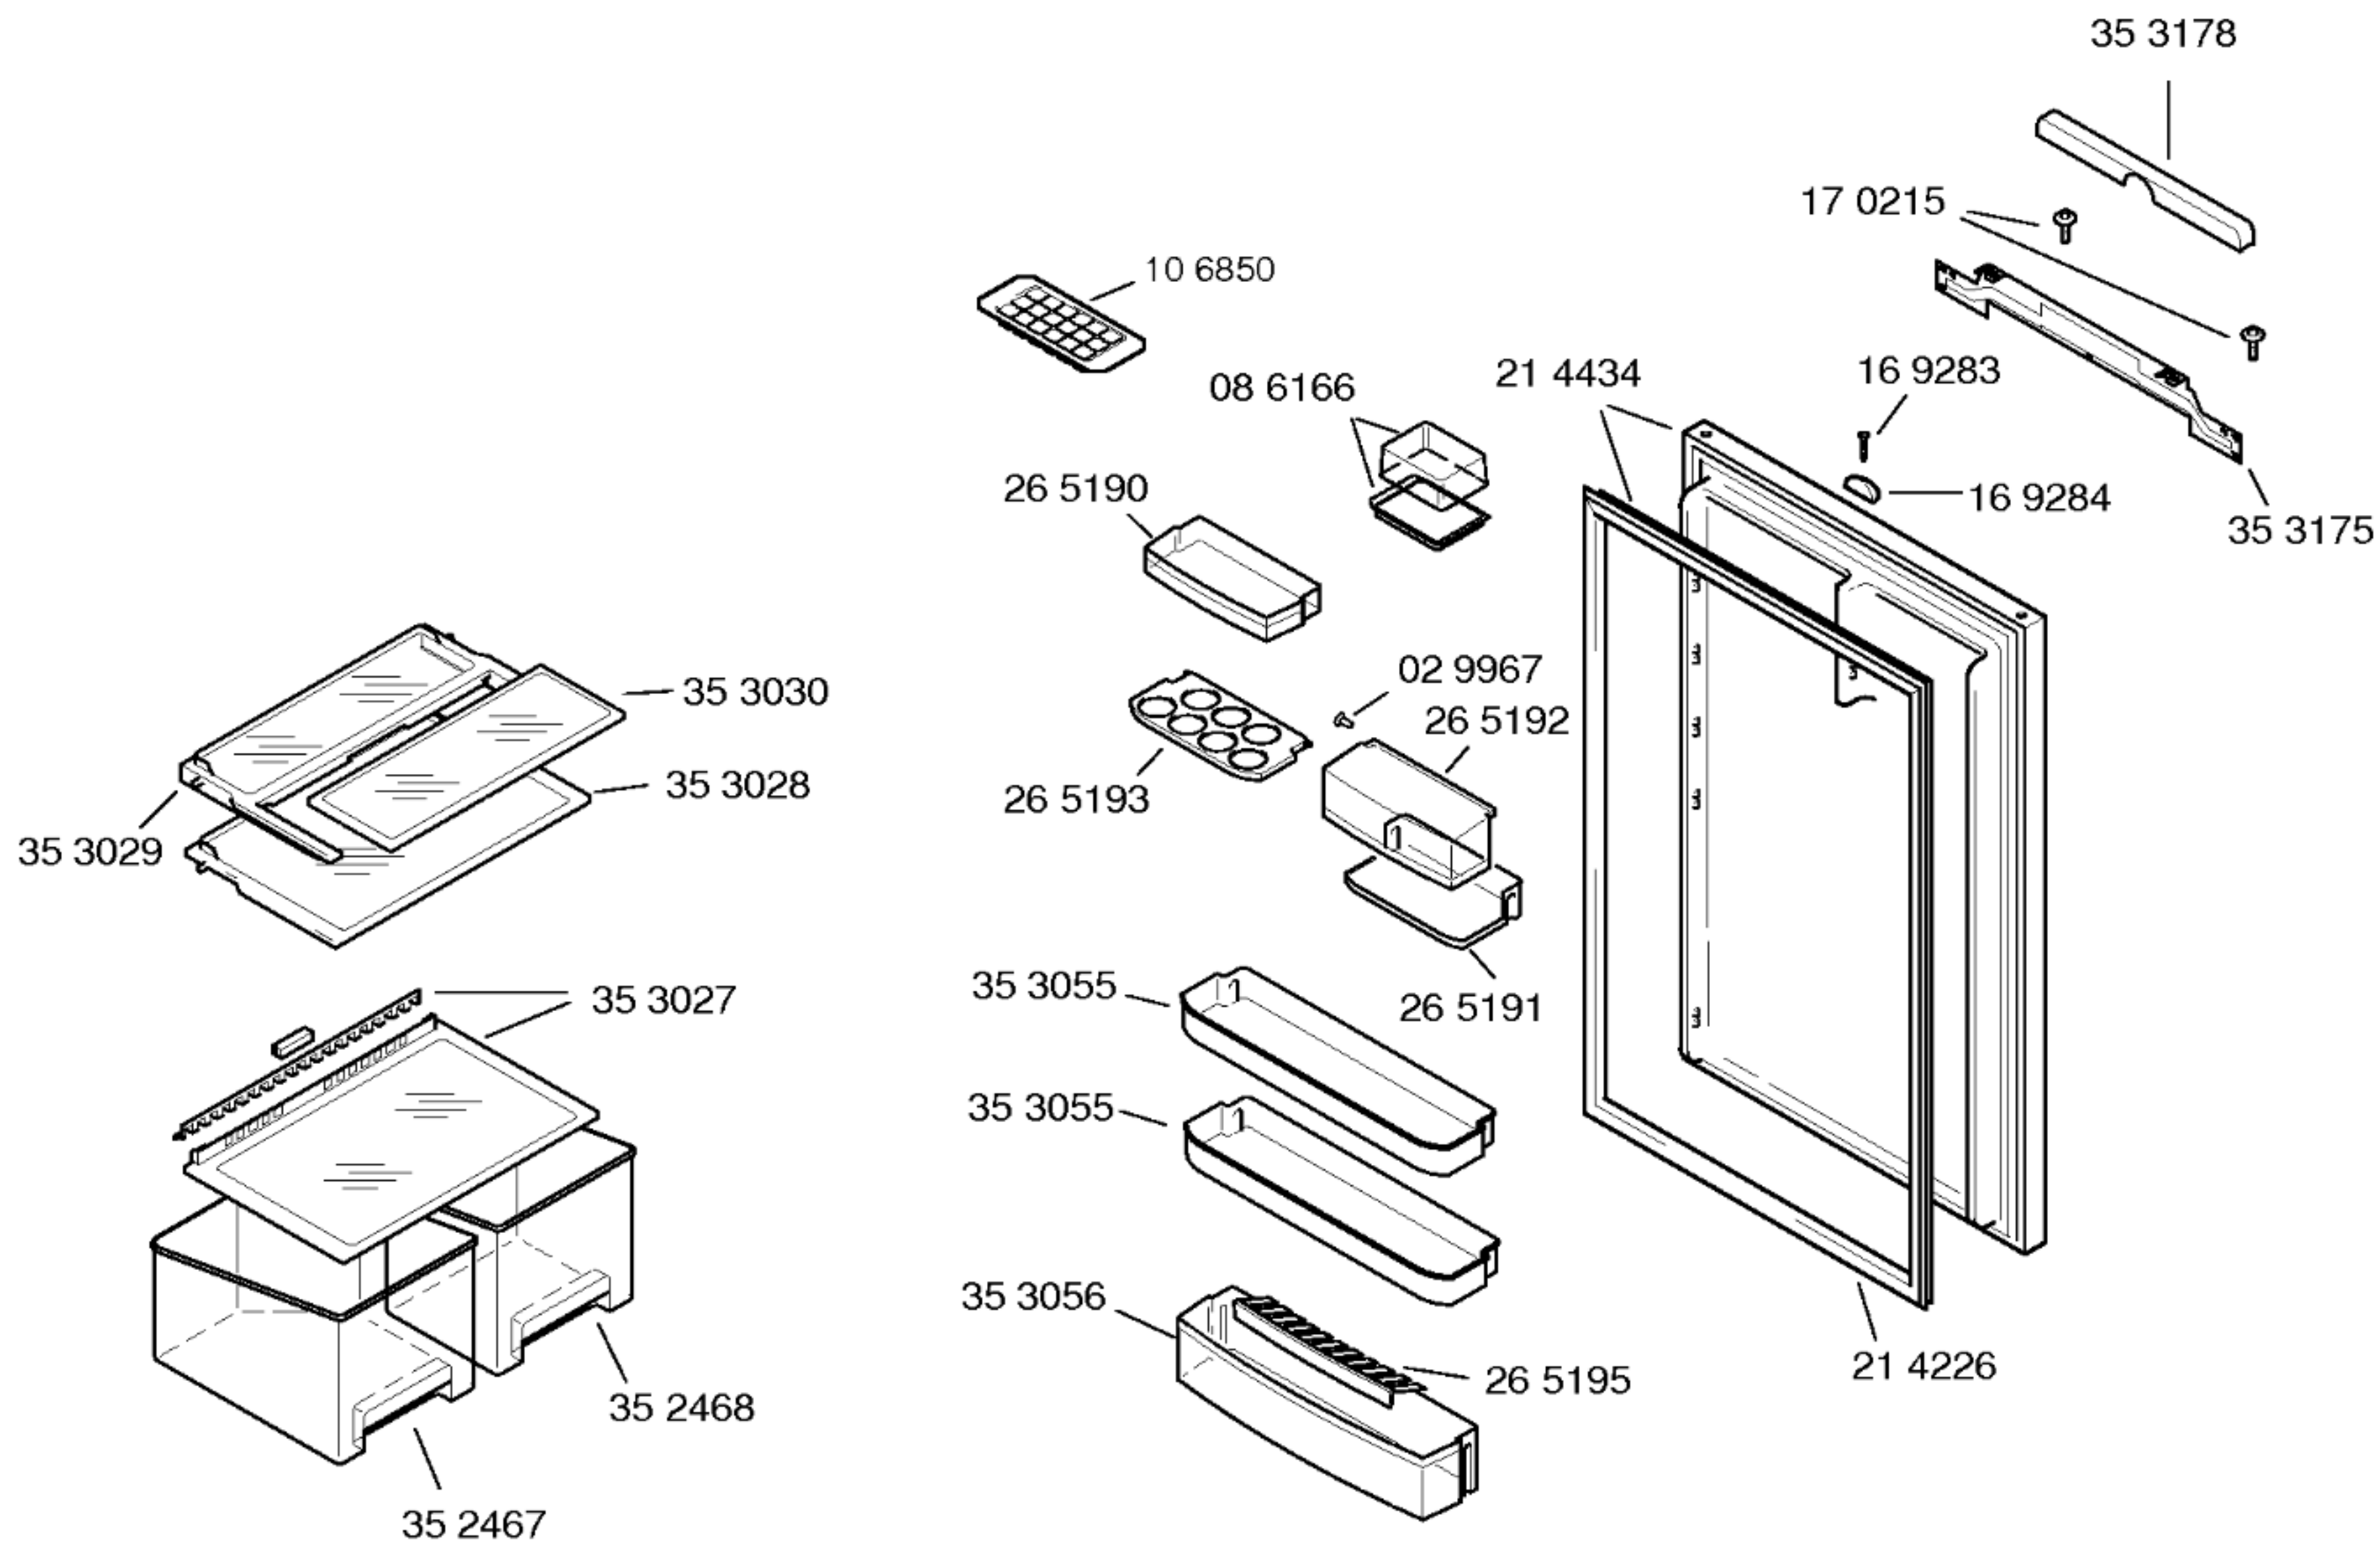

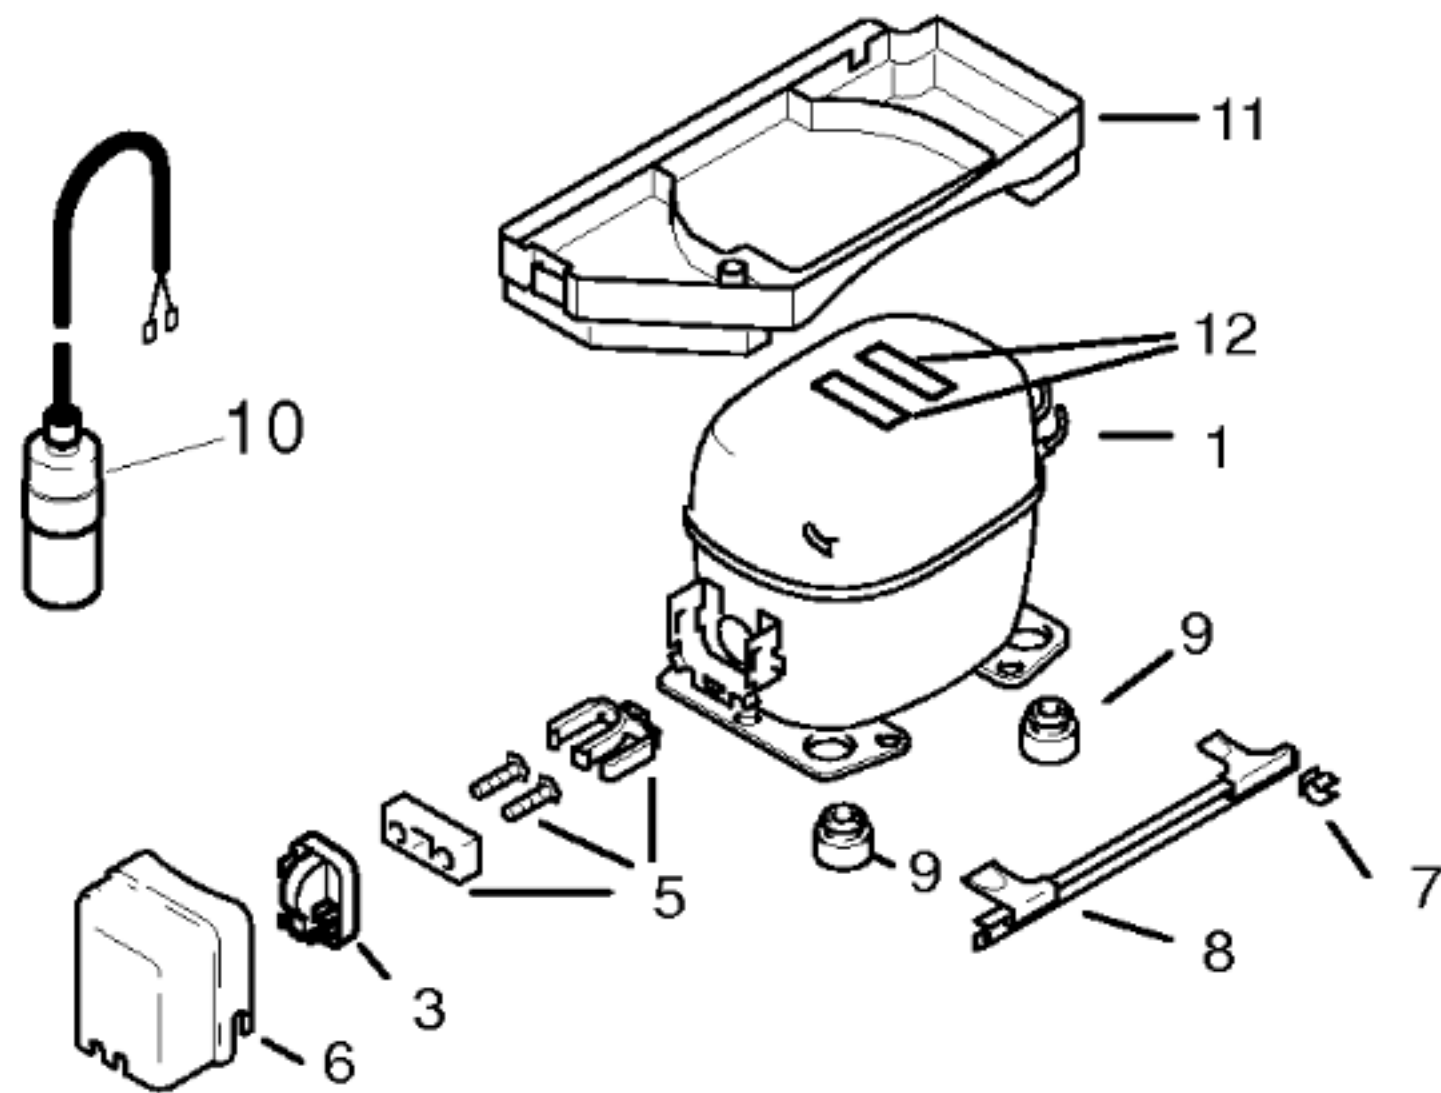

Pos.	Danfoss	Aspera	
	TLY6K	EMT 32 CLP	
1	14 1680	14 1838	
2			
3	15 1055	17 0880	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319		
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11	26 4878	26 4878	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		Aspera
Typ/Type		TLY6K		EMT 32 CLP
Förderleistung/Delivery/Débit	l/h	1026		1073
Anlaufstrom/Starting current/Cour de démarrage	A	4,4		3,5
Widerstand/Resistance/Résistance	Ha/main/prin	34,0		28,4
	Hi/aux	41,0		24,7
Temp.-Regler/Thermostat		Ranco		
Typ/Type		kalt		warm
Regelstellung/Position		+4,0		+4,0
Schaltwerte/Switching values	"warm"	-32,0		-12,0
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge		R600a		*
Anschlußwert/Conn.load/Puiss. connectée		W	67	68
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	W			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	W			
Temp.-Regler/Thermostat				
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	W			
Spannung/Voltage/Tension	V			

* siehe Typenschild