



Aufstellanweisungen

51 1820
(D,GB,F,I,NL,E,P)
51 1821
(D,F,I,S,DK)
bis FD 6409
51 2223
(D,F,I,S,DK)
ab FD 6410
51 1868
(D,I,N,SF)

Gebrauchsanweisungen

51 1848
(D,GB,F,I,NL,E)
51 1849
(D,F,I,S,DK)
51 1869
(D,I,N,SF)
bis FD 6603
51 2886
(D,GB,F,I,NL,E)
51 2888
(D,F,I,S,DK)
51 2887
(D,I,N,SF)
ab FD 6604

Programmtabellen

51 1850
(D,GB,F,I,NL,E)
51 1851
(D,F,I,S,DK)
51 1870
(D,I,N,SF)
bis FD 6603
51 2889
(D,GB,F,I,NL,E)
51 2891
(D,F,I,S,DK)
51 2890
(D,I,N,SF)
ab FD 6604

- 1) 08 7035
(Einlage, D)
Wechselfolien:
08 7019
(D)
08 7018
(S)
1) 08 7017
(DK)
08 7016
(SF)
08 7015
(N)
08 7014
(NL)
08 7013
(GB)
08 7012
(I)
08 7011
(F)





