 
 


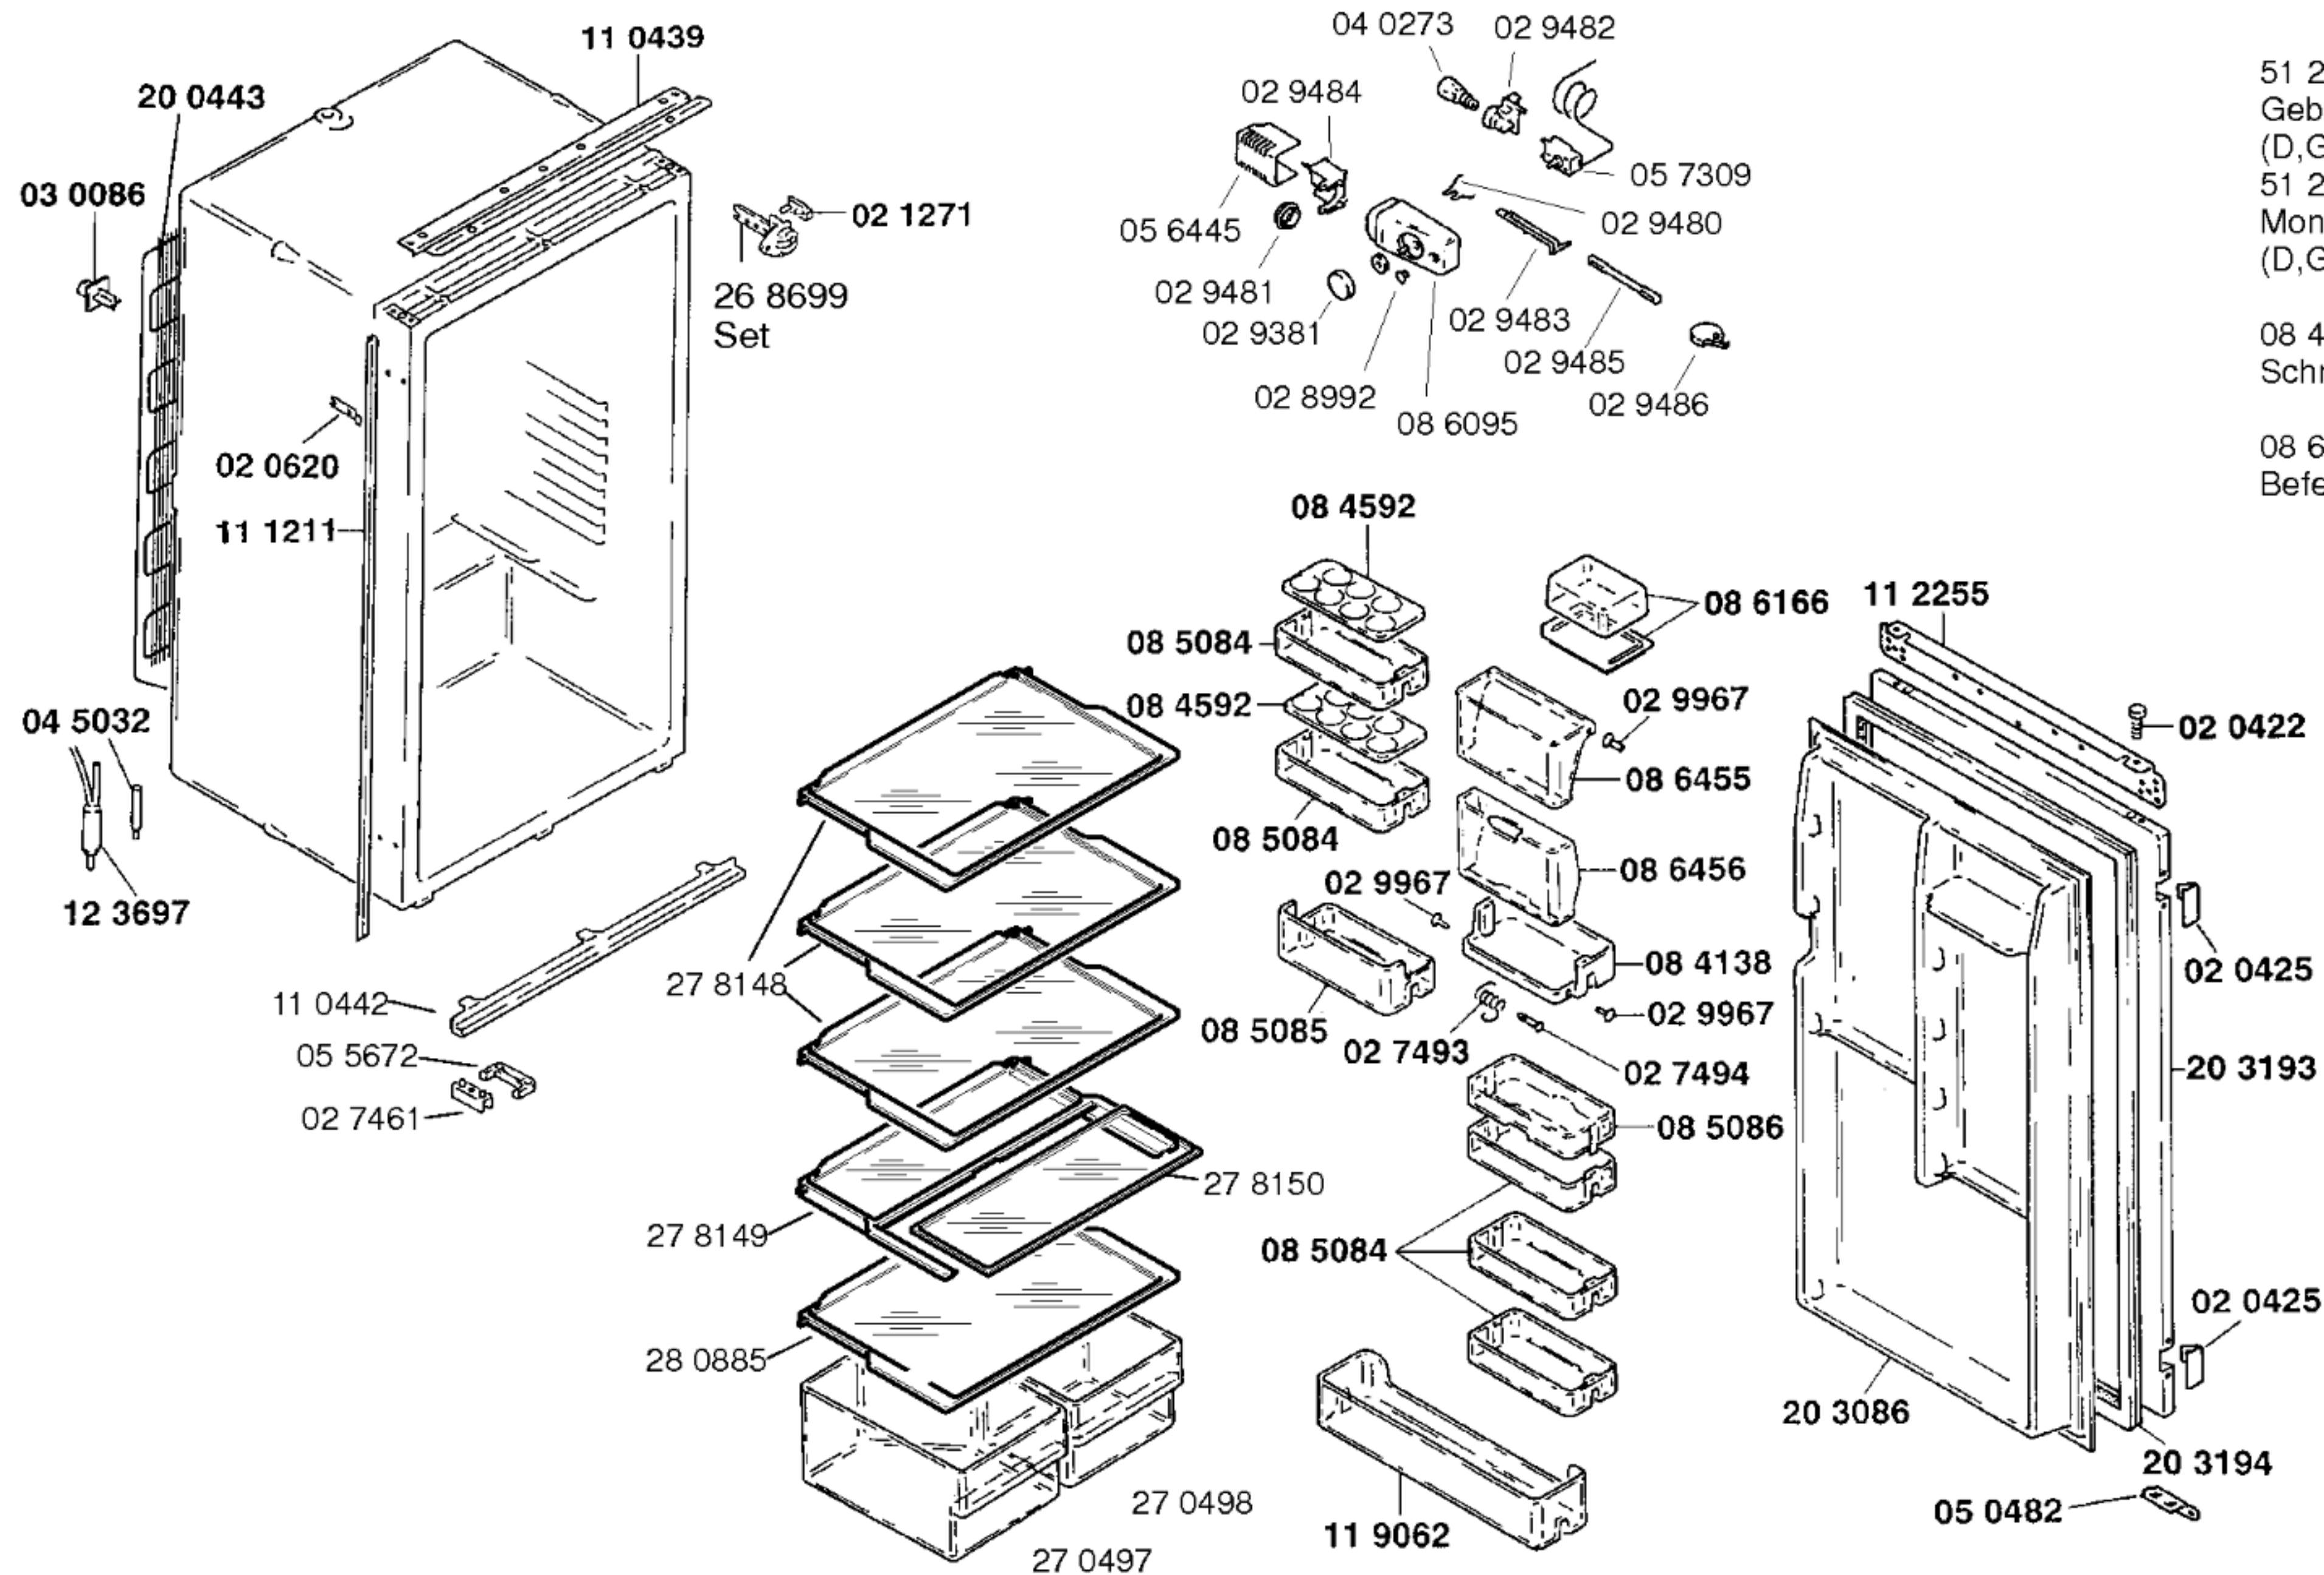

51 2718
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)
51 2737
Montageanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

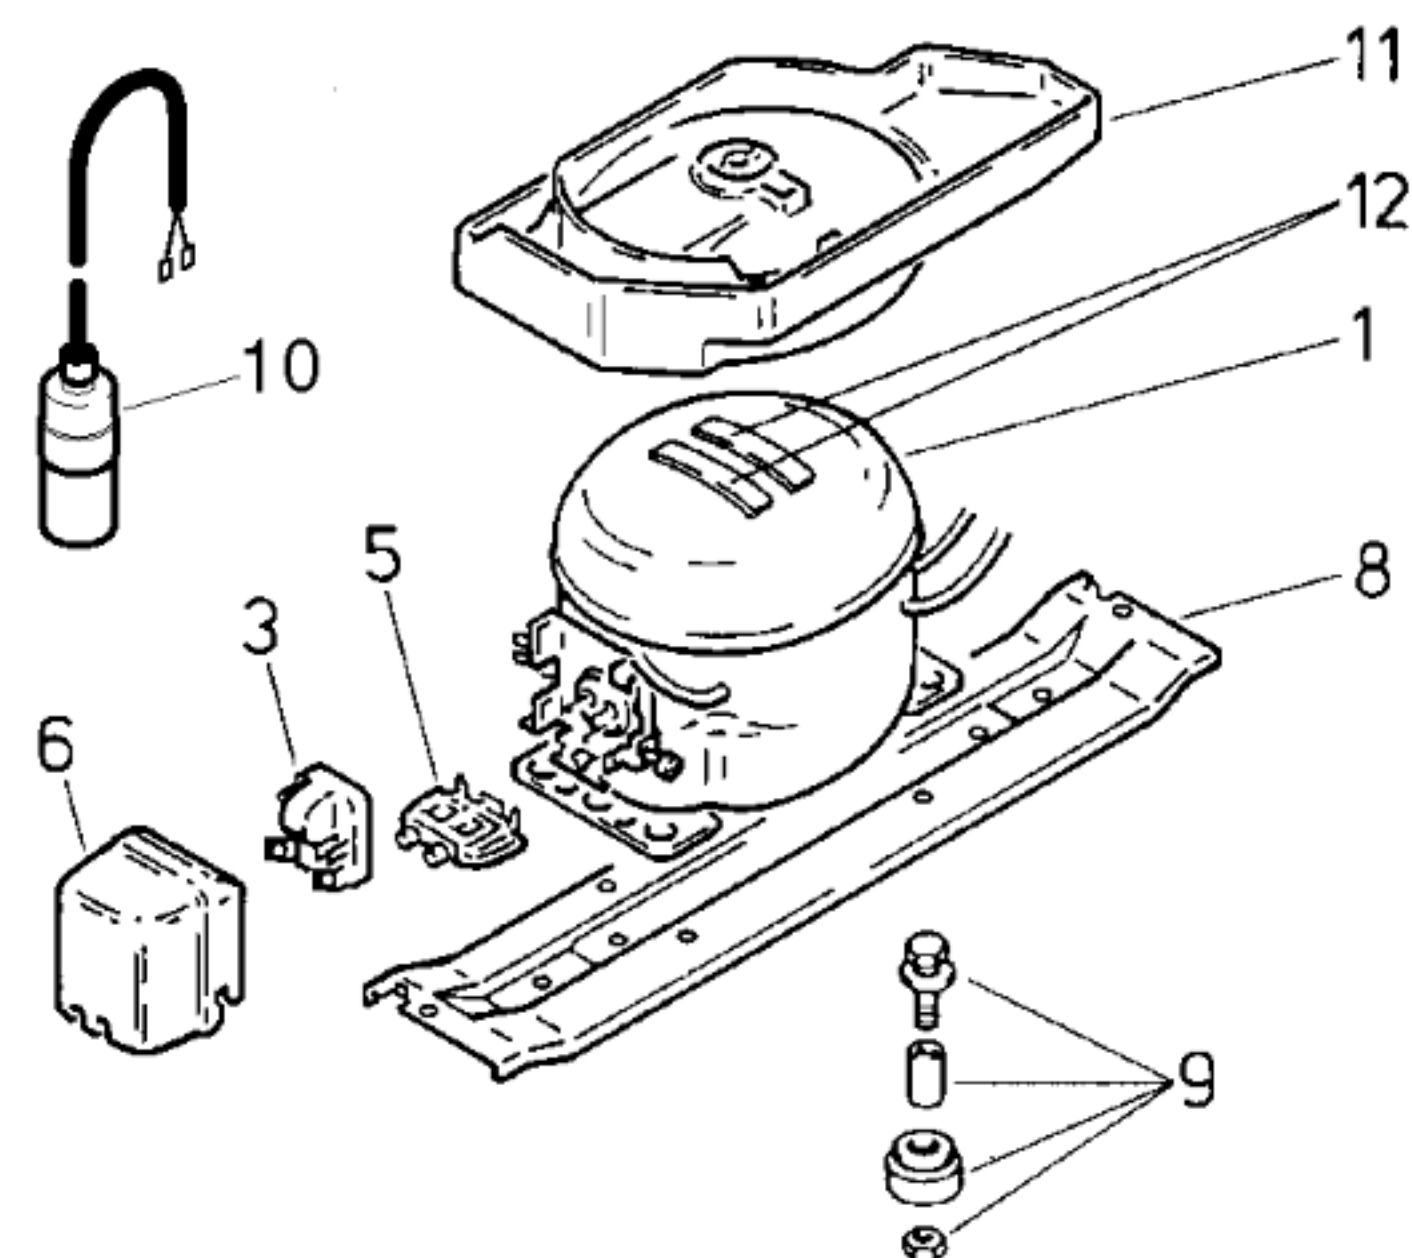

Pos.	Danfoss		
	TL 4 A		
1	13 1064		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	27 8207		
9	05 0166		
10	05 9128		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL4A		
Förderleistung/Delivery/Débit		l/h	695	
Anlaufstrom/Starting current/Cour de démarrage		A	8,3	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	23,4	
		Hi/aux Ω	15,5	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position		kalt warm		
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	+5	+5
Valeurs de commutation		„aus“	-27	-12
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R12	g	75
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		