
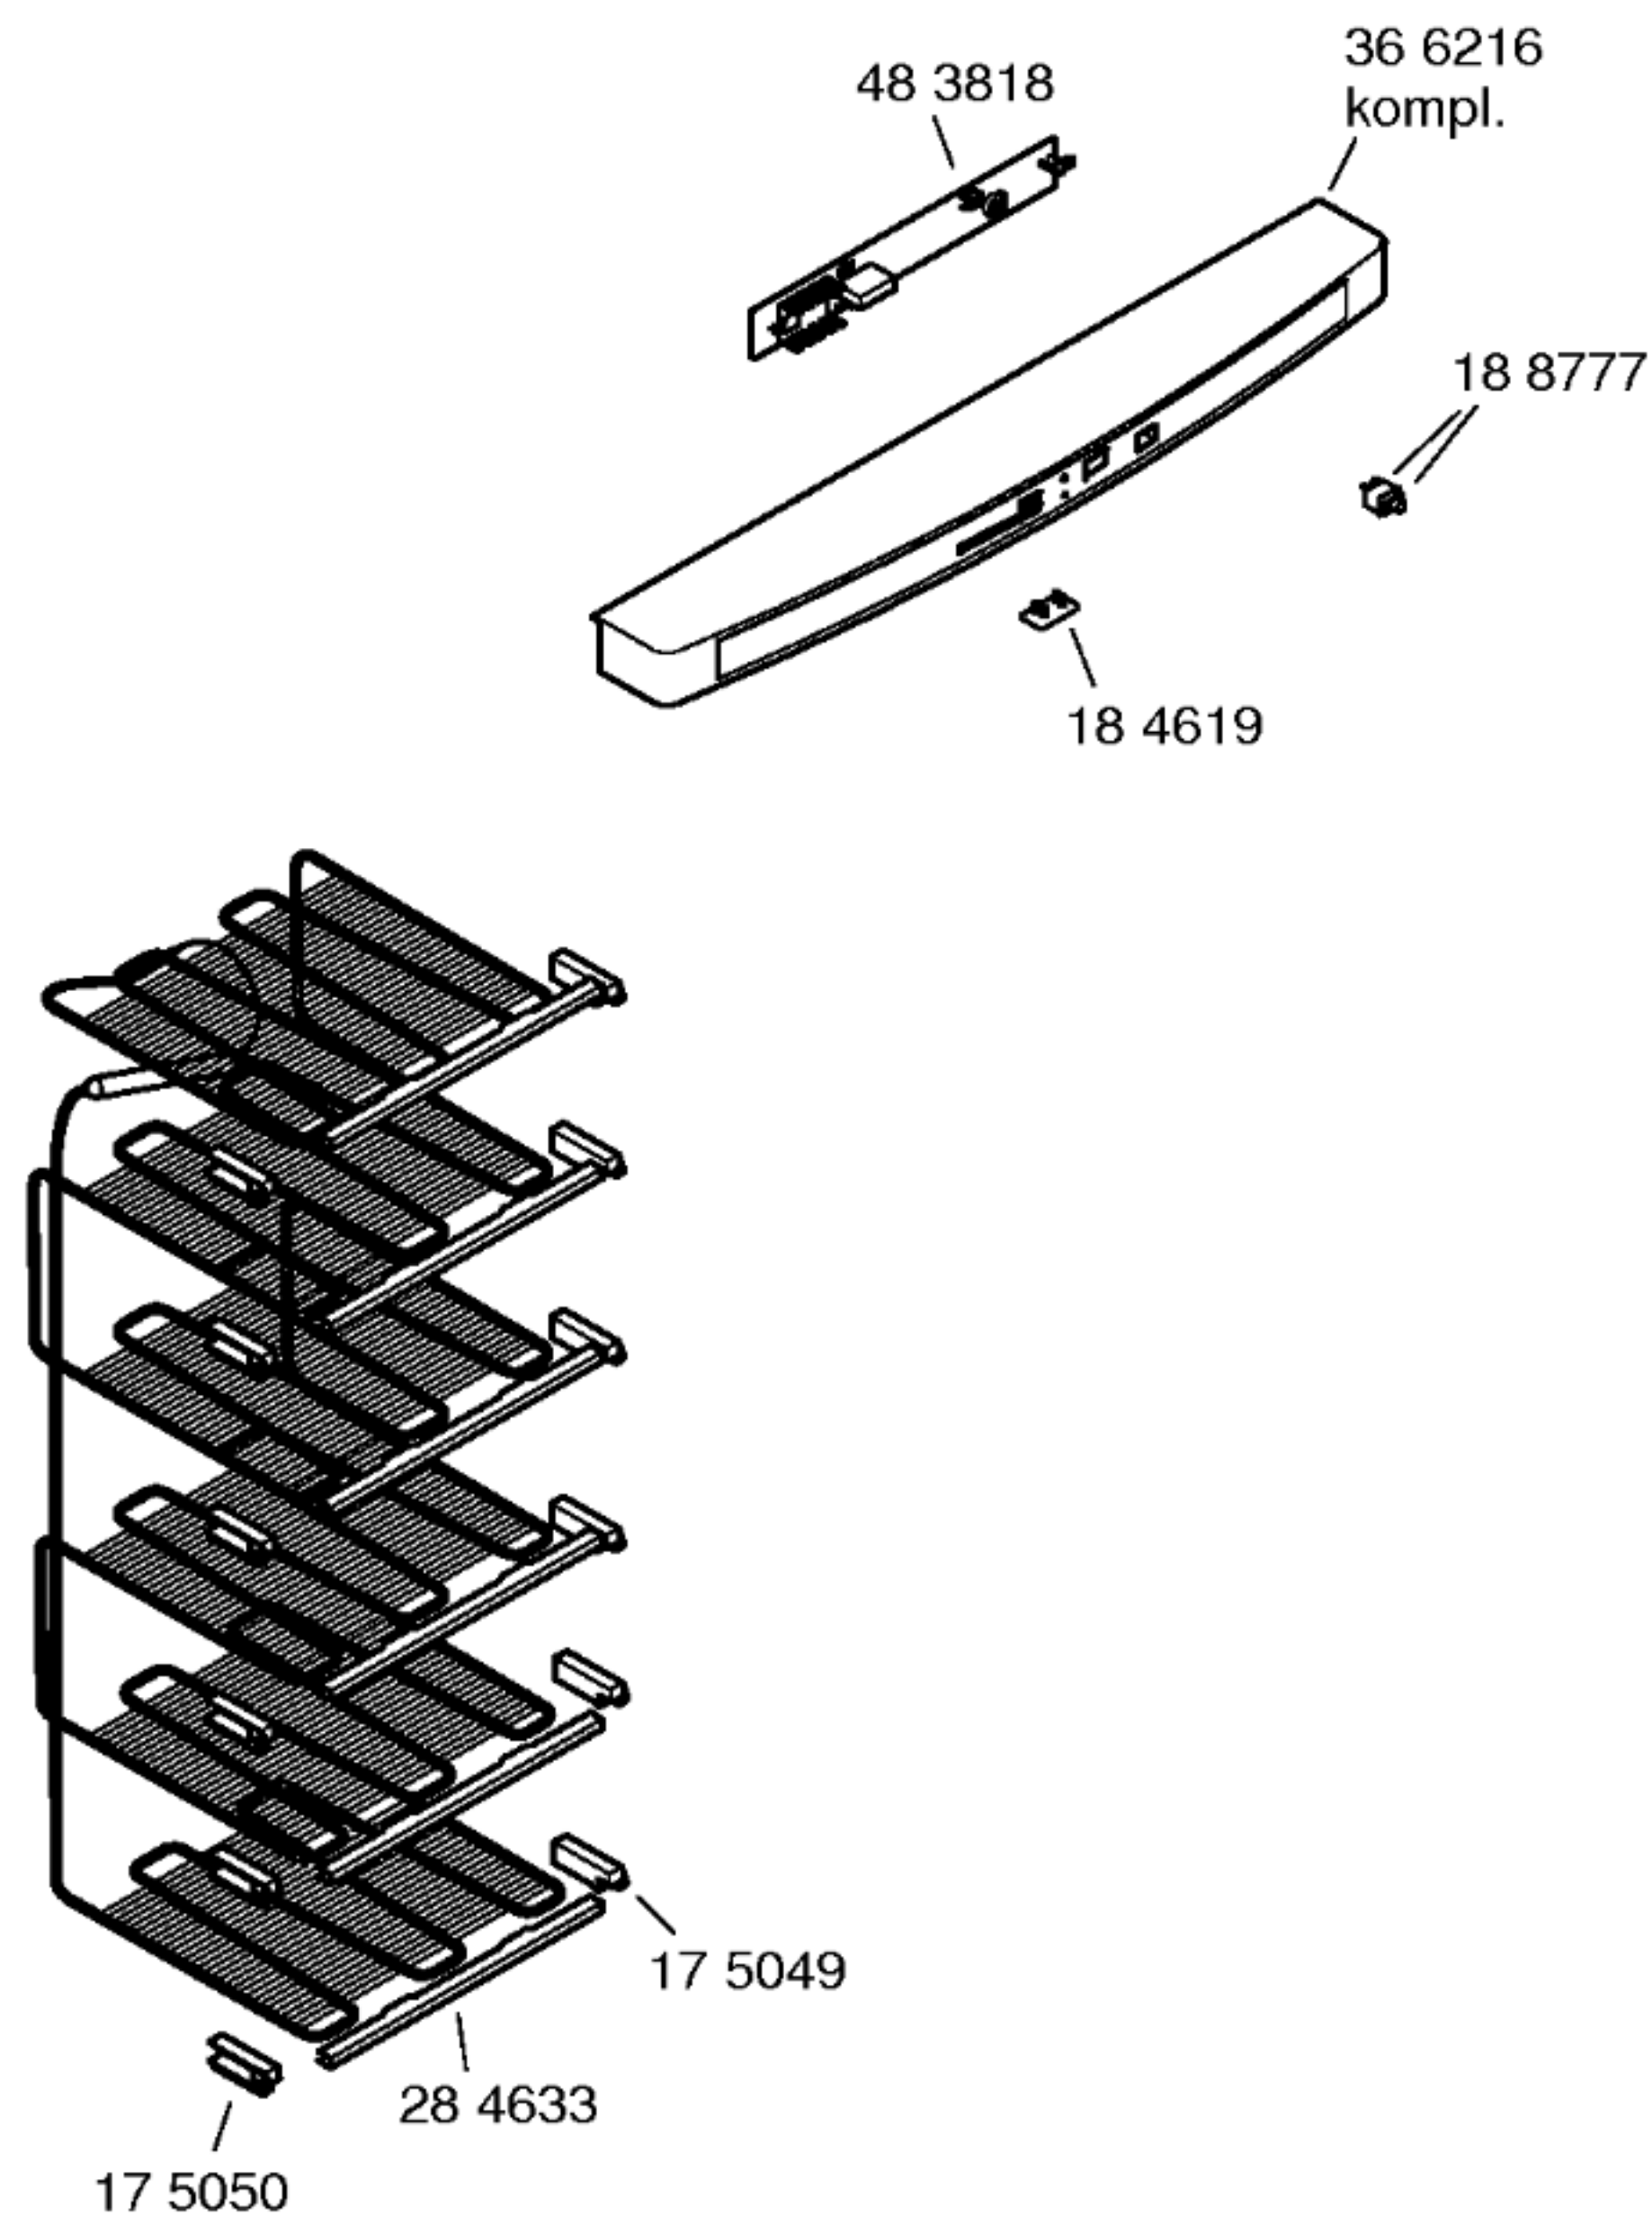
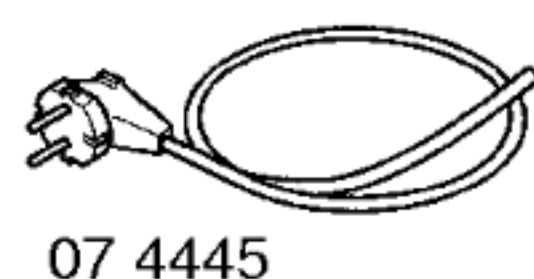



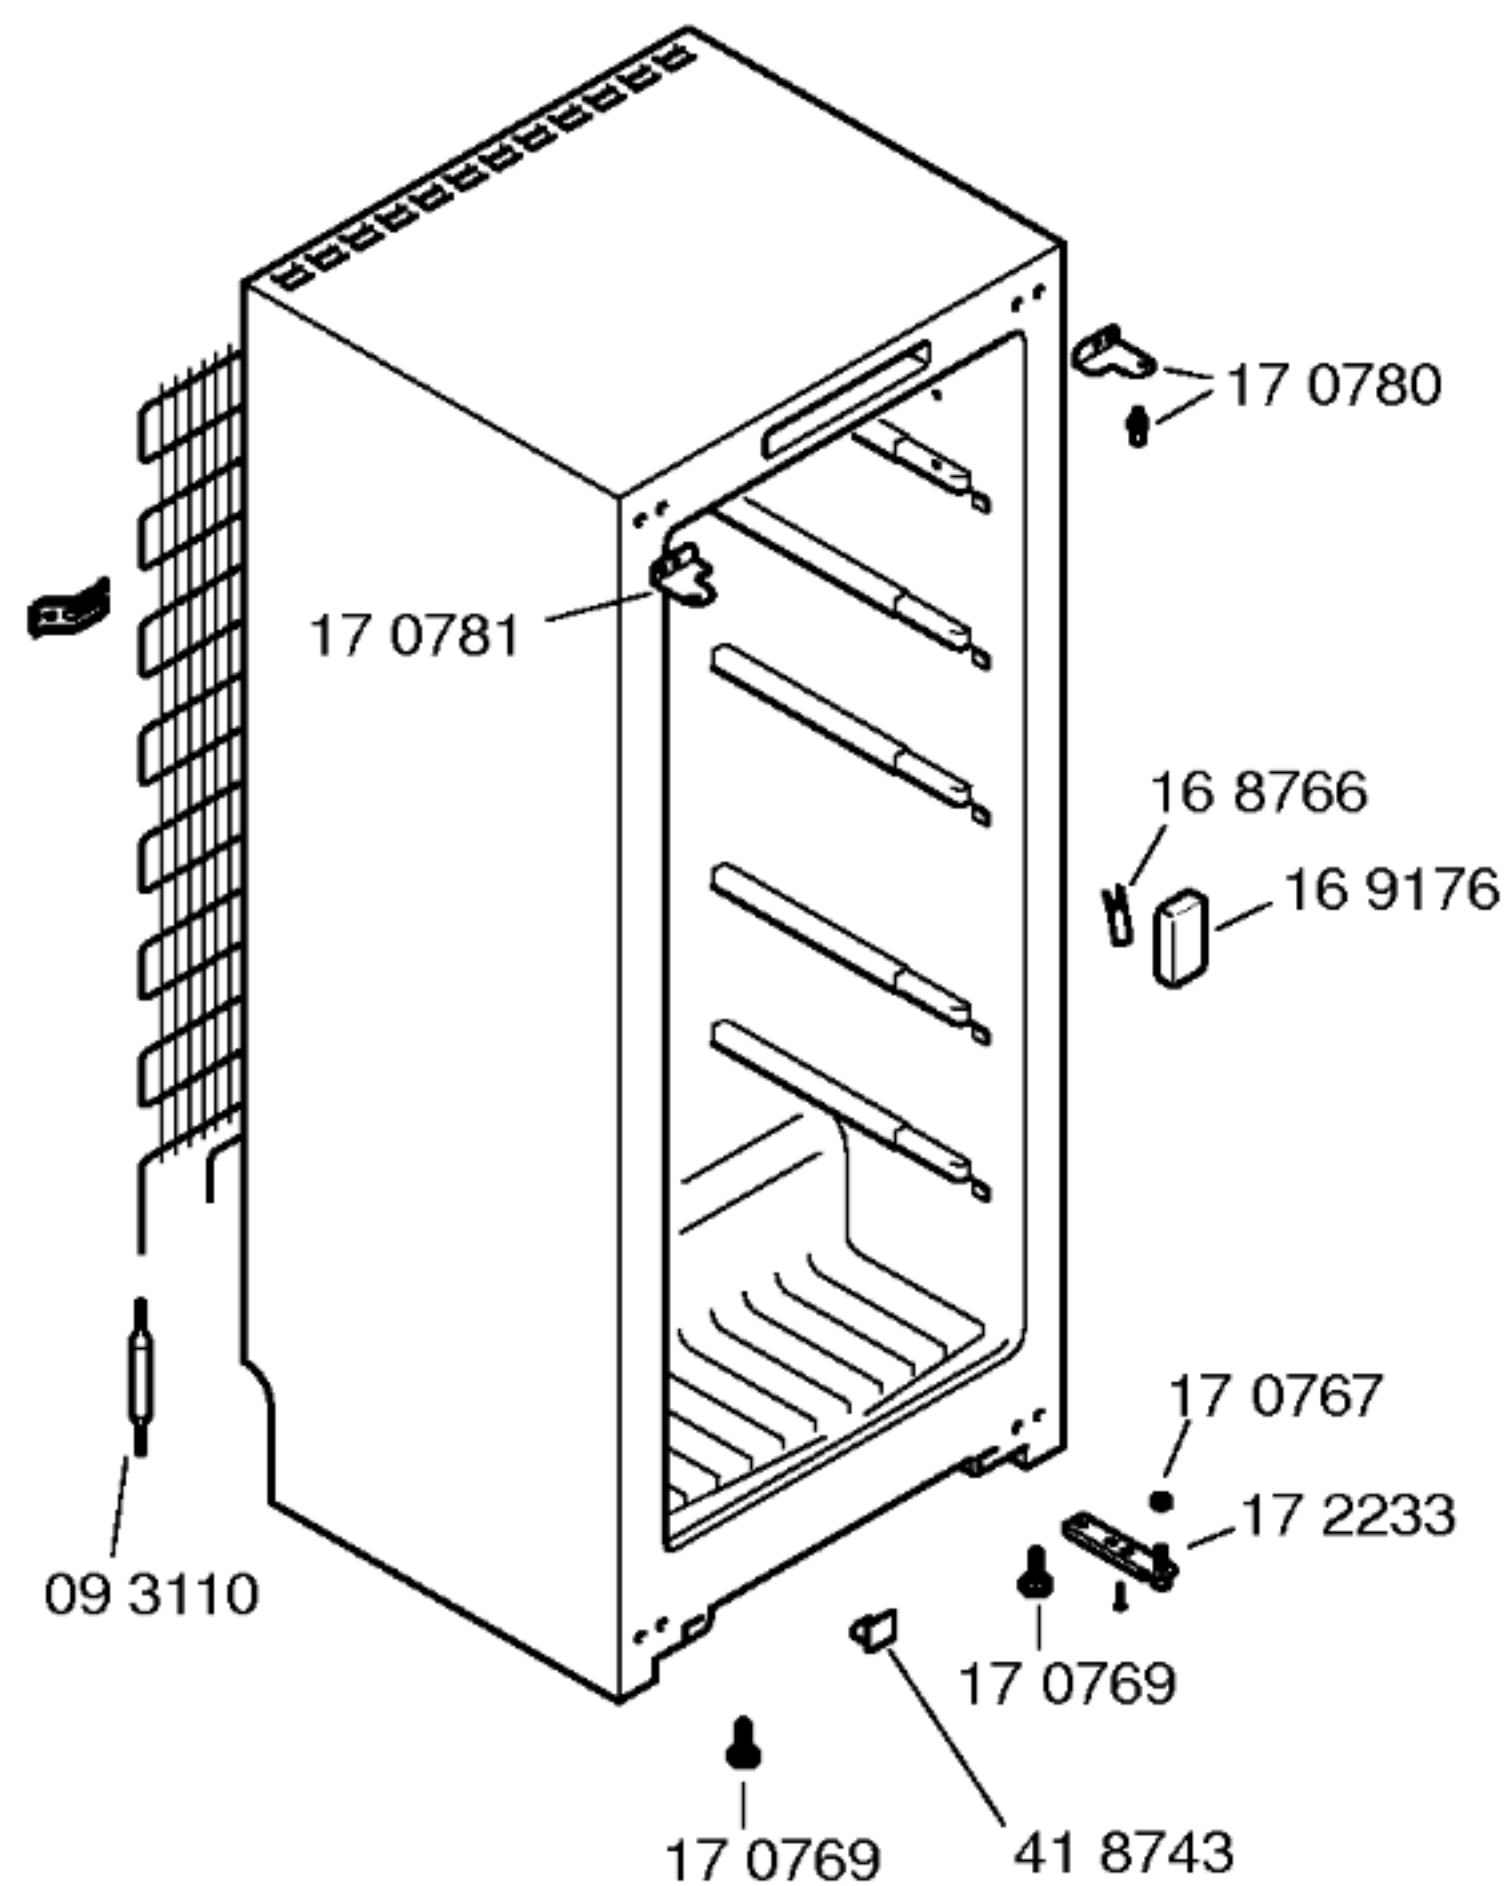



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 0838
(DE, EN, FR, IT, NL, ES,
PT, GR
58 0839
(NO, DA, FI, SE)

Montageanleitung
52 2772
(DE, EN, FR, IT, NL, DA, NO,
FI, ES, PT, GR, SE, TR)

Beistellsatz
26 5629

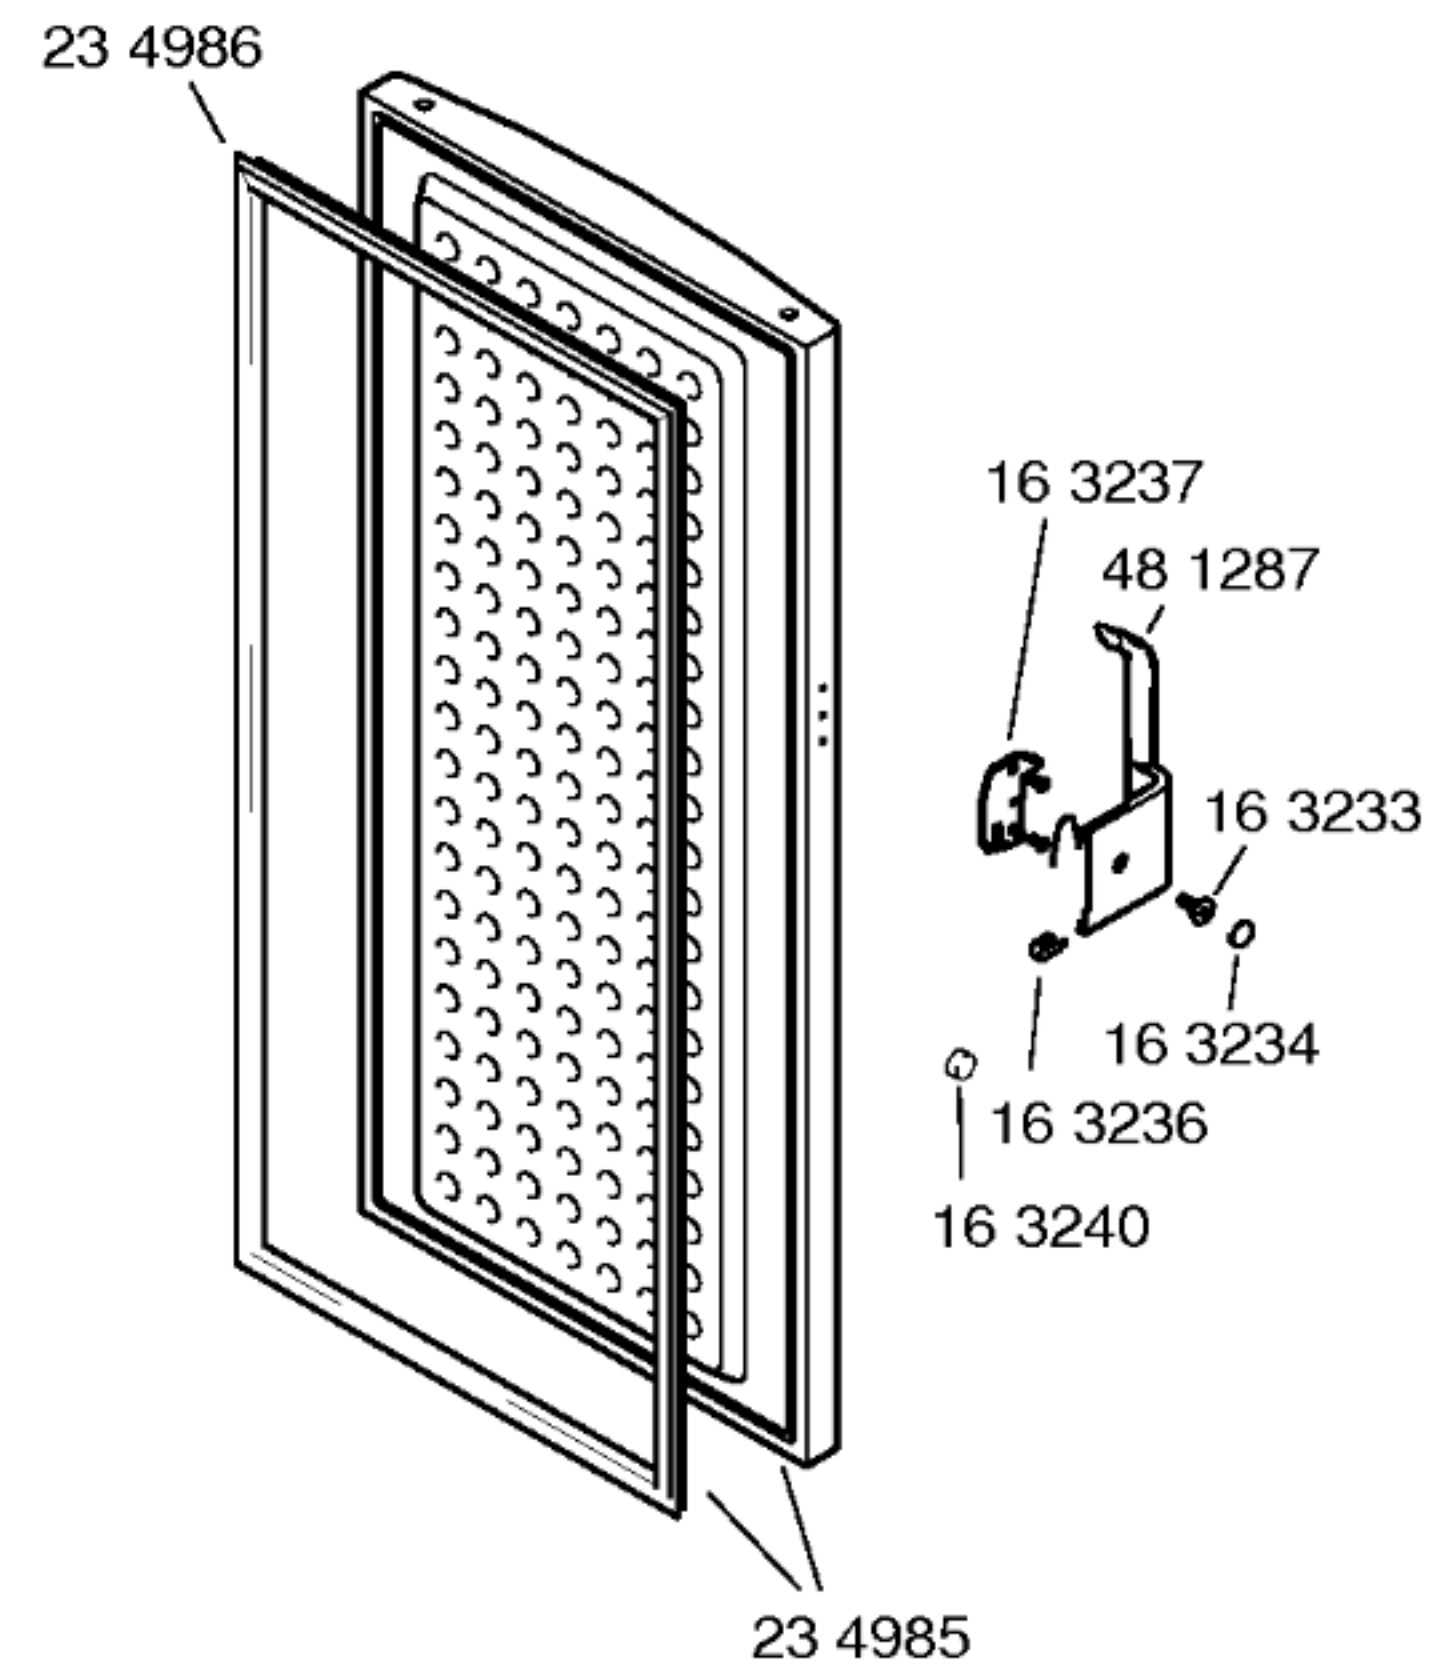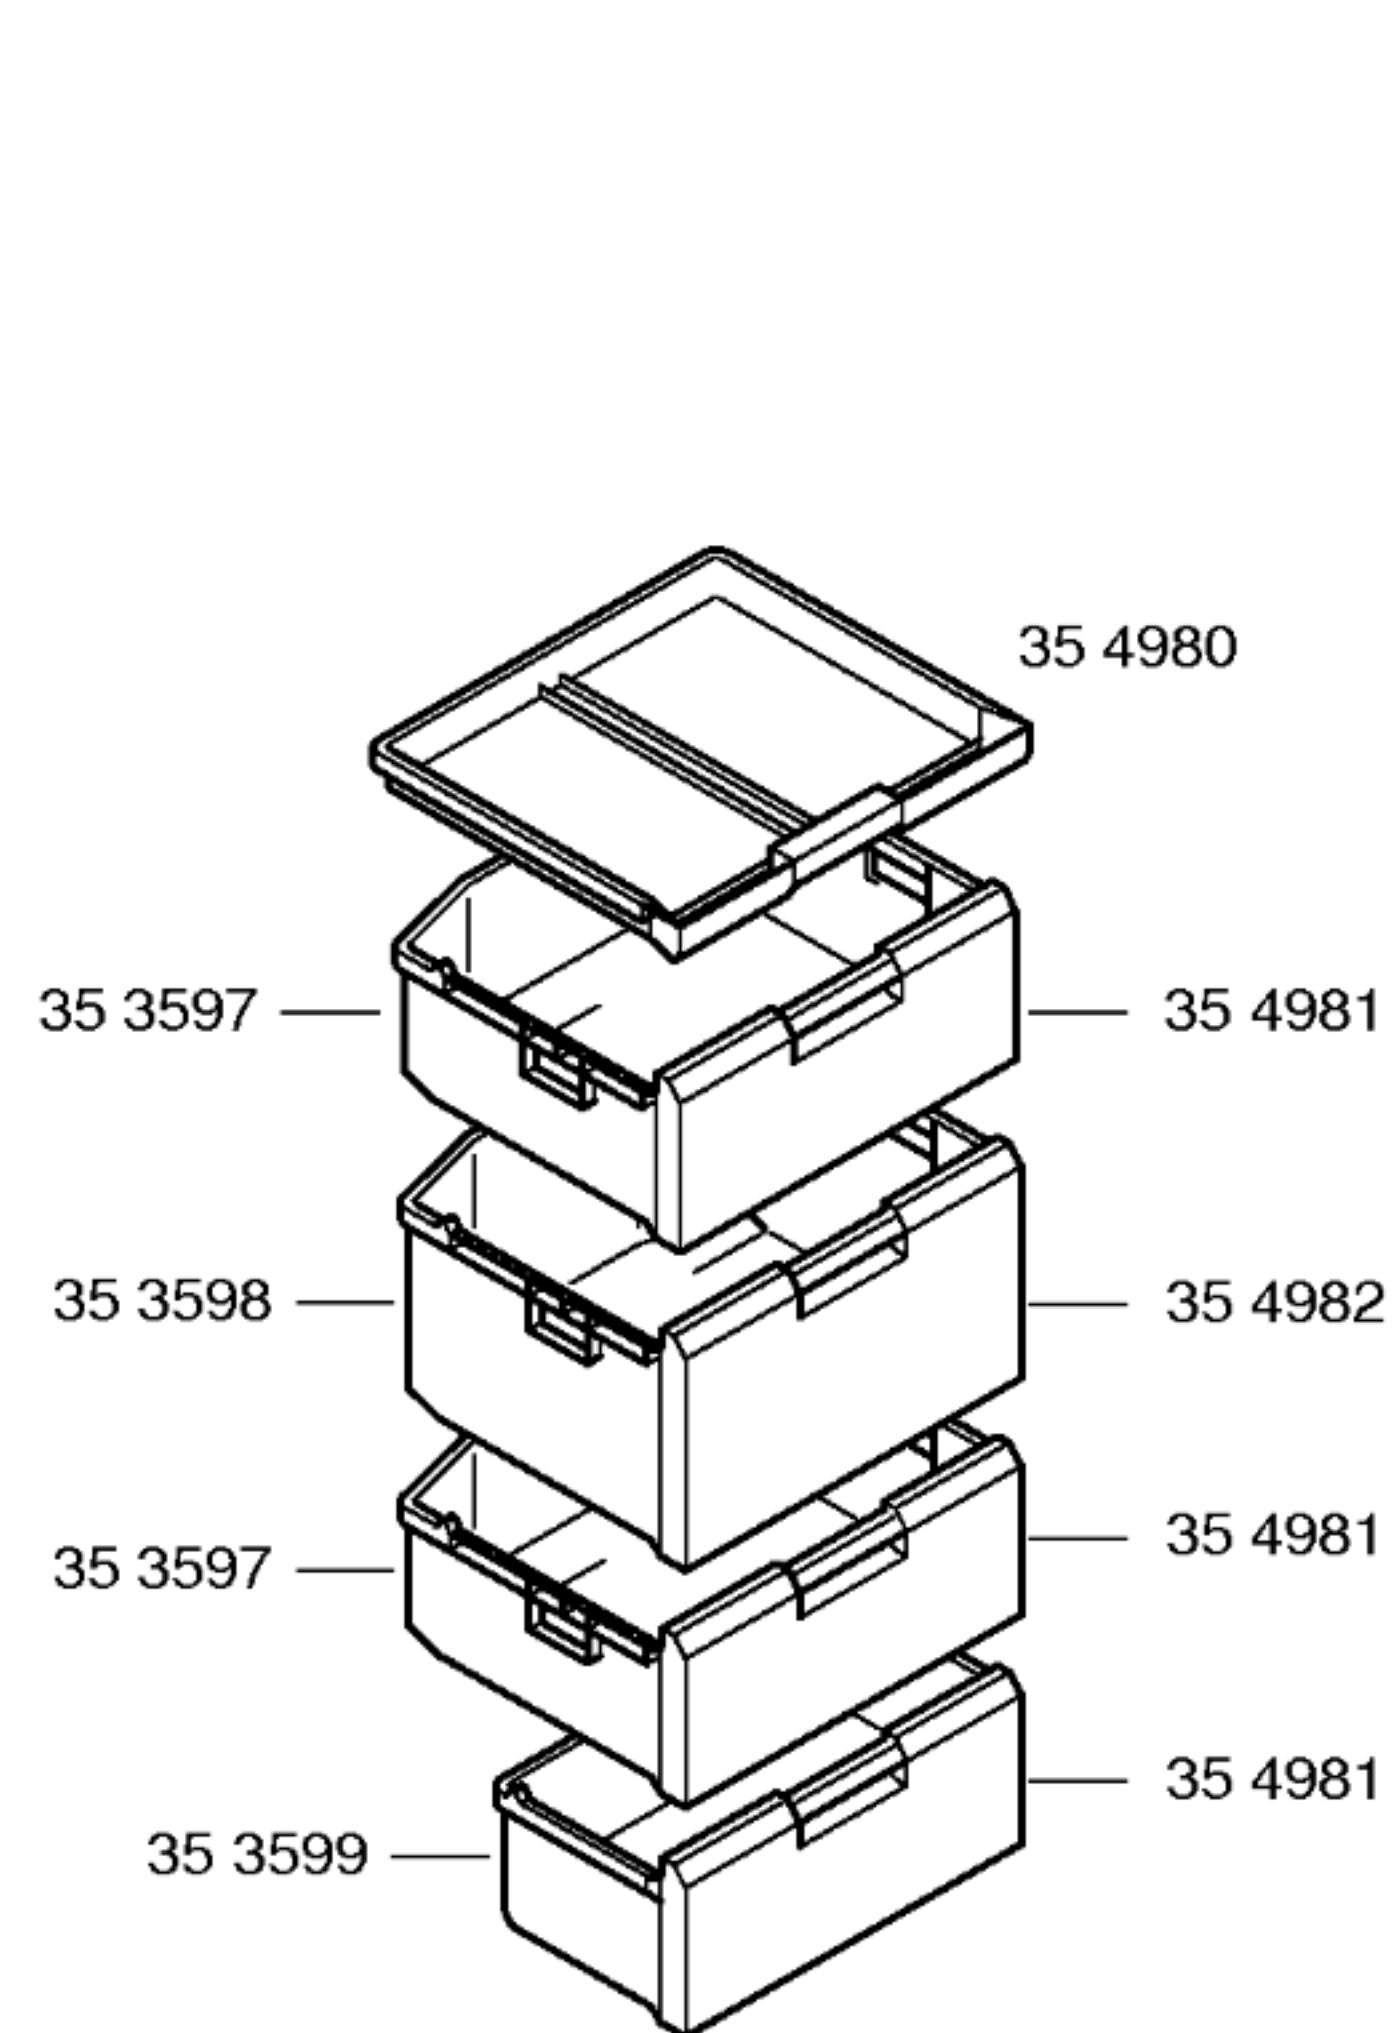

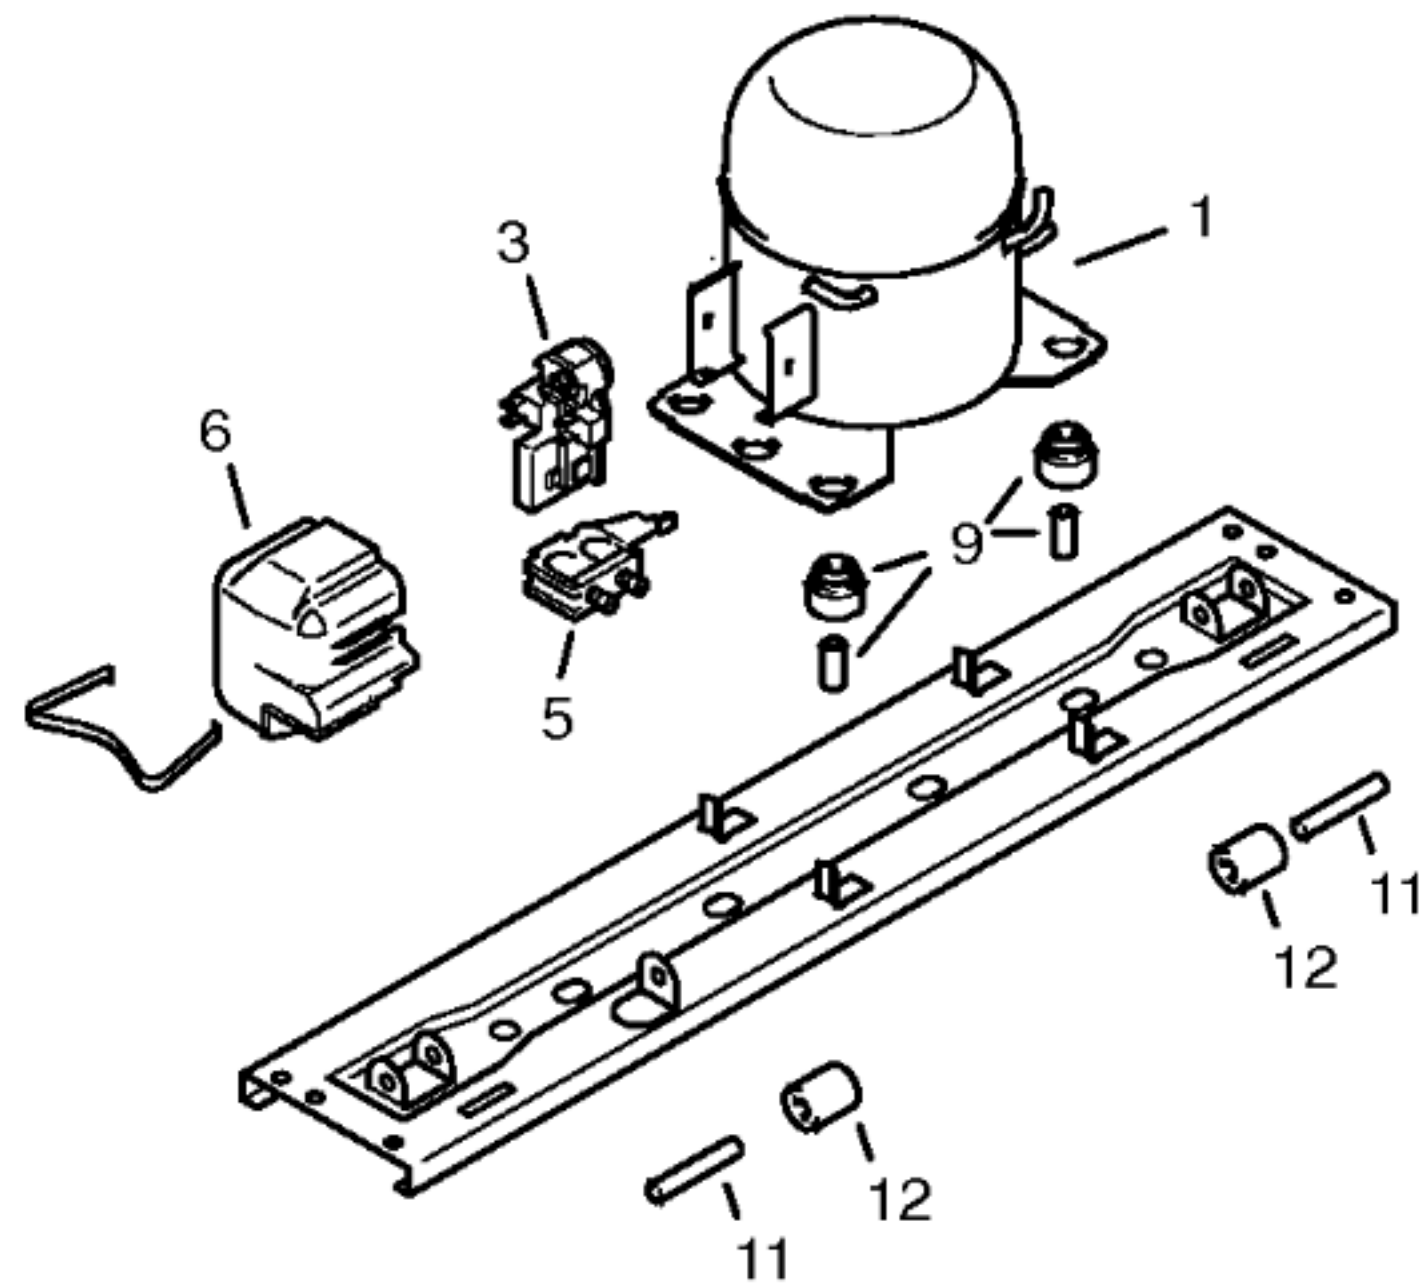

Pos.	V01		
	Matsushita		
	DC 110E		
	DC 110E		
1	14 2130		
2			
3	17 2671		
4			
5	16 6781		
6	16 6782		
7			
8	20 9294		
9	050166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC 110E		
Förderleistung/Delivery/Débit		l/h	1974	
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ω		
Hi/aux		Ω		
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC–Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	–18 43,31 ±1,10
		+5	12,70 ±0,18	–22 54,66 ±1,59
		0	16,33 ±0,16	–26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		