




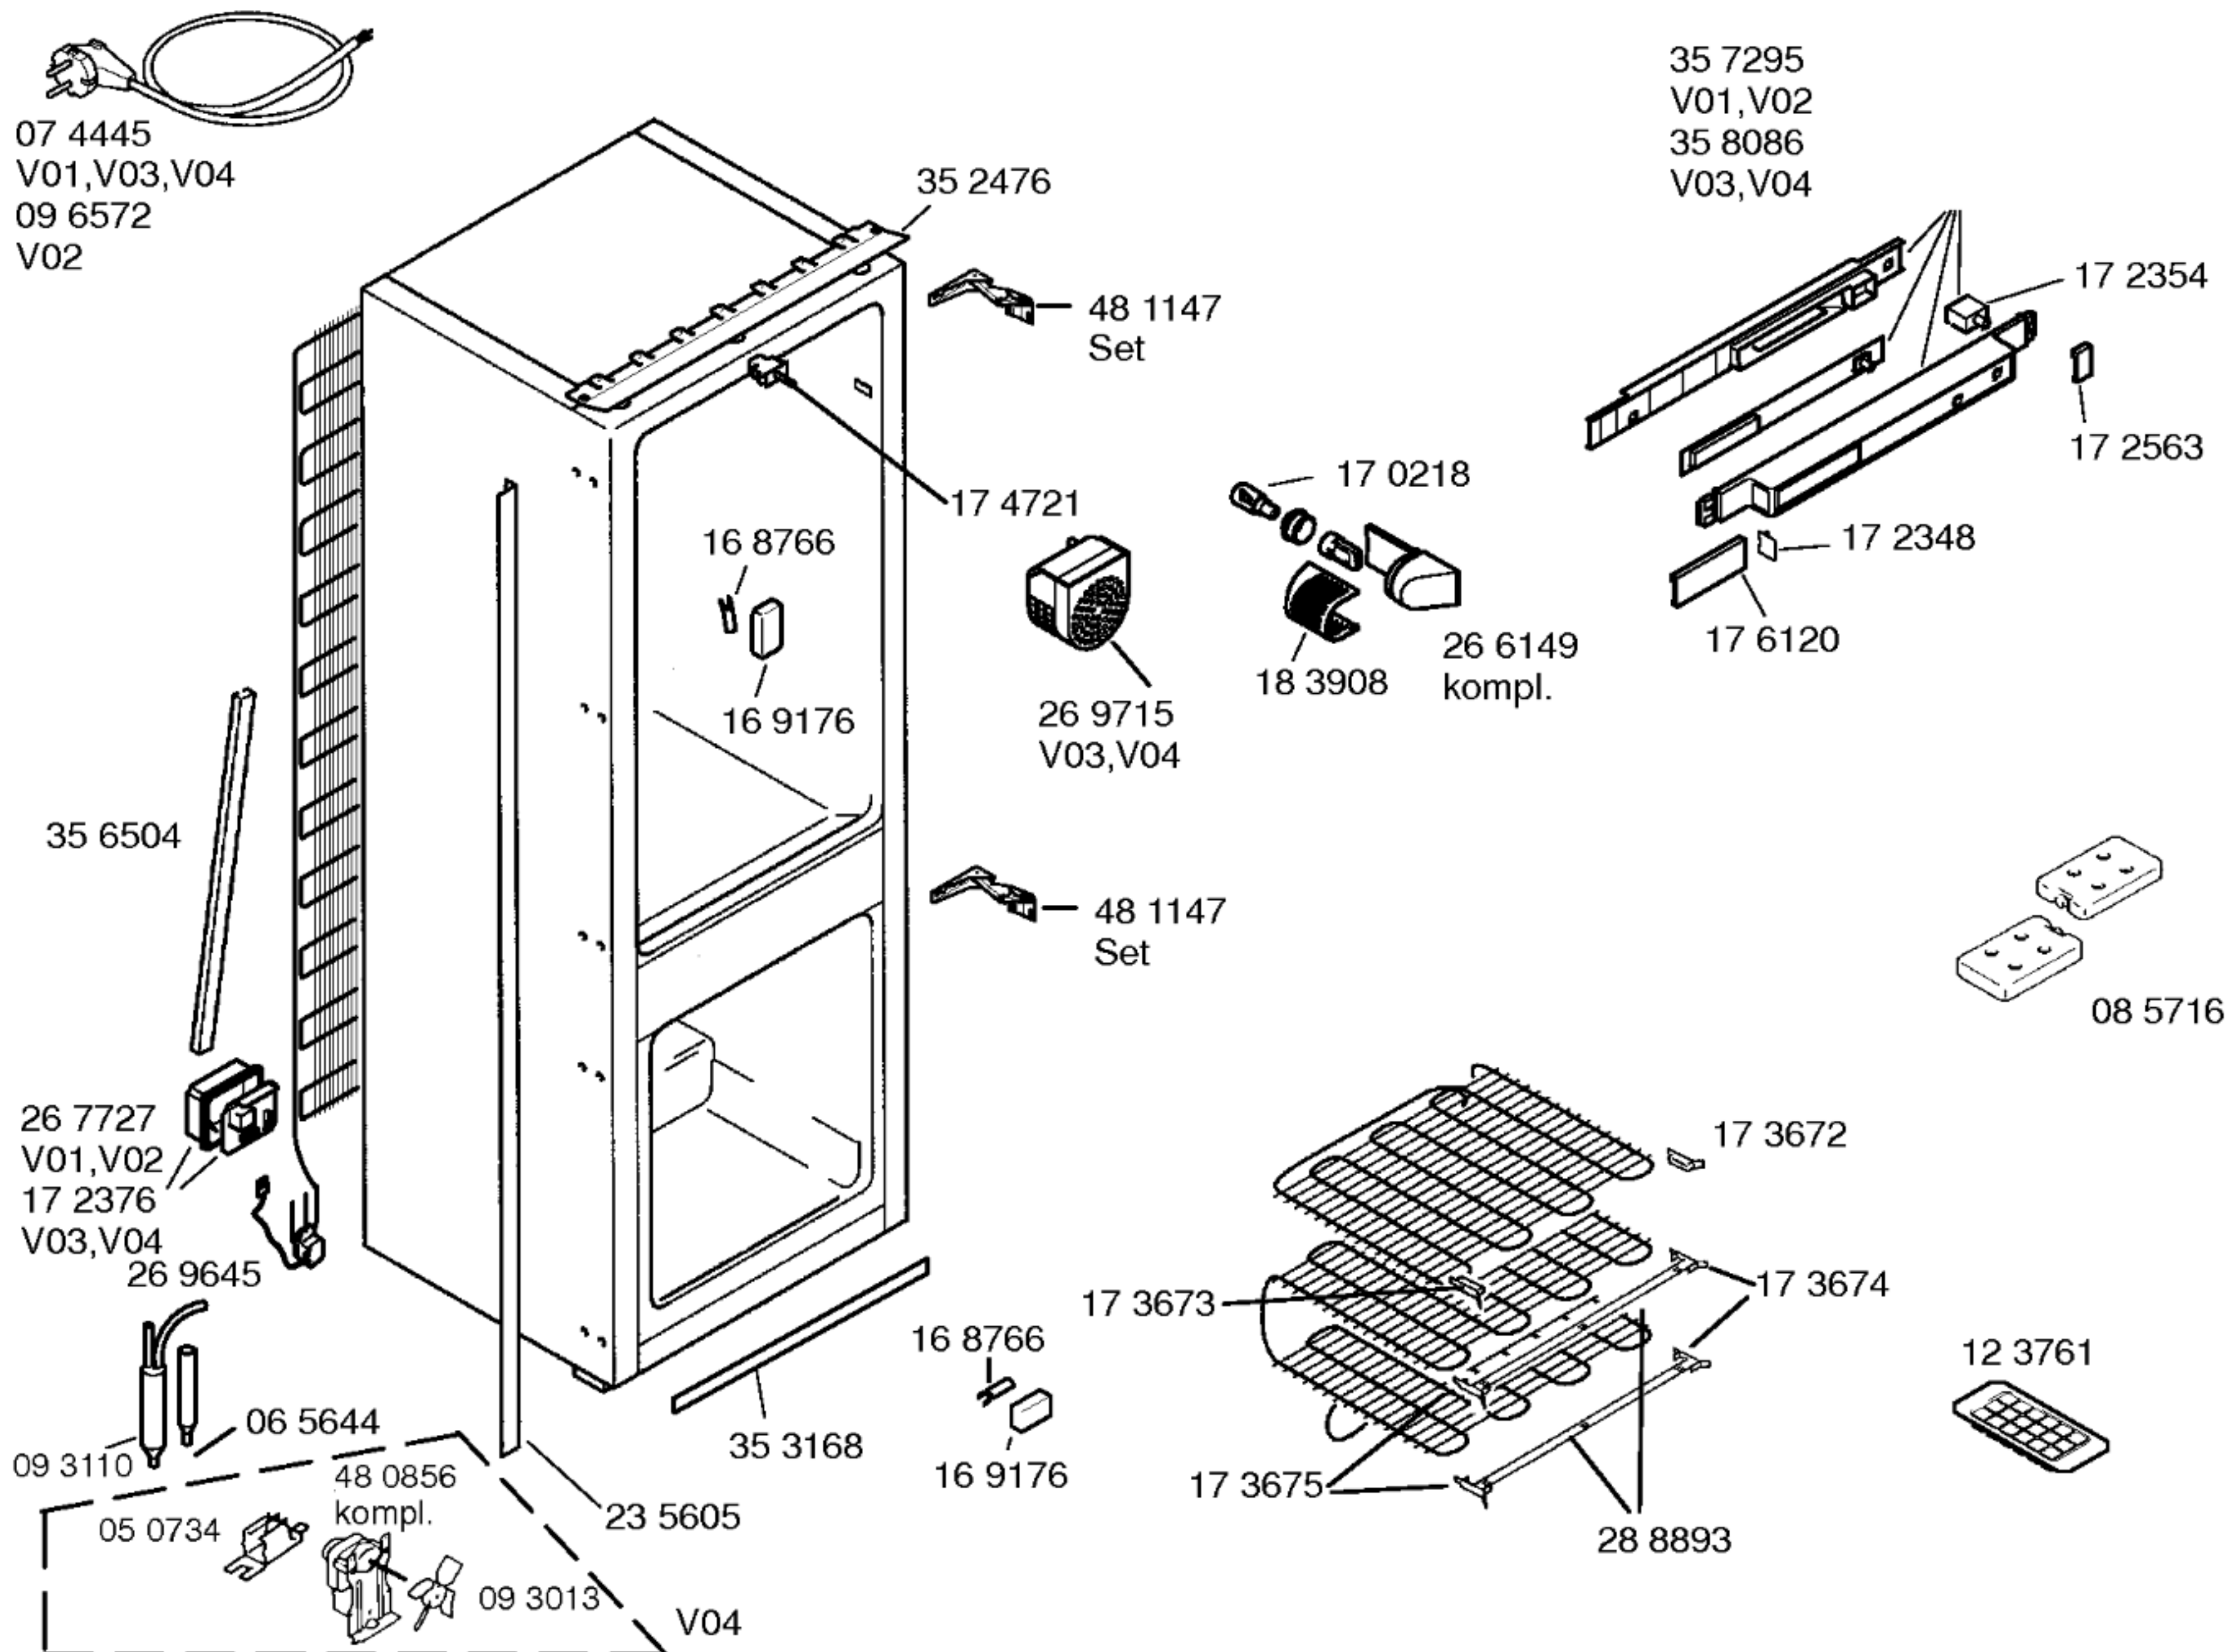

Gebrauchsanweisung
58 1223
(D,GB,F,I,NL,P,E,GR,TR)
58 1224
(I,E,P,GR)
Montageanleitung
52 2494 (DK,N,S,SF)

Befestigungssatz
26 6910

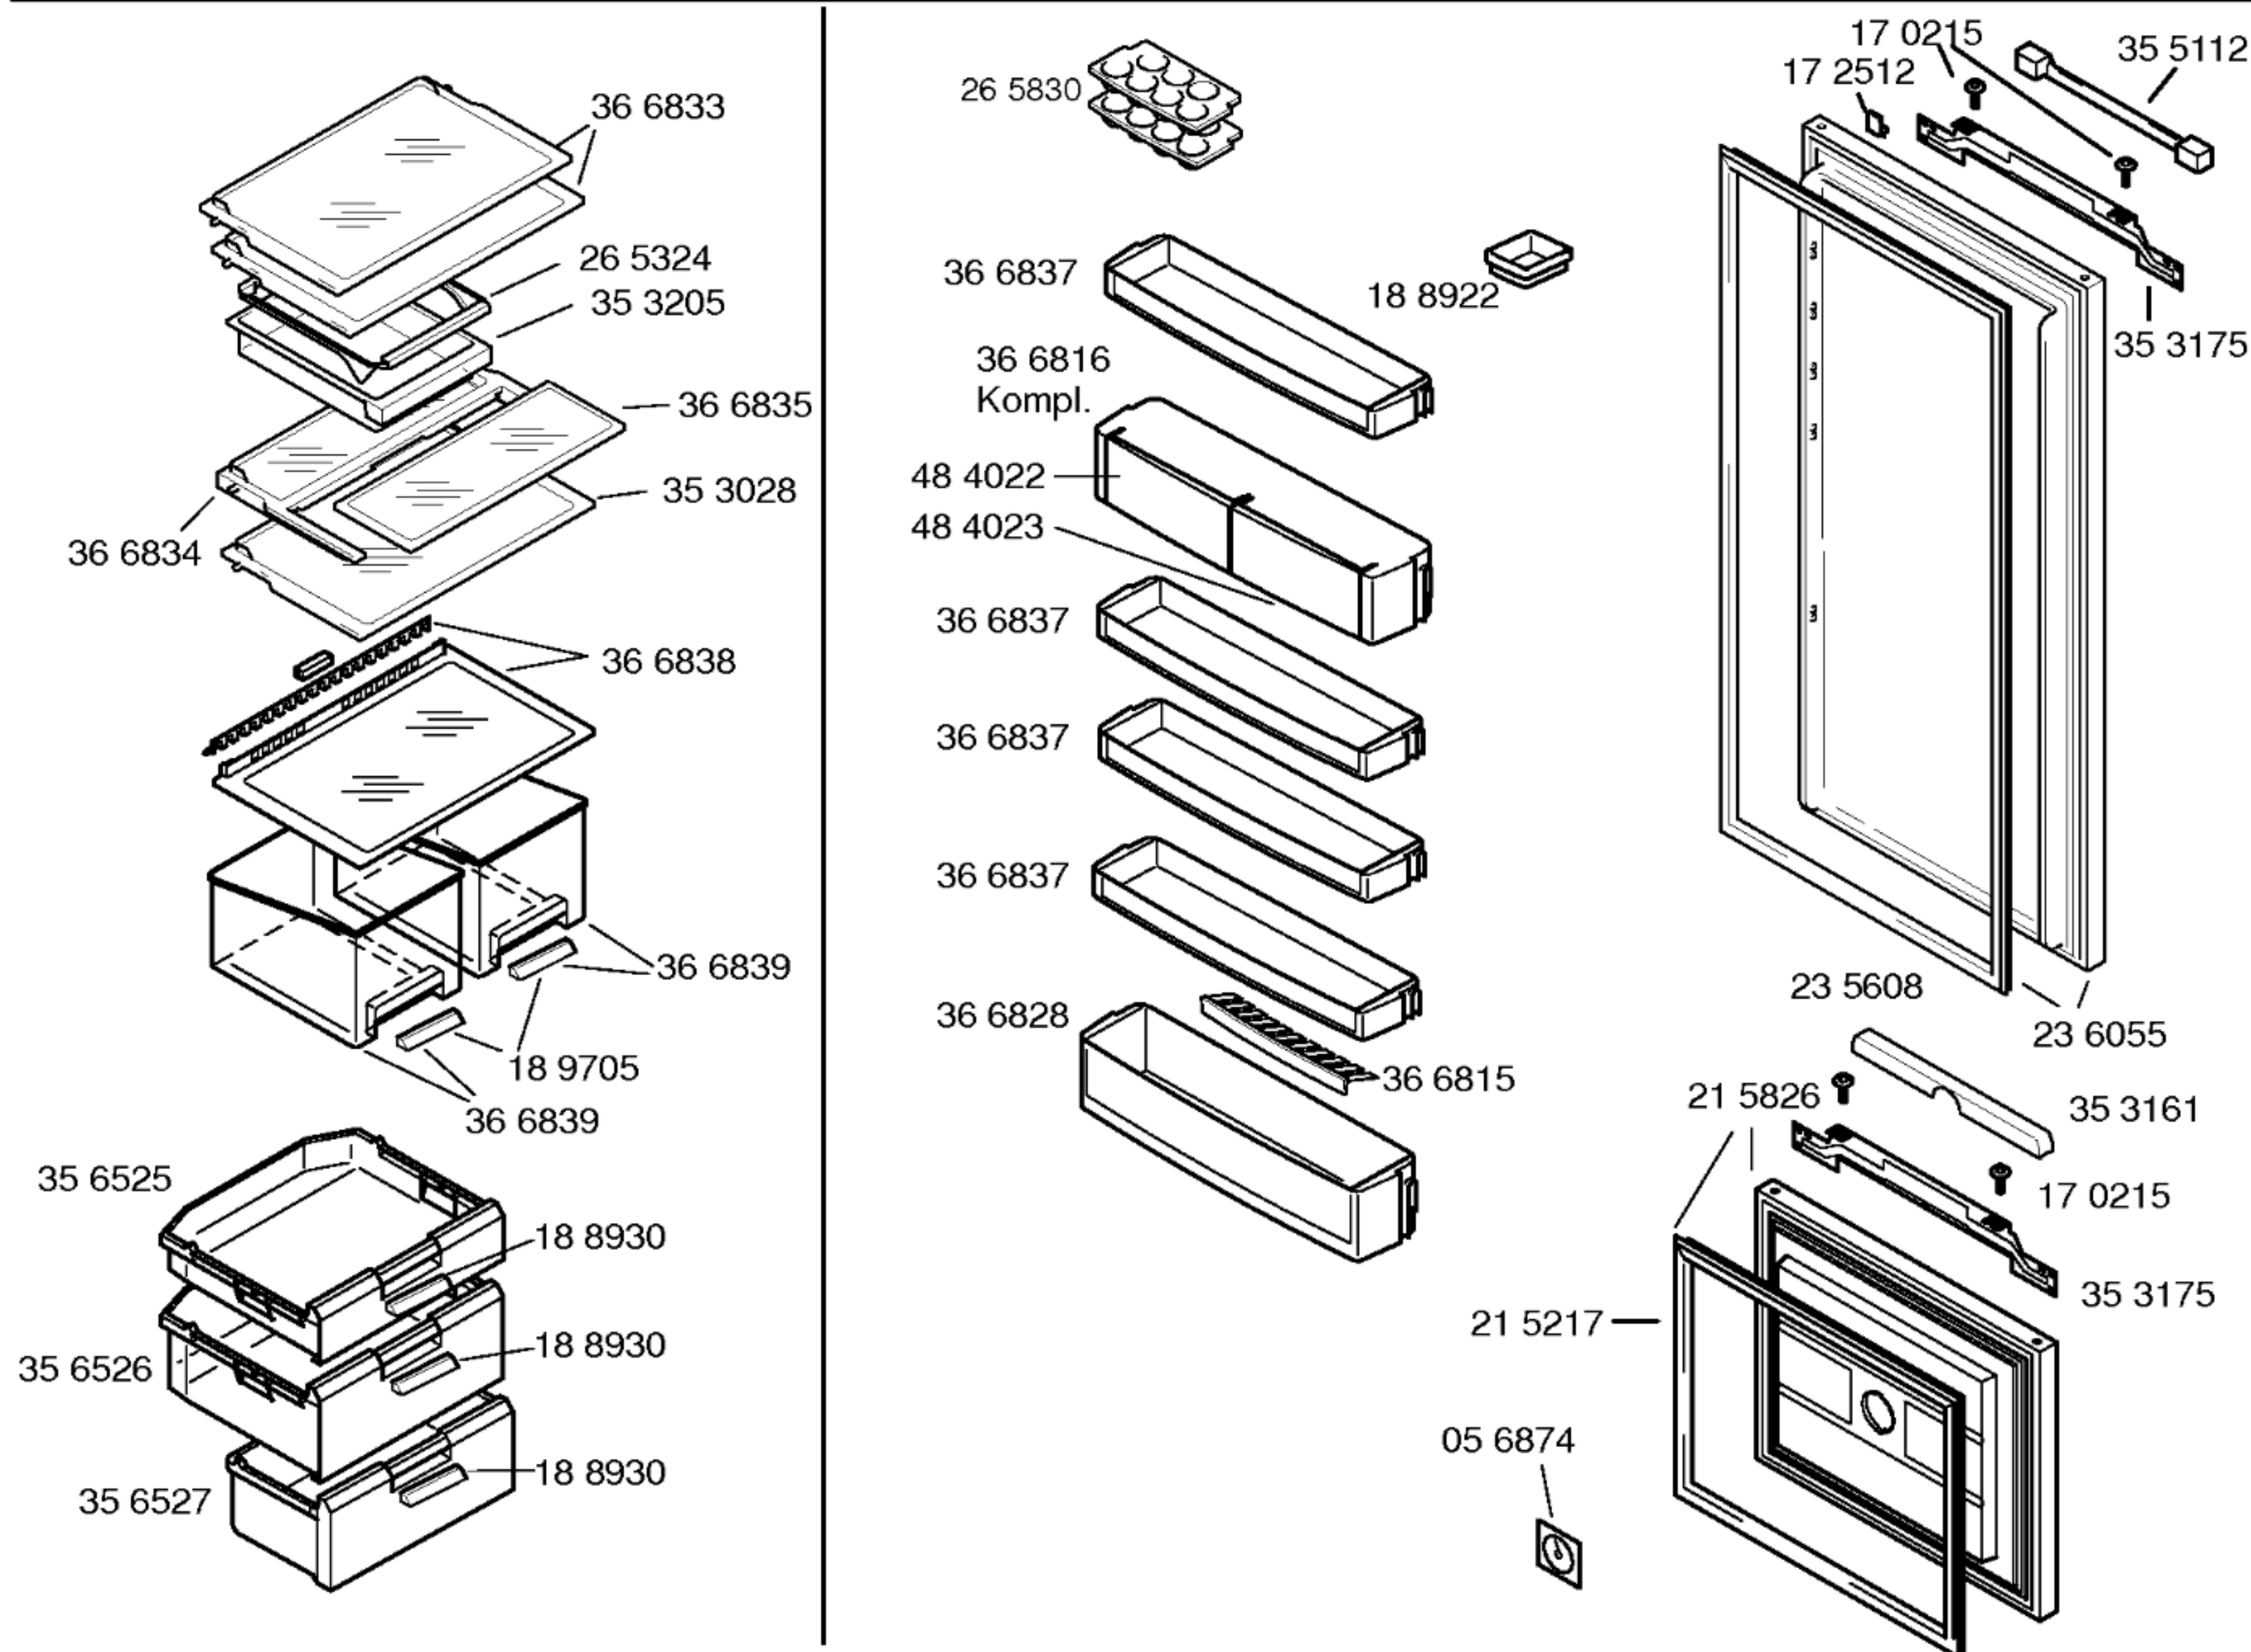

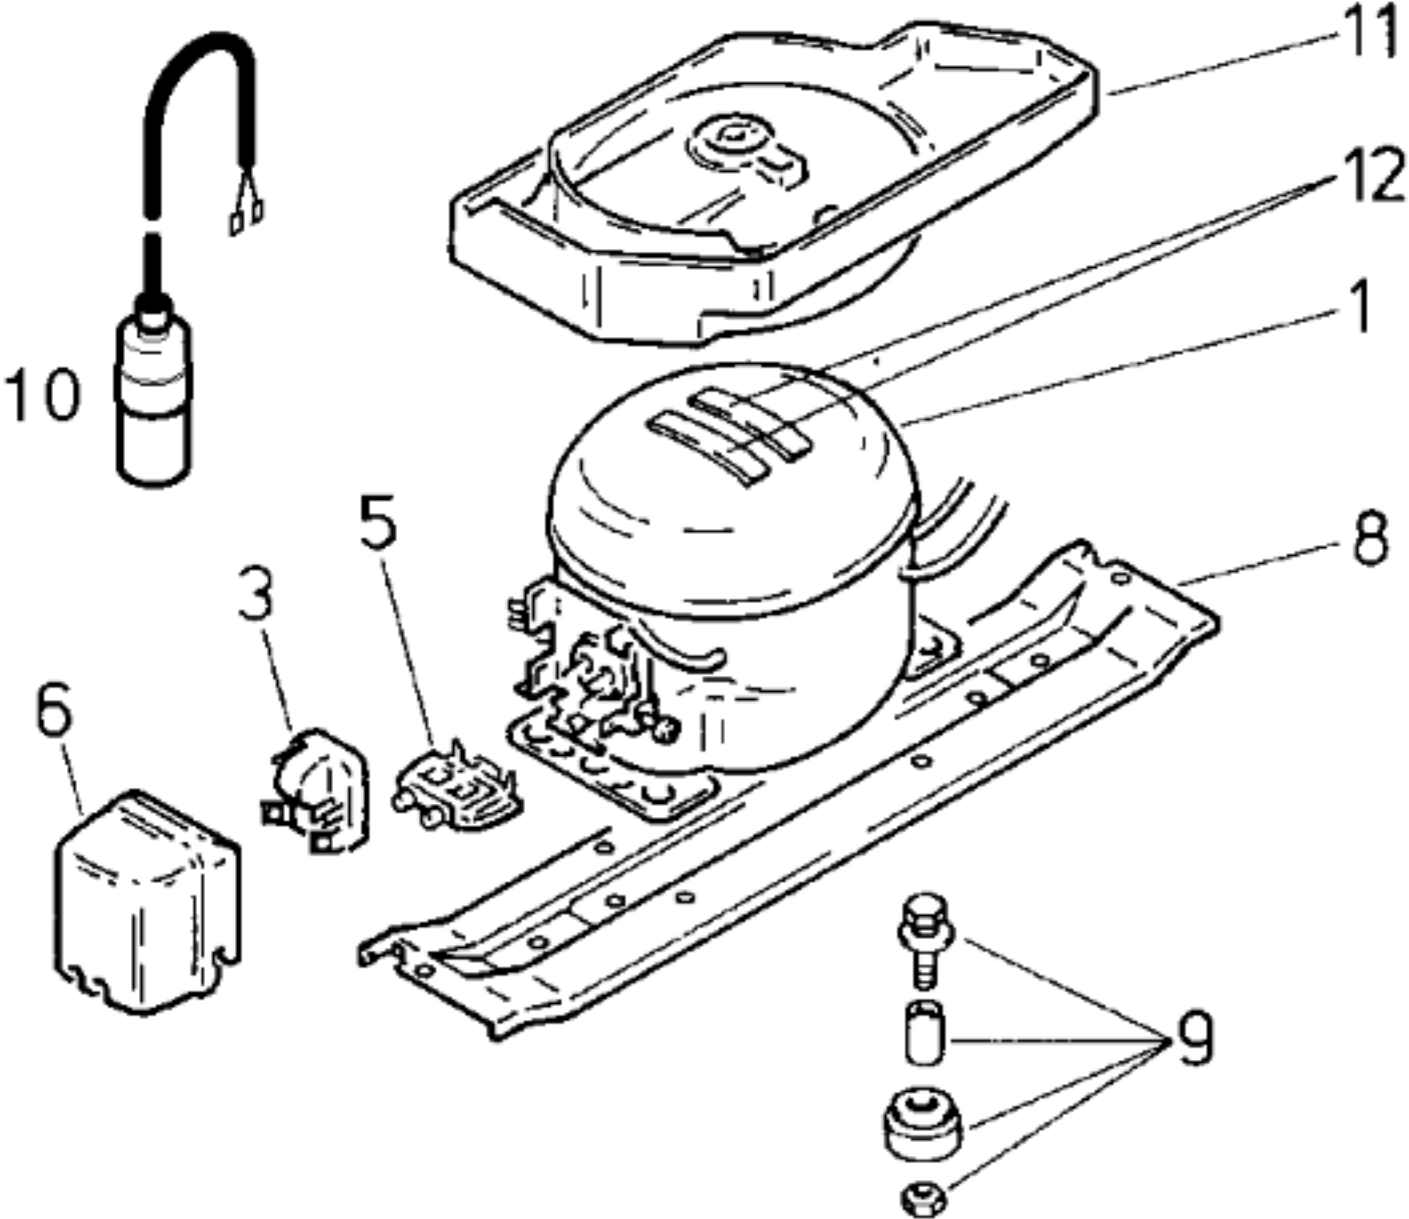

Pos.	V01–V03	V04	
	Matsushita DC110 E	Danfoss NL9FT	
1	14 2130	14 1782	
2			
3	17 2671	15 1055	
4			
5	16 2549	15 0760	
6	16 6782	15 1072	
7			
8	28 1825	28 1825	
9	05 0166	05 0166	
10	15 2222		
11	26 6624	26 6624	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Danfoss	
Typ/Type		DC110E	NL 9 FT	
Förderleistung/Delivery/Débit		l/h	1503	
Anlaufstrom/Starting current/Cour. de démarrage		A	8,6	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	14,2	8,9
		Hi/aux Ω	12,8	12,0
Temp.-Regler/Thermostat				
Typ/Type				
Reglerstellung/Position				
Schaltwerte/Switching values/		„ein“ °C		
Valeurs de commutation		„aus“		
		(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge		R600a g	*	
Anschlußwert/Conn.foad/Puiss. connectée		W	106	172
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild