 
 
 


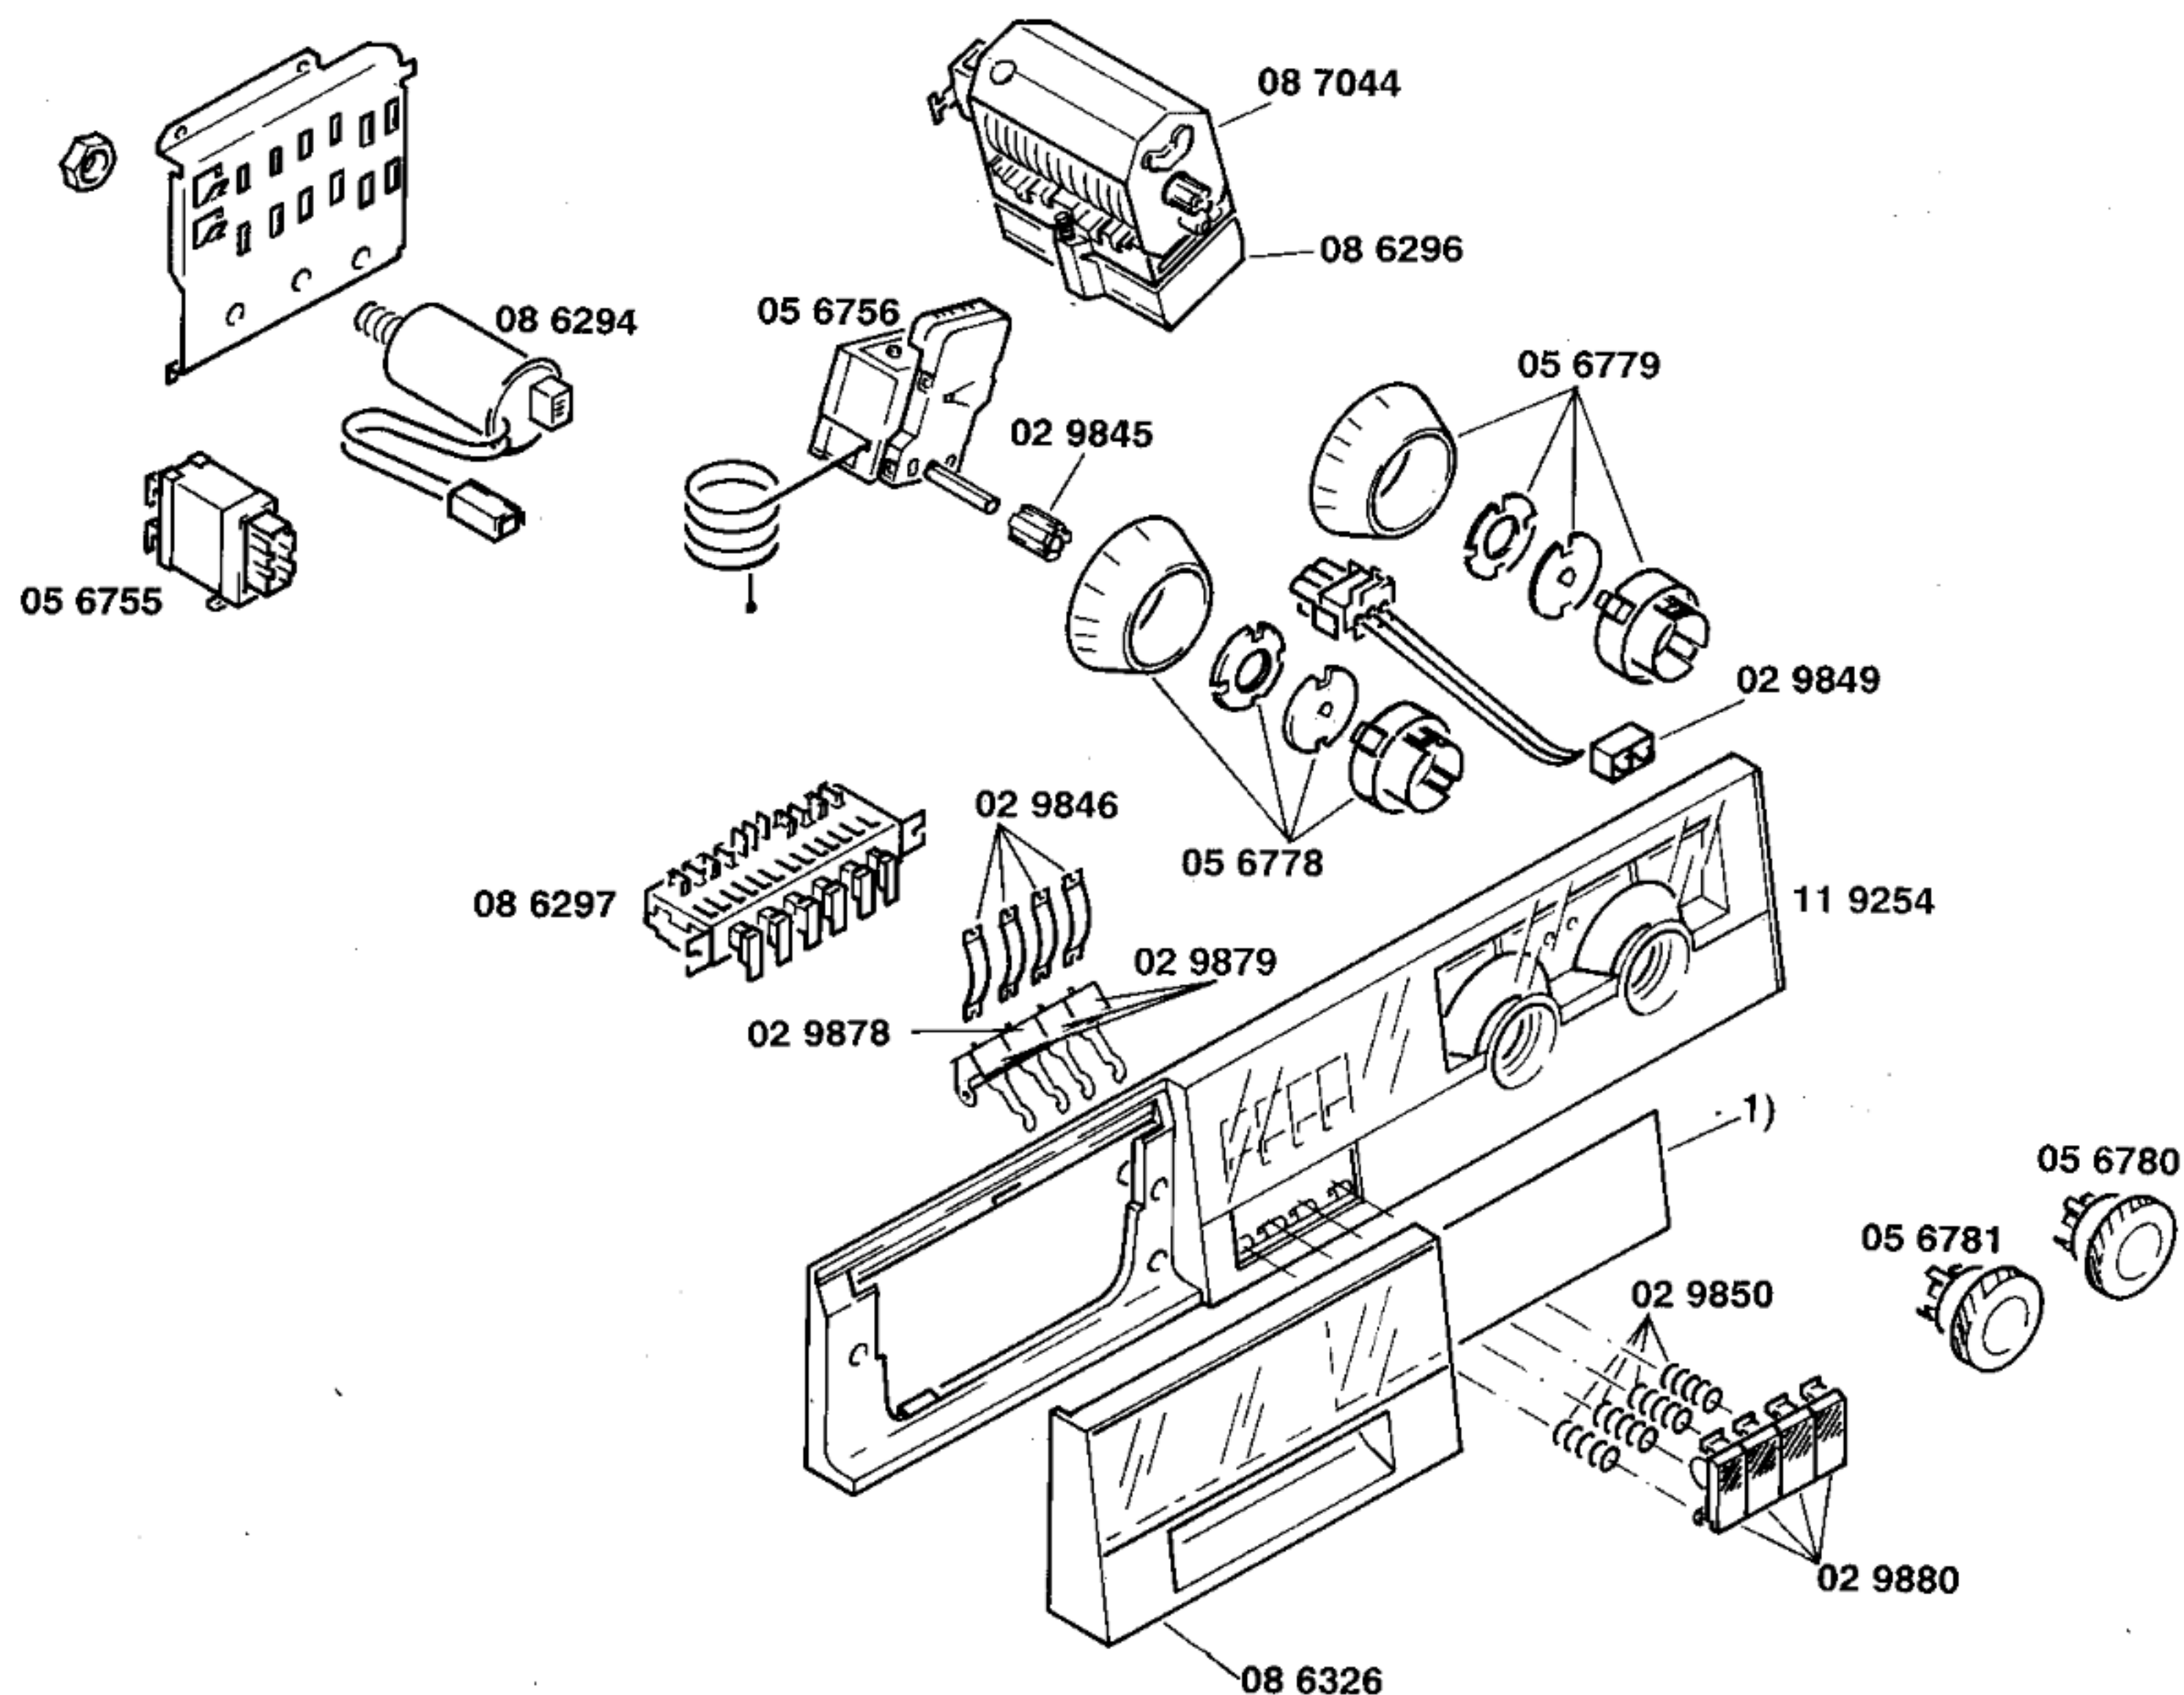

- 1) 08 6327
(D)
08 6328
(N)
08 6329
(E)
08 6330
(S)
08 6331
(DK)
08 6332
(F)
08 6333
(NL)
08 6334
(SF)
08 6687
(TR,YU,E,GB)
08 6689
(GB)
Gebrauchsanweisungen:
51 3564
(D,I,S,N,SF)
51 3565
(NL,F,E,GB)
Programmtabellen:
51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)
Aufstellanweisungen:
51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

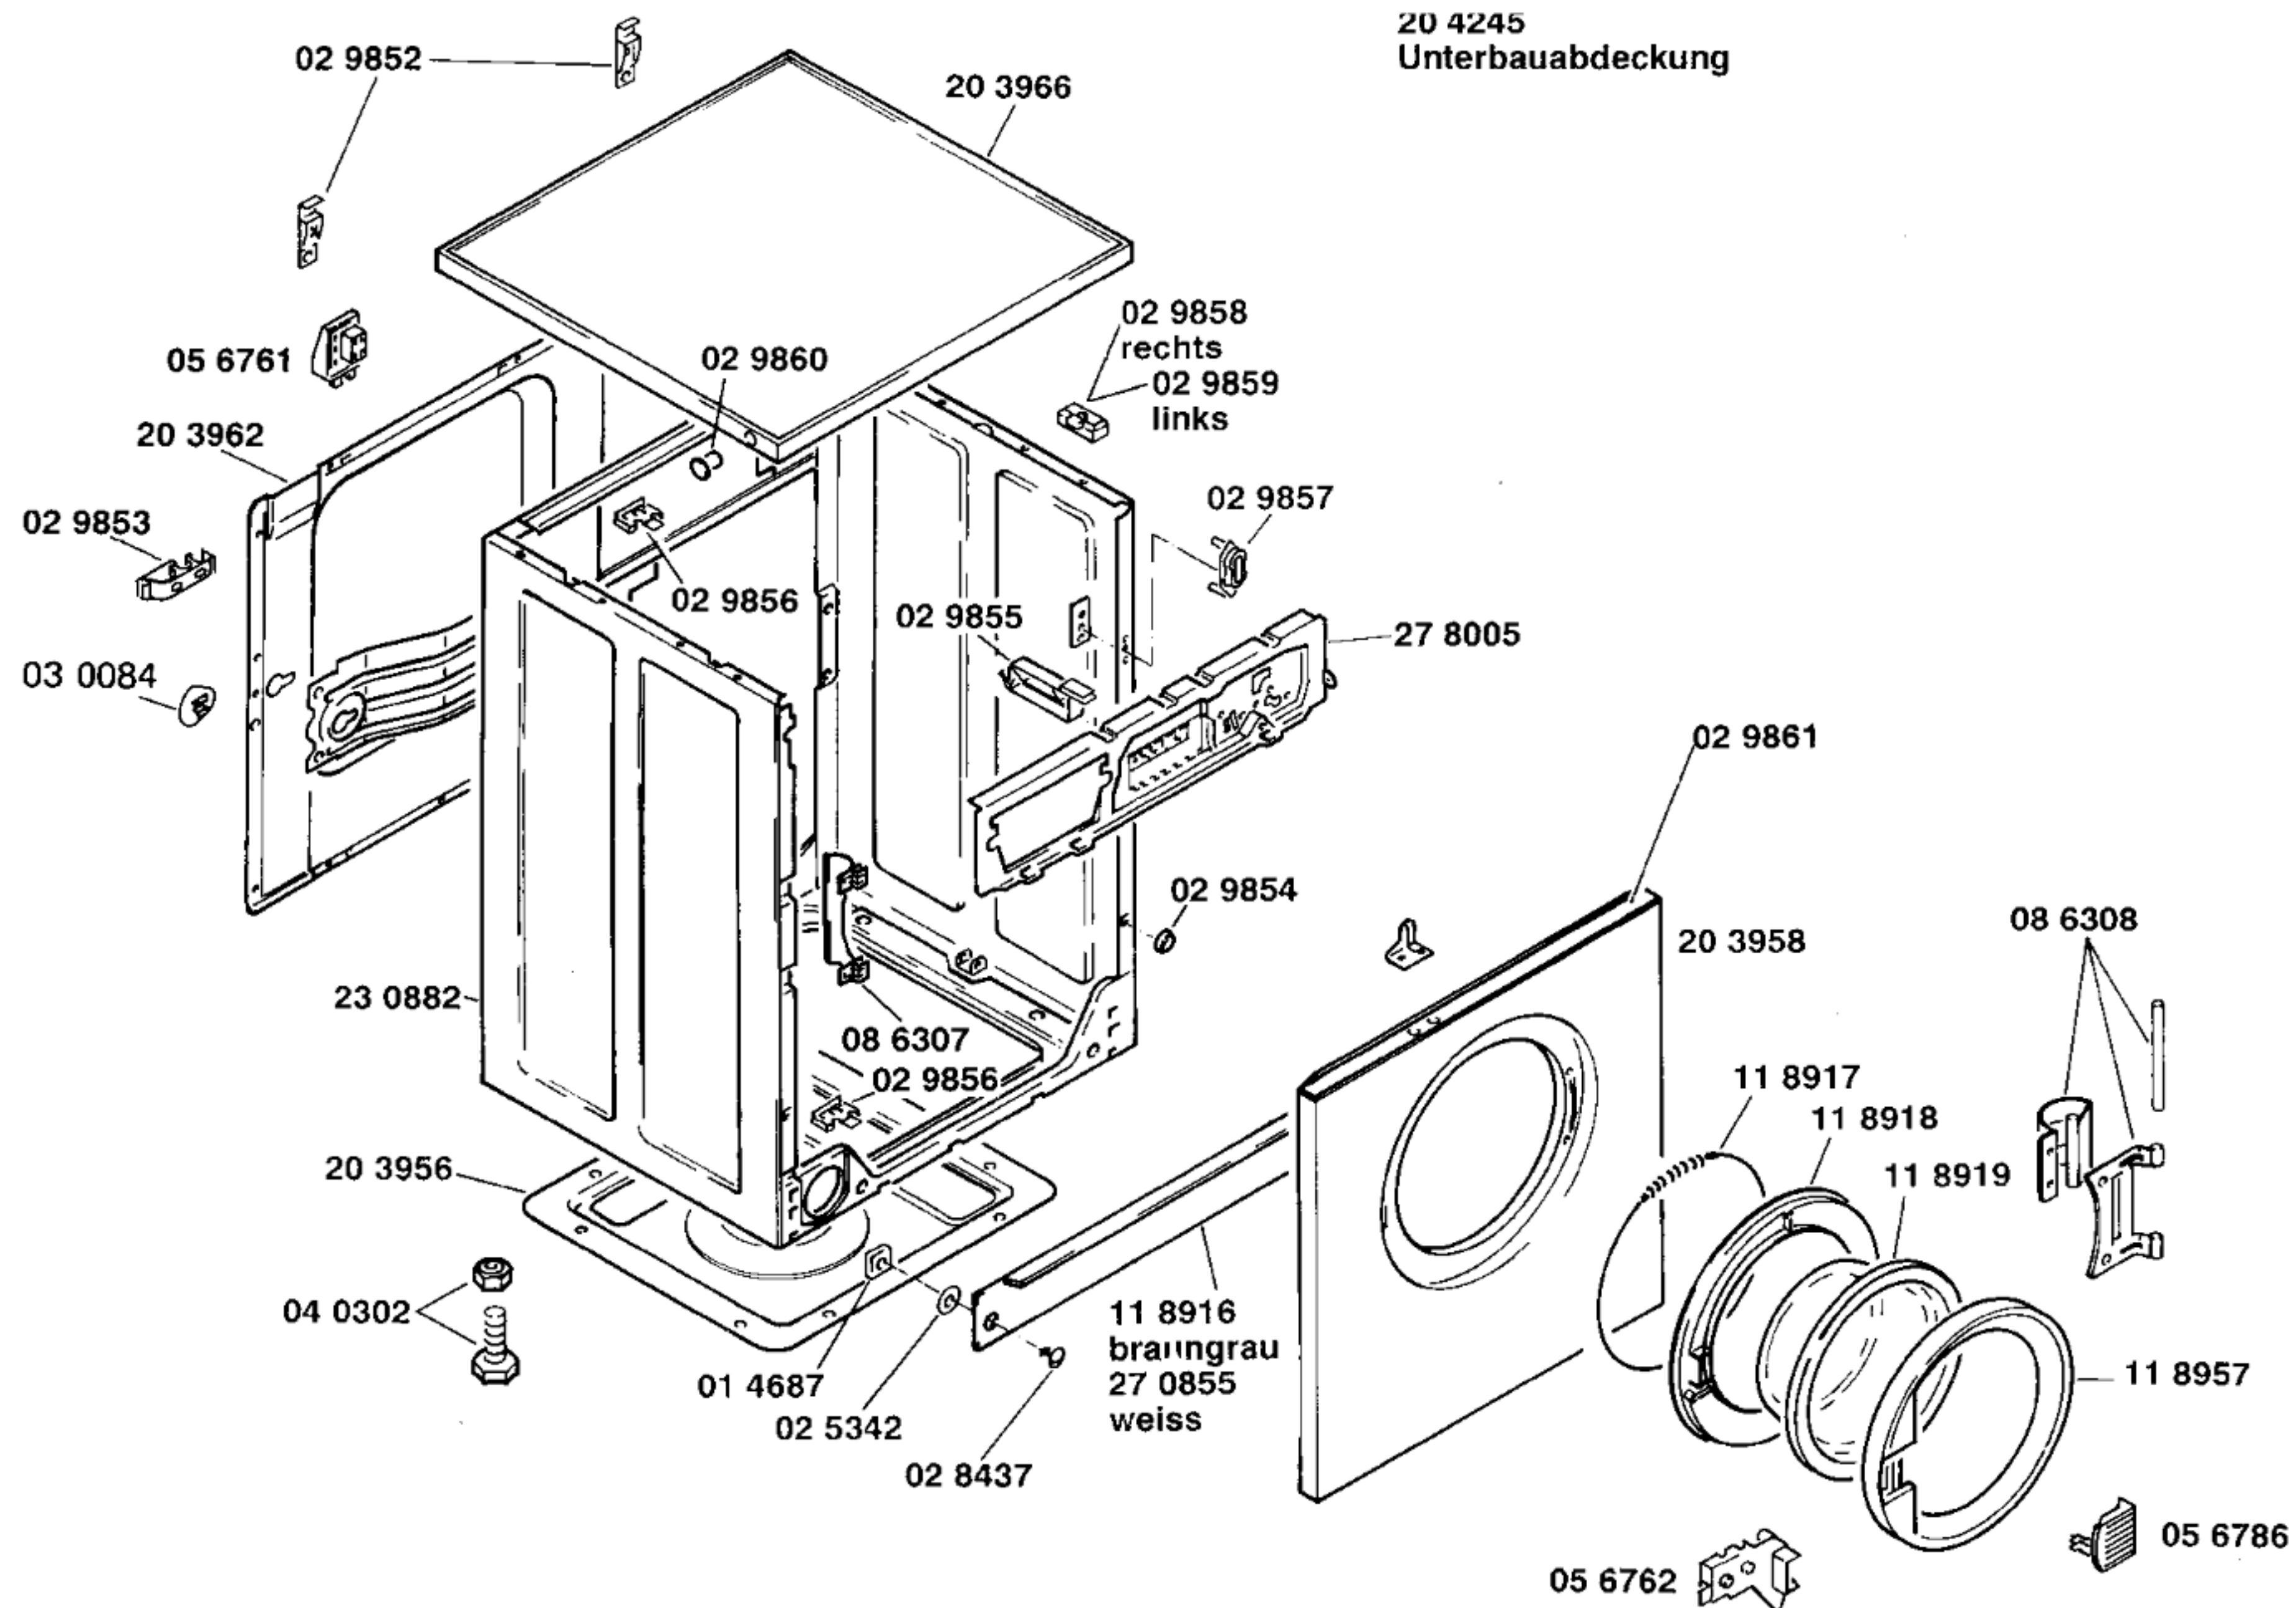

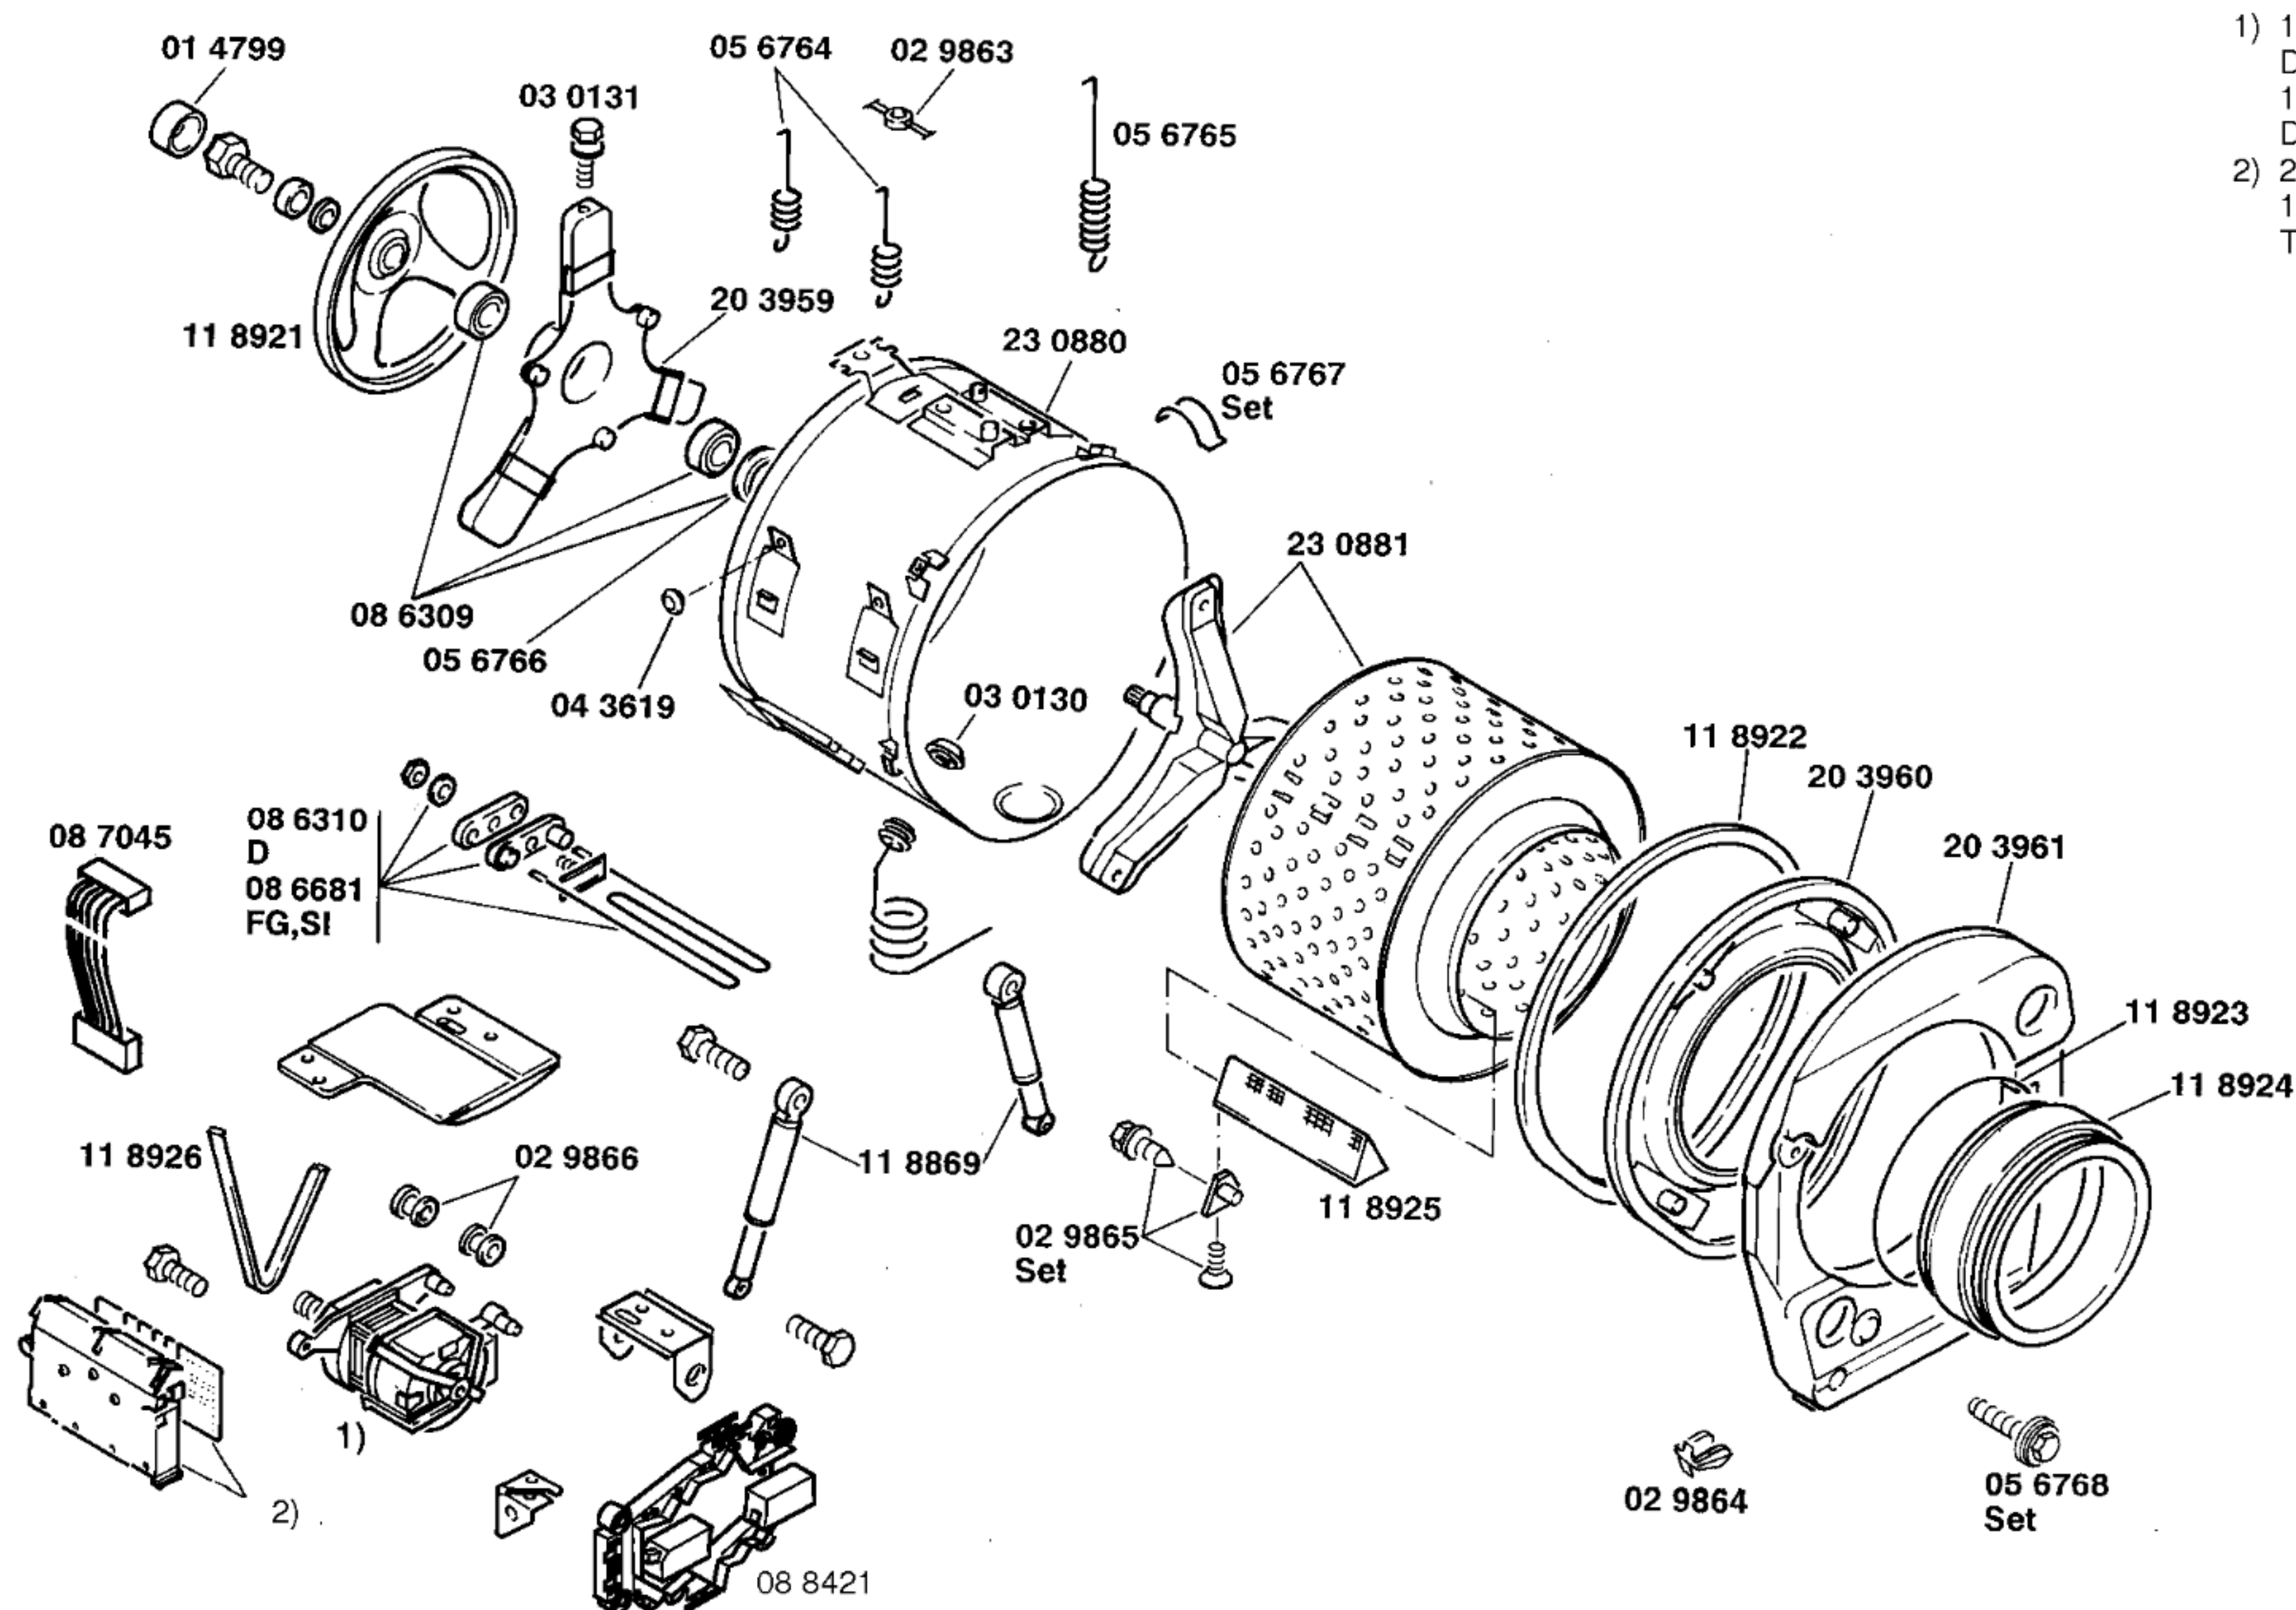

- 1) 14 0469
D1, FG1, SI1
14 0522
D2, FG2, SI2
- 2) 27 0444
15 5272
Triac-Motorleistung

