



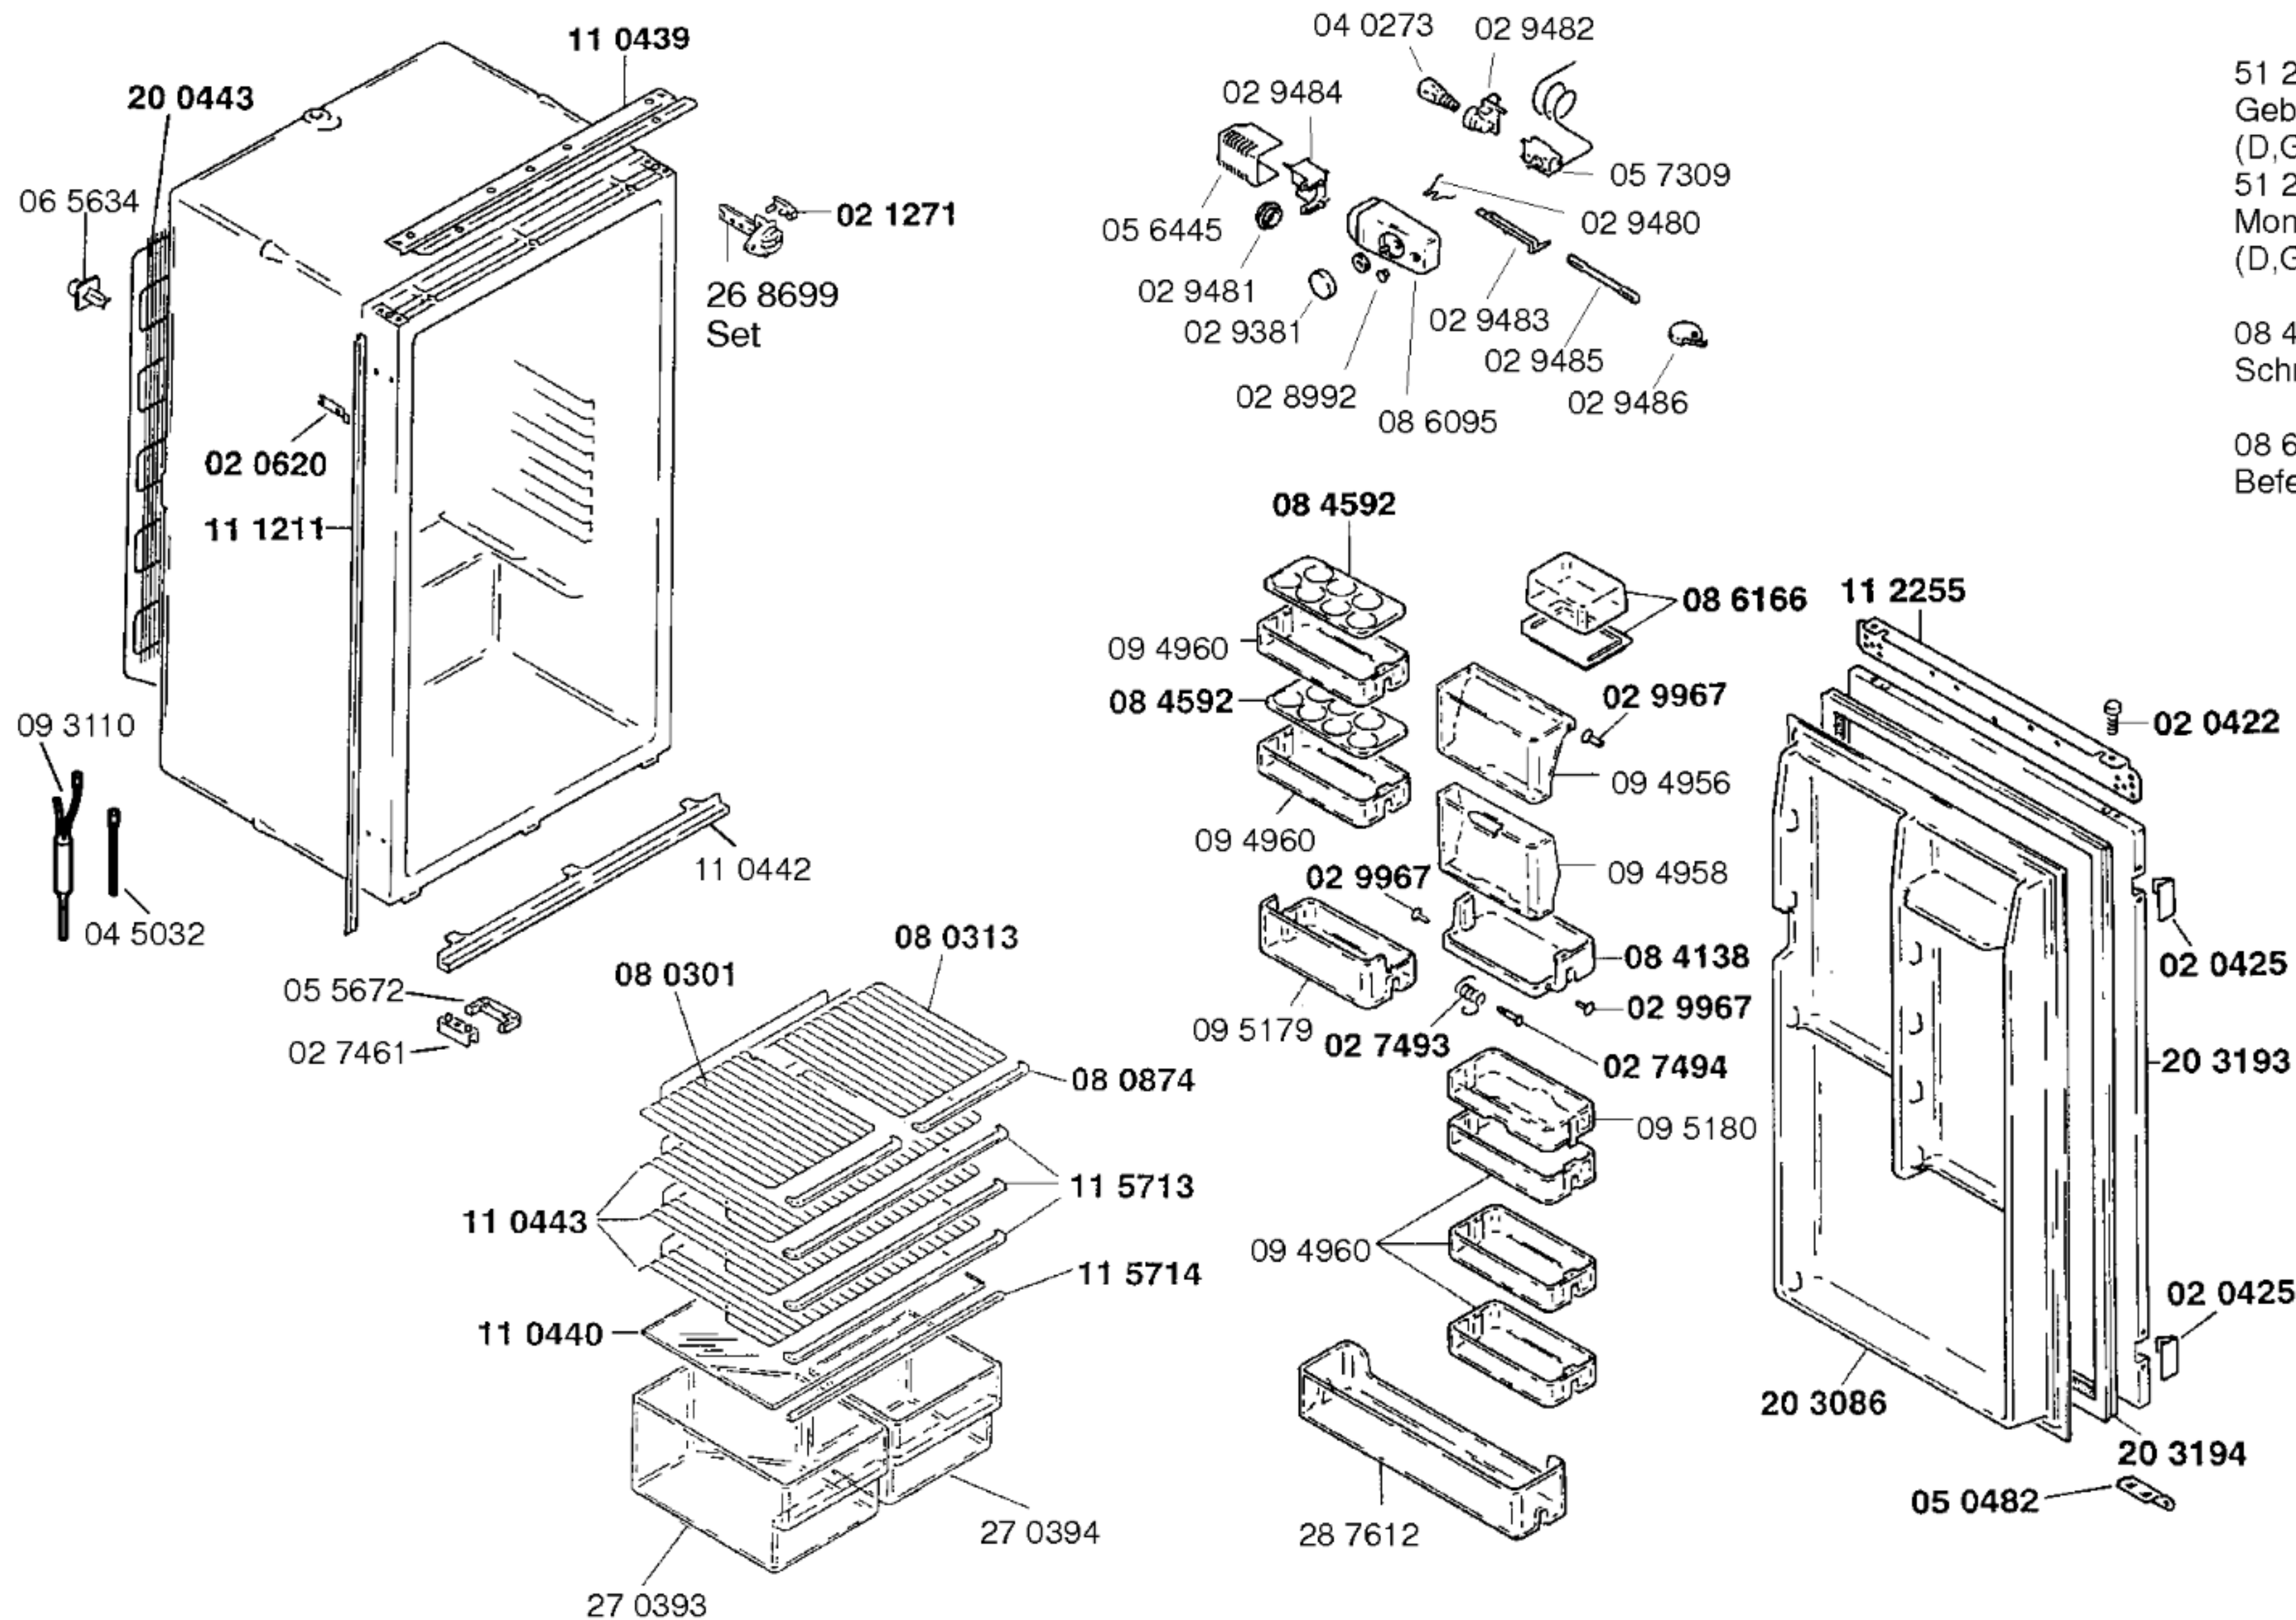

51 2718
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)
51 2737
Montageanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

08 4136
Schraubensatz

08 6512
Befestigungssatz

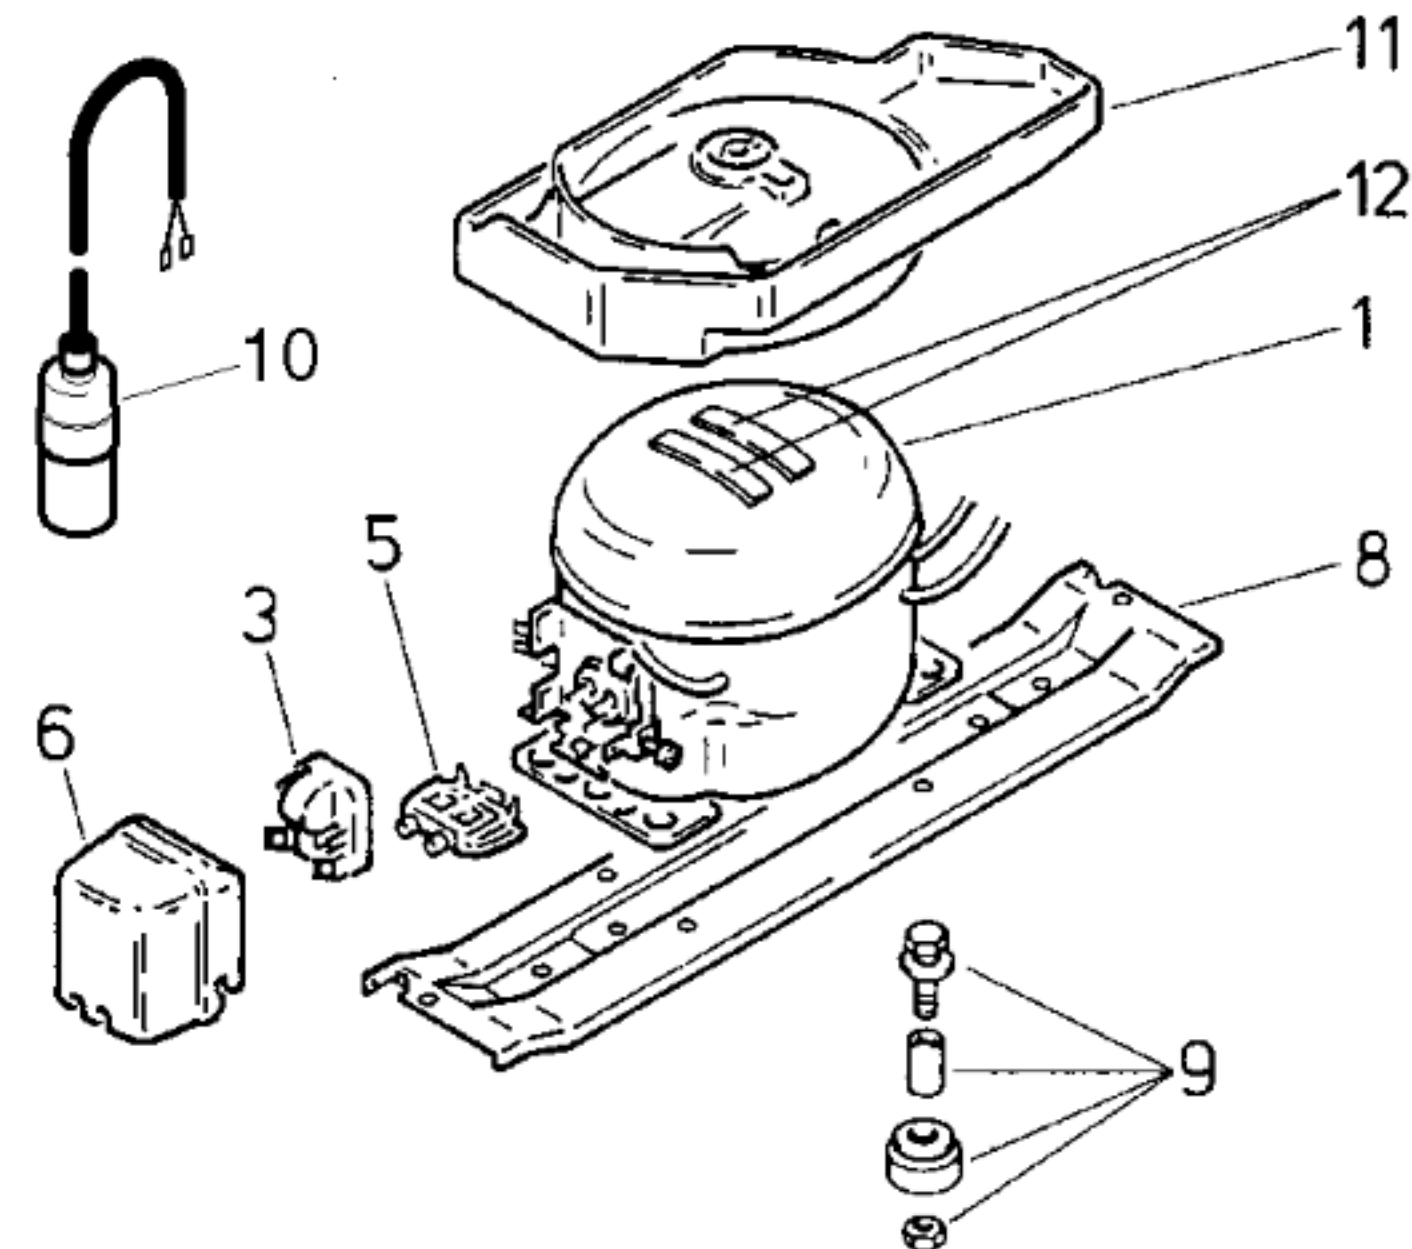

Pos.	Danfoss		
	TLES 5 F		
1	14 1242		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10	05 9467		
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 5 F		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	4,0	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,9	
		Hi/aux Ω	15,3	
Temp.-Regler/Thermostat		Ranco		
Typ/Type		k59		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“ $^{\circ}\text{C}$	+5	+5
		„aus“	-27	-12
		(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge		R134a	g	65
Anschlußwert/Conn.load/Puiss. connectée		W	110	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		