


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		DRUCKSCHRIFTEN	
		Gebrauchsanweisung	Operating Instructions
	53 1169	D / I	
	53 1168	F / E / NL / S	
	53 1170	GB / DK	
	53 5657	Service Manual	
	53 5613	DL- Mechanik	
	53 5656	Schaltpläne und Platinen	Schematic diagram
		ZUBEHÖR	
	73 8884	Trageriemen	Shoulder strap
	78 3177	AC-Adaptor	FZ 157 G4
	75 1529	AC-Verbindungskabel	AC-cord
	79 7223	AV-Verbindungskabel	AV-cord / chynch
	75 7000	VHS-C Cassettenadapter	FZ 163 G4
	75 8918	Akku 4,8V / 2,4Ah	FZ 169 G4
	79 4021	Akku 4,8V / 1Ah	FZ 168 G4
	76 0029	Akku 4,8V / 3,2Ah-NiMH	FZ 174 G4
	79 4474	21-Pin Adapter	21-Pin adaptor
	79 6141	Batteriefachdeckel	Battery cover
	79 6302	DC-Verbindungskabel	DC-output cable
	75 9670	Fernbedienung	Remote controller
	75 9667	Fernbedienungshalter	Remote controller holder
	73 8099	Lithiumzelle f. FB, CR2025	Battery for Remote control, CR2025

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		FUNKTIONSEINHEITEN	
	75 9984	Grundplatine, Camera	Camera main P.C.B.
	75 9989	Front	Front P.C.B.
	79 5488	Start-Stop	S/S P.C.B.
	79 6664	AV-Buchsen	AV jack P.C.B.
	79 6665	Sucher, A	EVF (A) P.C.B.
	79 6666	Sucher, B	EVF (B) P.C.B.
	79 6667	Sucher, C	EVF (C) P.C.B.
	79 6682	Mikrofon	Microphone P.C.B.
	79 6685	Eject	Eject P.C.B.
	79 6784	CCD Flex	CCD flex, P.C.B.
	79 6785	Lens Flex	Lens flex, P.C.B.
		DIVERSE BAUTEILE	
	73 9873	Photosensor 0N1004-R	Photo sensor
	79 3347	Photosensor SG-211S	Photo sensor
J1501	79 3339	AV-Buchsen	AV jack plate
J1601	79 6731	Batterie Anschluß/DC-Buchse	Battery connector/DC-jack
J4801	79 0219	Mikrofon Buchse	Mic.-jack
Z801	79 5314	Lithiumzelle VL2020/1HF	Lithium battery

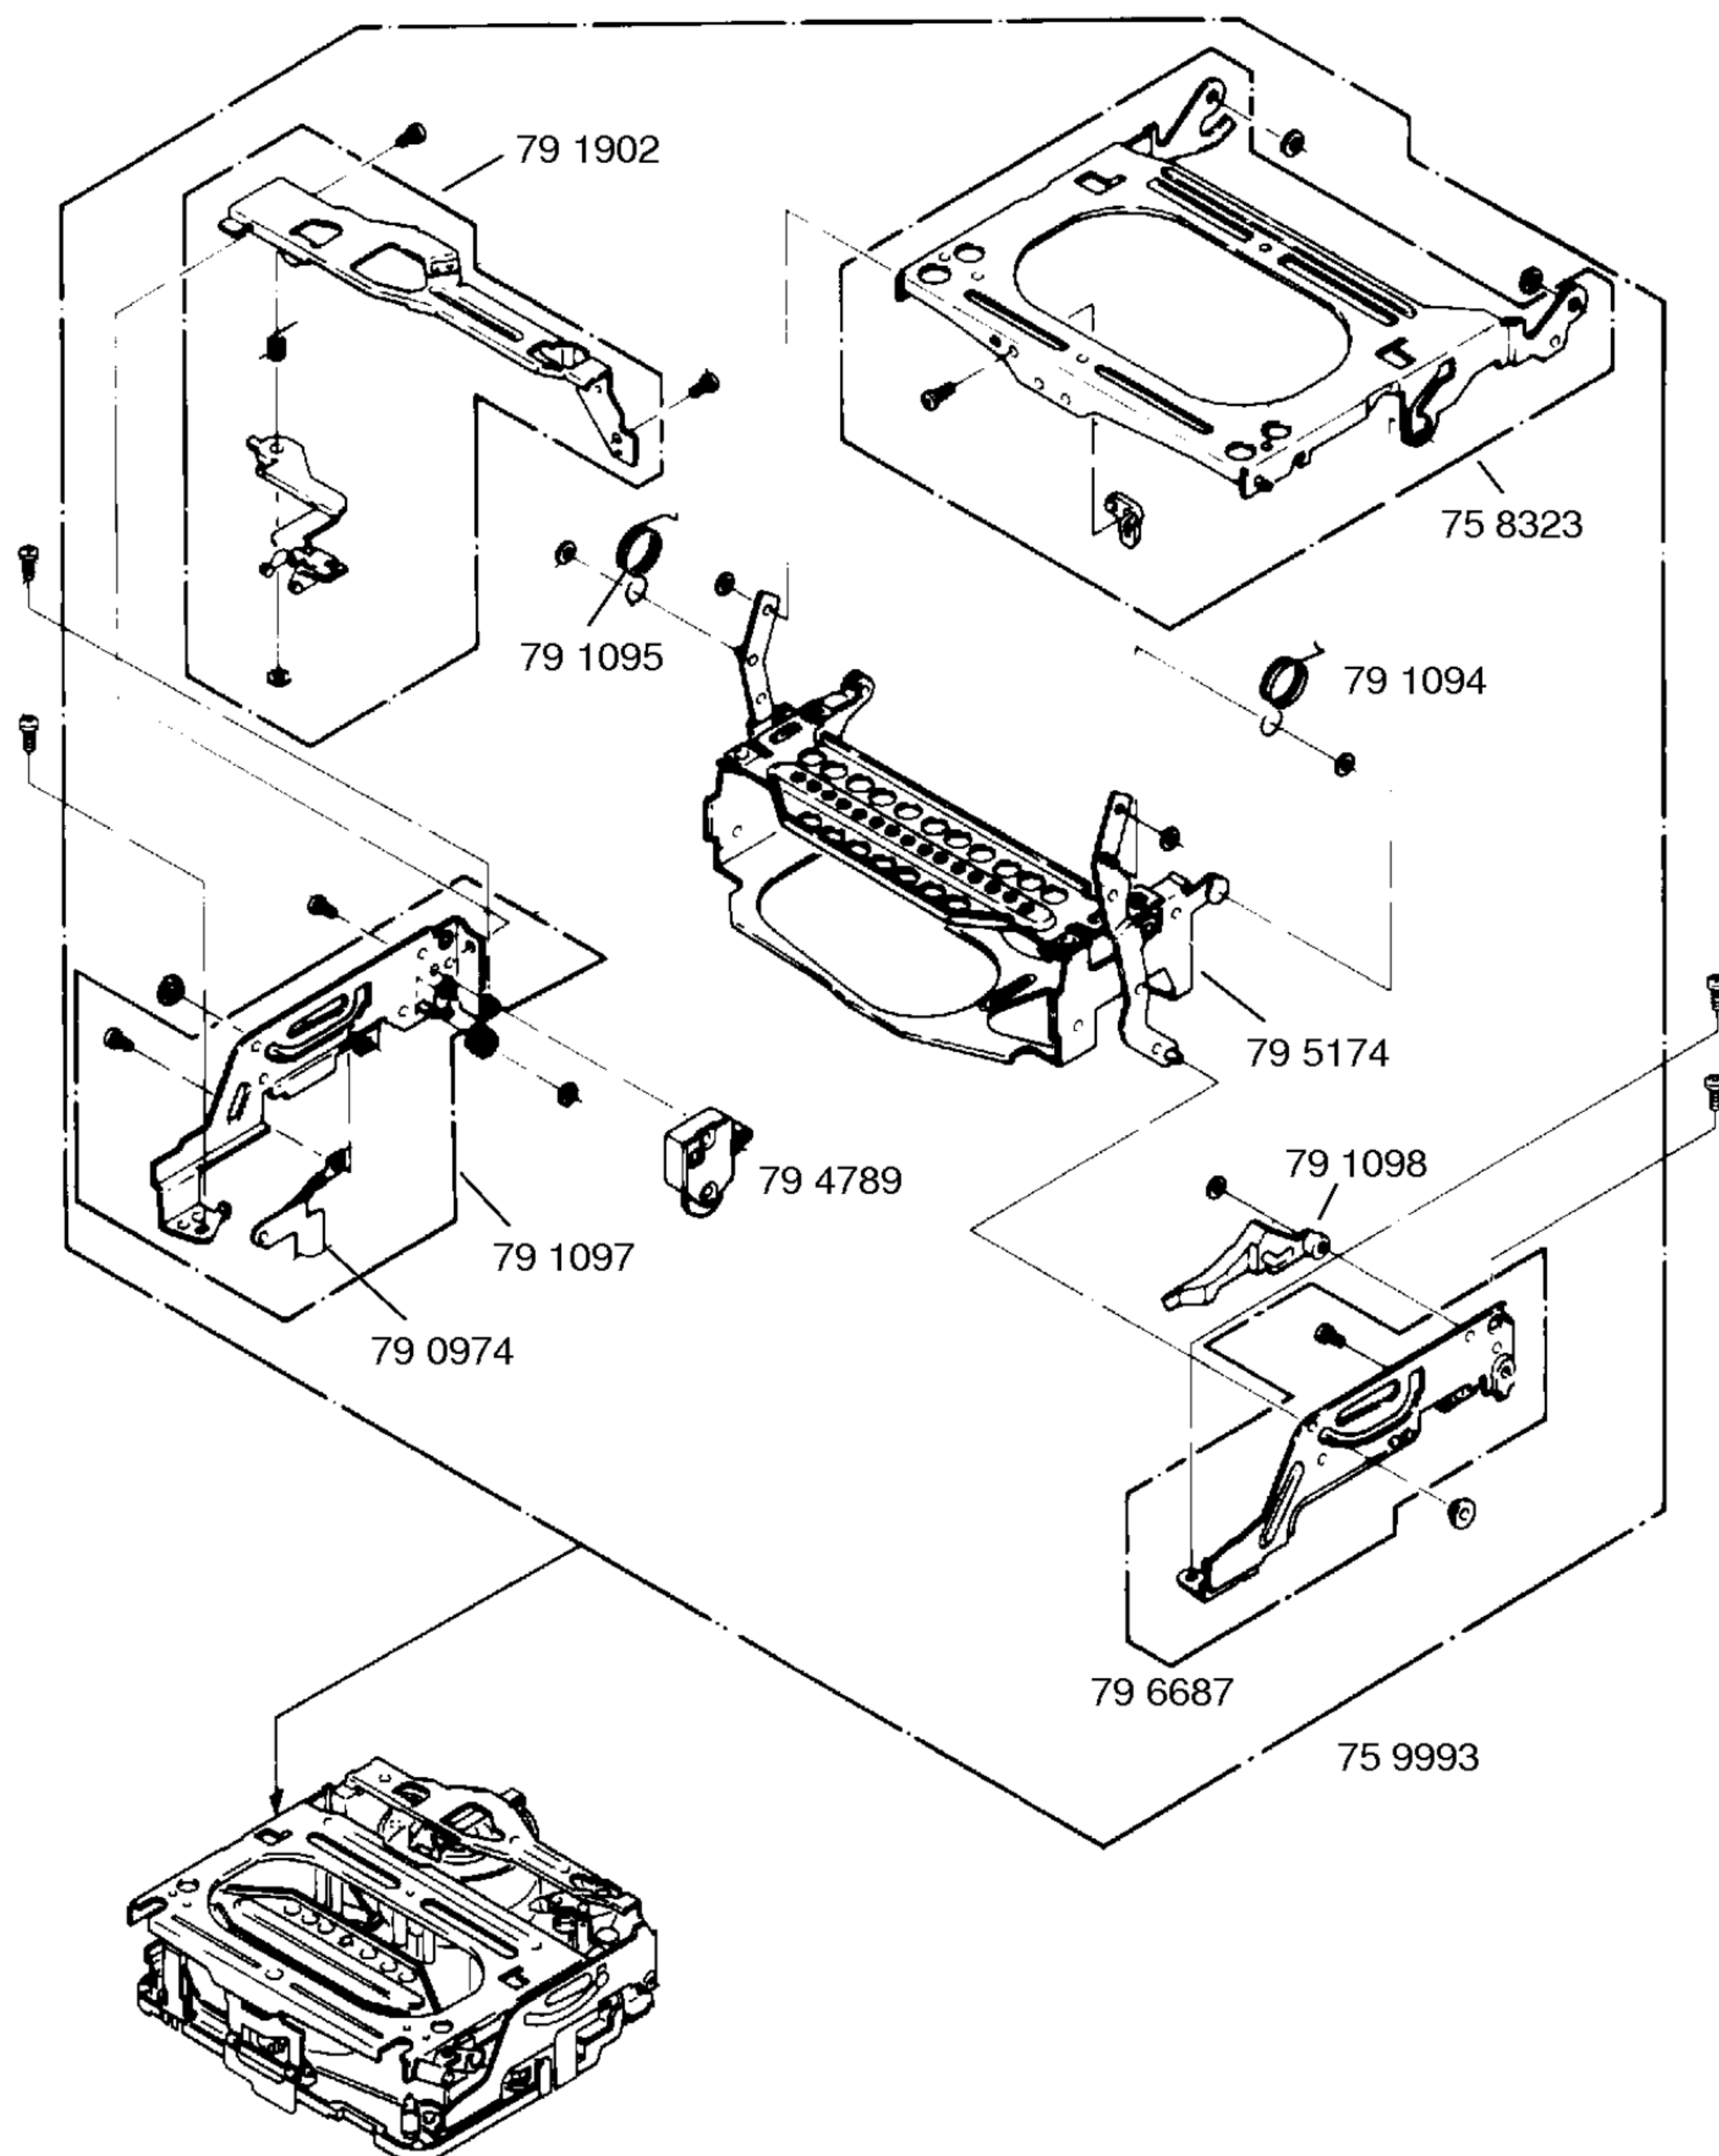

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
IC201	79 6841	VEFH43A	
IC202	79 6128	MN5226	
IC204	79 6677	M52946FP	
IC205	79 5321	SC7S08F	
IC206	79 0771	TC7W04F	
IC207	79 4161	TC7SU04F	
IC208	79 5321	SC7S08F	
IC209	79 5321	SC7S08F	
IC211	79 5610	SC7S04F	
IC212	79 5610	SC7S04F	
IC301	73 9617	TC7S32F	
IC302	79 6842	MN67323	
IC303	79 2378	TC7S86F	
IC304	79 6671	AN2043SB	
IC305	79 6674	MN1866405M7W	
IC306	79 6675	MN67335	
IC307	79 0762	M62352GP	
IC309	79 5041	AK6440HF	
IC310	79 6673	MM1166AF	
IC311	79 6678	NN4792FBP	
IC701	79 6561	TB6526F	
IC702	79 6561	TB6526F	
IC706	79 6558	NJM2115VA	
IC711	79 5059	TA75W01FU	
IC751	79 5480	TA75S393F	
IC801	79 3151	FA7610N	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
IC802	79 6672	CXA1854AR	
IC891	79 3956	PQ20VZ1U	
IC1001	79 3803	BA9706K	
IC1702	79 6679	RH5RH492B	
IC2001	79 5481	TB6518F	
IC2002	79 0798	UN224	
IC2003	79 0798	UN224	
IC3001	79 6553	HA118401F	
IC4001	79 5467	BA7758FS	
IC5001	79 5465	AN3355FHP	
IC5501	79 6557	MSM7470-73MS	
IC6001	79 6676	MN6755486M7X	
IC6002	79 5800	S3510ANFJ	
IC6003	79 6681	UPD6462GS615	
IC6004	79 1785	RH5RE38AA	
IC6005	79 3089	BA6289F	
IC6006	79 4415	TA75W393FU	
IC6007	79 6680	S2900AUP	
IC6008	79 0771	TC7W04F	
IC6009	79 4413	PST9133NR	
IC6010	79 5792	BU4066BCFV	
IC6801	79 6843	VEK6546	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
S501	79 6722	AF/MF	
S502	79 3962	Digital Dial	
S6702	79 5616	Camera Power	
SW511	79 5617	Eject	
SW1695	79 7090	Anti-Ground	
SW1696	79 5618	Power Safe	
			
T891	79 6789	E.v.F.	
T1001	79 5619	Netzteil	power sec.
T1002	79 4427	Netzteil	power sec.
T4001	79 6725	Löschoscillator	erase osc.
			
X201	79 6787	22,531250 MHz	
X301	79 6147	19,801 MHz	
X801	79 6150	4,433619 MHz	
X5501	79 6723	4,43 MHz	
X6001	79 6148	1,600 MHz	
X6002	79 4671	32,768 MHz	
X6003	79 4671	32,768 MHz	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		MESSWERKZEUGE	
	34 0214	H-Position Abgleich	H-Position adjustment
	34 0216	Conv. Filter	C12
	34 0217	Conv. Filter	C2
	34 0260	VHS-C Abgleichcassette	VHS-C Aligment-tape
	34 0290	EVR- Abgleichcomputer	EVR Fixture
	79 6786	ROM 33	ROM 33
		ADAPTERKABEL	
	34 0189	5Pin	
	34 0394	6 Pin	
	34 0393	9 Pin	
	34 0368	12 Pin	
	34 0293	18 Pin	
	34 0199	24 Pin	
	34 0291	24 Pin	
	34 0413	28 Pin	
		ADAPTERSTECKER	
	34 0481	6 Pin	
	34 0552	6 Pin	
	34 0411	7 Pin	
	34 0478	9 Pin	
	34 0550	9 Pin	
	34 0477	12 Pin	
	34 0551	12 Pin	
	34 0479	18 Pin	
	34 0480	18 Pin	
	34 0482	18 Pin	

