



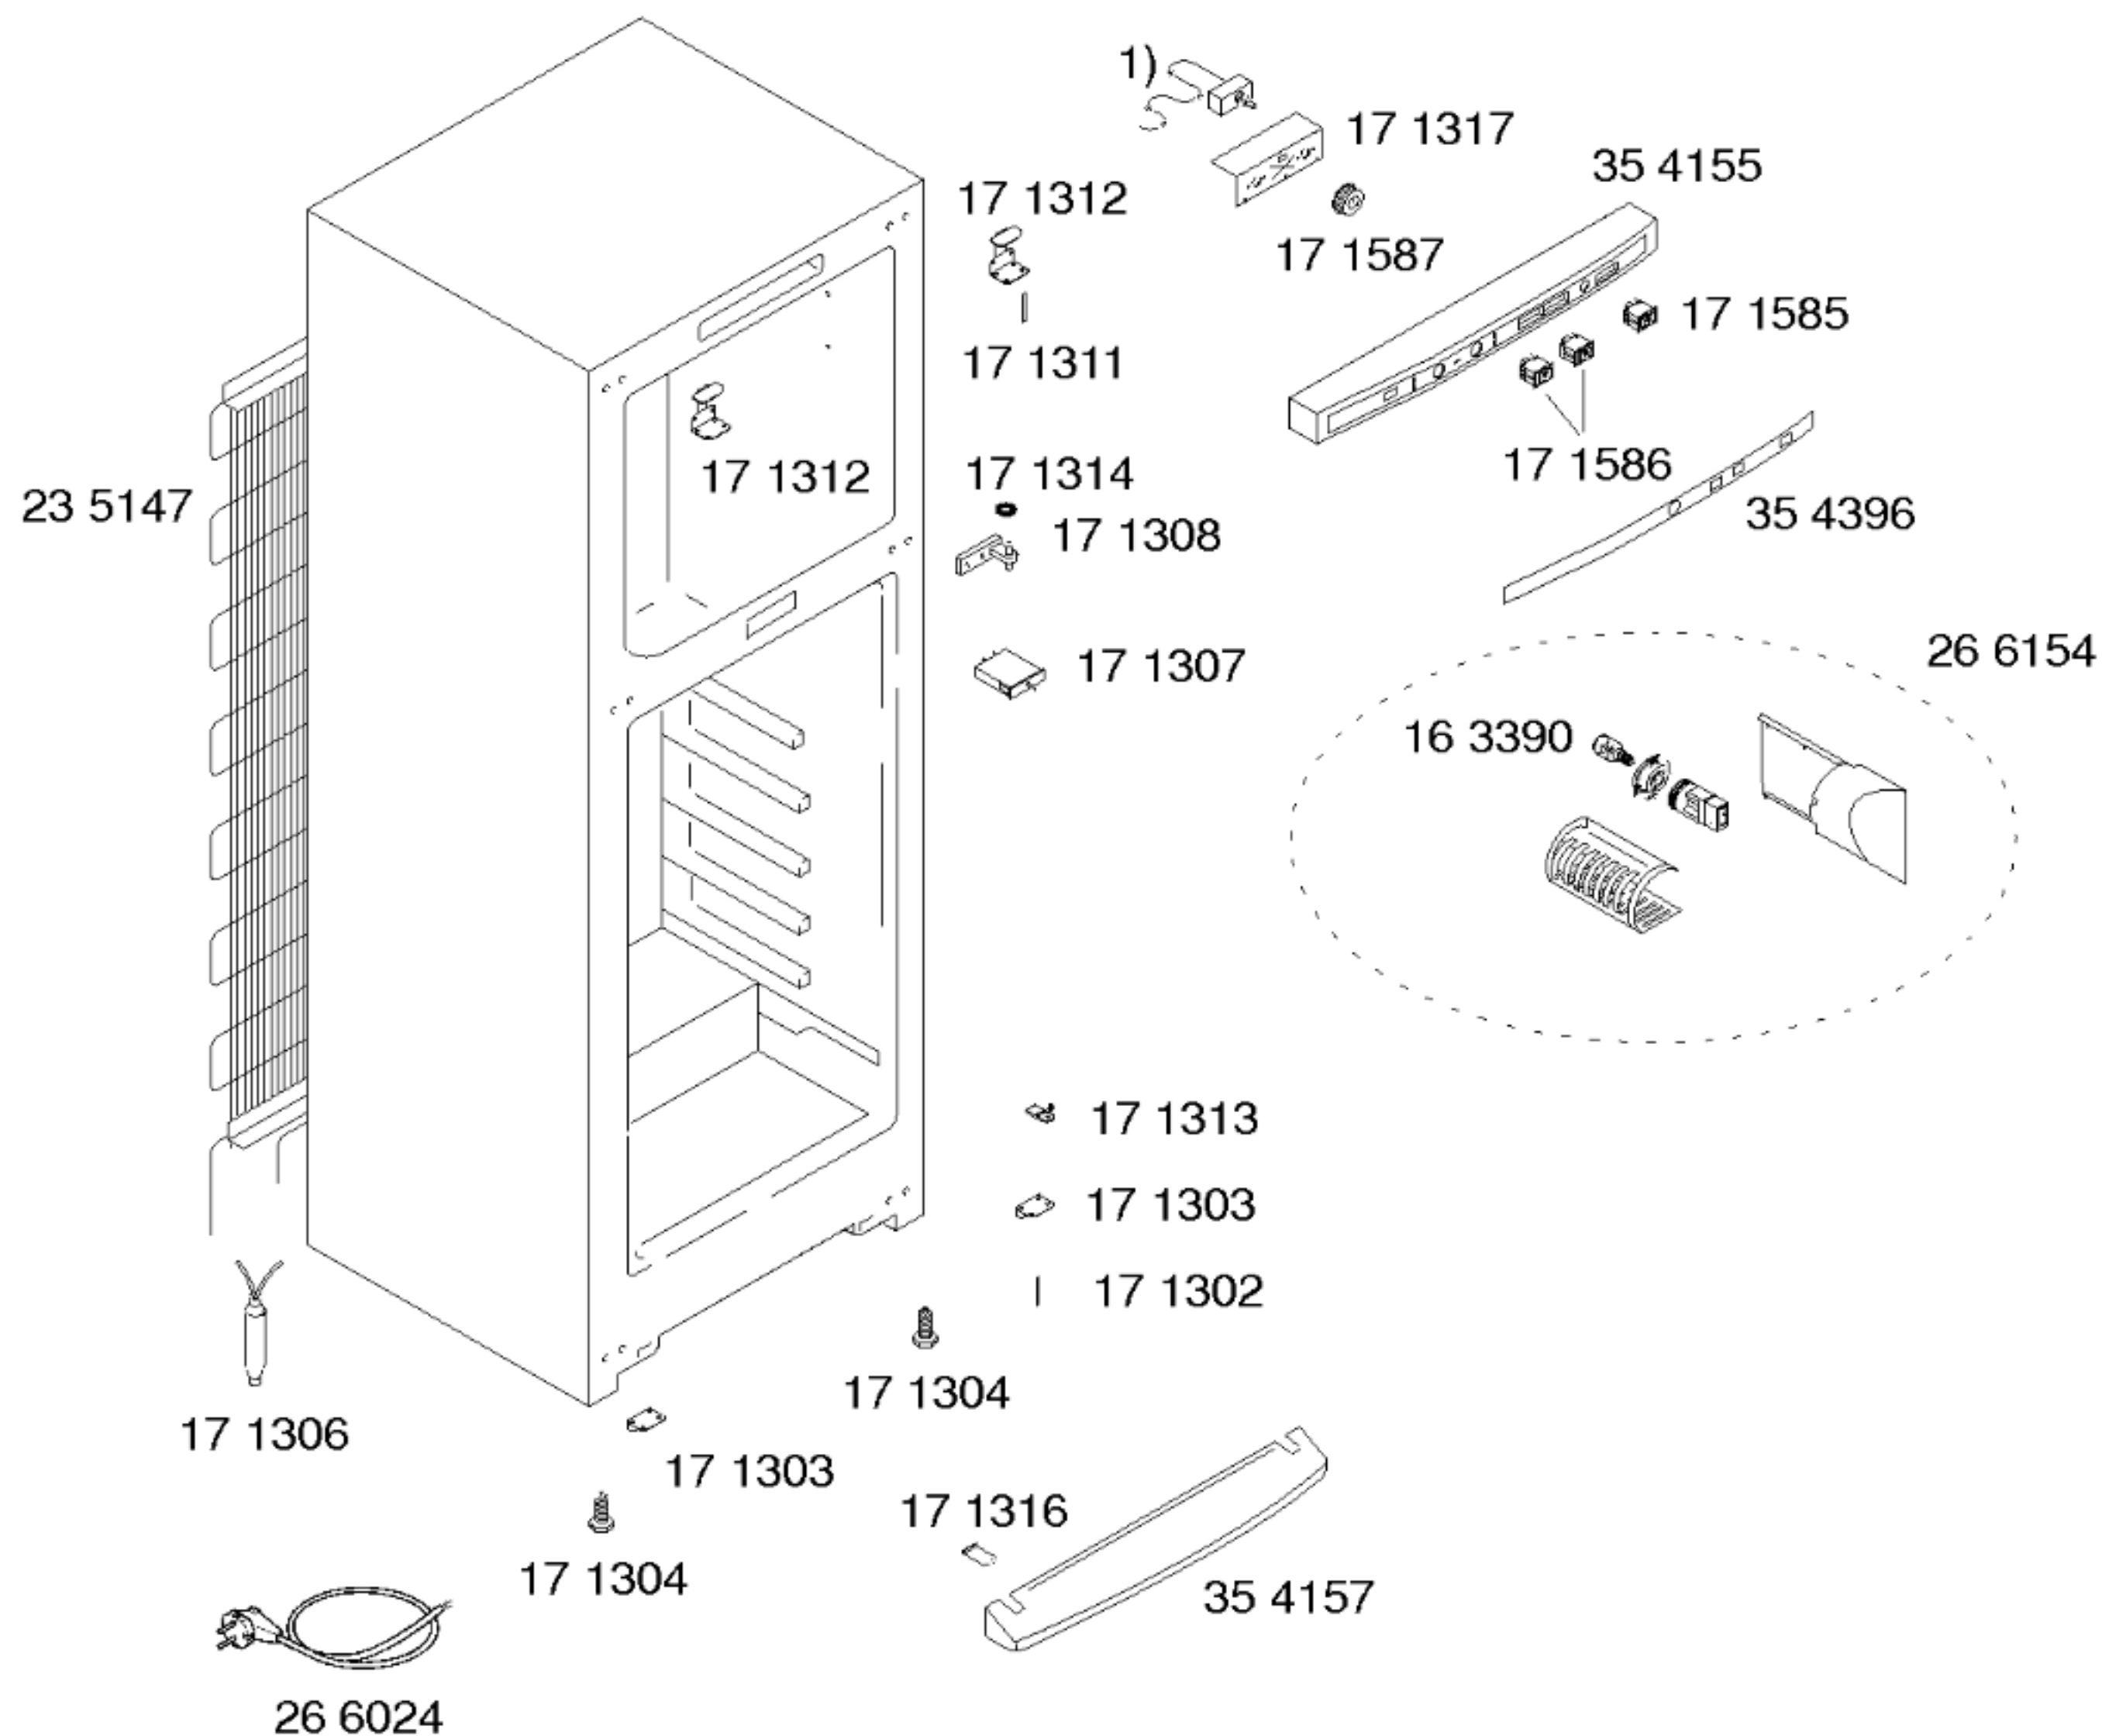


Gebrauchsanweisung
52 4000
(DE,FR,IT)

1) 17 2017
V01,V02
18 2792
V03,V04

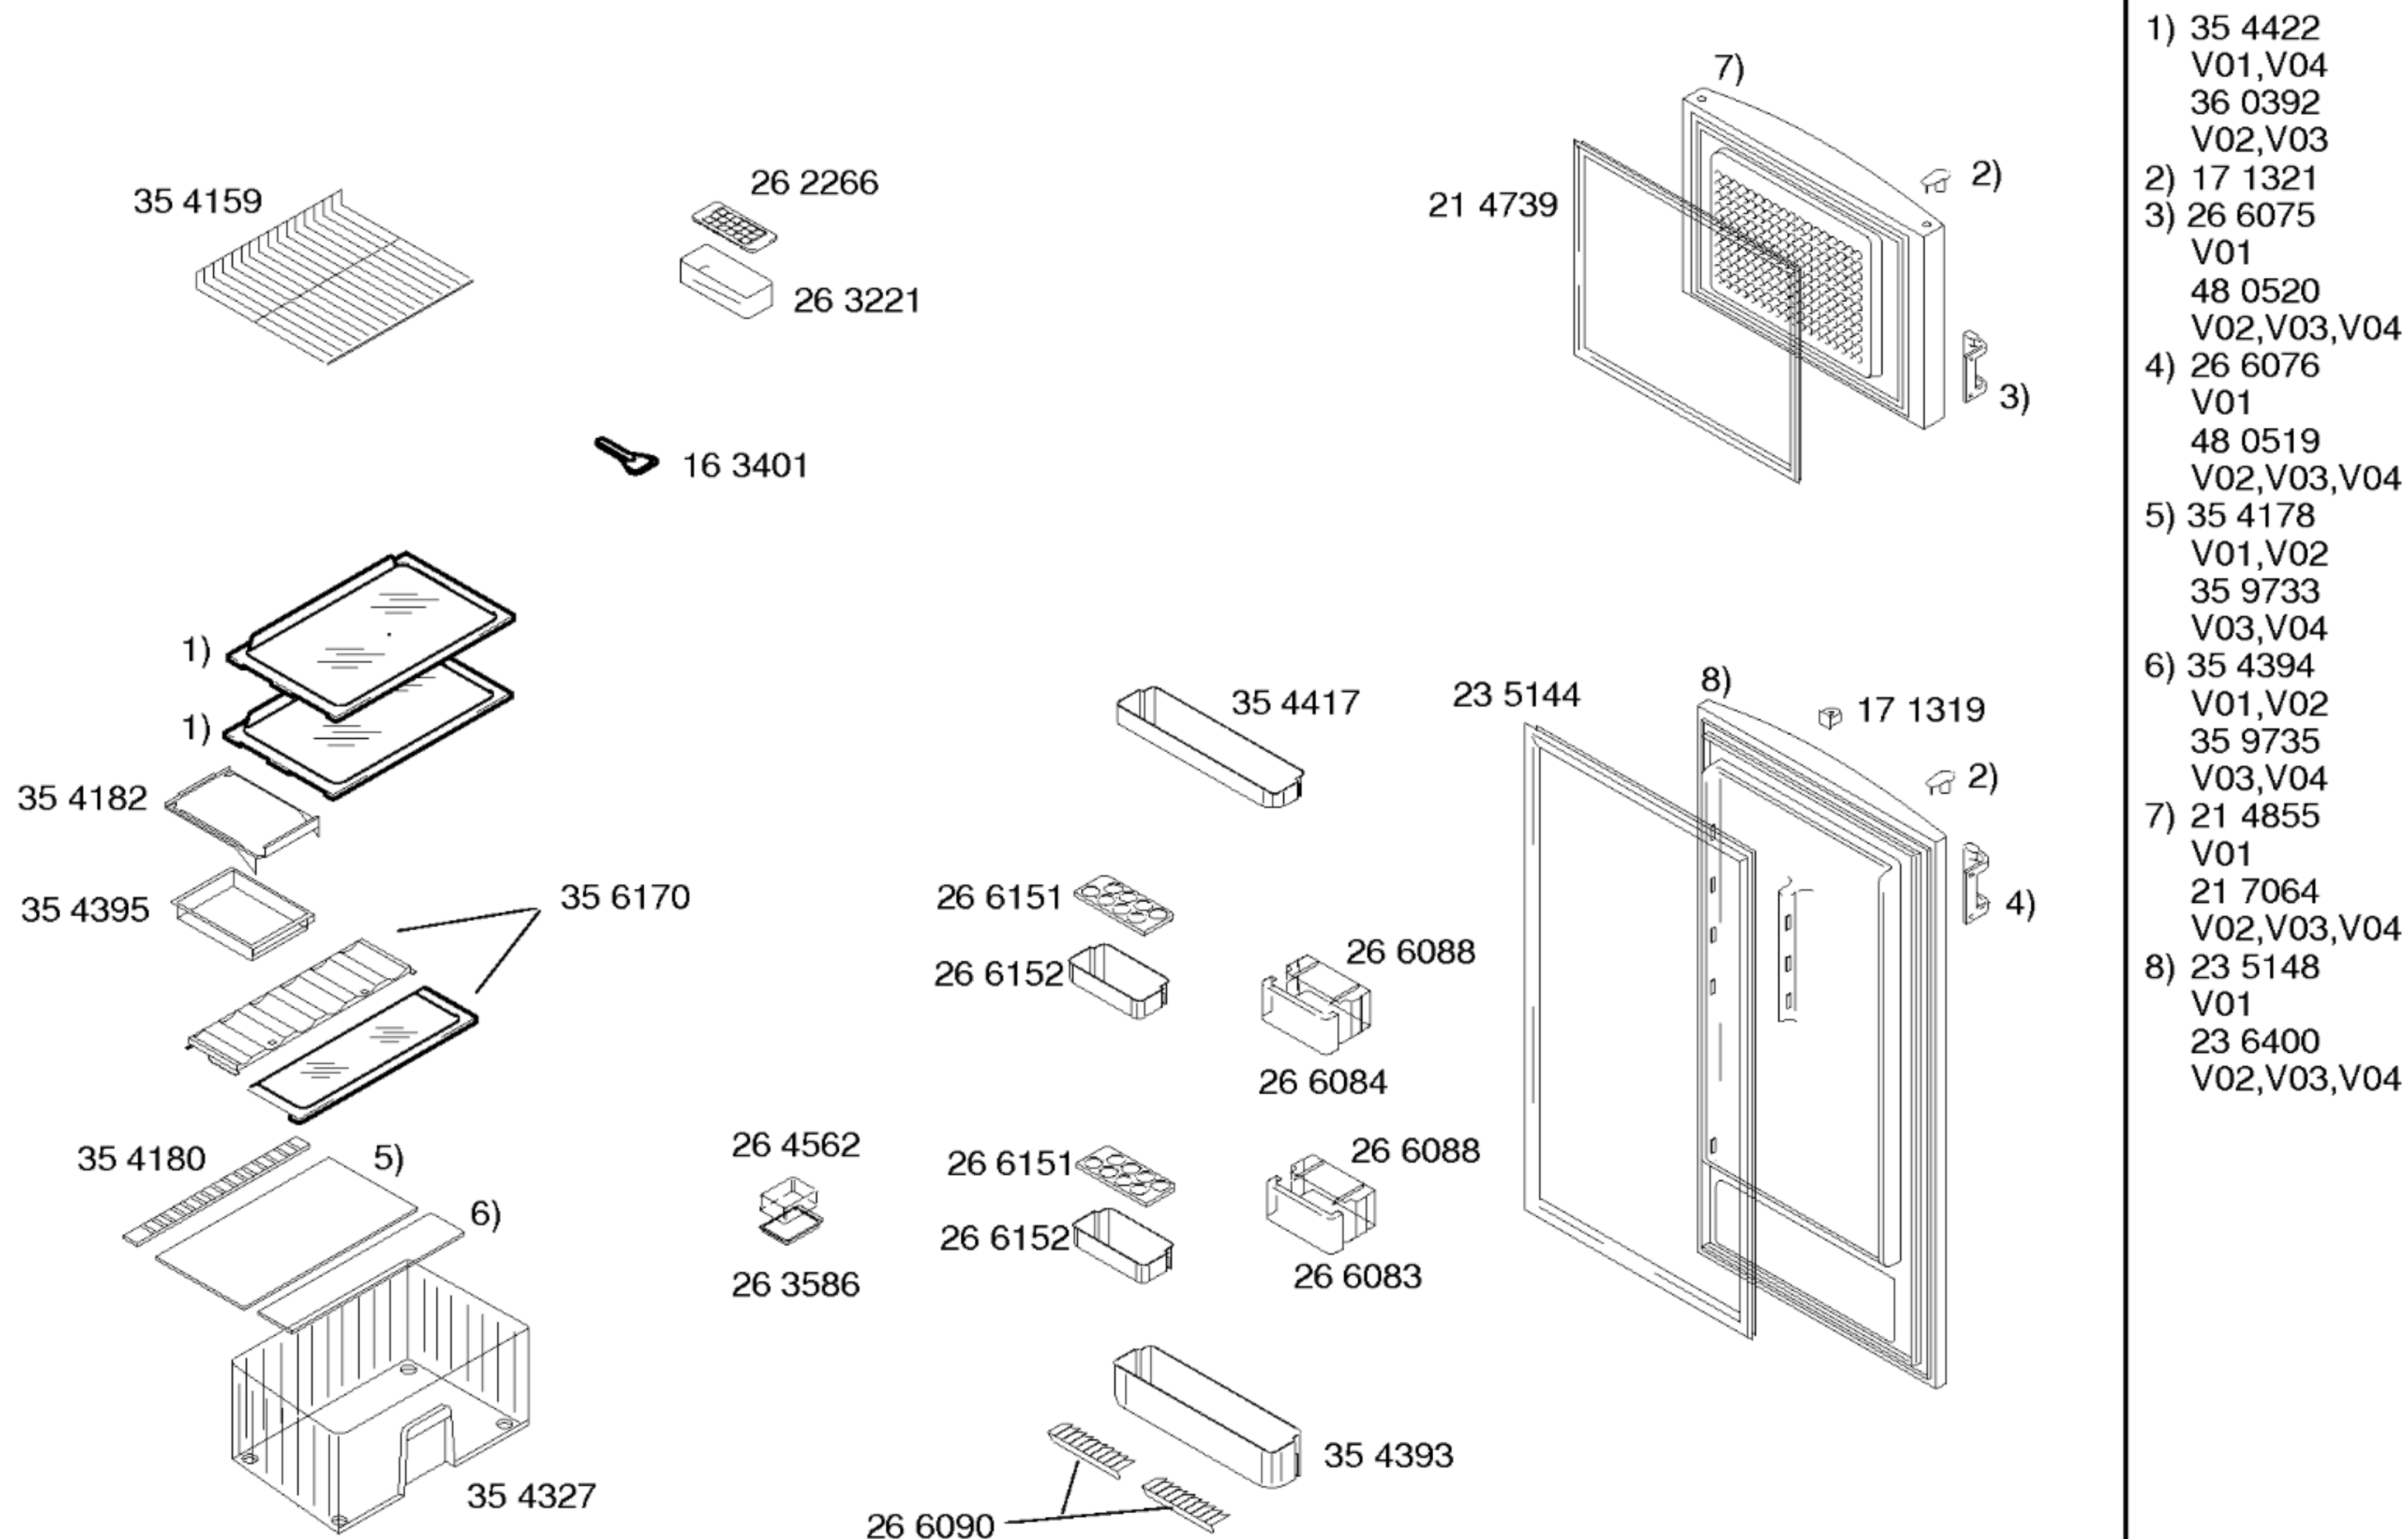

- 1) 35 4422
V01,V04
36 0392
V02,V03
- 2) 17 1321
- 3) 26 6075
V01
48 0520
V02,V03,V04
- 4) 26 6076
V01
48 0519
V02,V03,V04
- 5) 35 4178
V01,V02
35 9733
V03,V04
- 6) 35 4394
V01,V02
35 9735
V03,V04
- 7) 21 4855
V01
21 7064
V02,V03,V04
- 8) 23 5148
V01
23 6400
V02,V03,V04

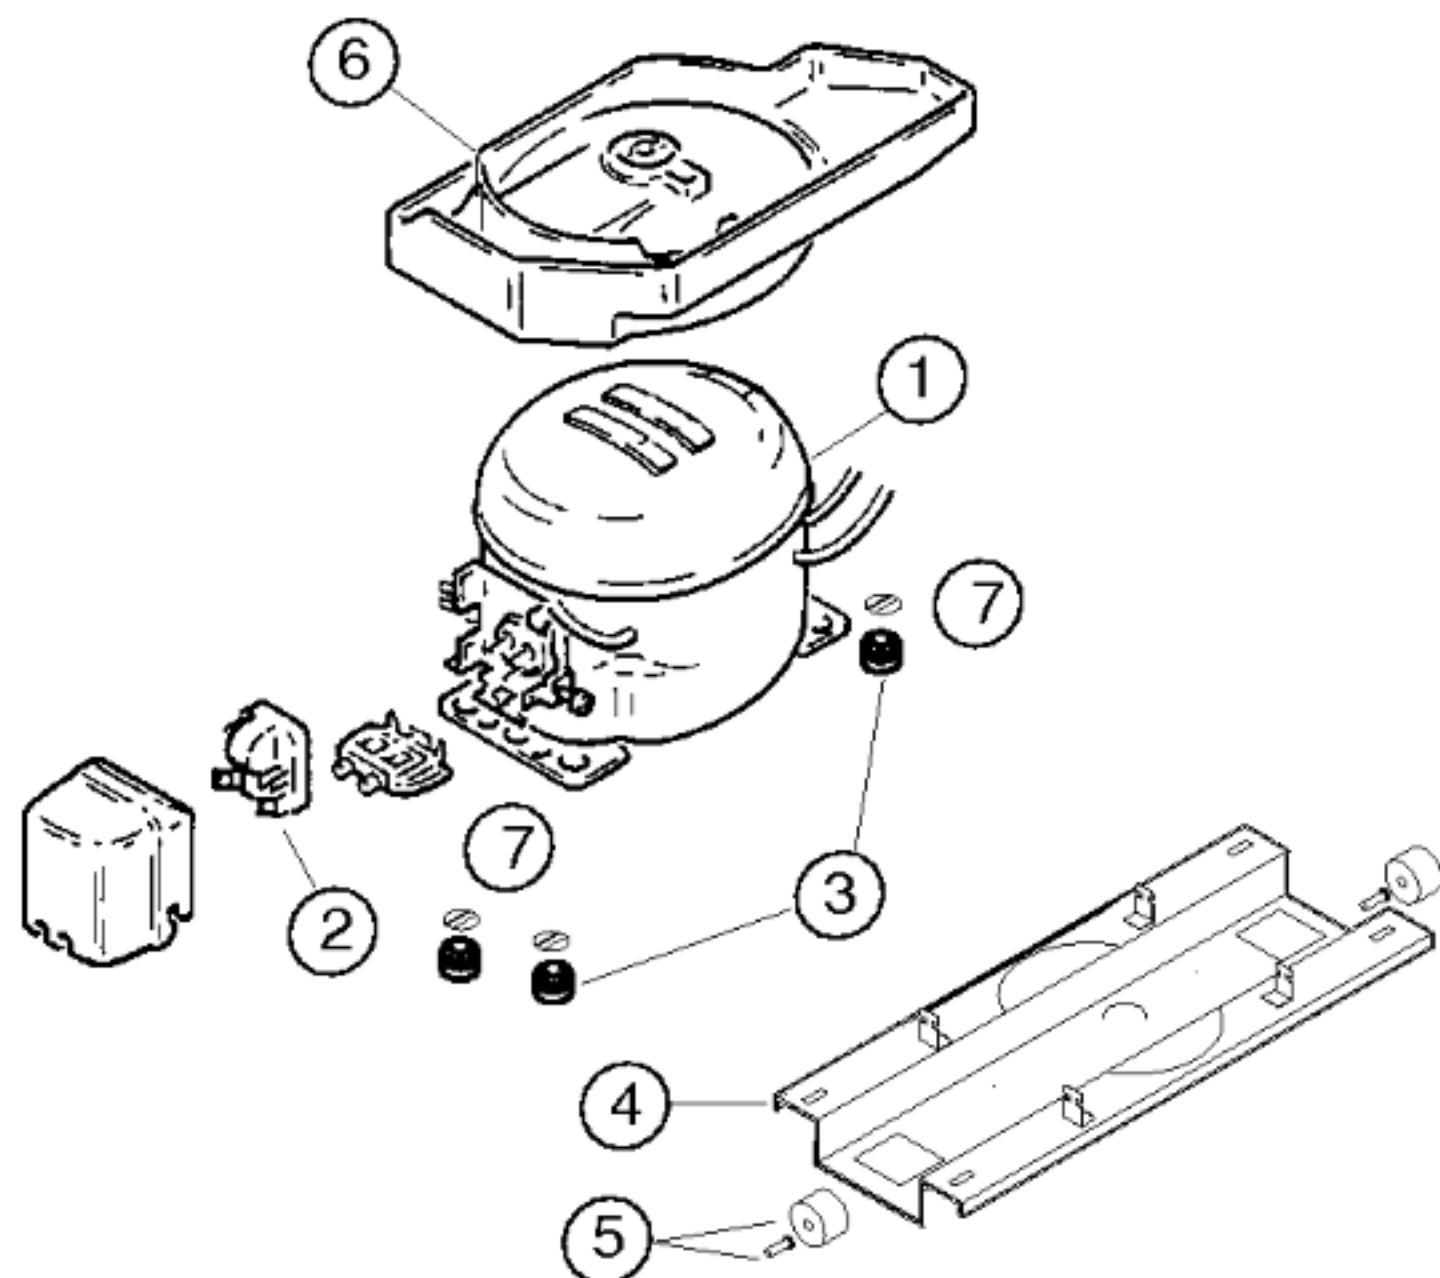

Pos.	Danfoss		
	NLE11K		
1	14 1878		
2	16 5570		
3	16 3427		
4	35 4158		
5	17 1318		
6	26 5327		
7	17 1519		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör

Typ/Type/Tip

Förderleistung/Delivery/Verim/h

Anlaufstrom/Starting current/Giris akimi

Widerstand/Resistance/Rezistans Ha/

A

Ω

Hi/aux.

Danfoss

NLE11K

10.7

12.9

18

Temp.Reyler/Thermostat/Termostat

Typ/Type/Tip

Reglerstellung/Position/Termostat pozisyonu

Schaltwerte/Actma kapama degerleri

..ein/acma °C

Valeurs de commutation/Termostat degeri

..aus"/kapama

(..abtaven' od)

..alarm'

RANCO

K59/P6833

+3.5 +3.5

-31 -20

Füllmenge/Fill. quantily/ Dolum miktari

R600

g

*

Anschlusswert/Comm. load/Giris gucu

W

*

Heizung/Heater/Rezistans

Widerstand/Resistance/Direnc

Leistung/Power/Guc

Ω

W

Ventilador/Blower/Vantilatör

Widerstand/Resistance/Rezistans

Ω

Magnetventil/Magnetic valve/Manyetik valf

Widerstand/Resistance/Rezistans

Spannung/Voltage/Gerilim

Ω

V

Temp.Reyler/Thermostat/Termostat

* Siehe Typenschild/Mamul etiketine bakiniz