 



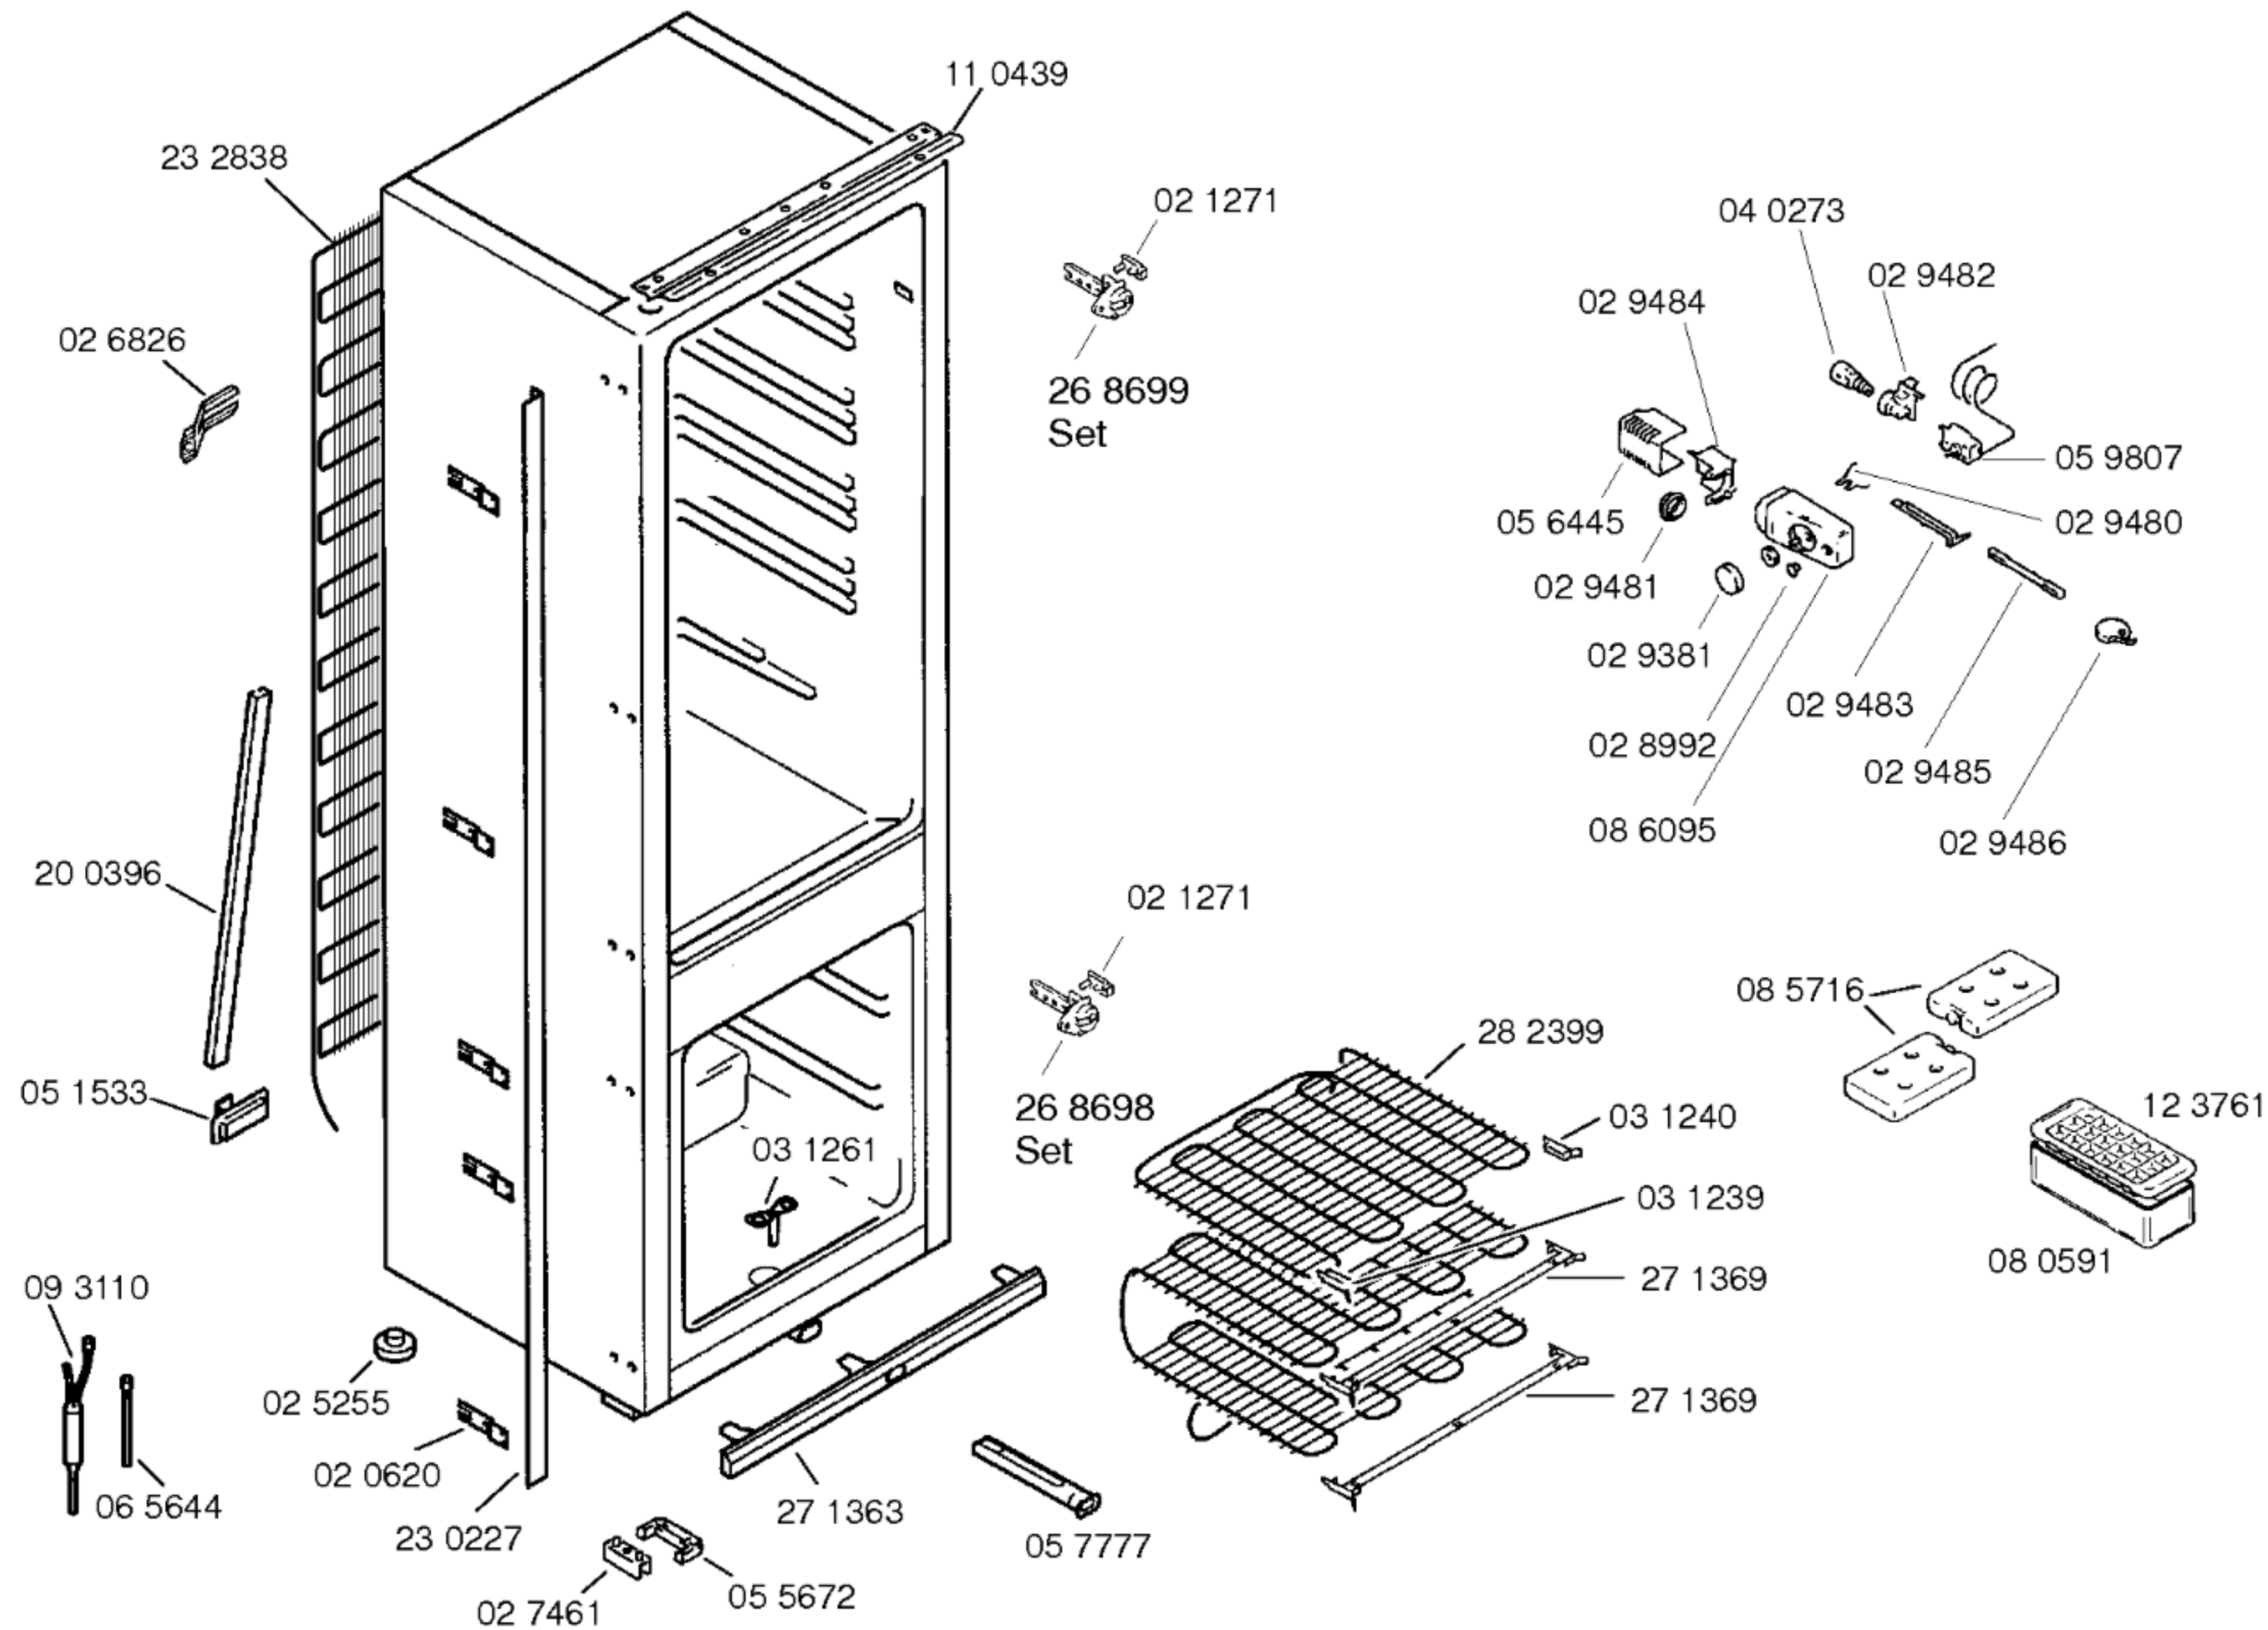



Gebrauchsanweisung
51 6233
(D,GB,F,I,NL,S,E,DK,N,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,SF)

Befestigungssatz
08 4137

  Schraubensatz
08 4136

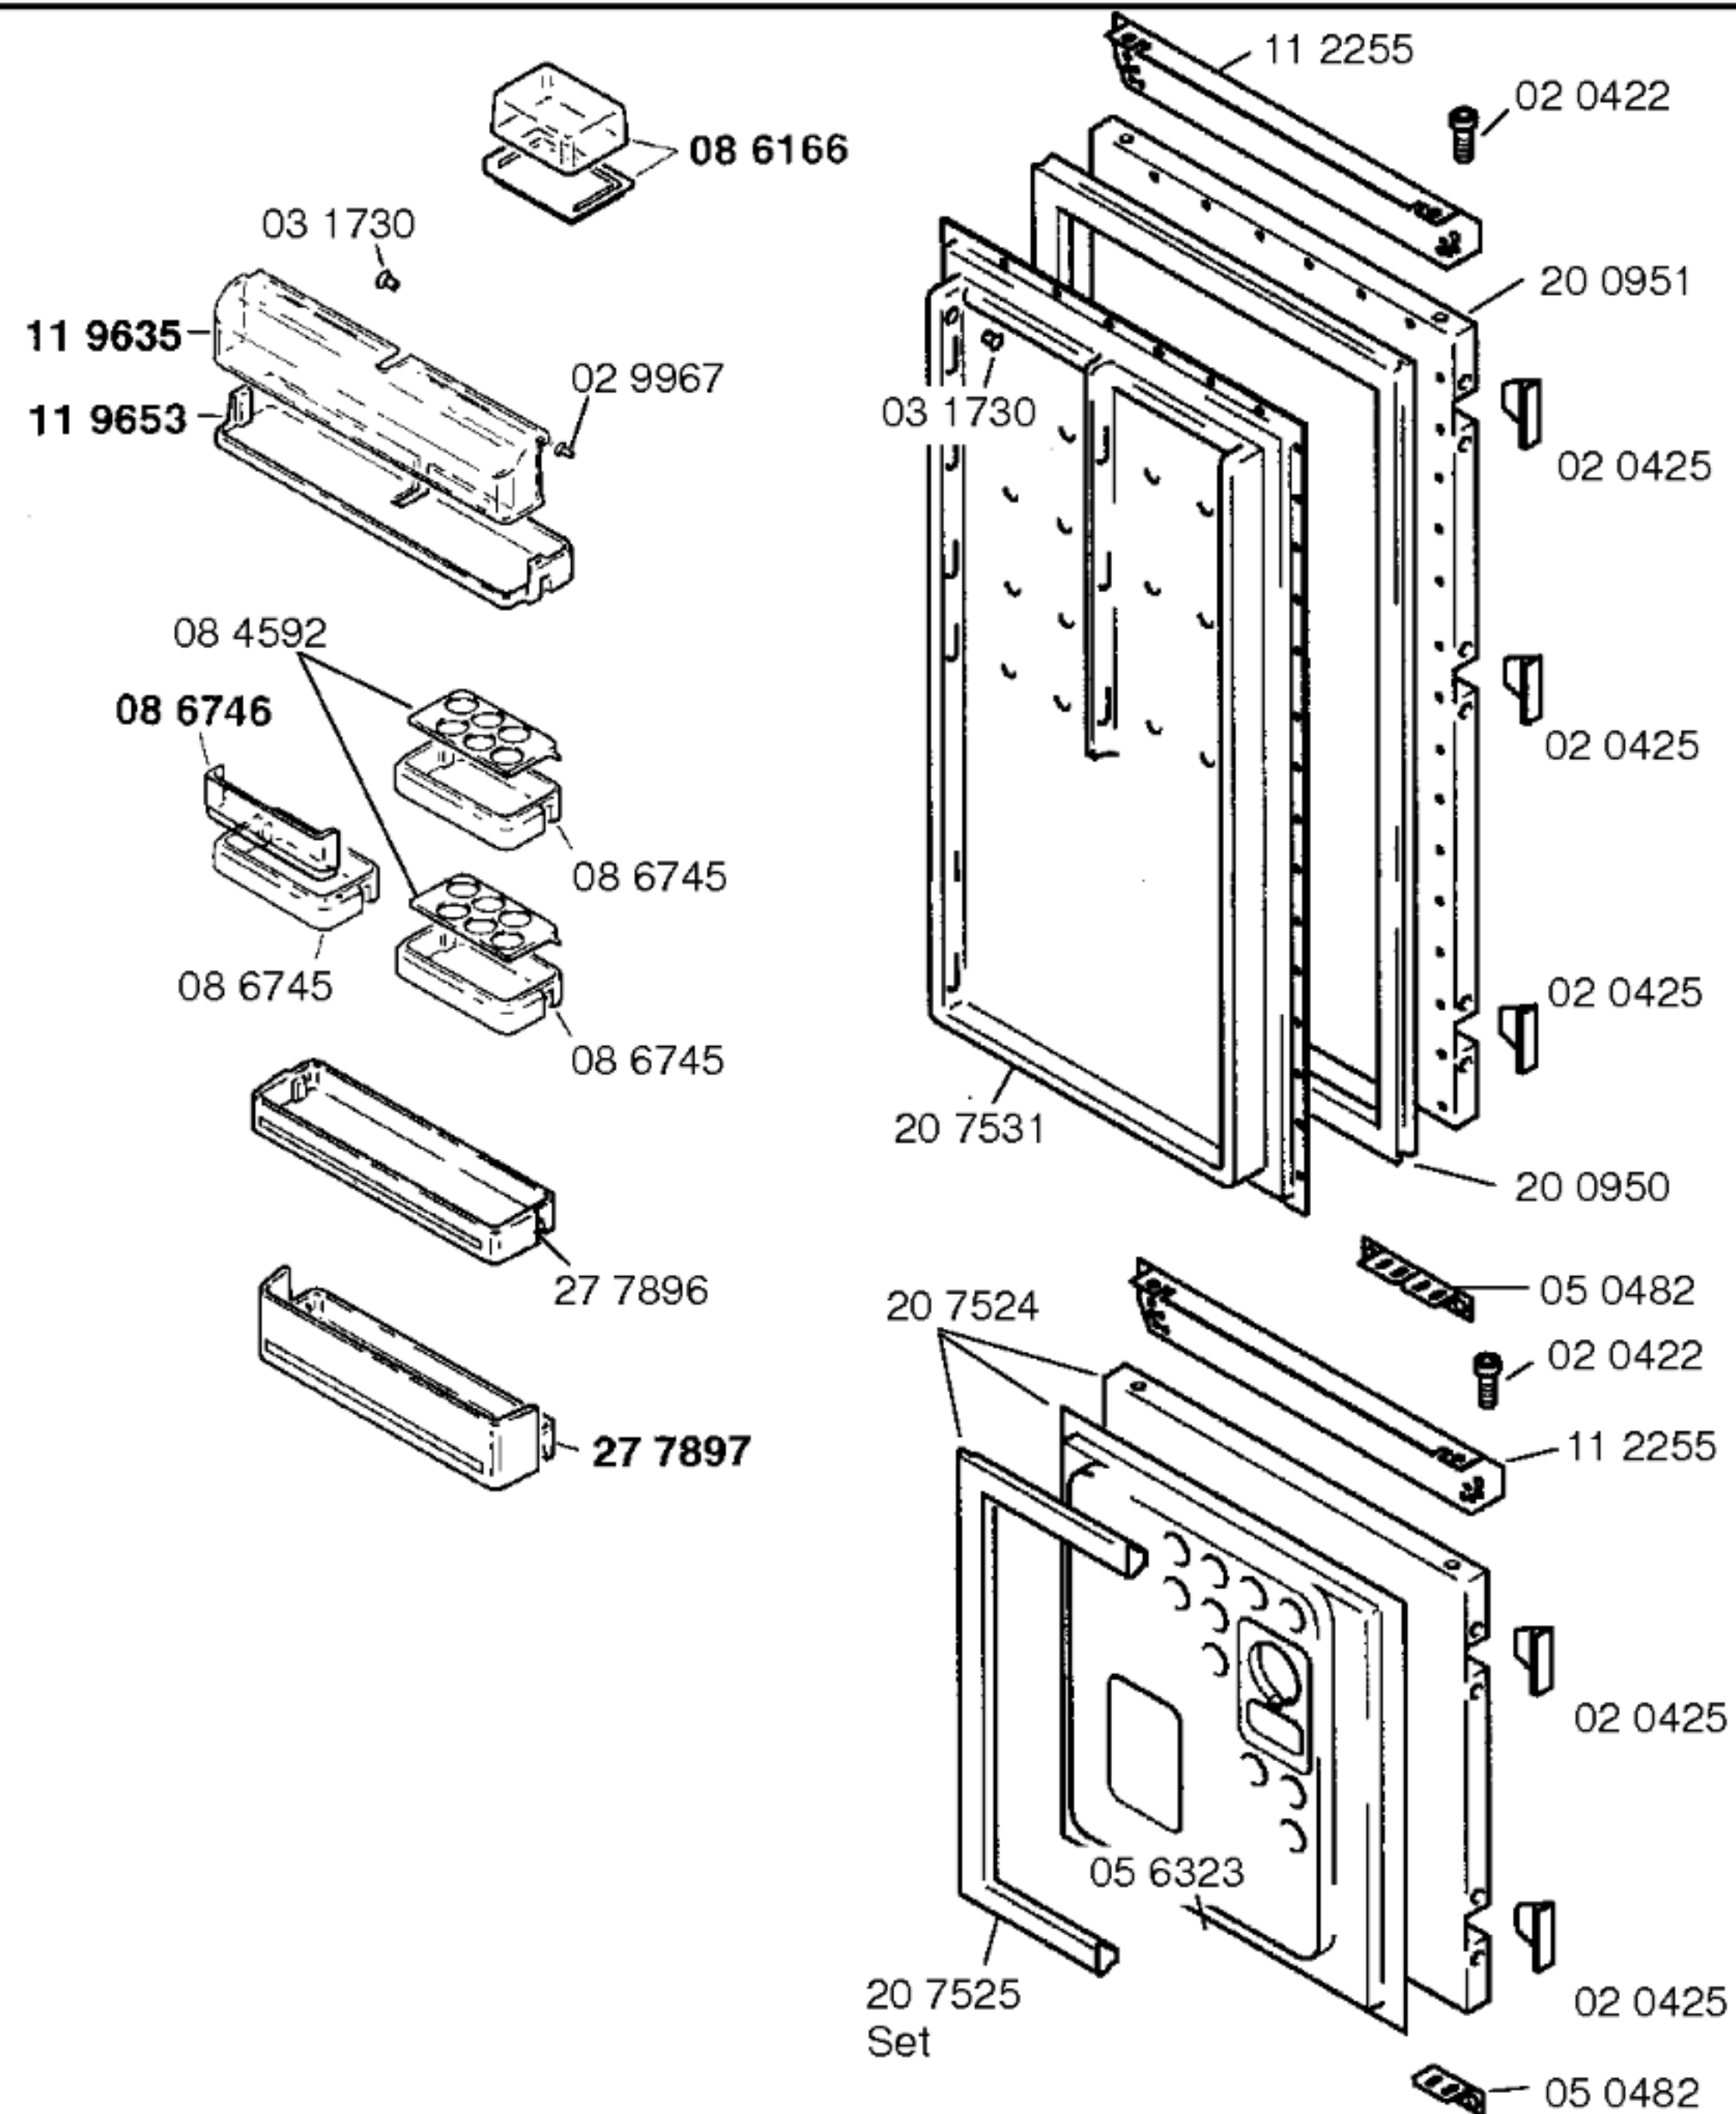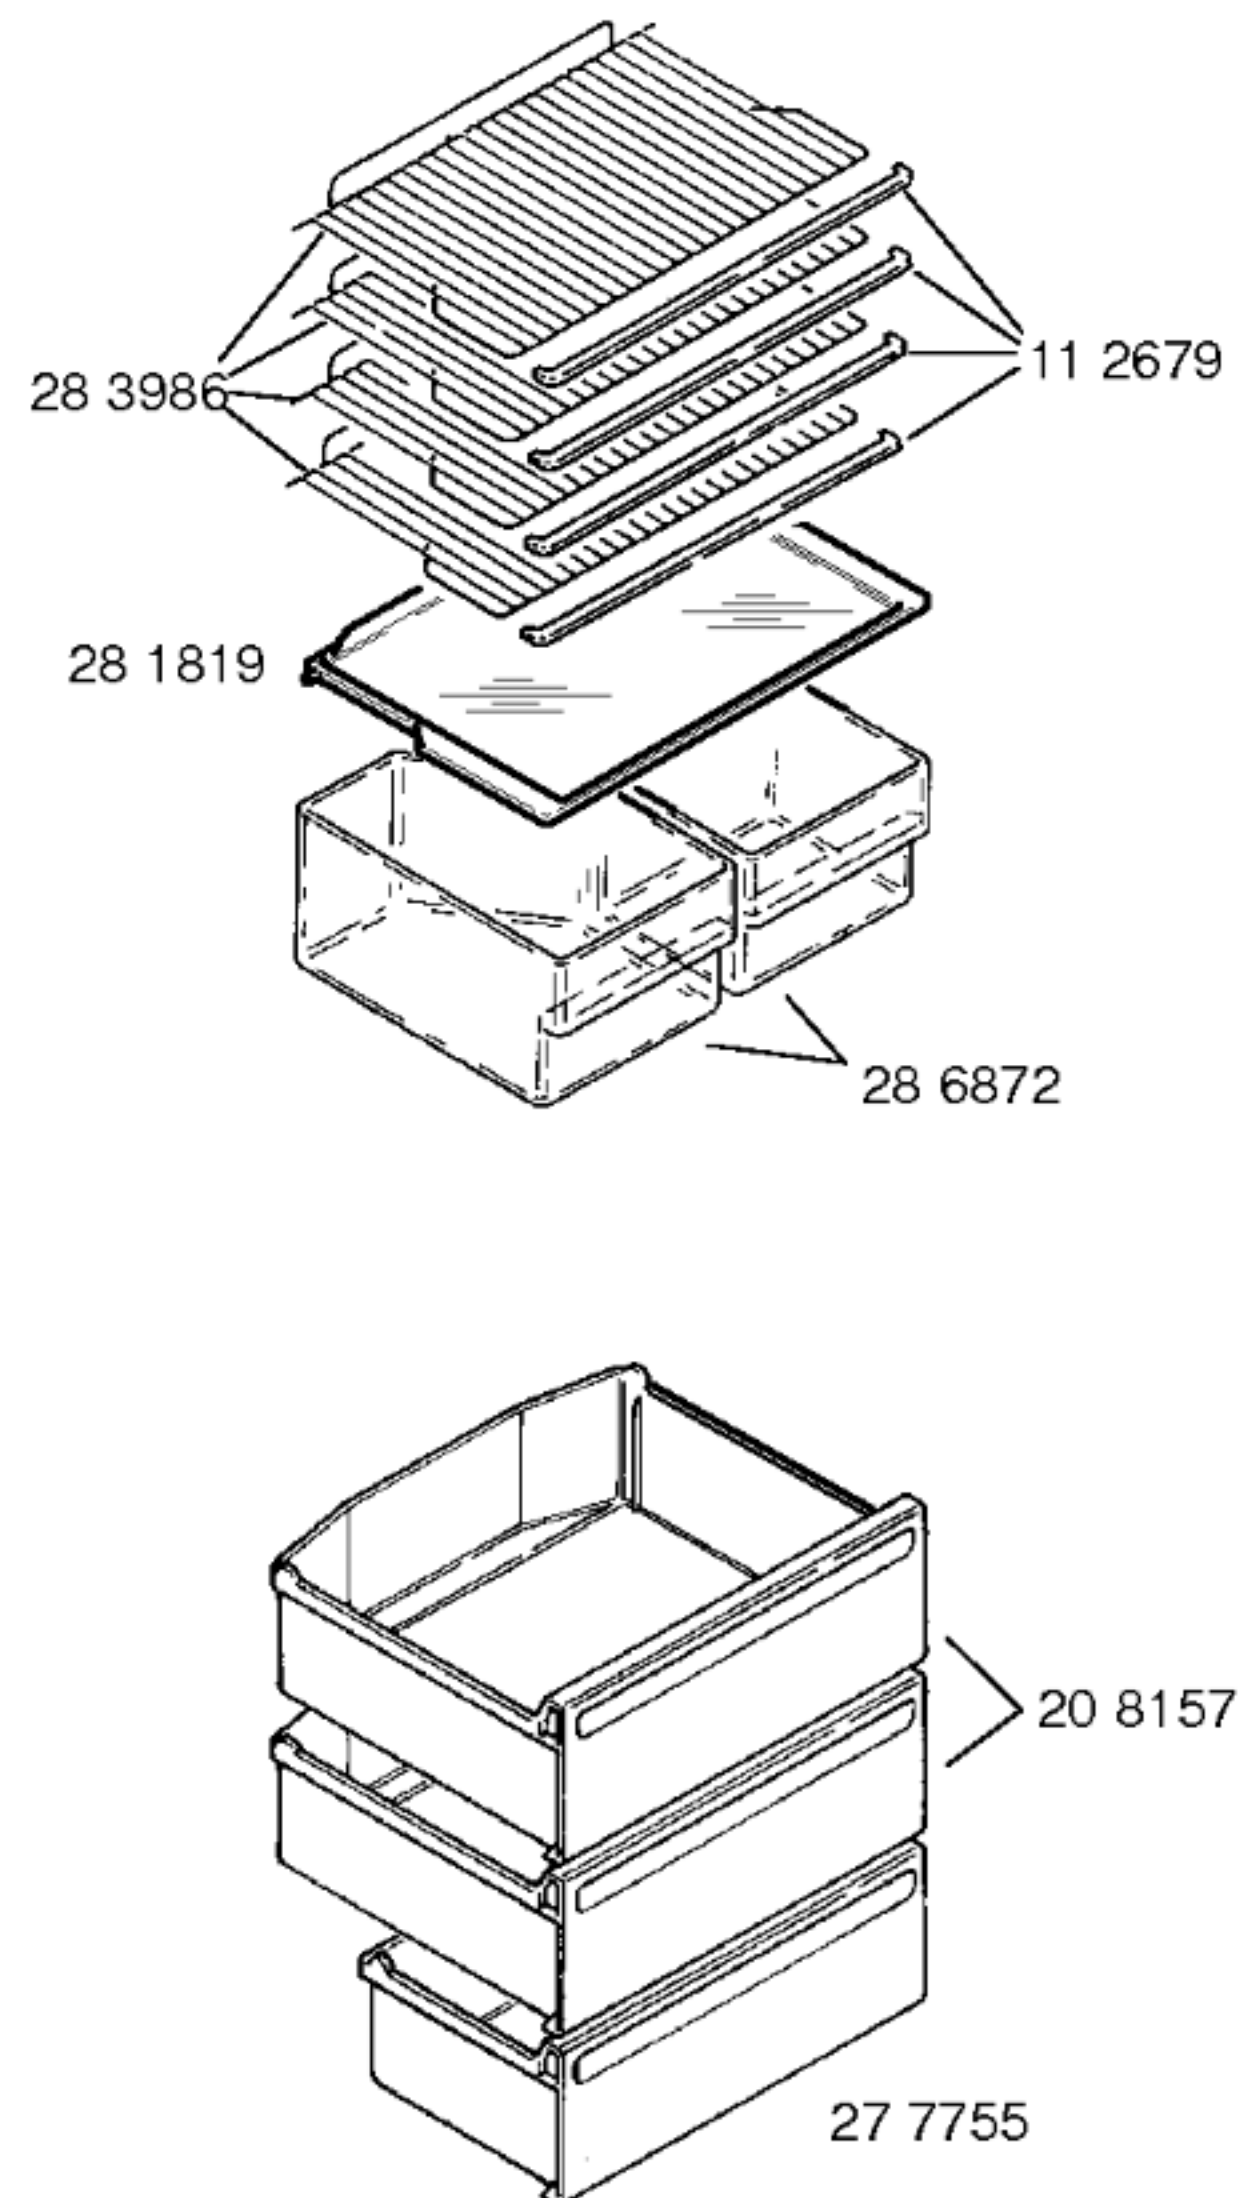

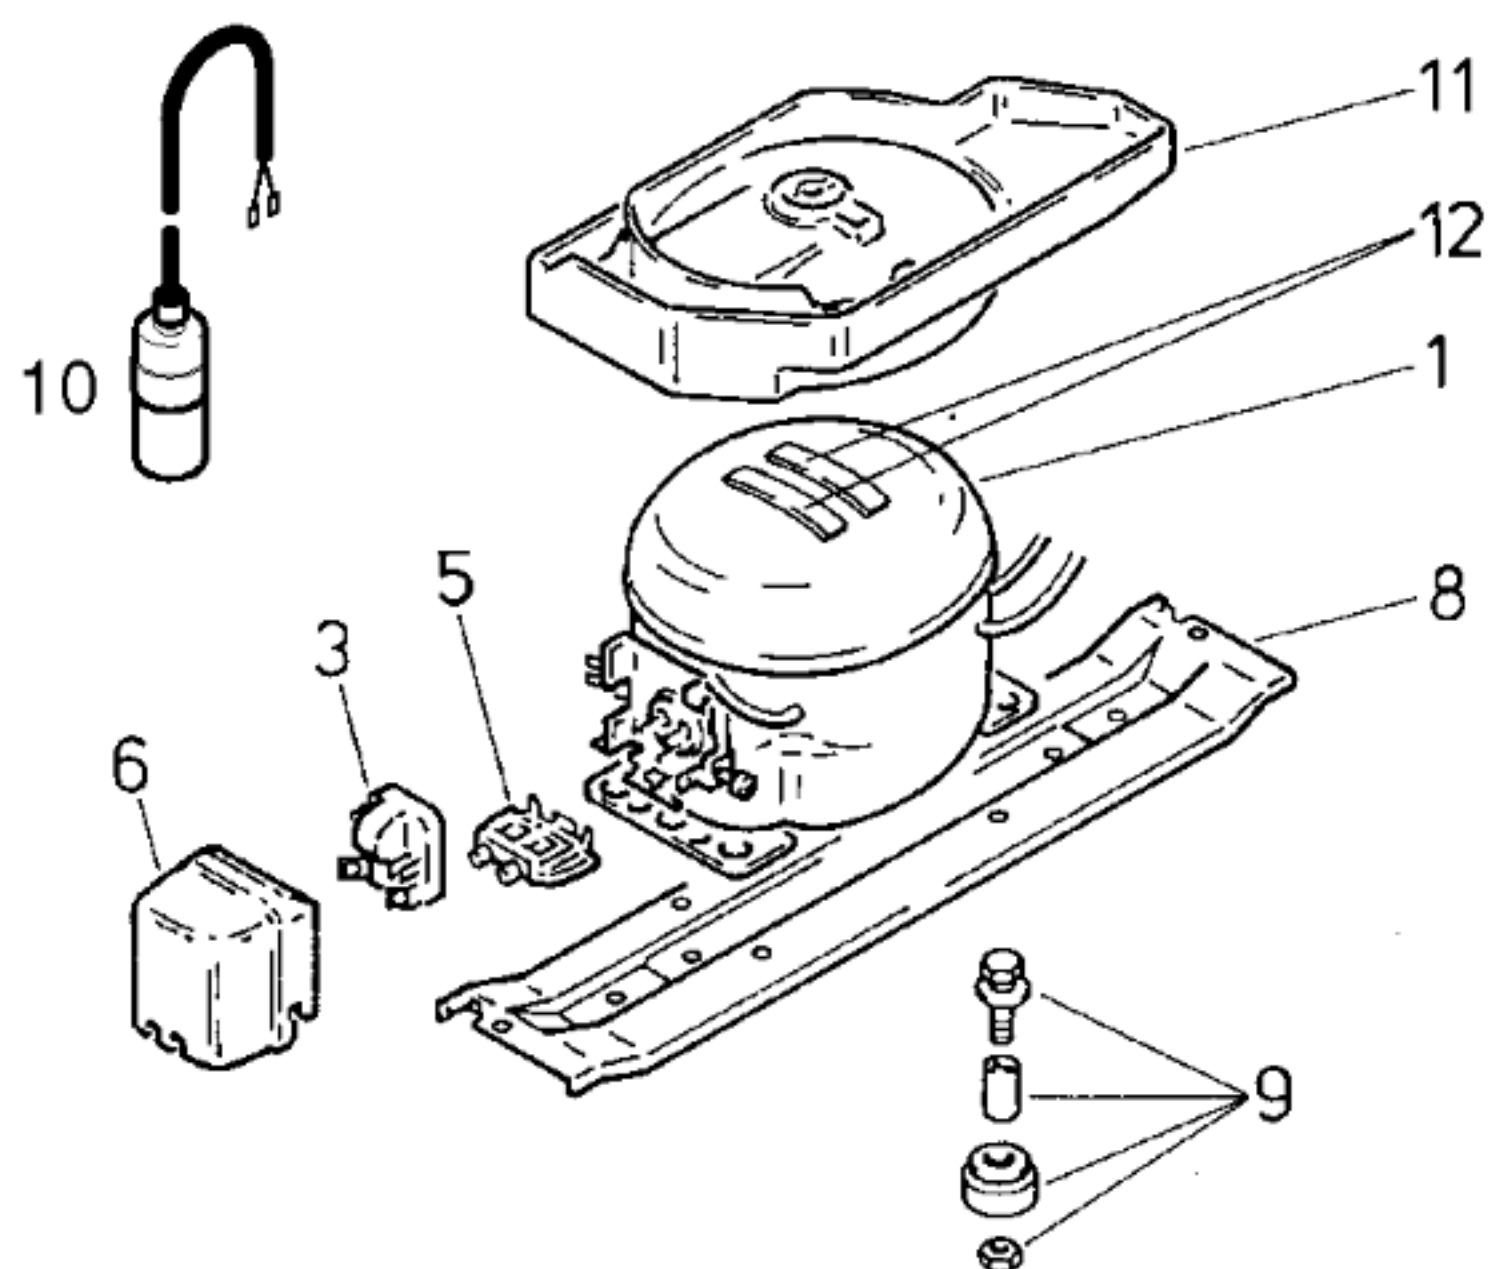

Pos.			
	Danfoss		
	NLE 15 K		
1	14 1311		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE 15 K			
Förderleistung/Delivery/Débit	l/h	2637			
Anlaufstrom/Starting current/Cour. de démarrage	A				
Widerstand/Resistance/Résistance	Ha/main/prin. Ω				
	Hi/aux Ω				
Temp.-Regler/Thermostat		WHF/TPC			
Typ/Type		TF 57 F1K			
Reglerstellung/Position		kalt warm			
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5 +5			
Valeurs de commutation	„aus“	-31 -20			
	(„abtauen“ od.) „alarm“				
Füllmenge/Fill.quantity/Charge	R600a g	72			
Anschlußwert/Conn.load/Puiss. connectée	W	150			
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
Leistung/Power/Puissance	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				