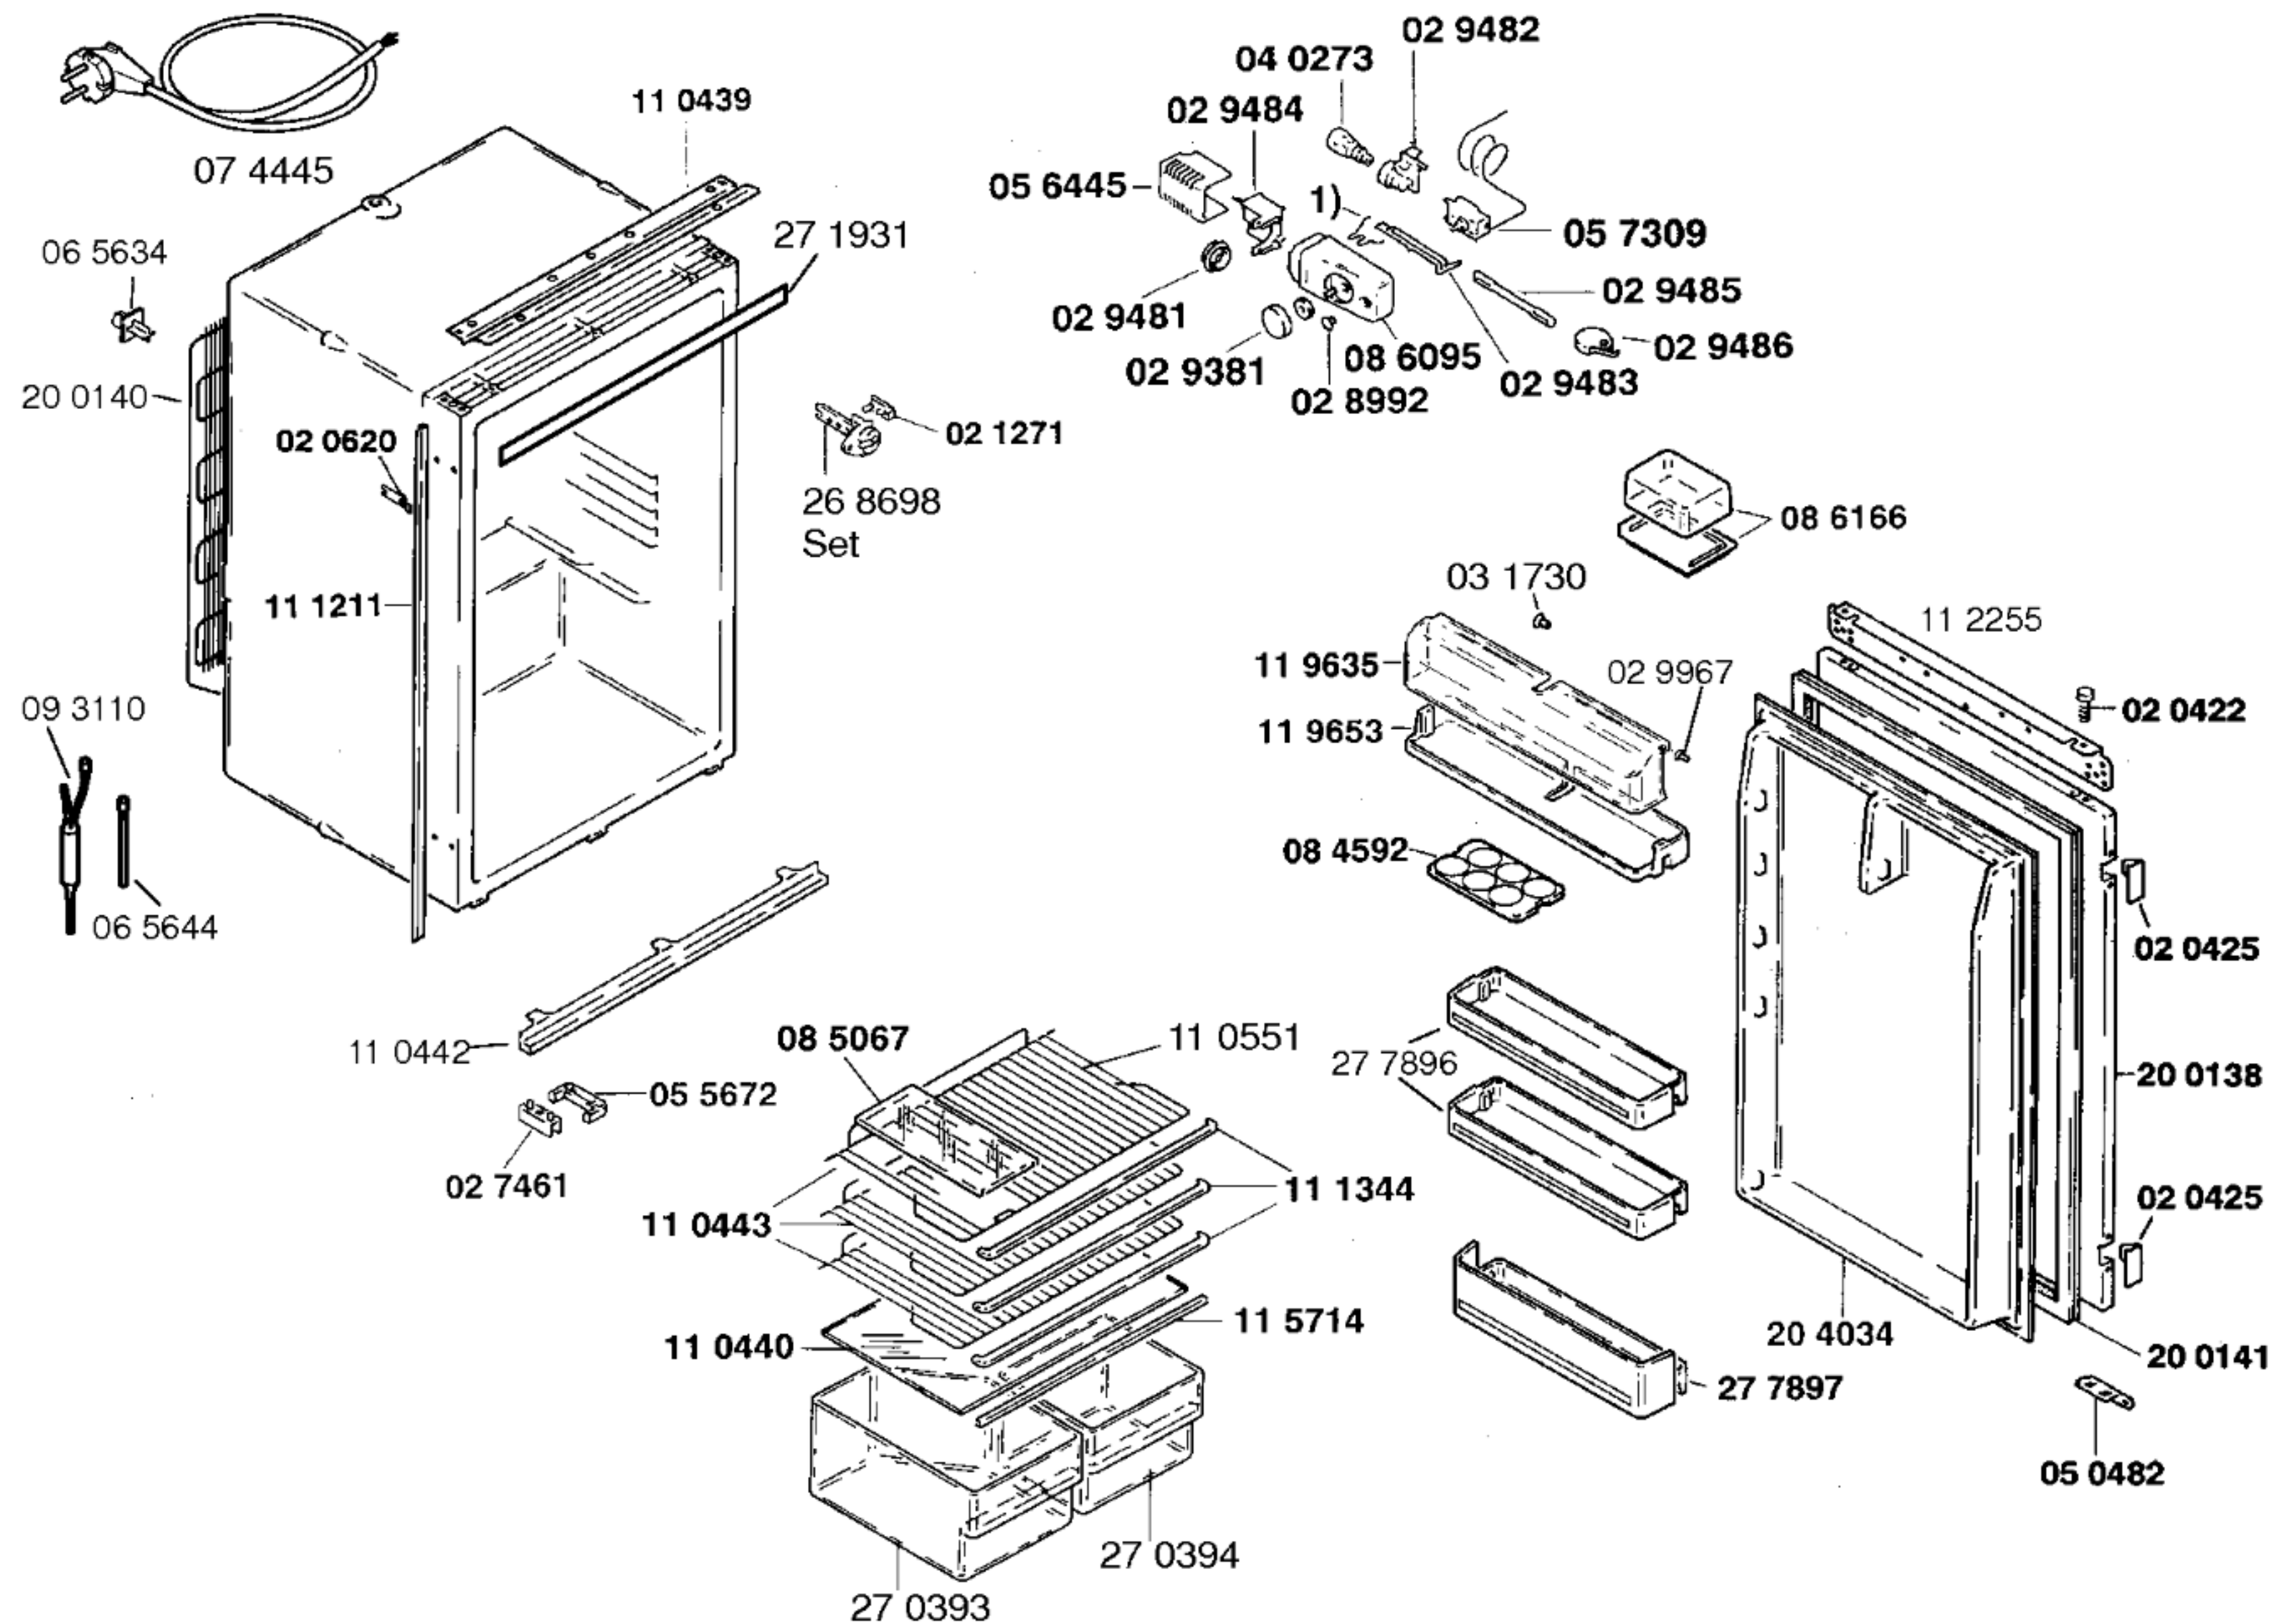


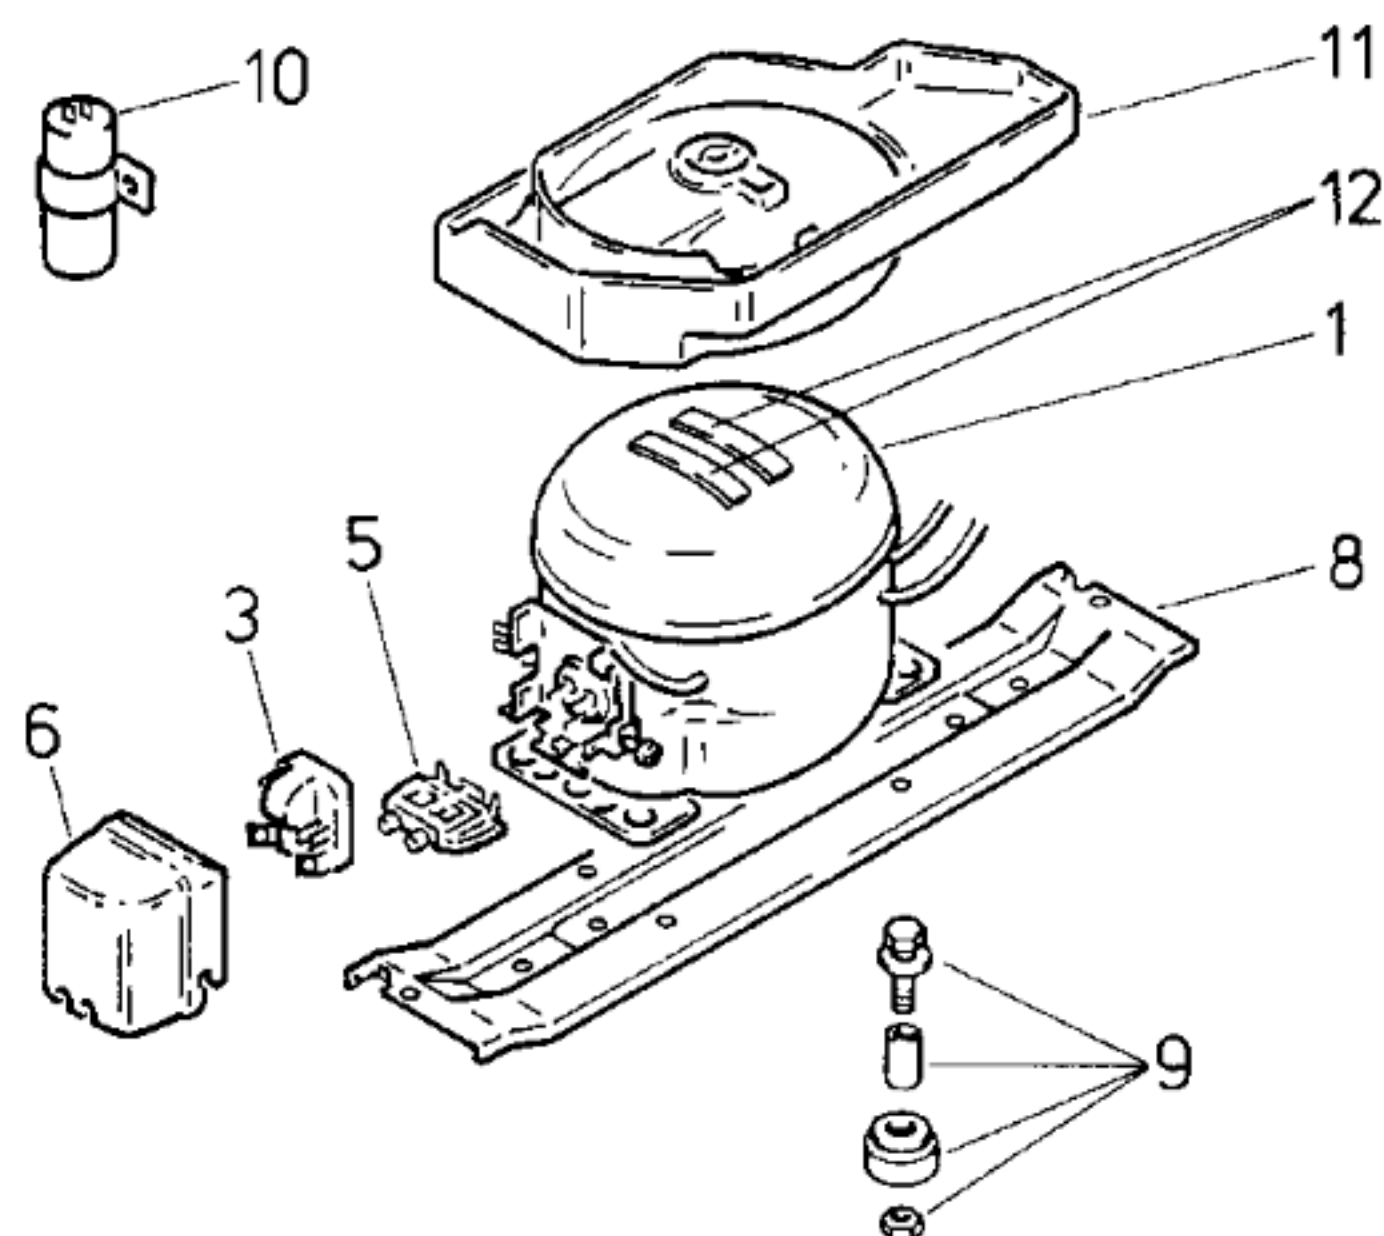

 Gebrauchsanweisung
 51 3750
 (D,GB,F,I,NL)

 Montageanleitung
 51 2737
 (D,GB,F,I,NL,DK,N,
 S,SF,E)

 Schraubensatz
 08 4136

 Befestigungssatz
 08 6512

1) 02 9480



	V01	V02	
Pos.	Danfoss	Matsushita	
	TLES 6 K	SD 65 E	
1	14 1306	14 1316	
2			
3	15 1055	03 2035	
4			
5	15 0760		
6	15 1072	05 8458	
7			
8	27 8207	27 1375	
9	05 0166	05 0166	
10			
11	08 4744	08 8893	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Matsushita
Typ/Type		TLES 6 K	SD 65 E
Förderleistung/Delivery/Débit	l/h	1026	1170
Anlaufstrom/Starting current/Cour de démarrage	A	4,0	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	18,9	
	Hi/aux Ω	15,3	
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$		
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild