



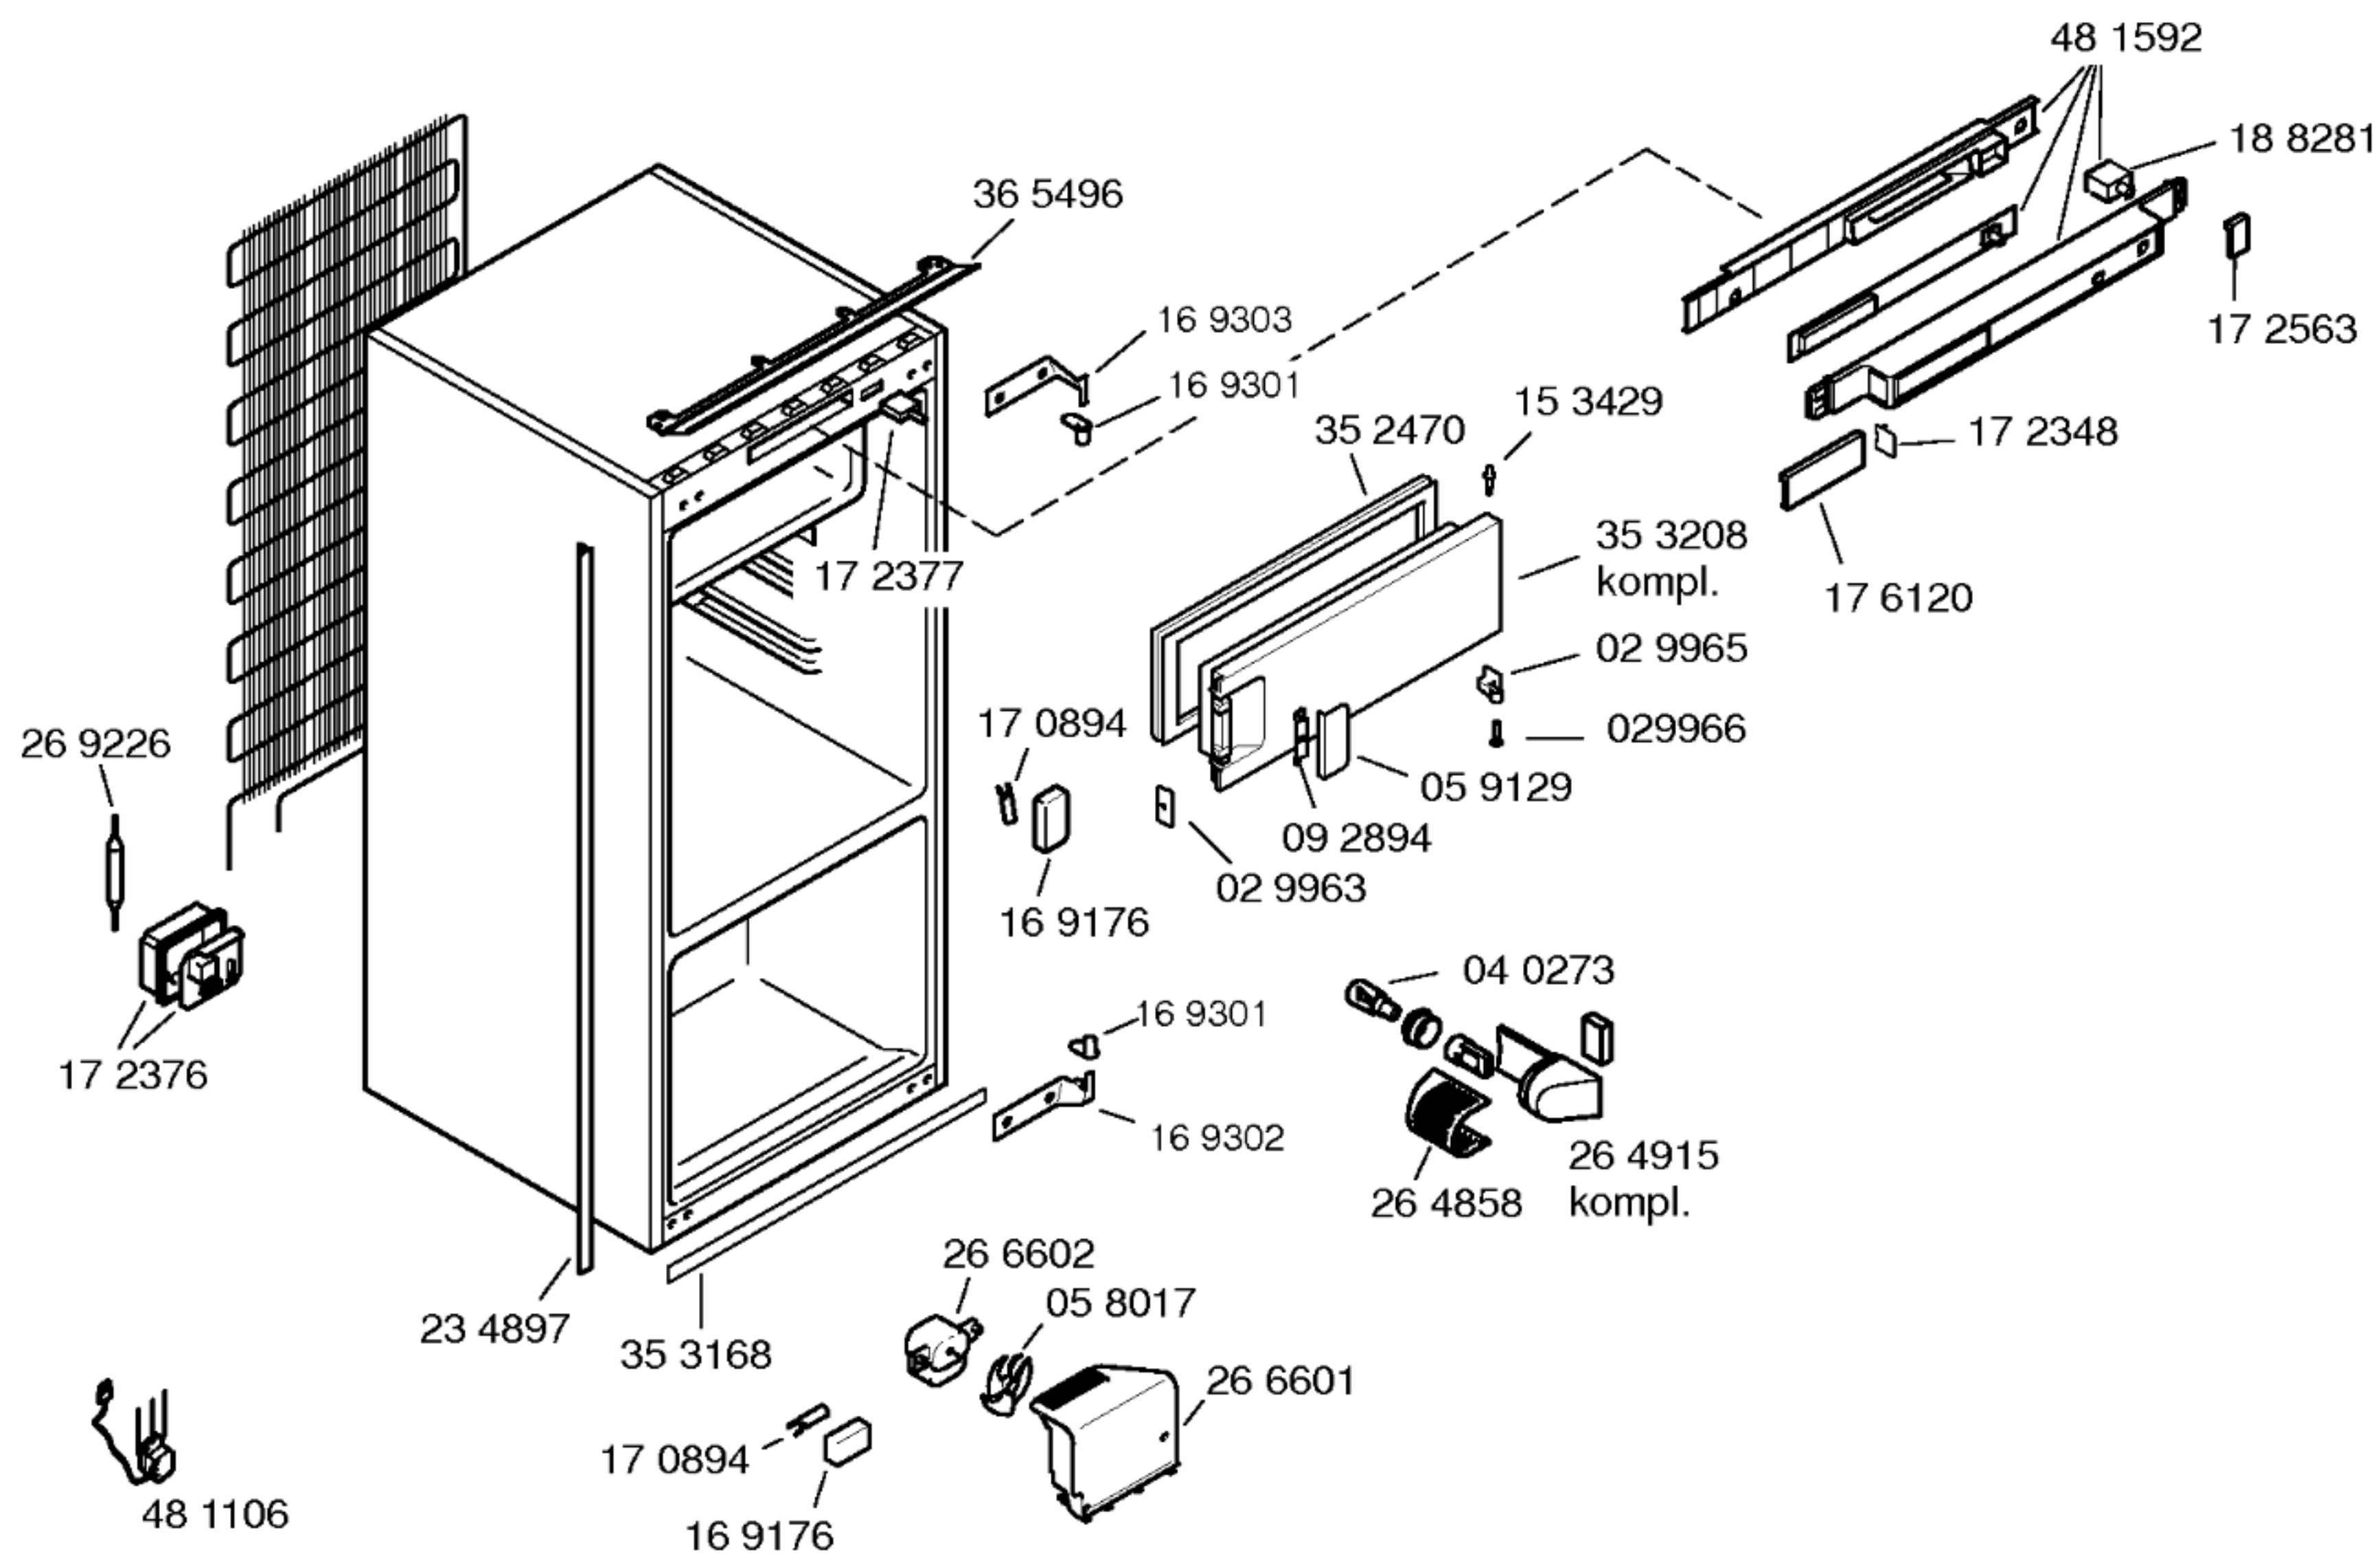


Gebrauchsanweisung
52 3573

Montageanleitung
52 2494

Beistellsatz
26 5161

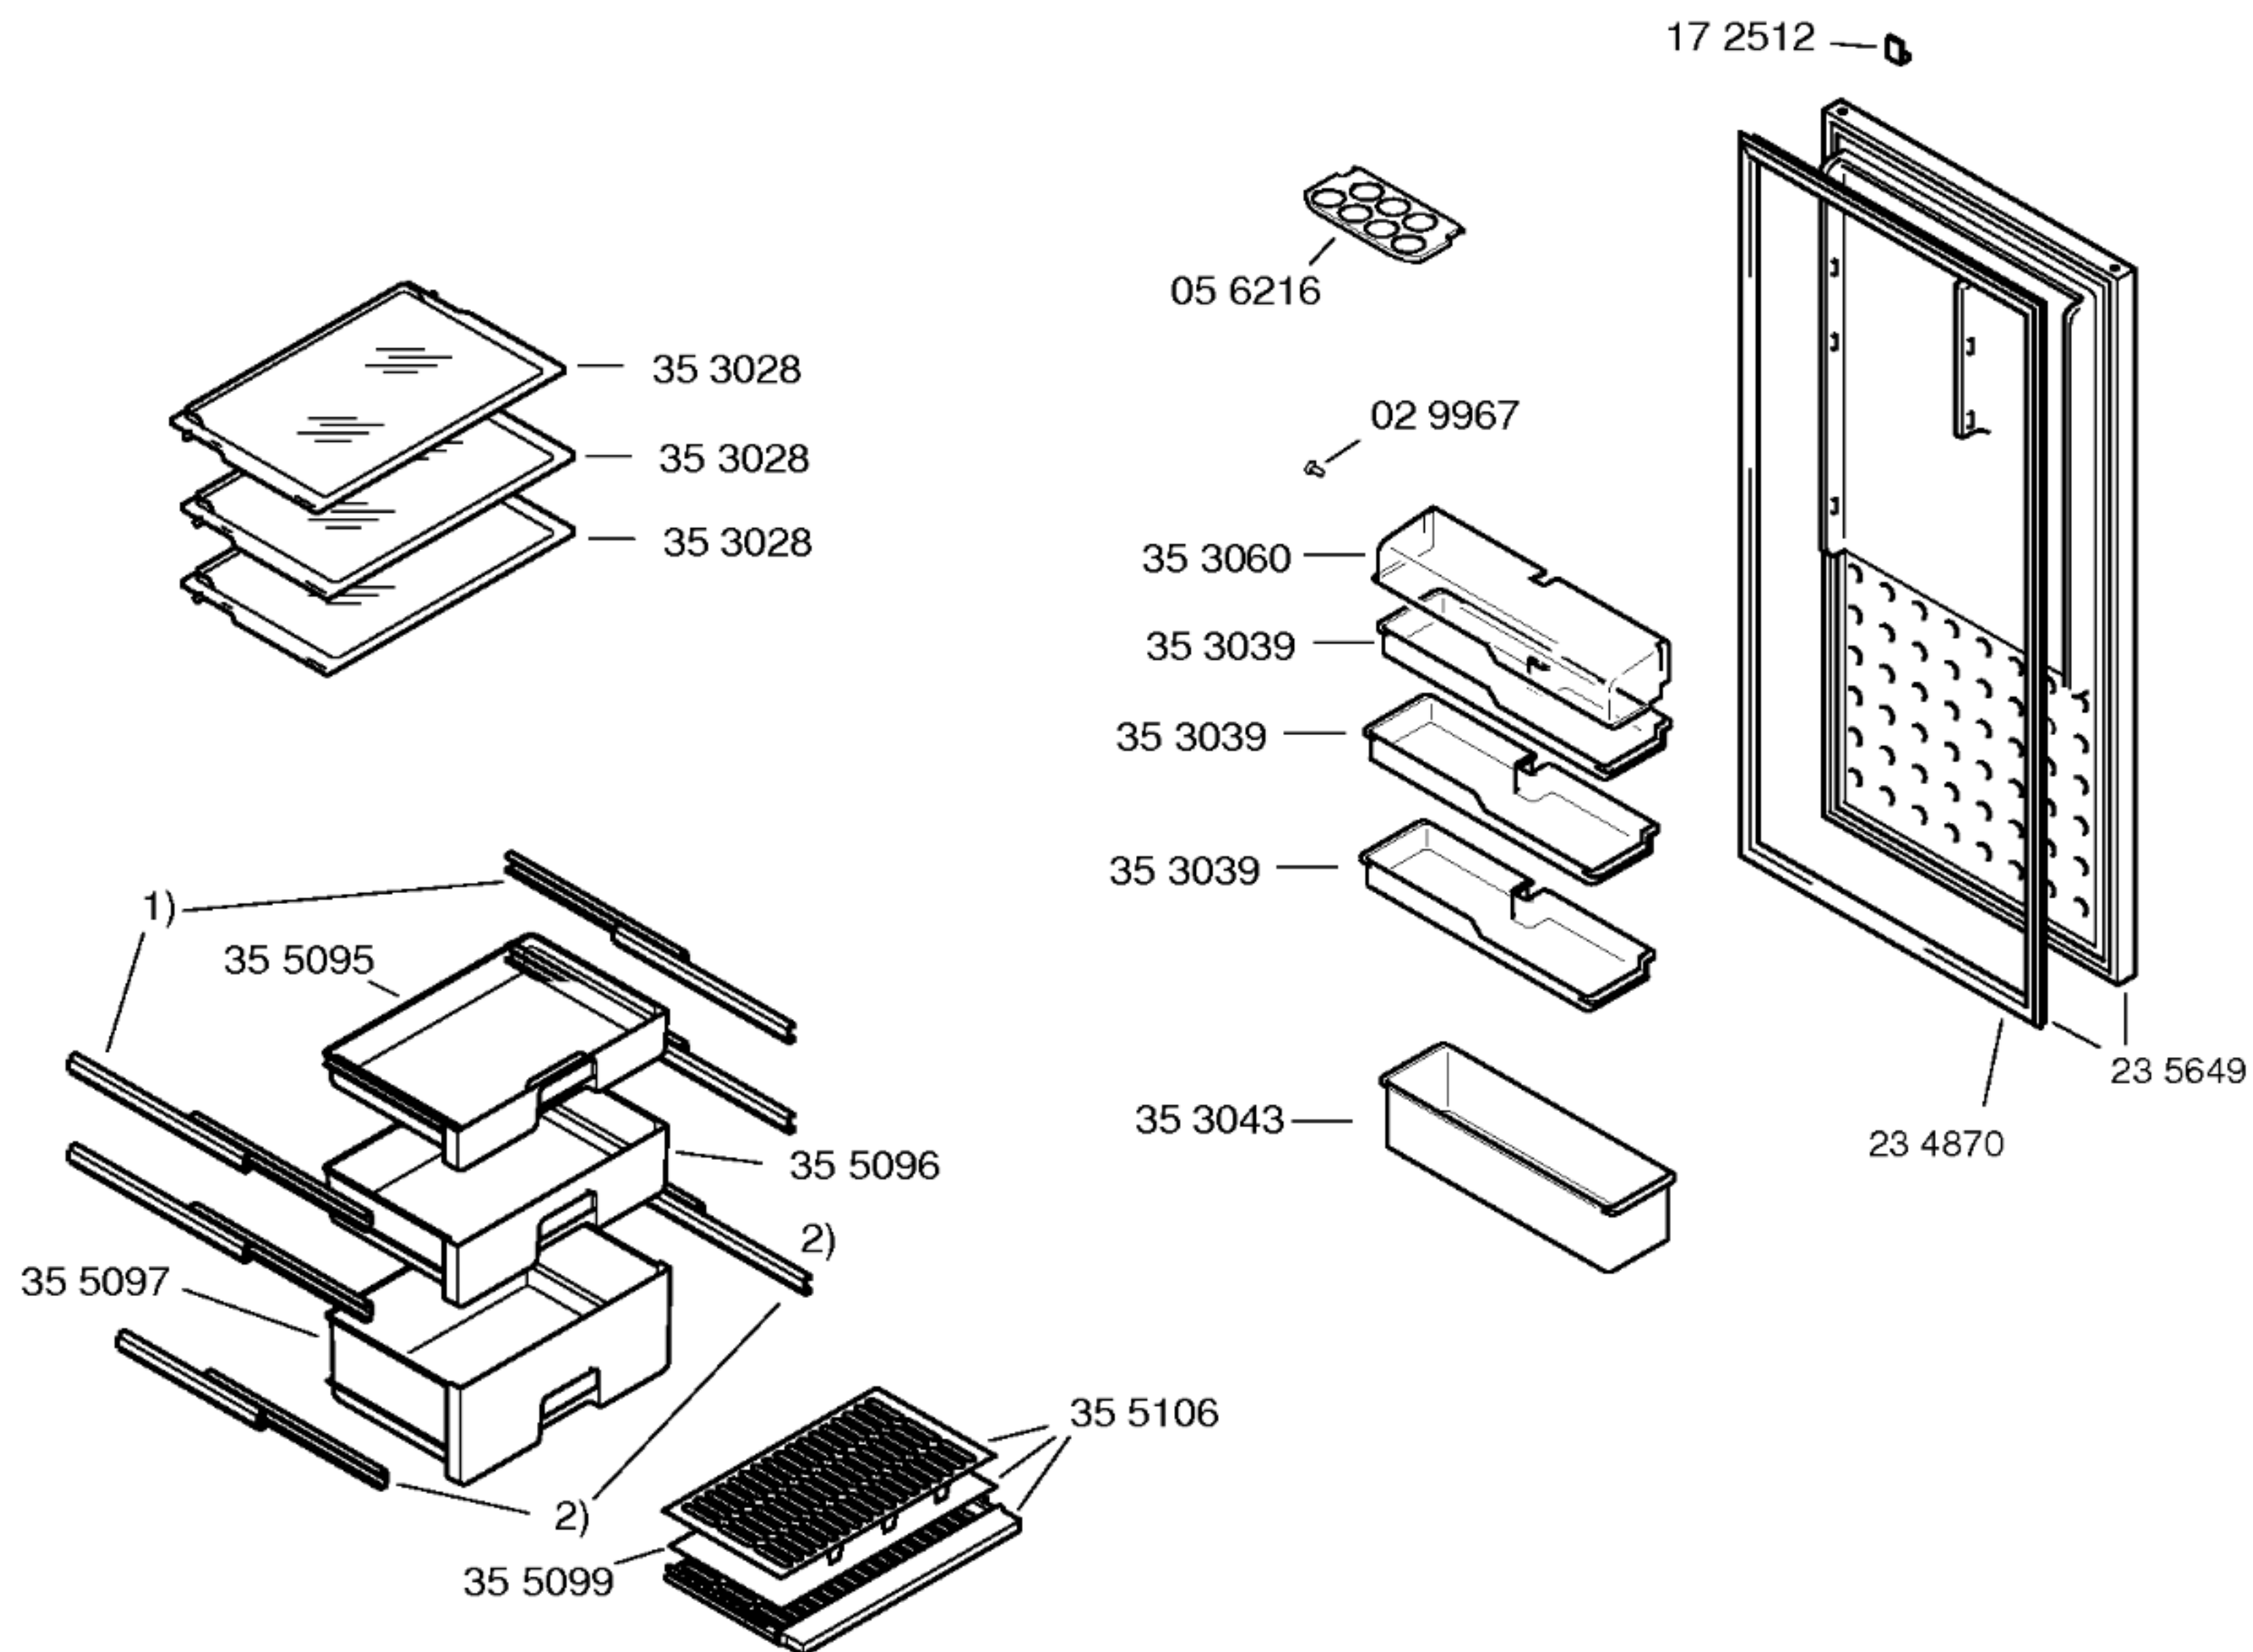

- 1) 35 5088
- 2) 35 5090

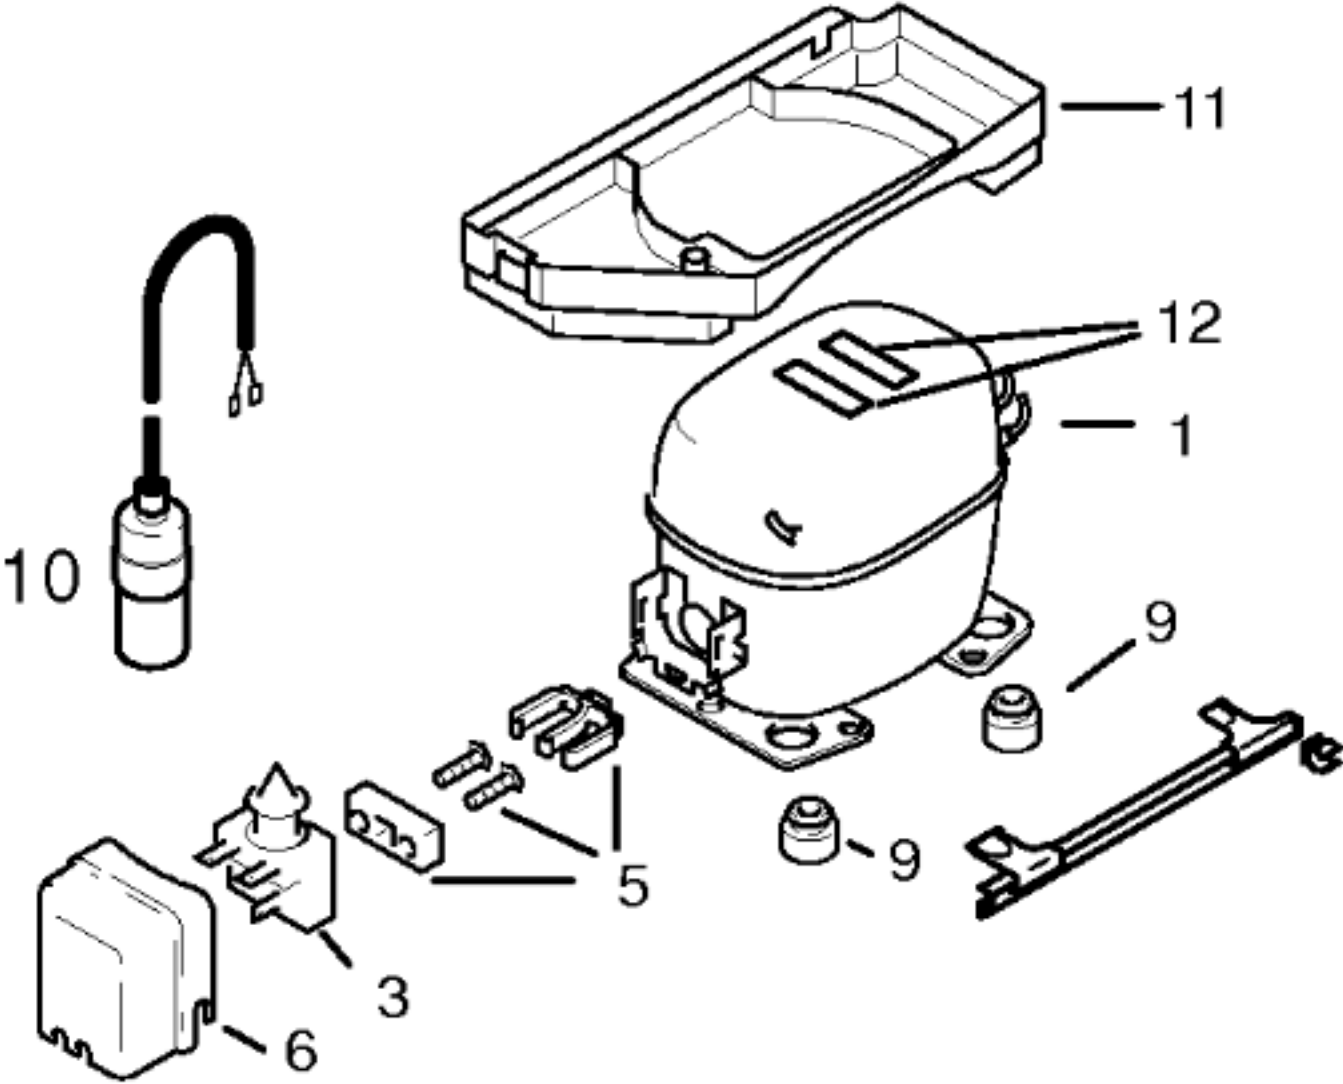

Pos.	V01		
	Danfoss		
	TLY 8 KK2		
1	14 1881		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	36 5099		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLY 8 KK2		
Förderleistung/Delivery/Débit		l/h	1404	
Anlaufstrom/Starting current/Cour de démarrage		A	6,4	
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	21,6
		Hi/aux	Ω	26,0
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	90	68
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18 43,31 ±1,10
		+5	12,70 ±0,18	-22 54,66 ±1,59
		0	16,33 ±0,16	-26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		

* siehe Typenschild