



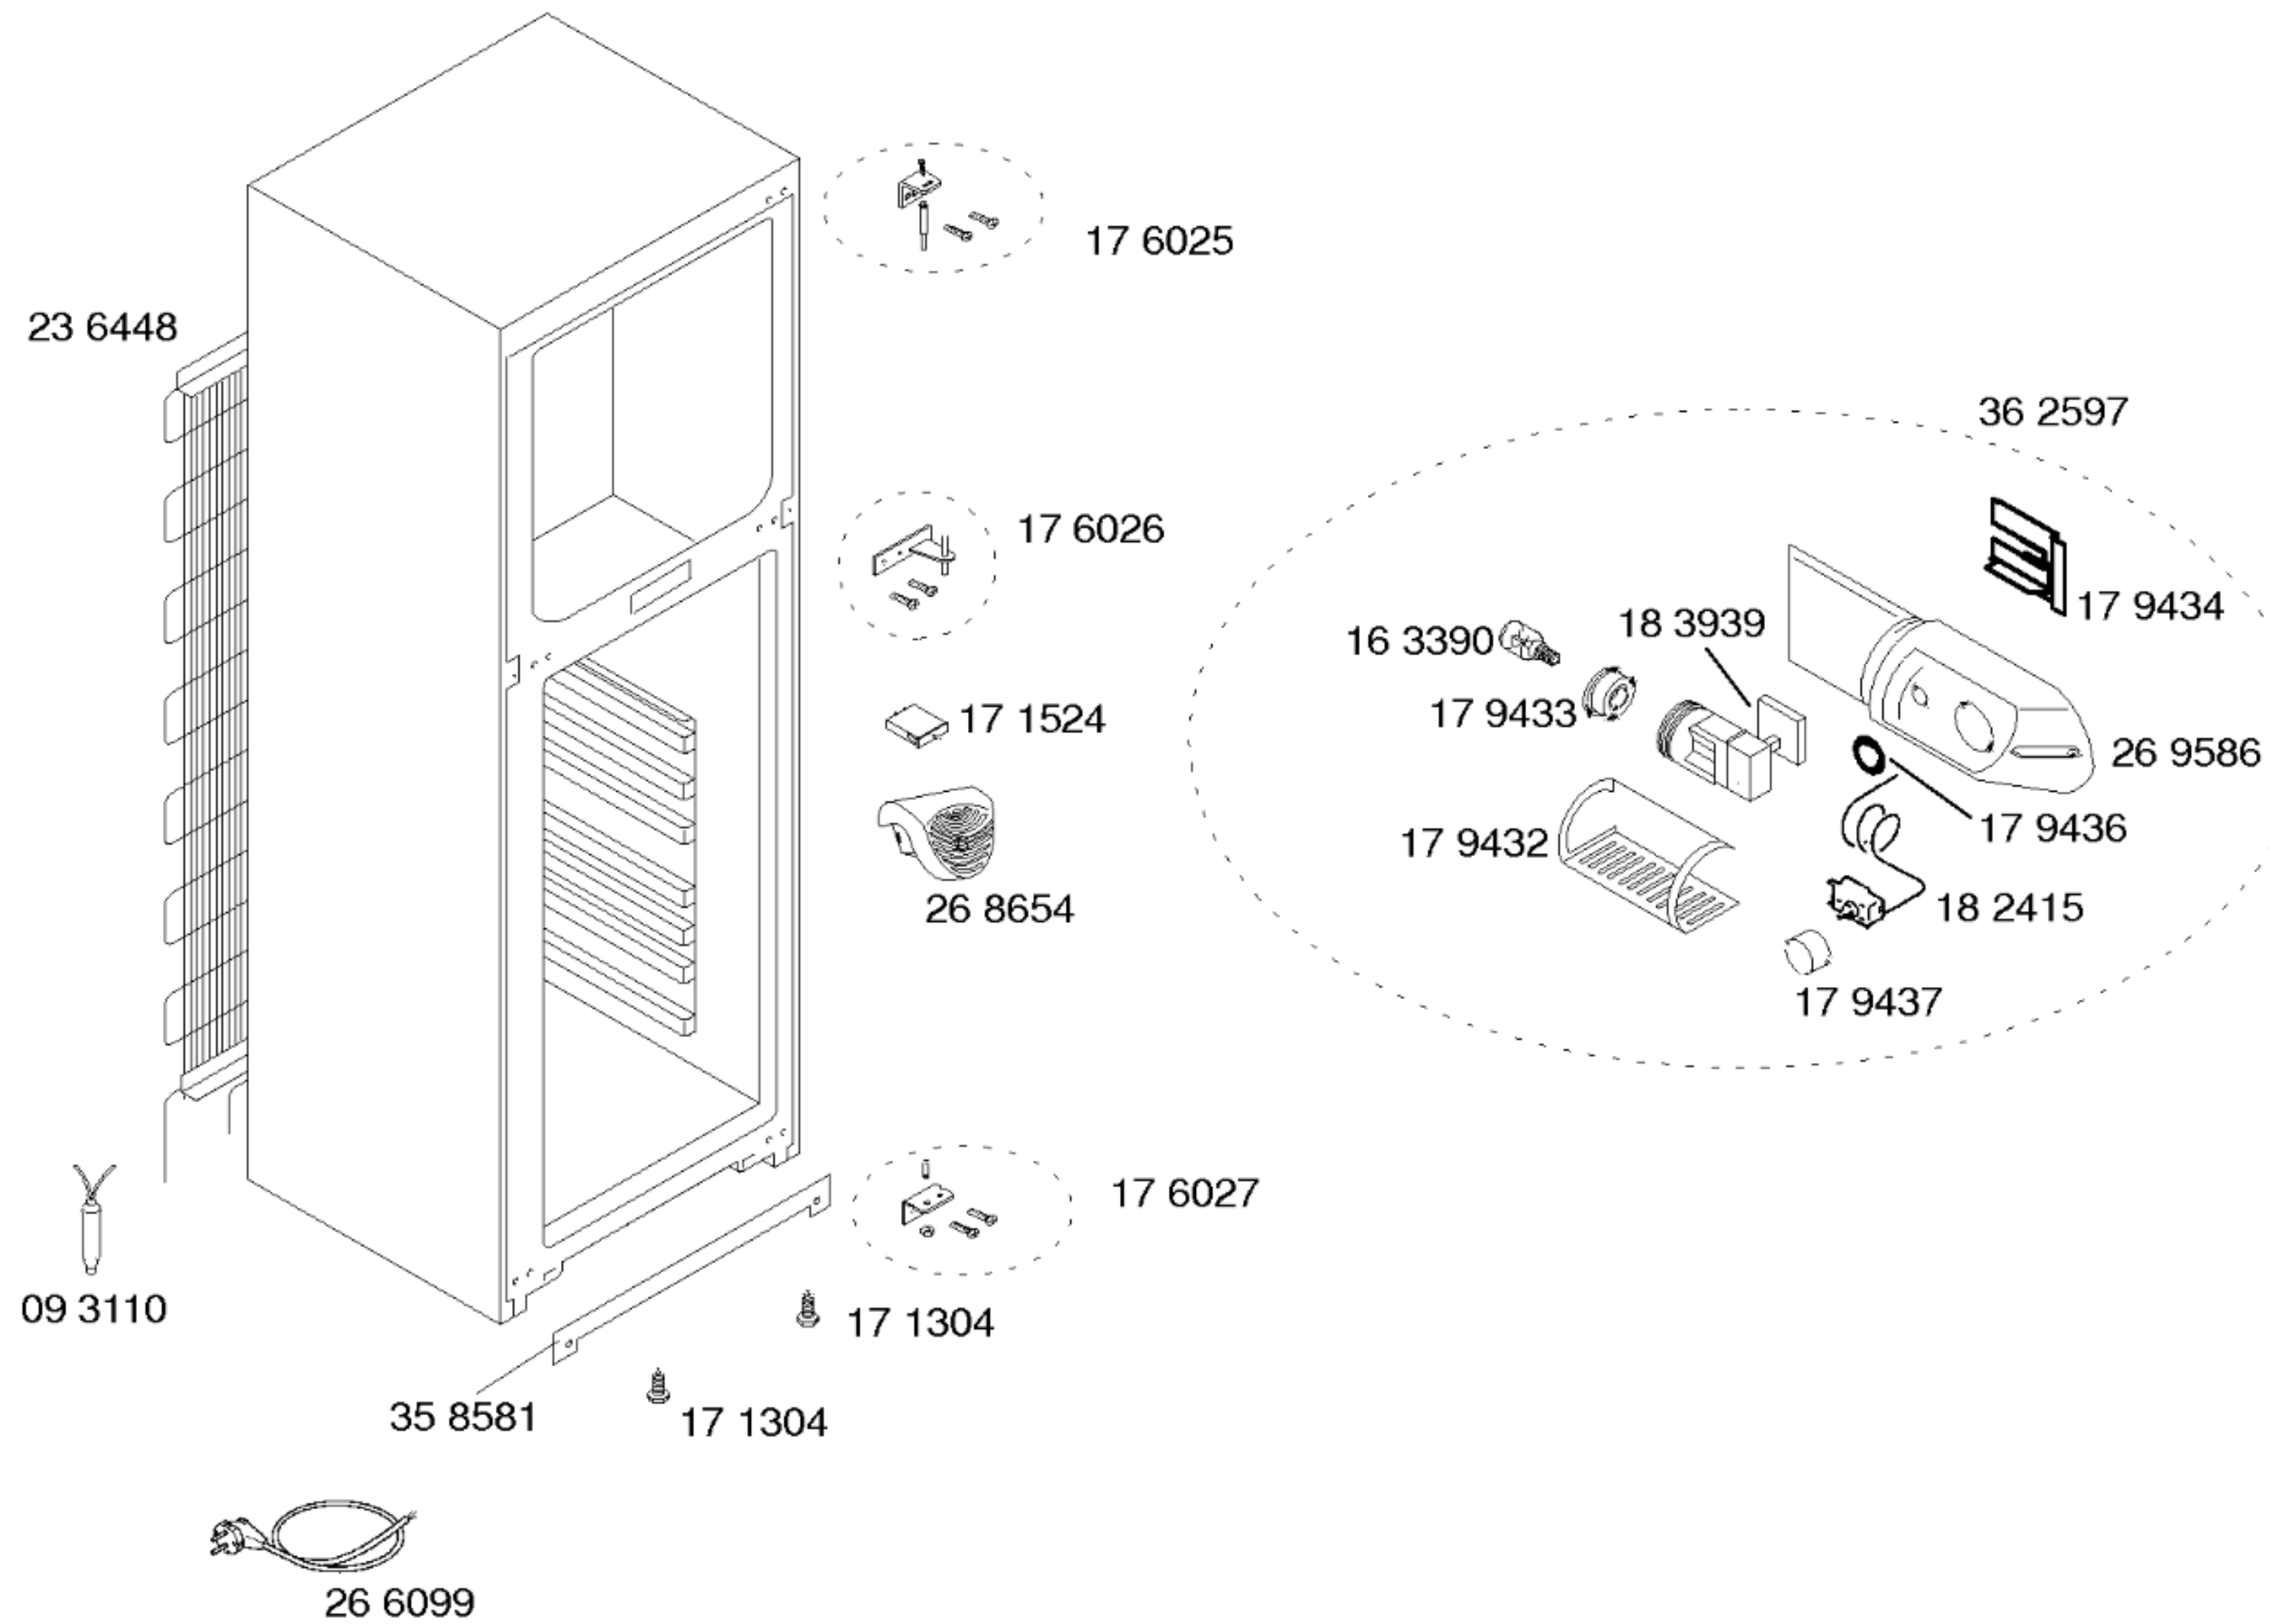



Gebrauchsanweisung
52 9478

DE,EN,FR,NL,DA
SV,NO,FI,IT

Montagesatz fuer
Scharnierwechsel
17 5513

1) 35 8584
2) 35 4895

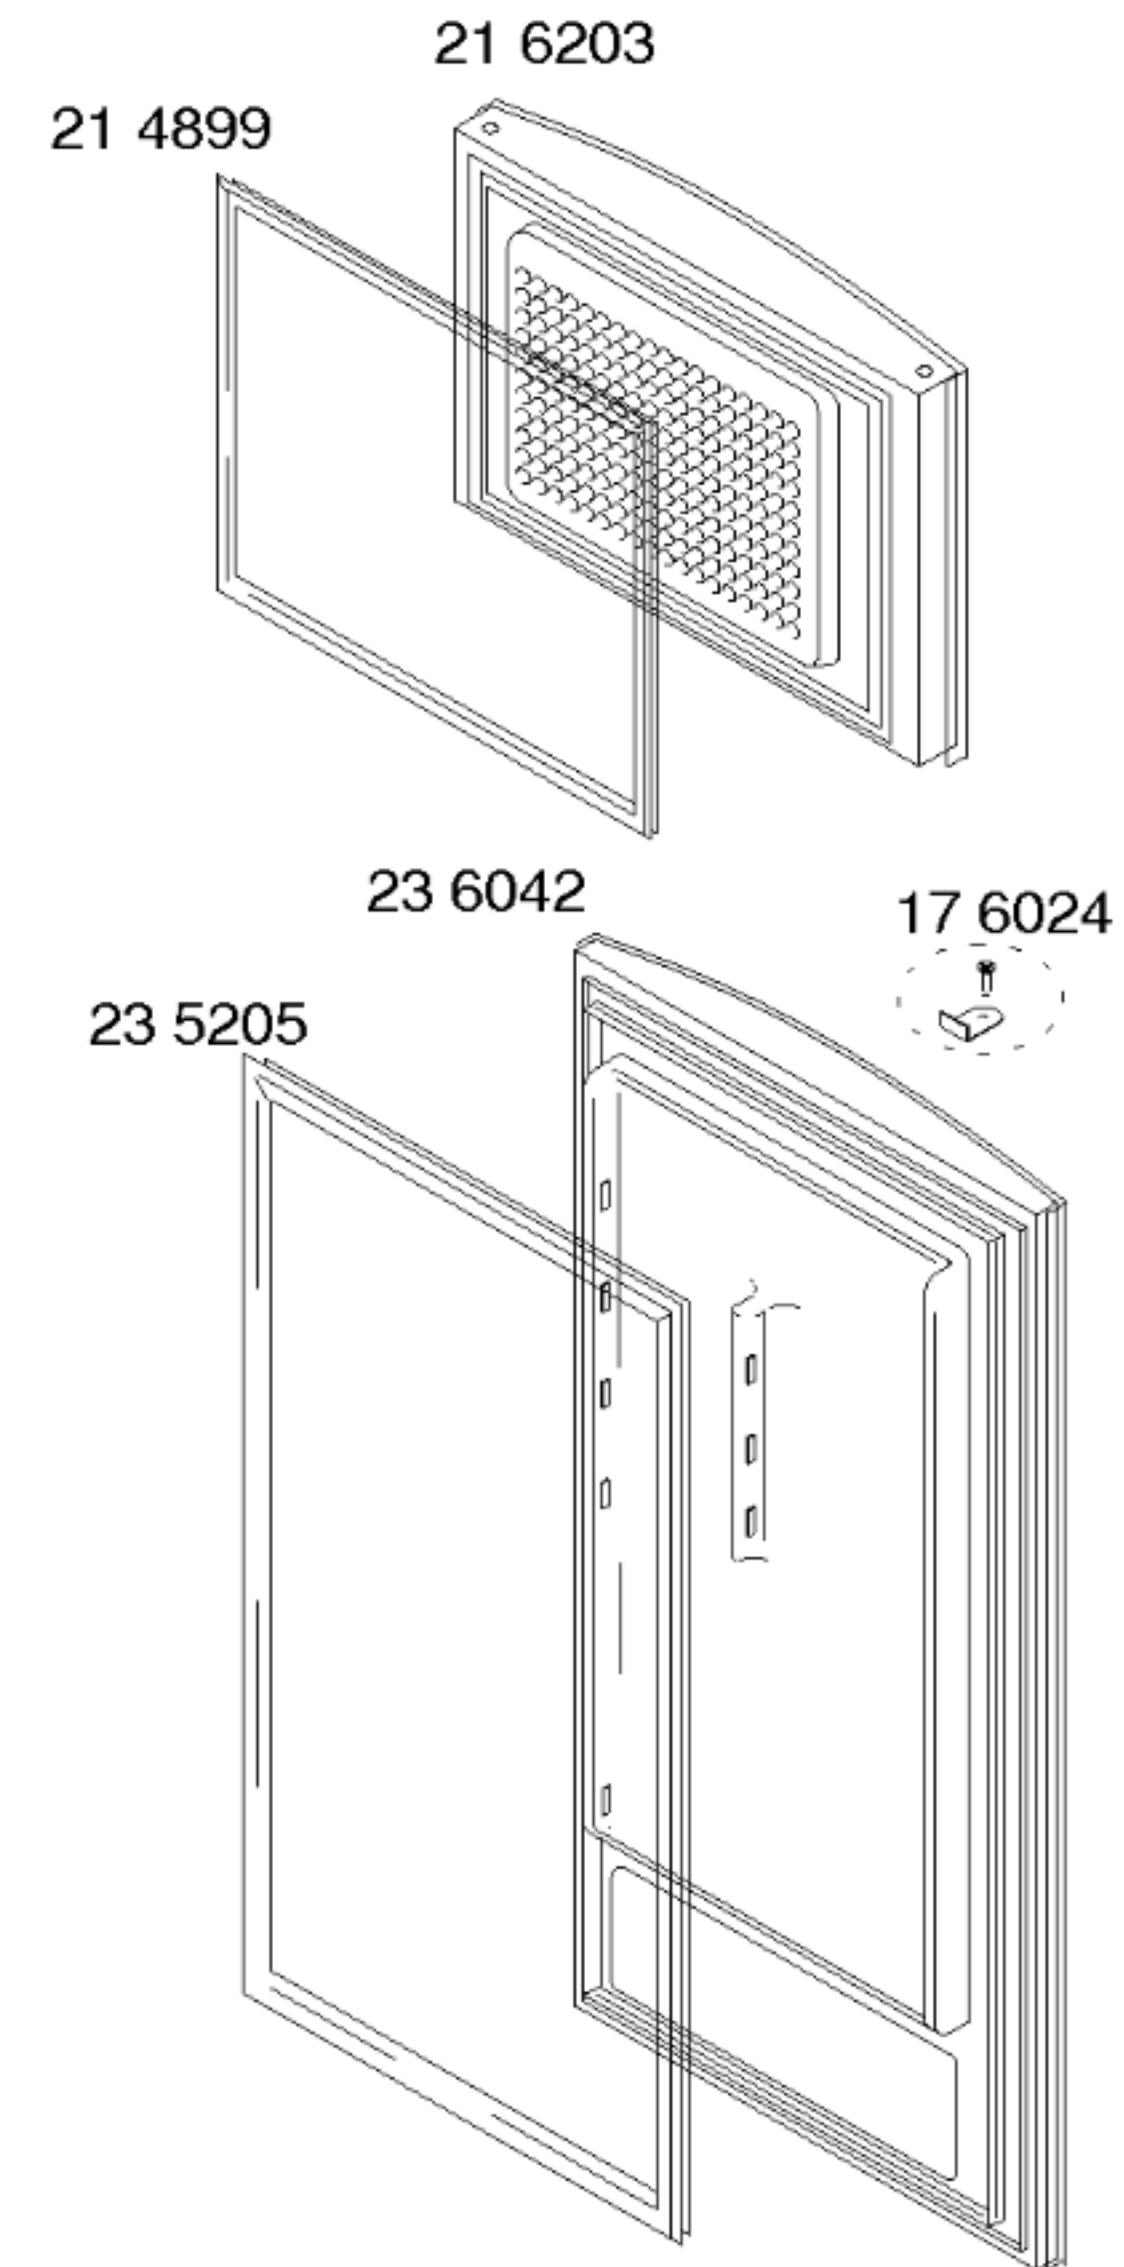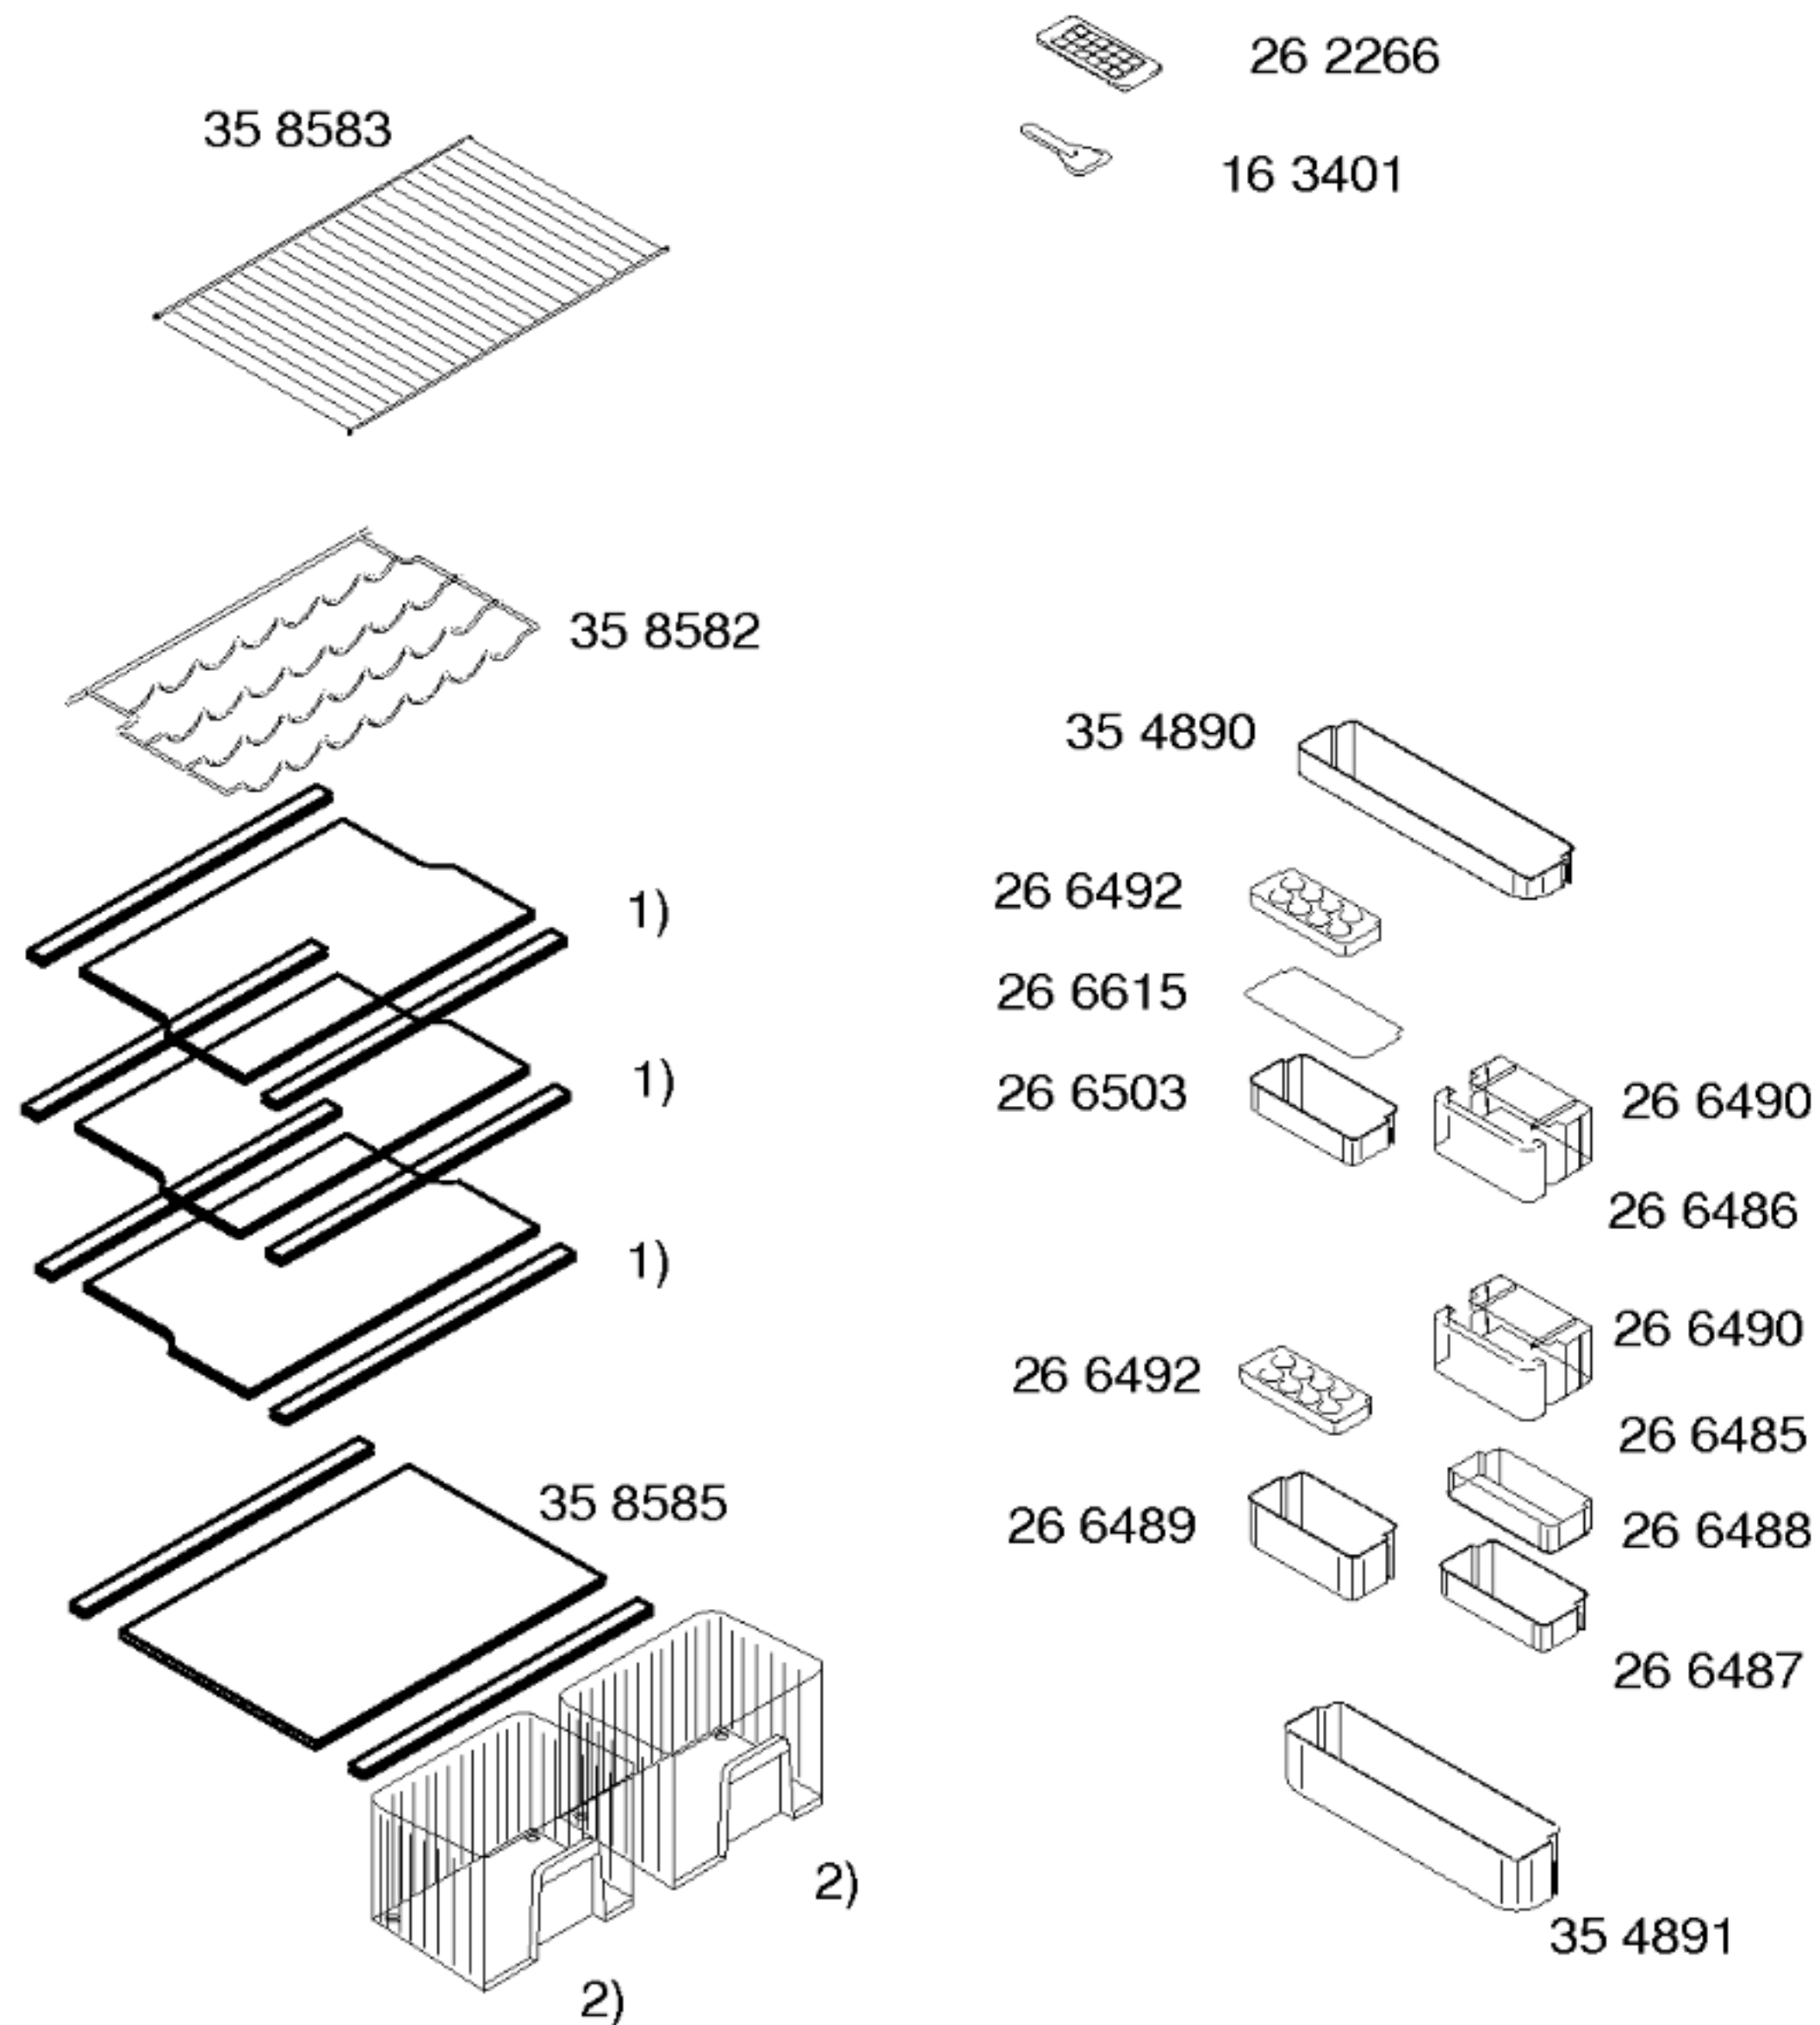

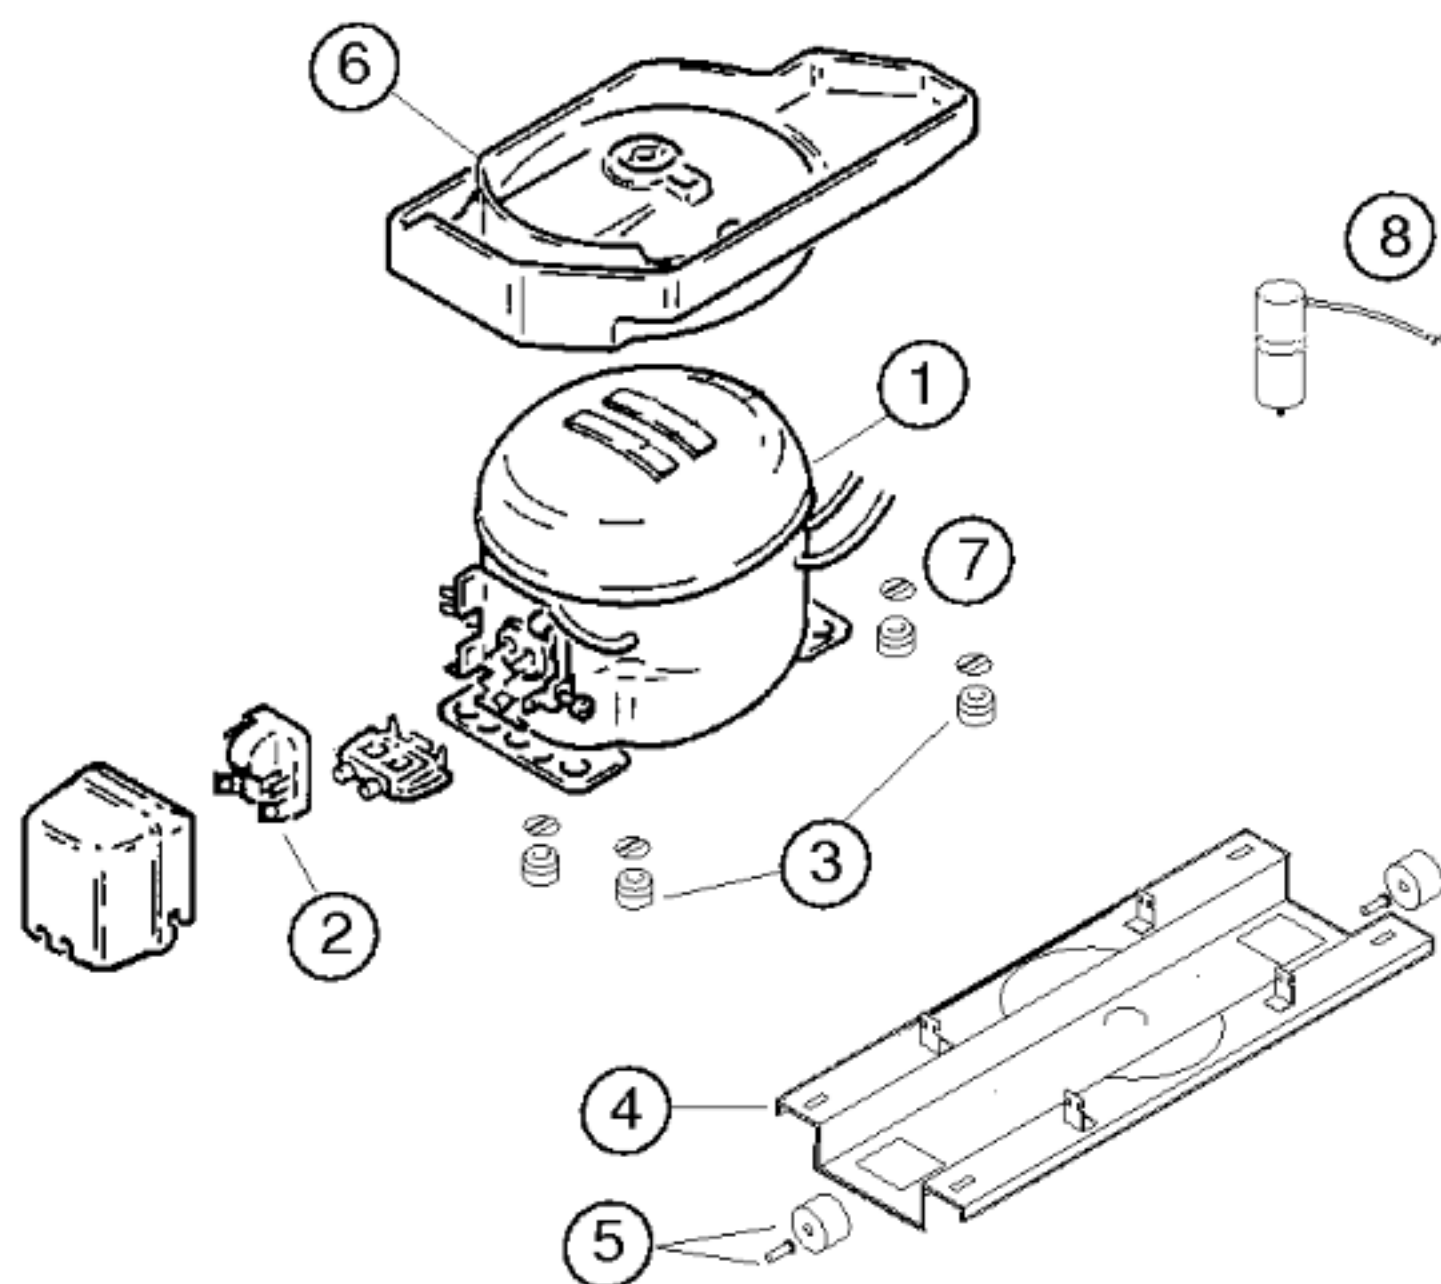

Pos.	V01	V02,V03	
	Danfoss	Matsushita	
	NY13K	DC125E12	
1	14 2045	14 2169	
2	16 5570	18 3873	
3	16 3427		
4	35 4583		
5	17 1318		
6	26 5327	09 1308	
7	17 1519		
8	17 4093		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

	V01	V02,V03	
Verdichter/Compressor/Kompresör	Danfoss	Matsushita	
Typ/Type/Tip	NLE15K	DC125E12	
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	10.9		A
Widerstand/Resistance/Rezistans Ha/Hi/aux.	10.7		Ohm
	13.0		
Temp.Reyler/Thermostat/Termostat	RANCO	RANCO	
Typ/Type/Tip	K59/P1777	K59/P1777	
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	+3.5 +3.5	+3.5 +3.5	..ein/acma °C
Valeurs de commutation/Termostat degeri	-31 -20	-31 -20	..aus"/kapama
(..abtaven' od)			..alarm'
Füllmenge/Fill quantity/ Dolum miktarı	R600		g
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız