



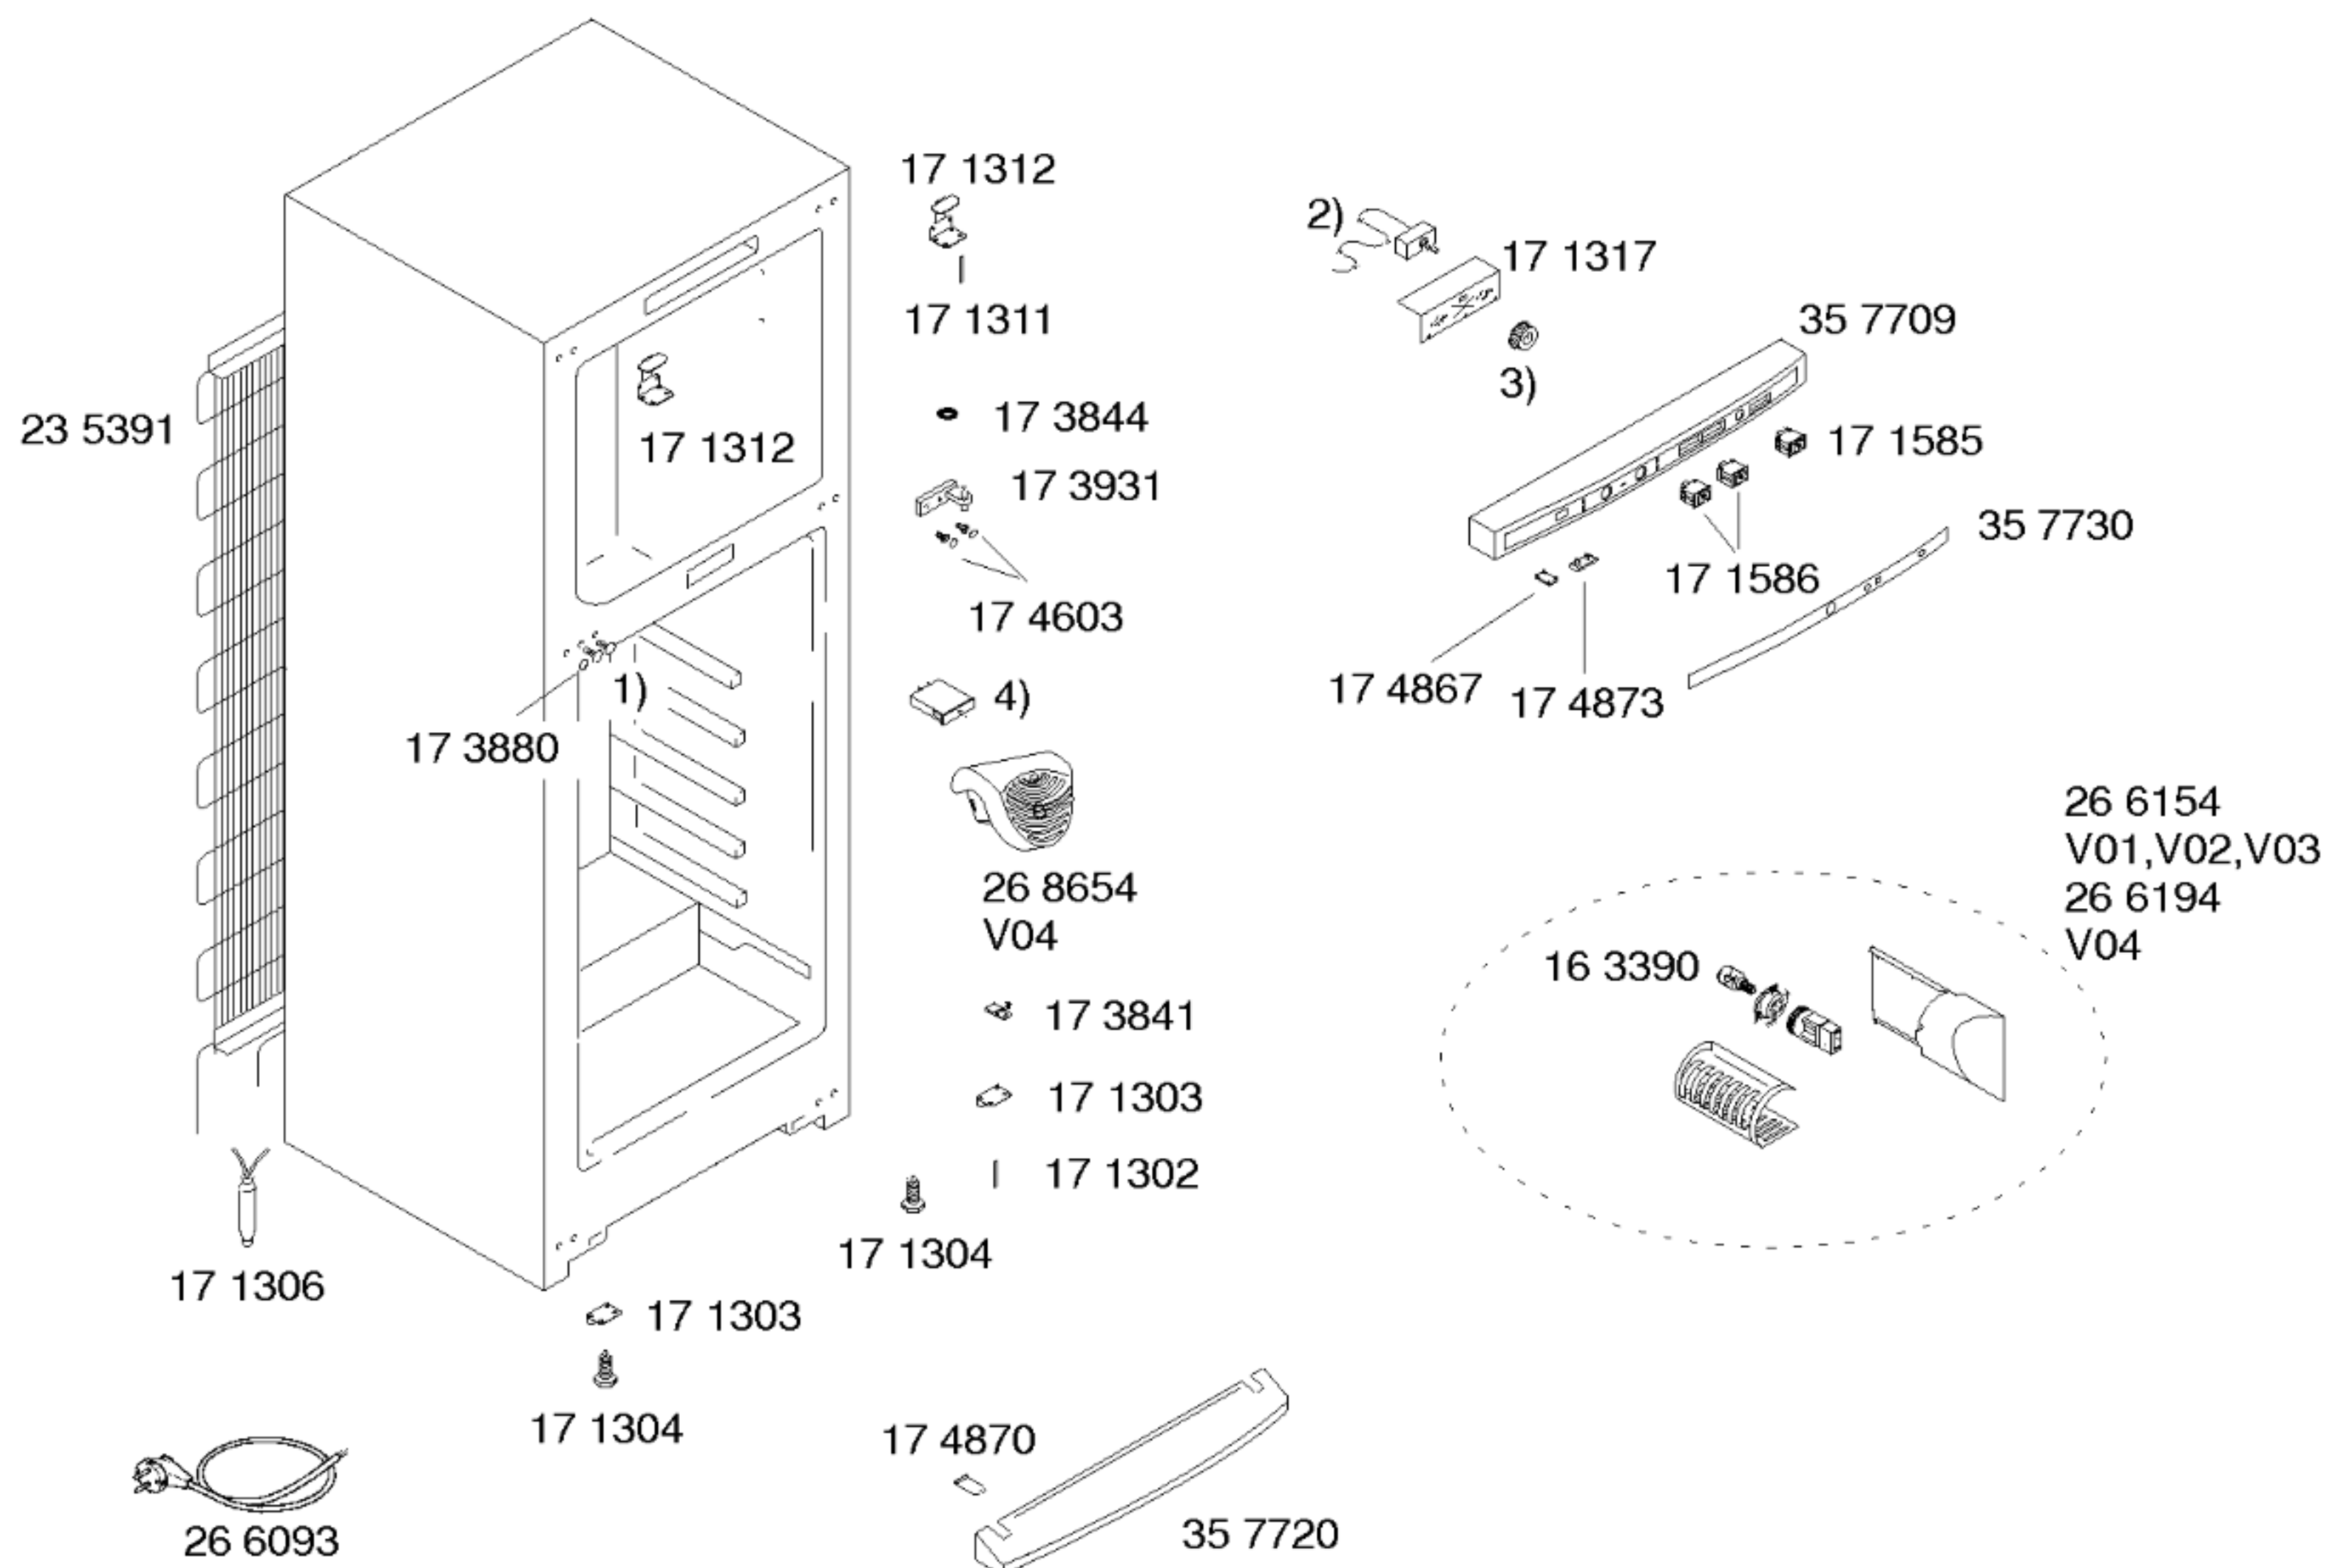


Gebrauchsanweisung
52 3268
V01,V02,V03
52 9567
V04
(DE,GB,FR,NL,SE,FI,
NO,DK)

- 1) 17 3865
- 2) 17 2017
V01
18 2792
V02,V03
18 2417
V04
- 3) 17 1585
V01,V02,V03
18 4234
V04
- 4) 17 3847
V01,V02,V03
17 4603
V04

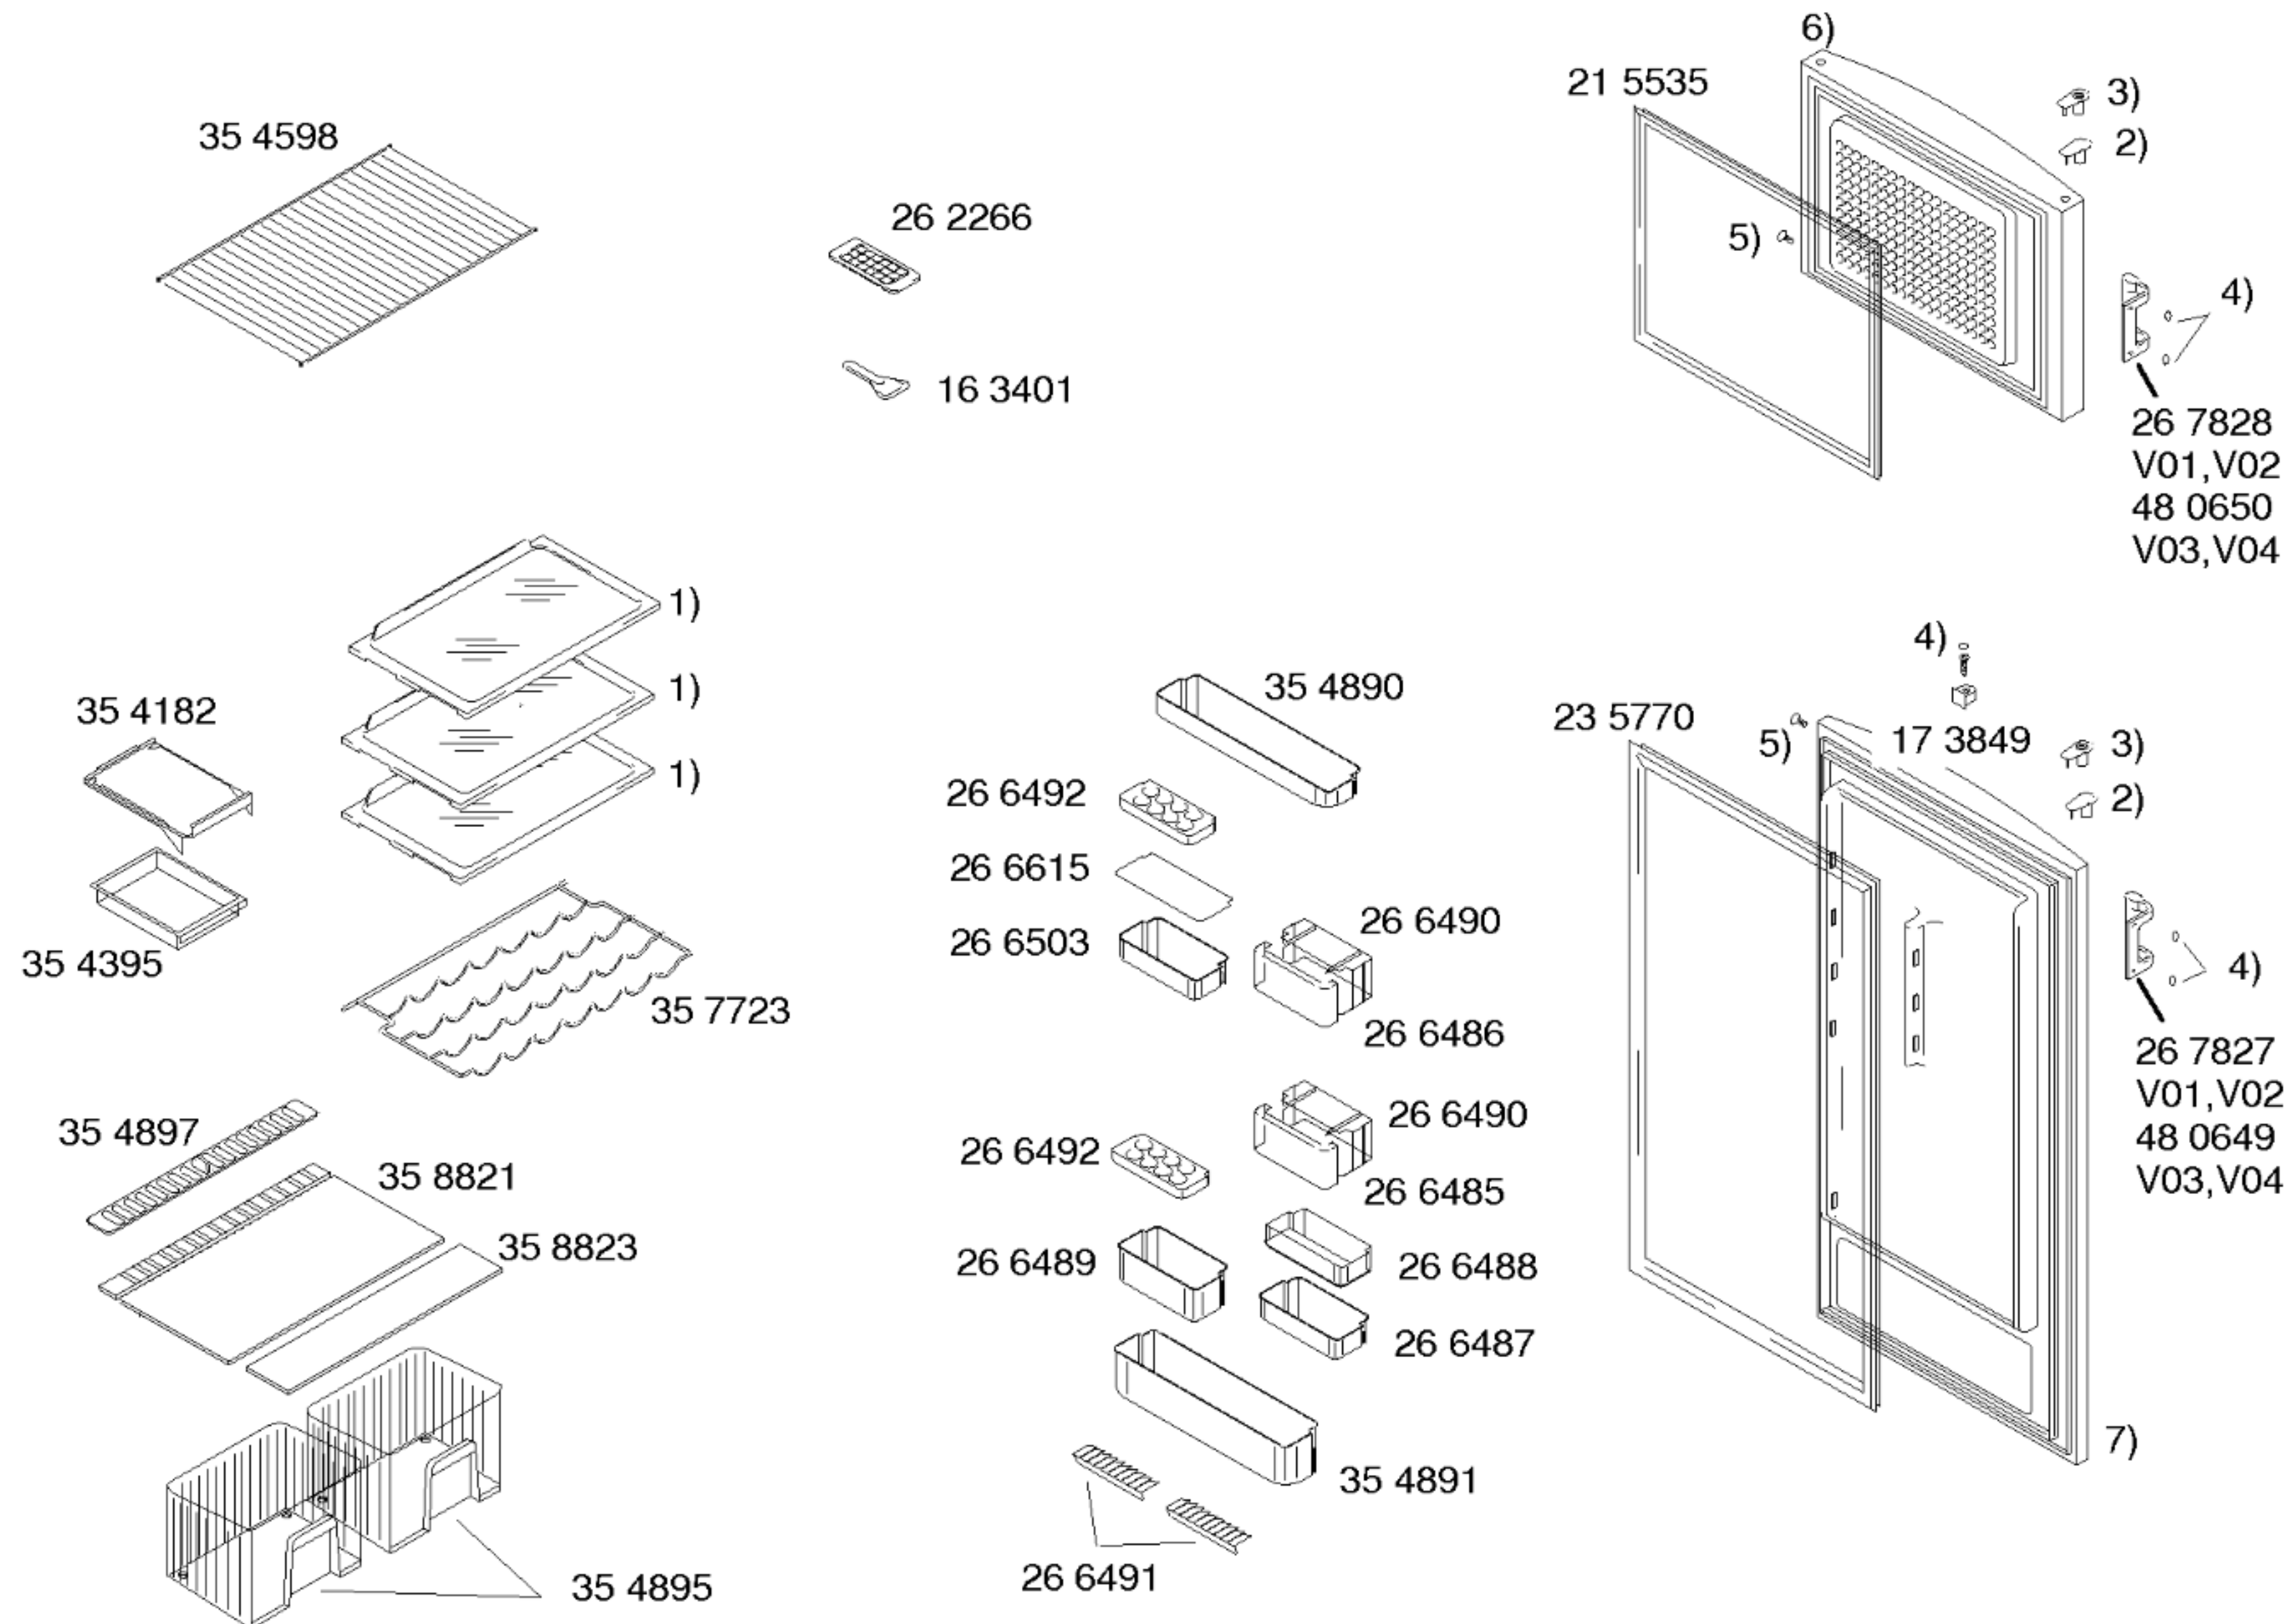

- 1) 35 4887
V01,V03,V04
36 0393
V02
- 2) 17 4858
- 3) 17 4855
- 4) 17 3880
- 5) 17 3861
- 6) 21 5952
V01,V02
21 7181
V03,V04
- 7) 23 5914
V01,V02
23 6575
V03,V04

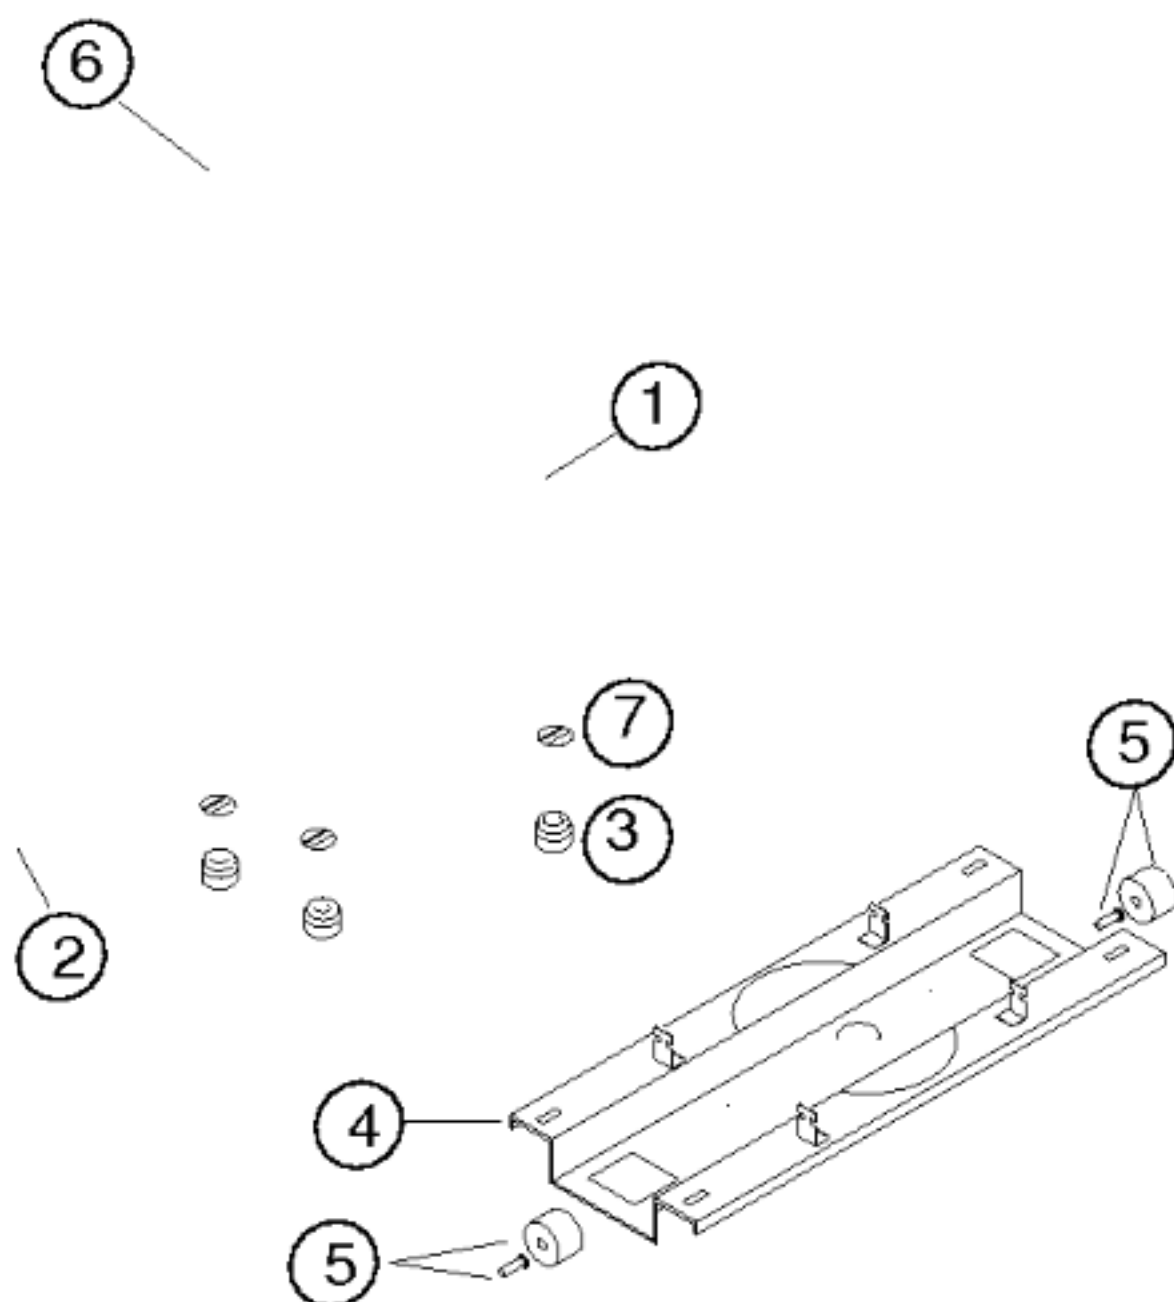

Pos.	Danfoss		
	NLE15K		
1	14 1926		
2	16 5570		
3	16 3427		
4	35 4583		
5	17 1318		
6	26 5327		
7	17 1519		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NLE15K		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	6.6/10.9	
Widerstand/Resistance/Rezistans	Ω	10.7	
Hi/aux.		13	
Temp.Reyler/Thermostat/Termostat	RANCO		
Typ/Type/Tip	K59/P6834		
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma °C	+3.5 +3.5	
Valeurs de commutation/Termostat degeri	..aus"/kapama	-31 -20	
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari	R600	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ω		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ω		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ω		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz