
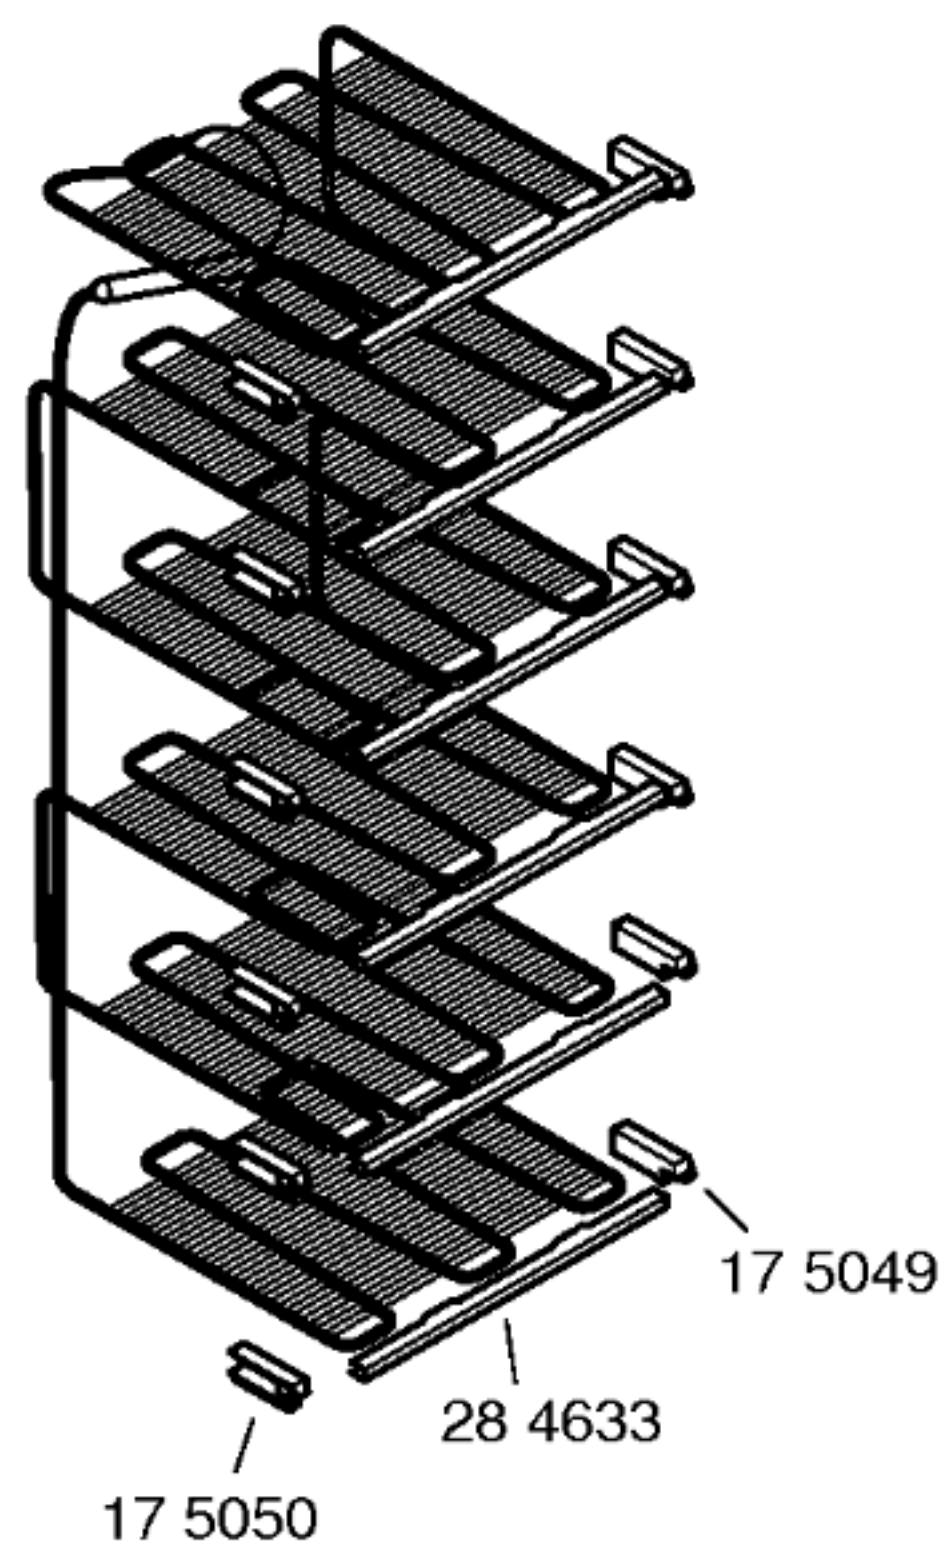
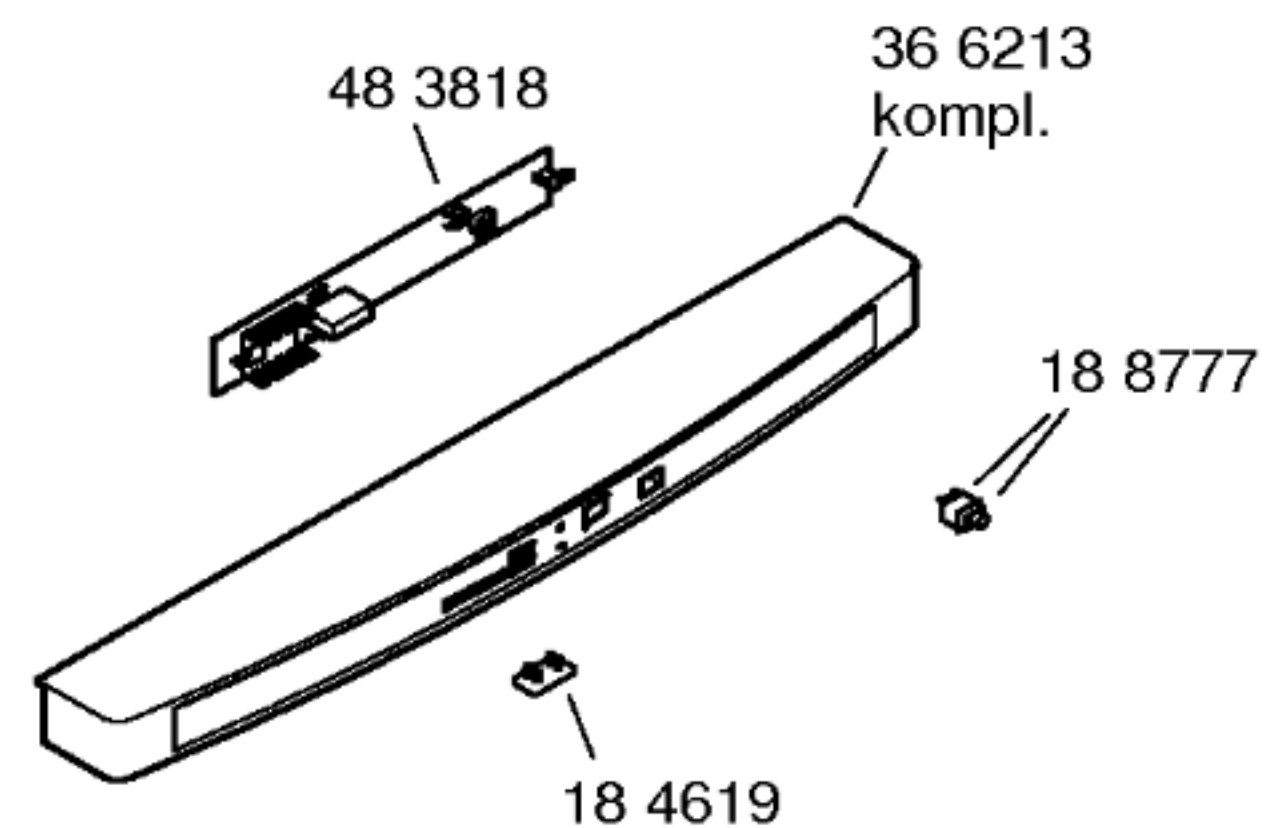


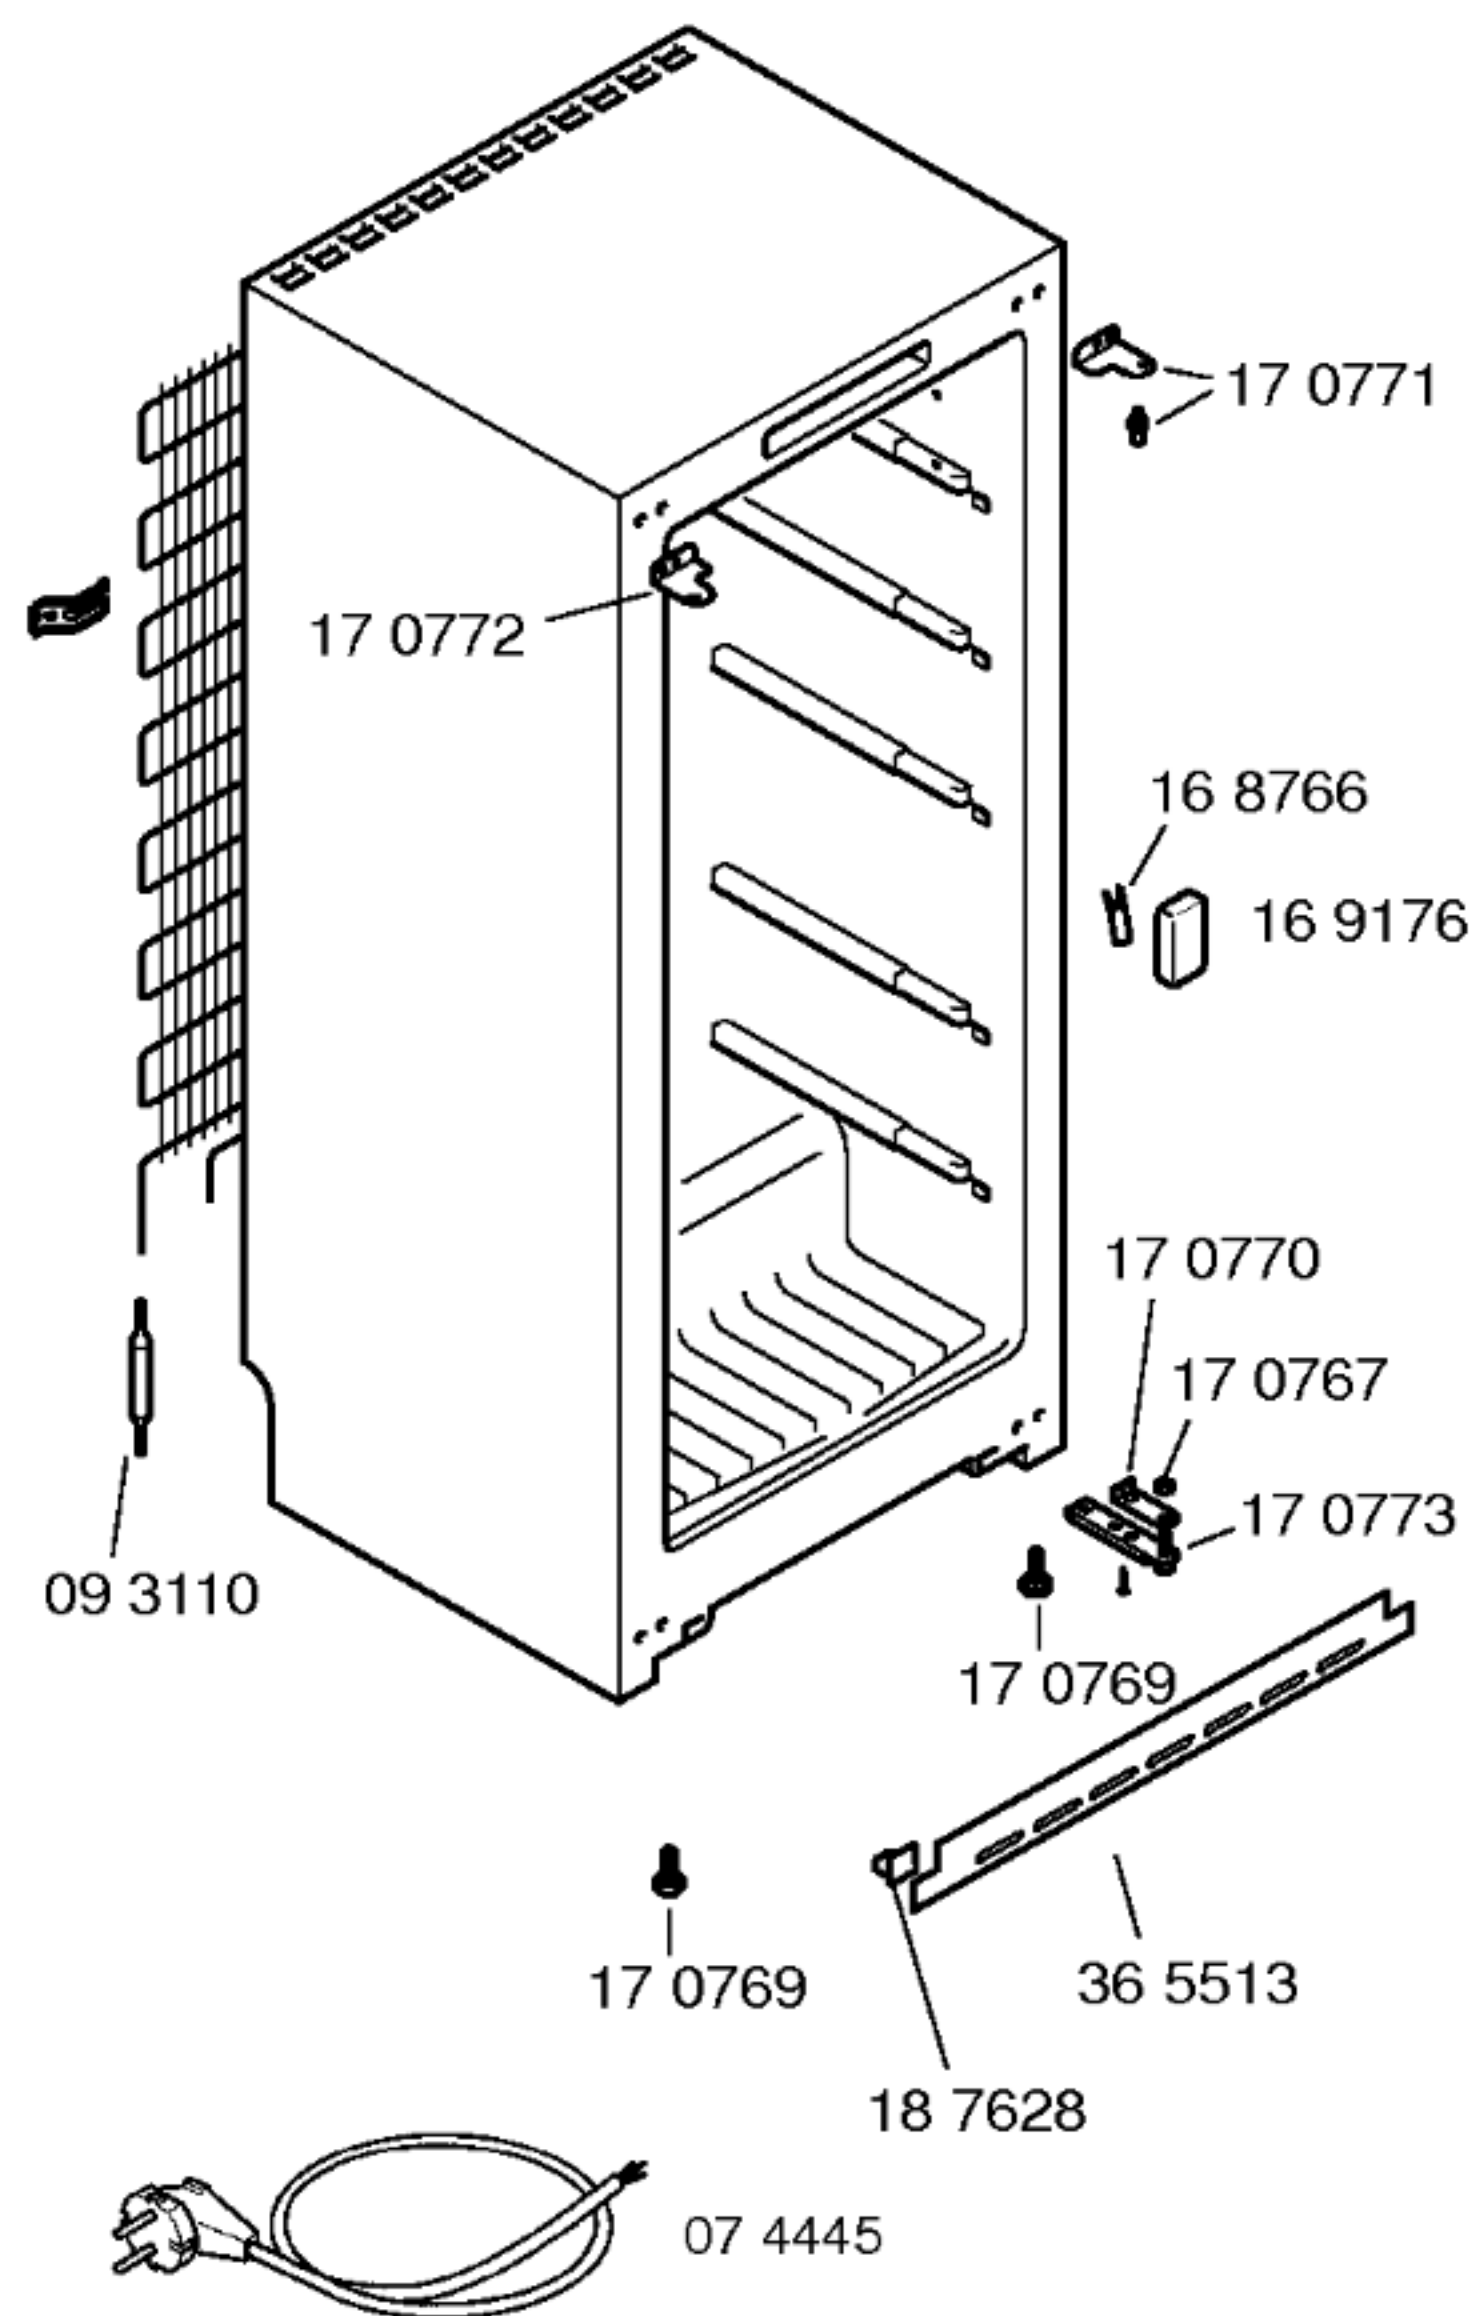



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
58 0838
(D,GB,F,I,NL,E,P)
58 0839
(DK,N,SF,S)

Montageanleitung
58 0241
(D,GB,F,I,NL,DK,N,SF,
SE,E,P,GR,TR)

Beistellsatz
26 5627

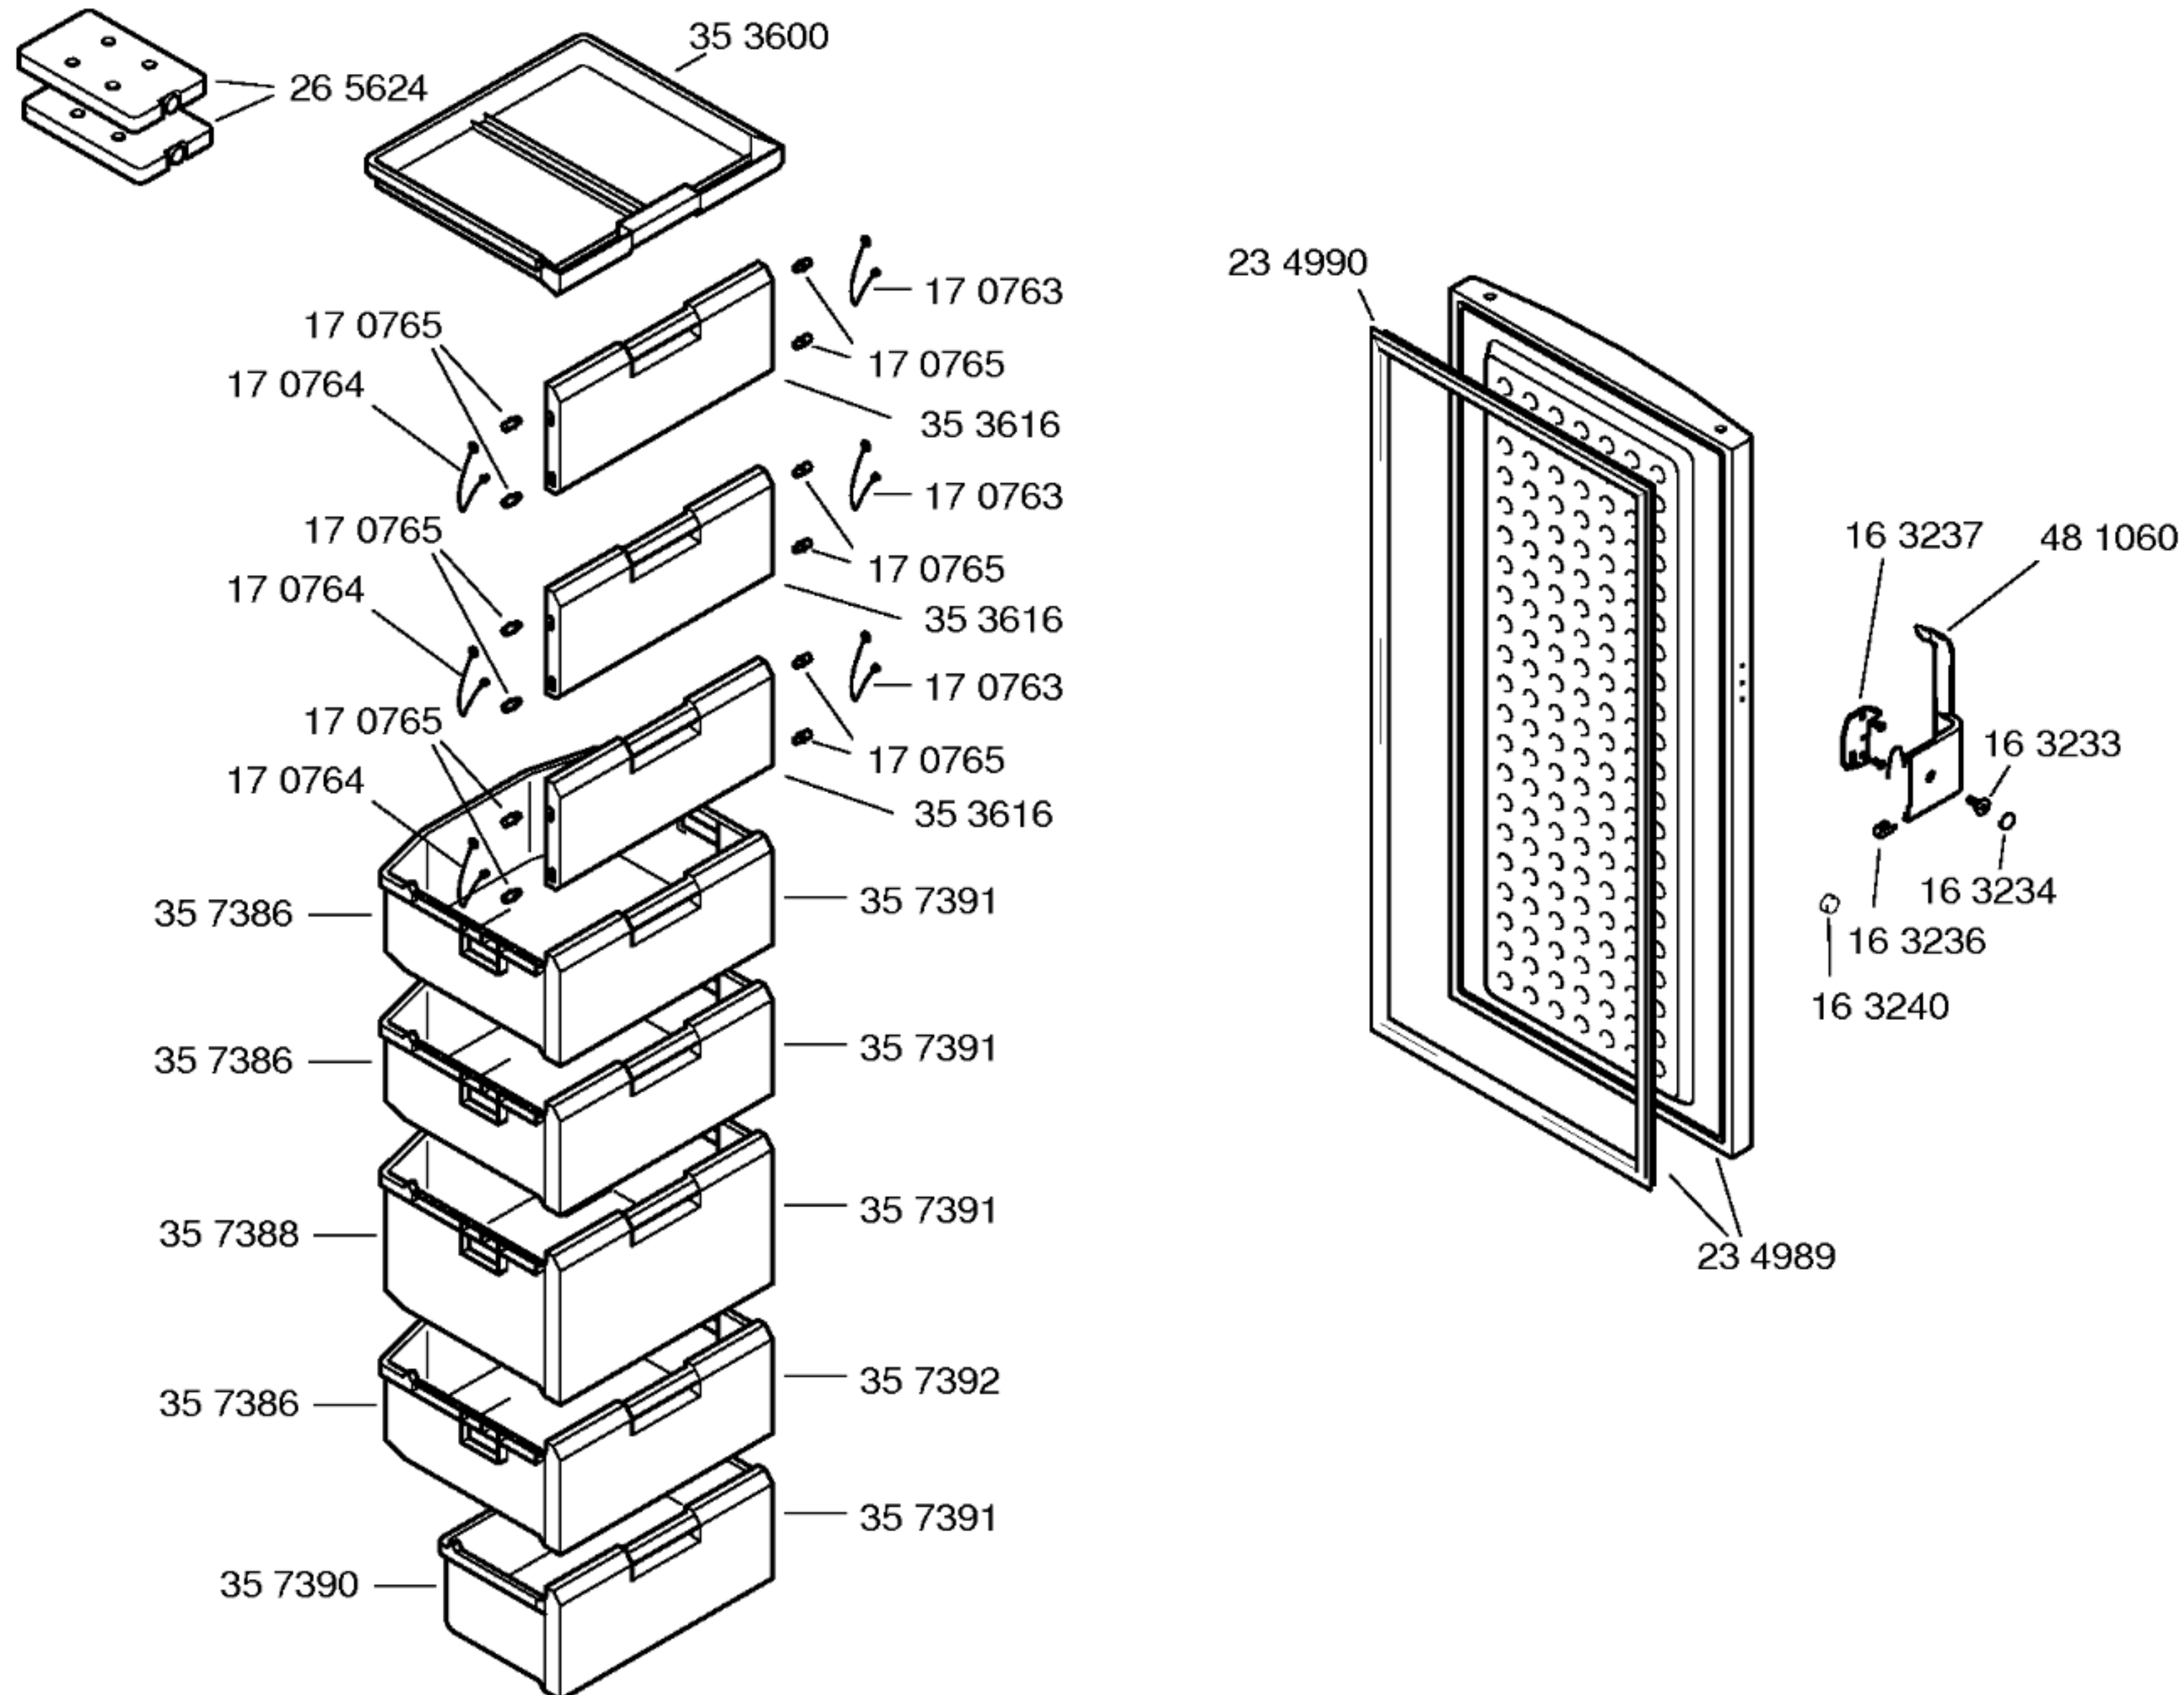

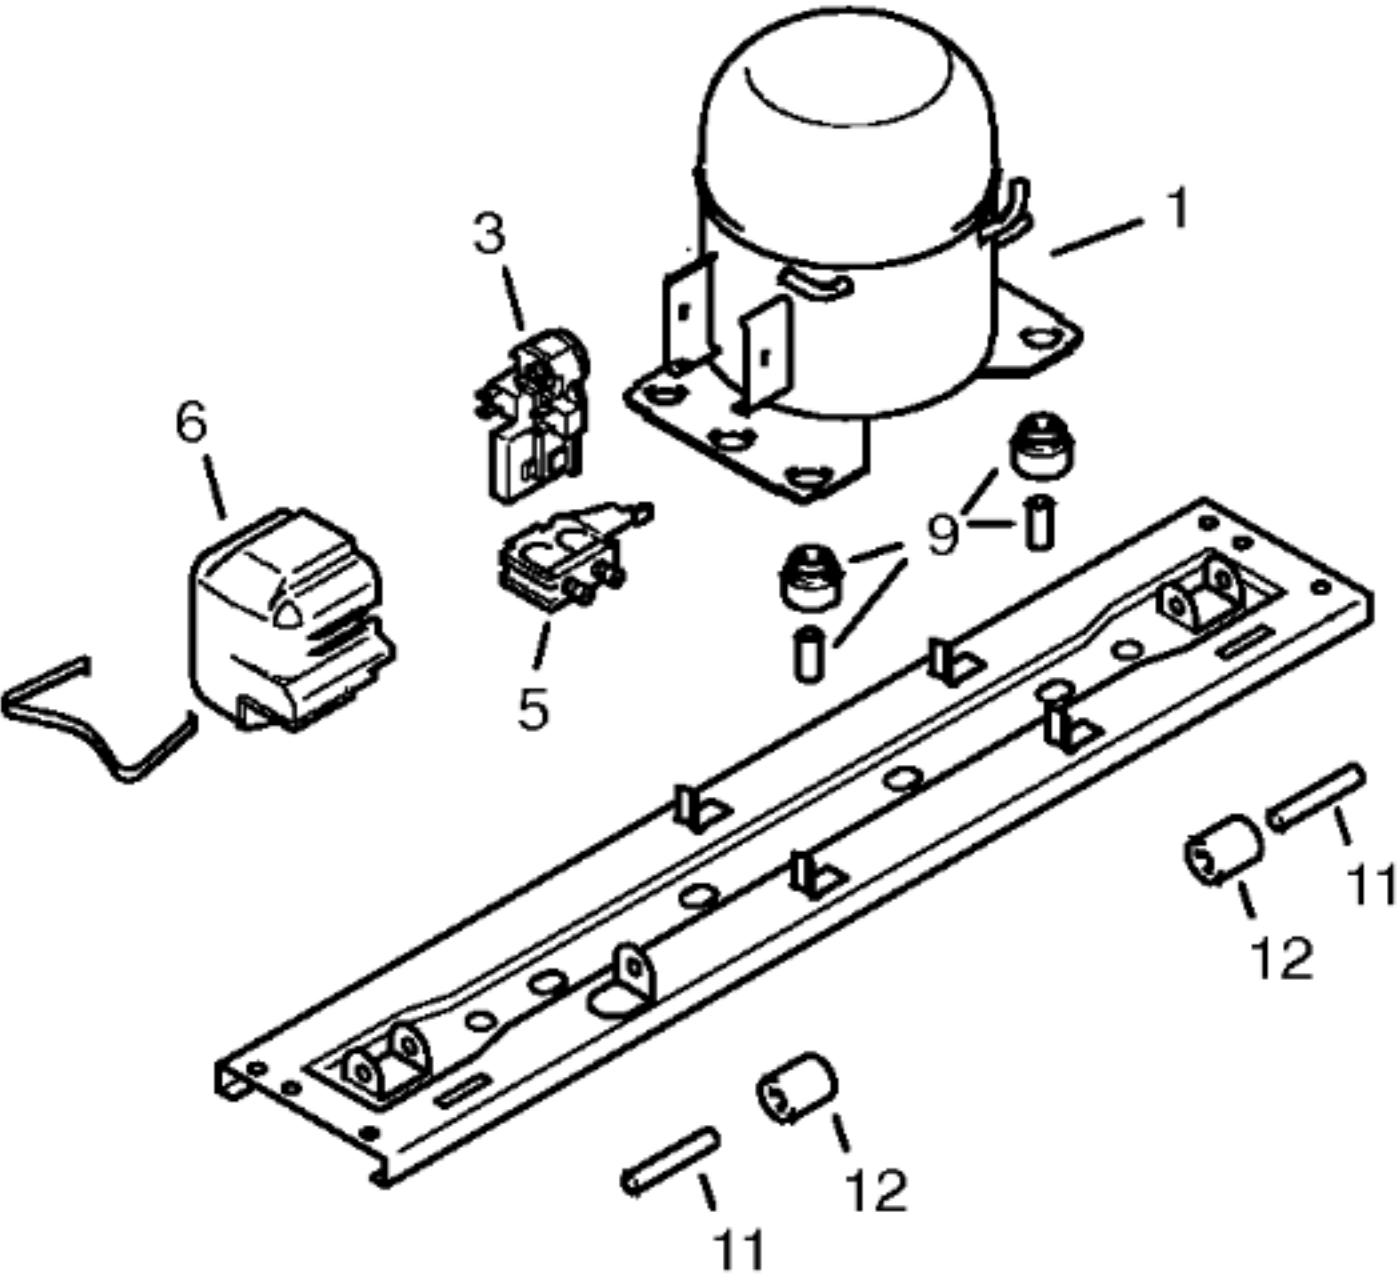

Pos.	V01		
	Matsushita		
	DC 125 E		
	14 2131		
1			
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC 125 E		
Förderleistung/Delivery/Débit	l/h	2246		
Anlaufstrom/Starting current/Cour de démarrage	A	9,2		
Widerstand/Resistance/Résistance	Ha/main/prin	Ω 12,1		
	Hi/aux	Ω 13,8		
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values	"warm"			
Valeurs de commutation	"kalt"			
	"alarm"			
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18 43,31 ±1,10
		+5	12,70 ±0,18	-22 54,66 ±1,59
		0	16,33 ±0,16	-26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			