


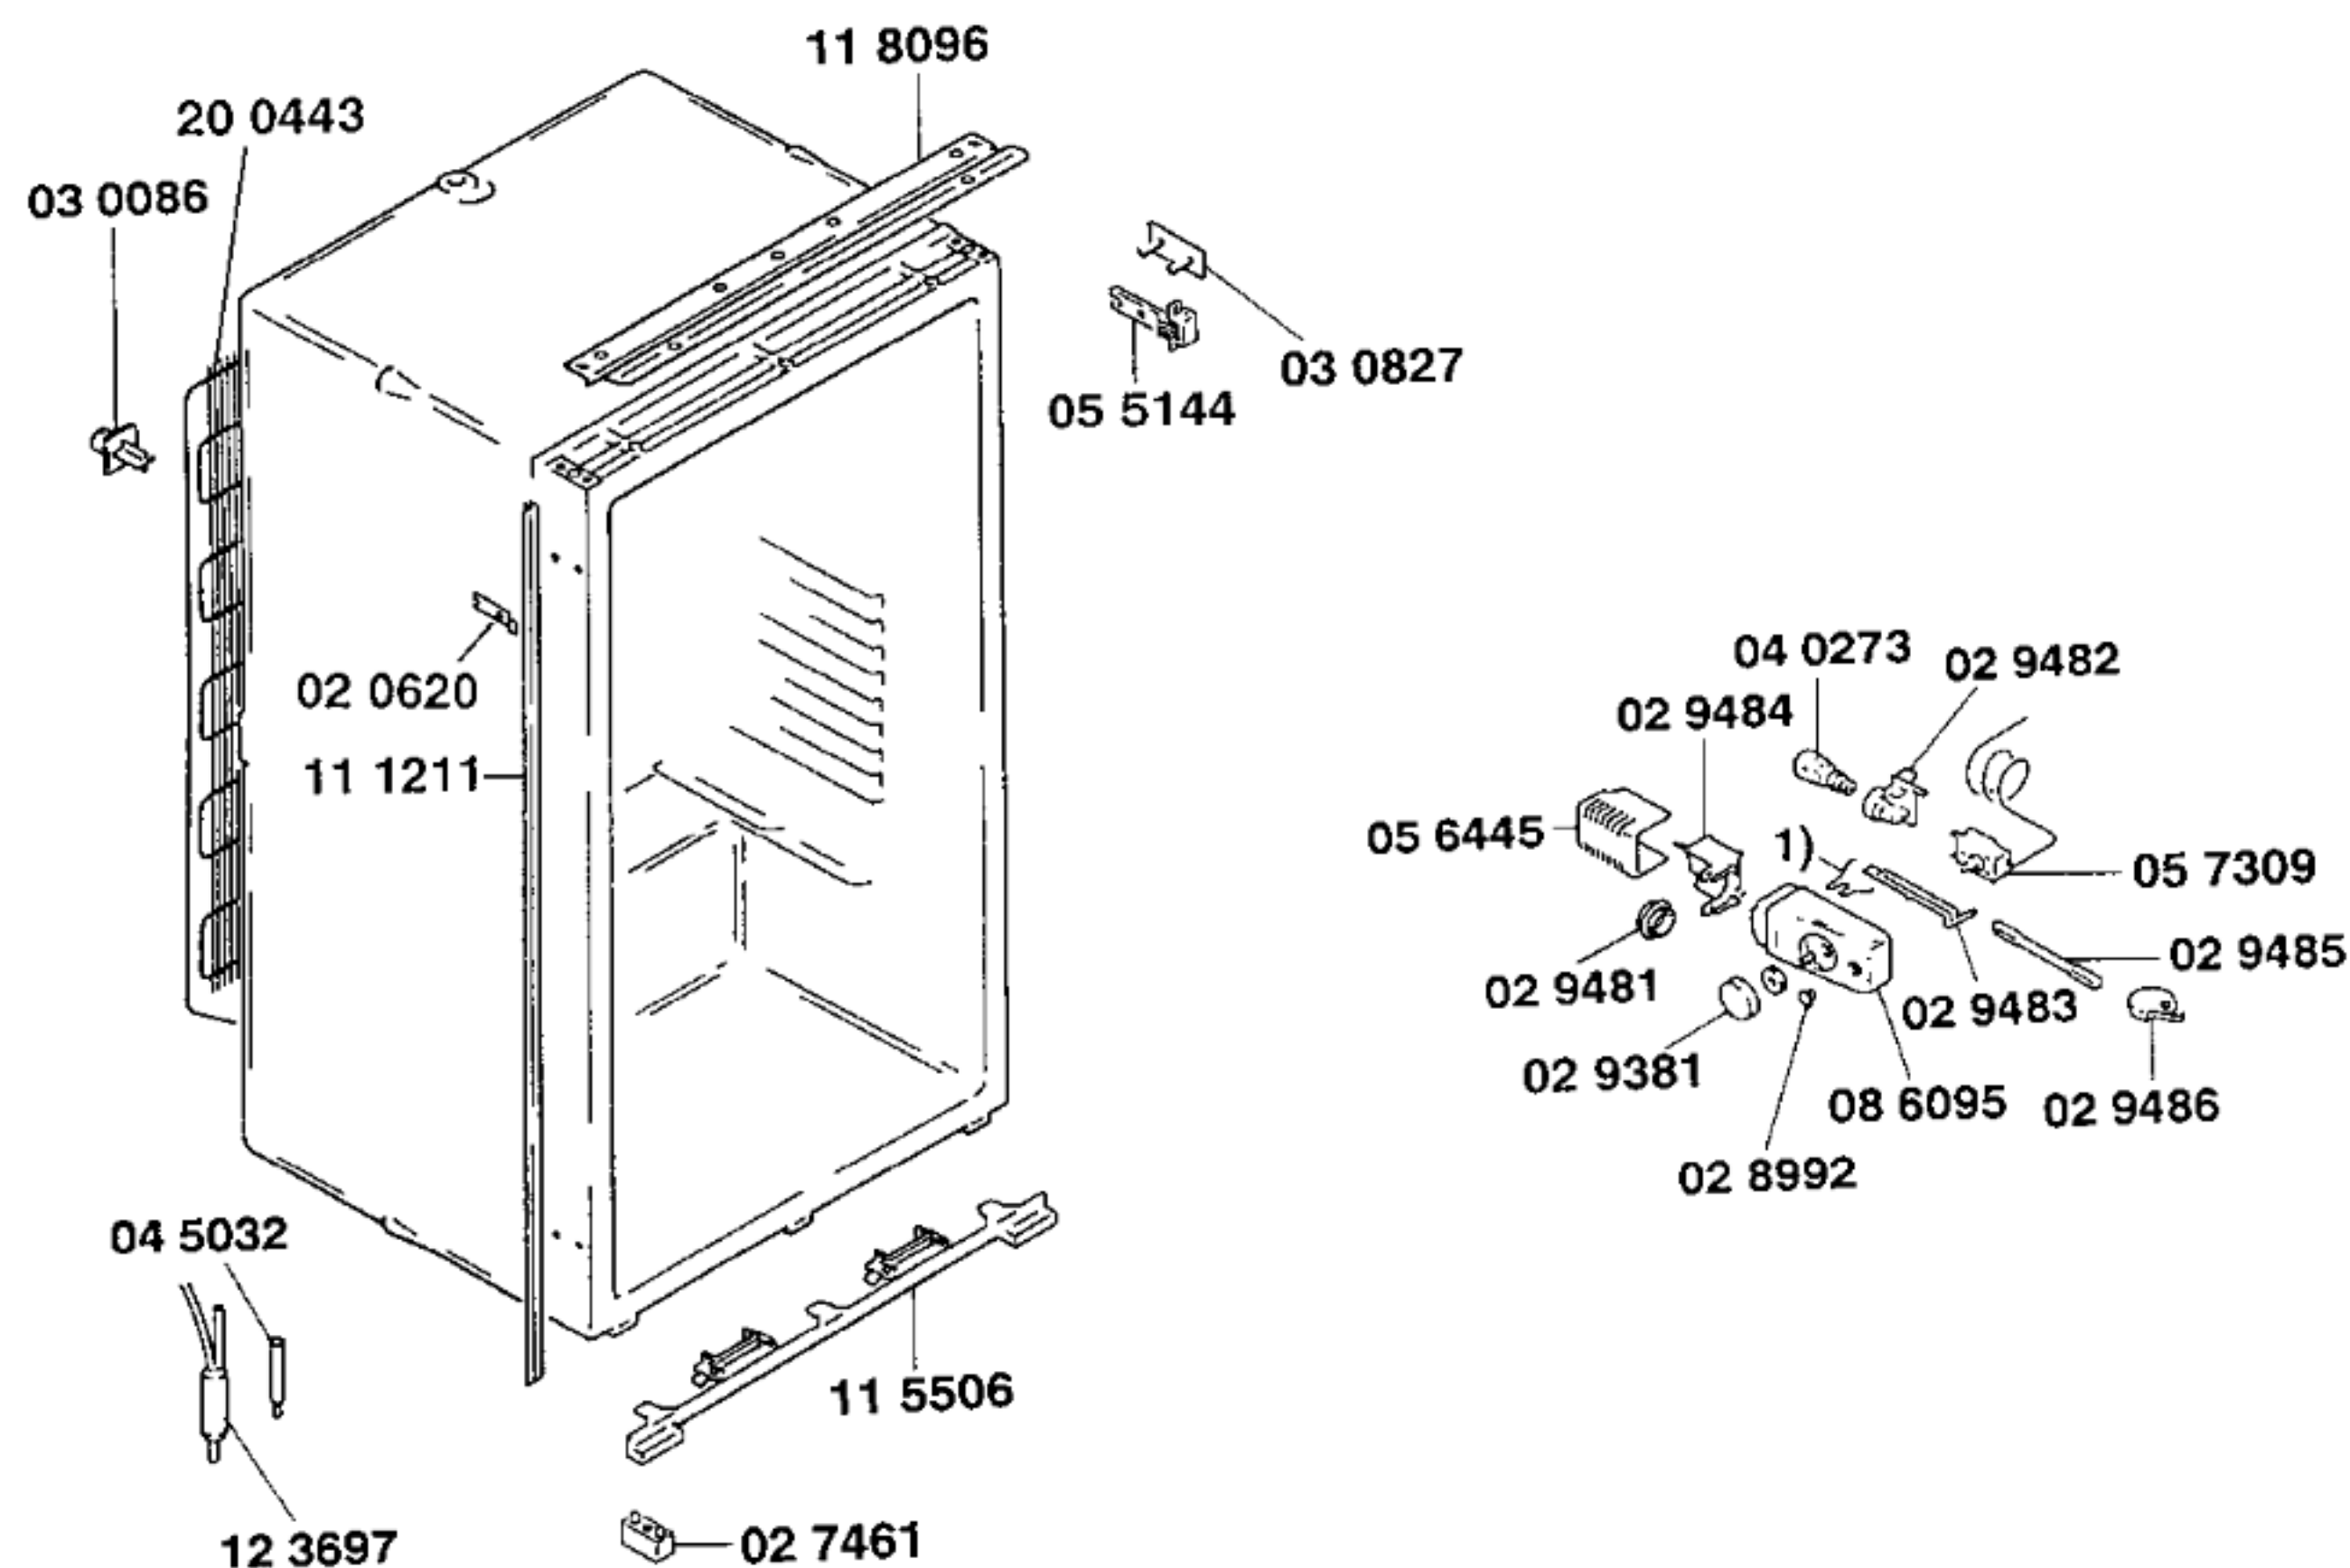

51 2718
Gebrauchsanweisung
(D,GB,F,I,NL,N,DK,SF,E)

51 2304
Montageanleitung
(D,GB,F,I,NL,DK,N,S,SF,E,P)

08 4136
Schraubensatz


1) 02 9480


Zubehör:

Dekorrahmen
KZ12240, weiss
KZ12260, braun

**Ausgleichs-
blenden
braun:**
KZ12080,37mm
KZ12090,41mm
KZ12100,56mm

Alu:
KZ12110,37mm
KZ12120,41mm
KZ12130,56mm

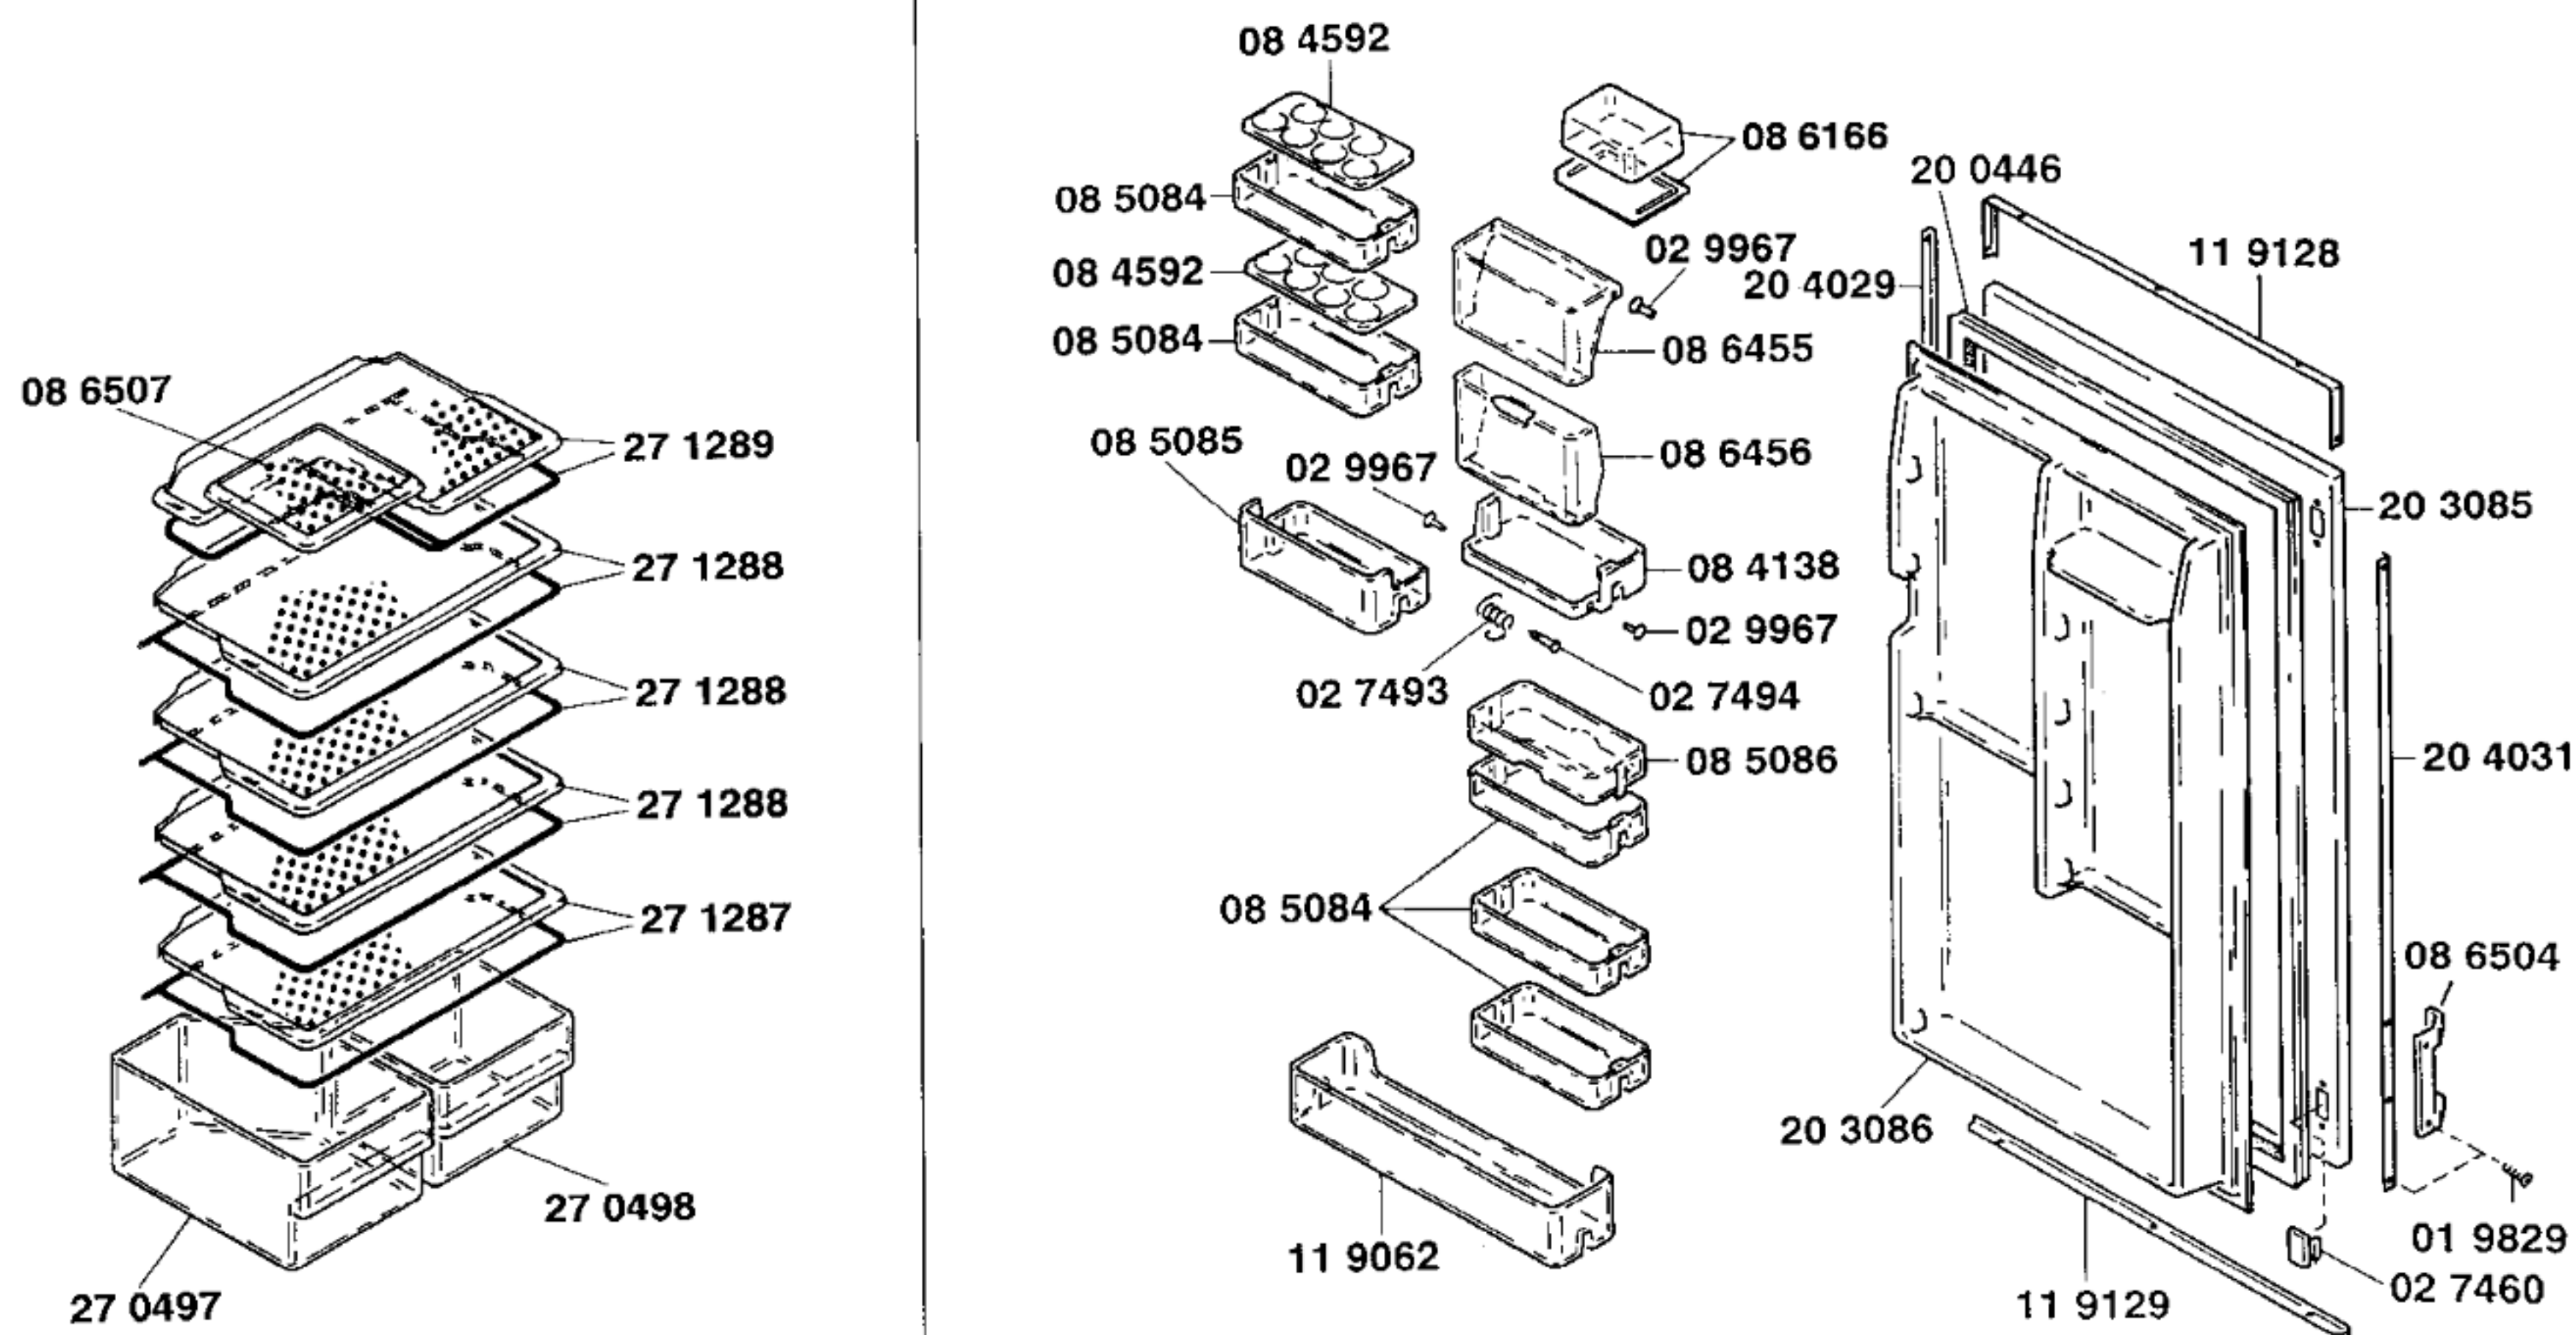

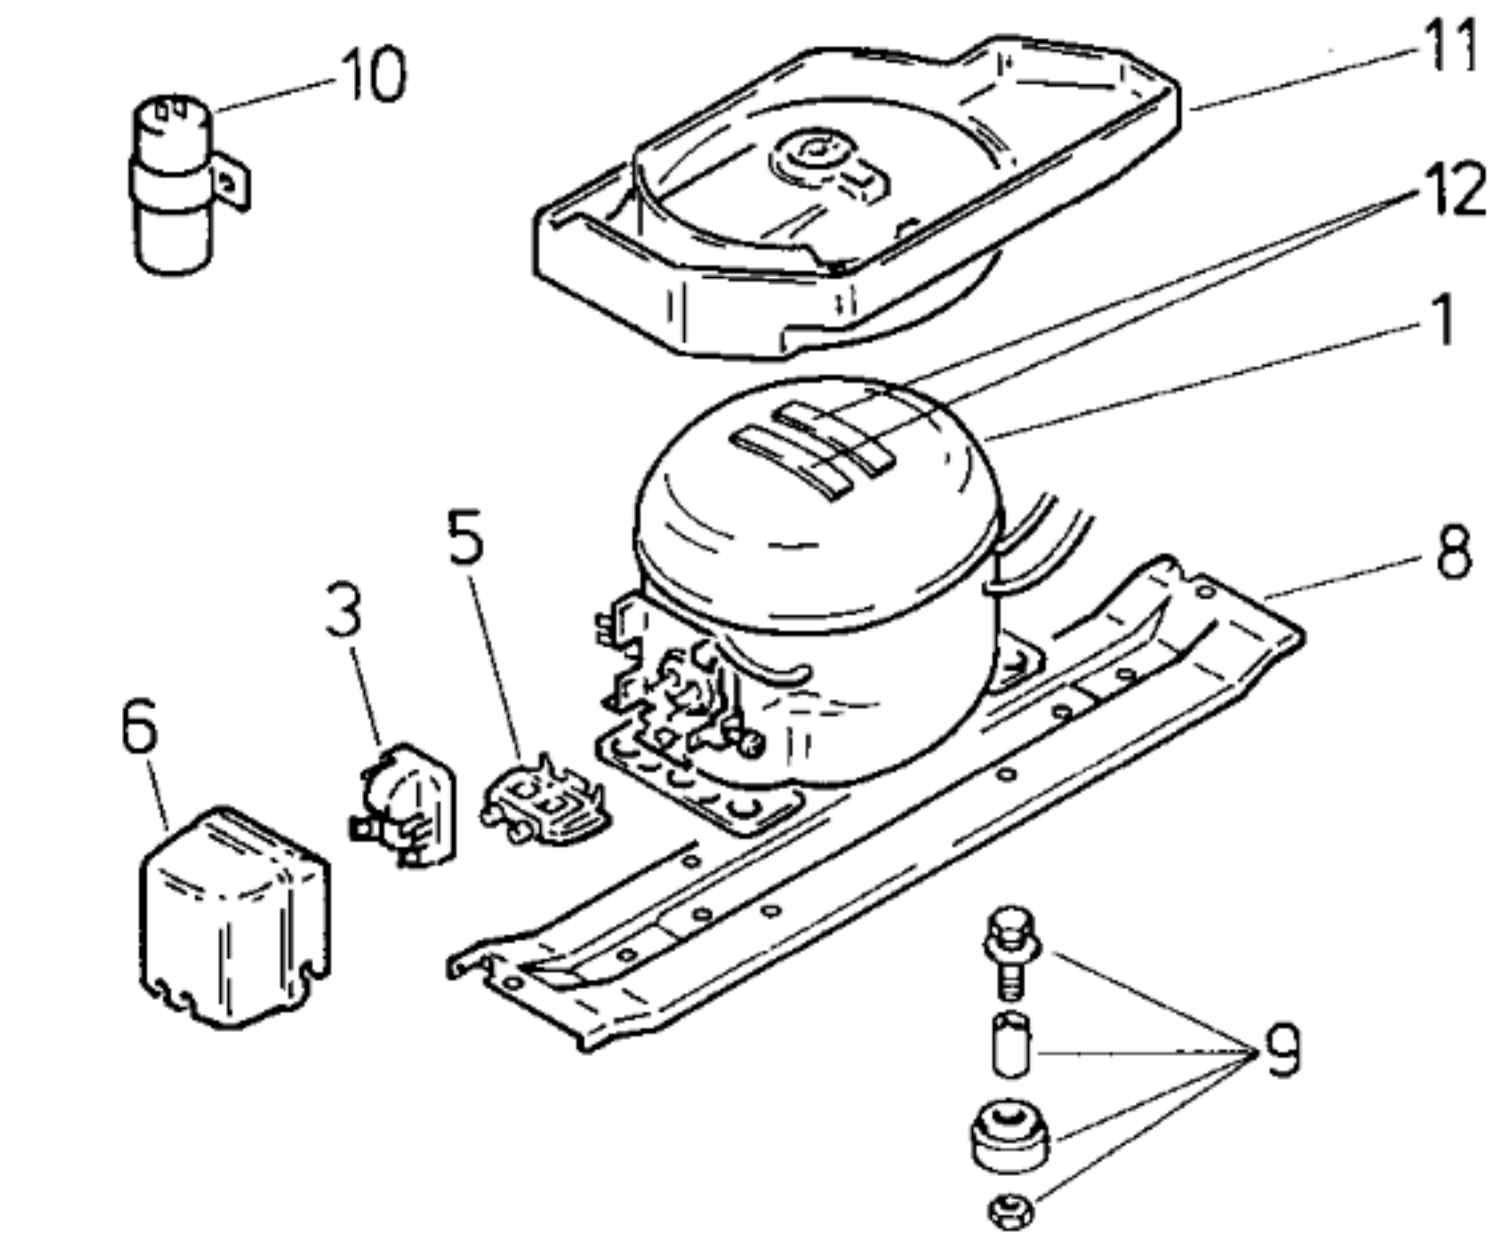

Pos.	EU1	I1	
	Danfoss TL 4 A	Danfoss TL 5 A	
1	13 1064	14 0065	
2			
3	02 0108	02 0108	
4			
5	02 7310	02 7310	
6	05 1413	05 1413	
7			
8	11 0437	11 0437	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 4 A	TL 5 A	
Förderleistung/Delivery/Débit	l/h	695	914	
Anlaufstrom/Starting current/Cour. de démarrage	A	8,3	9,0	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω 23,4	15,5	
	Hi/aux	Ω 15,5	16,8	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ °C	+ 5	+ 5	
Valeurs de commutation	„aus“	- 26	- 12	
(„abtauen“ od.)	„alarm“			
Füllmenge/Fill.quantity/Charge		R12	g	75
Anschlußwert/Conn.load/Puiss. connectée		W	110	120
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			