 
 
 


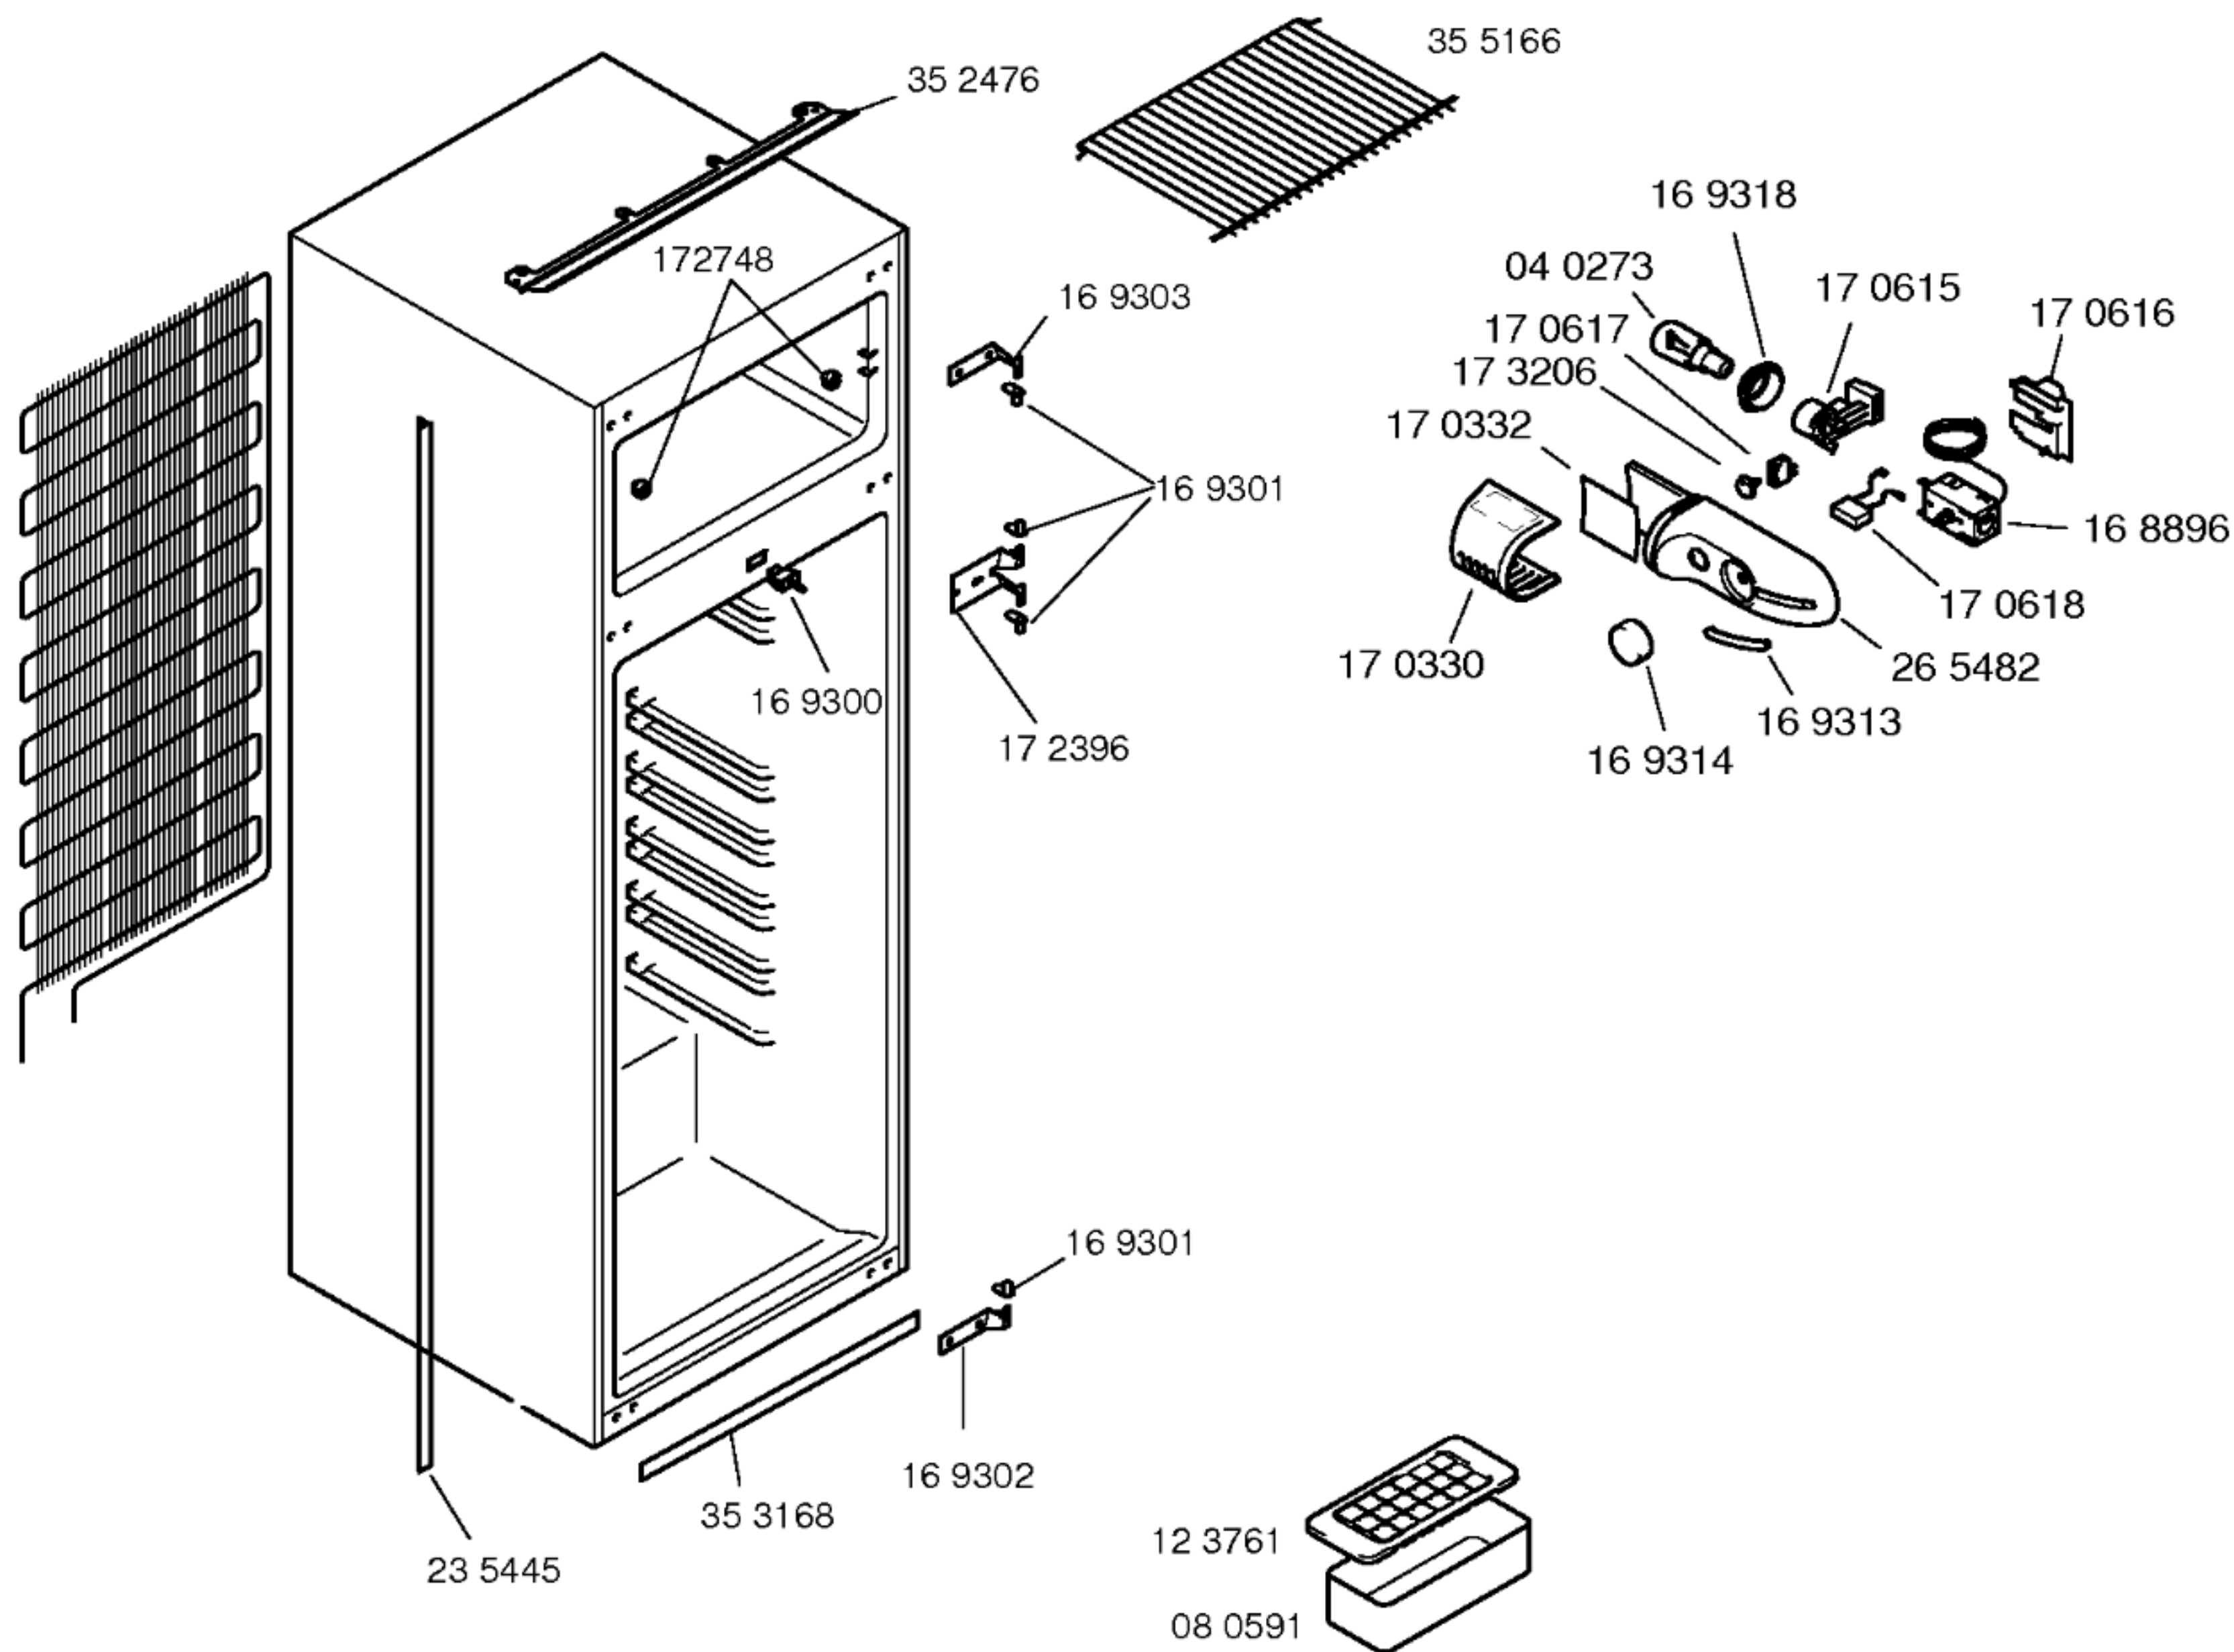

Gebrauchsanweisung
52 3607
(D-GB-F-I-NL)
52 3606
(E-P-GR)
Montageanleitung
52 1893

Beistellsatz
26 6763

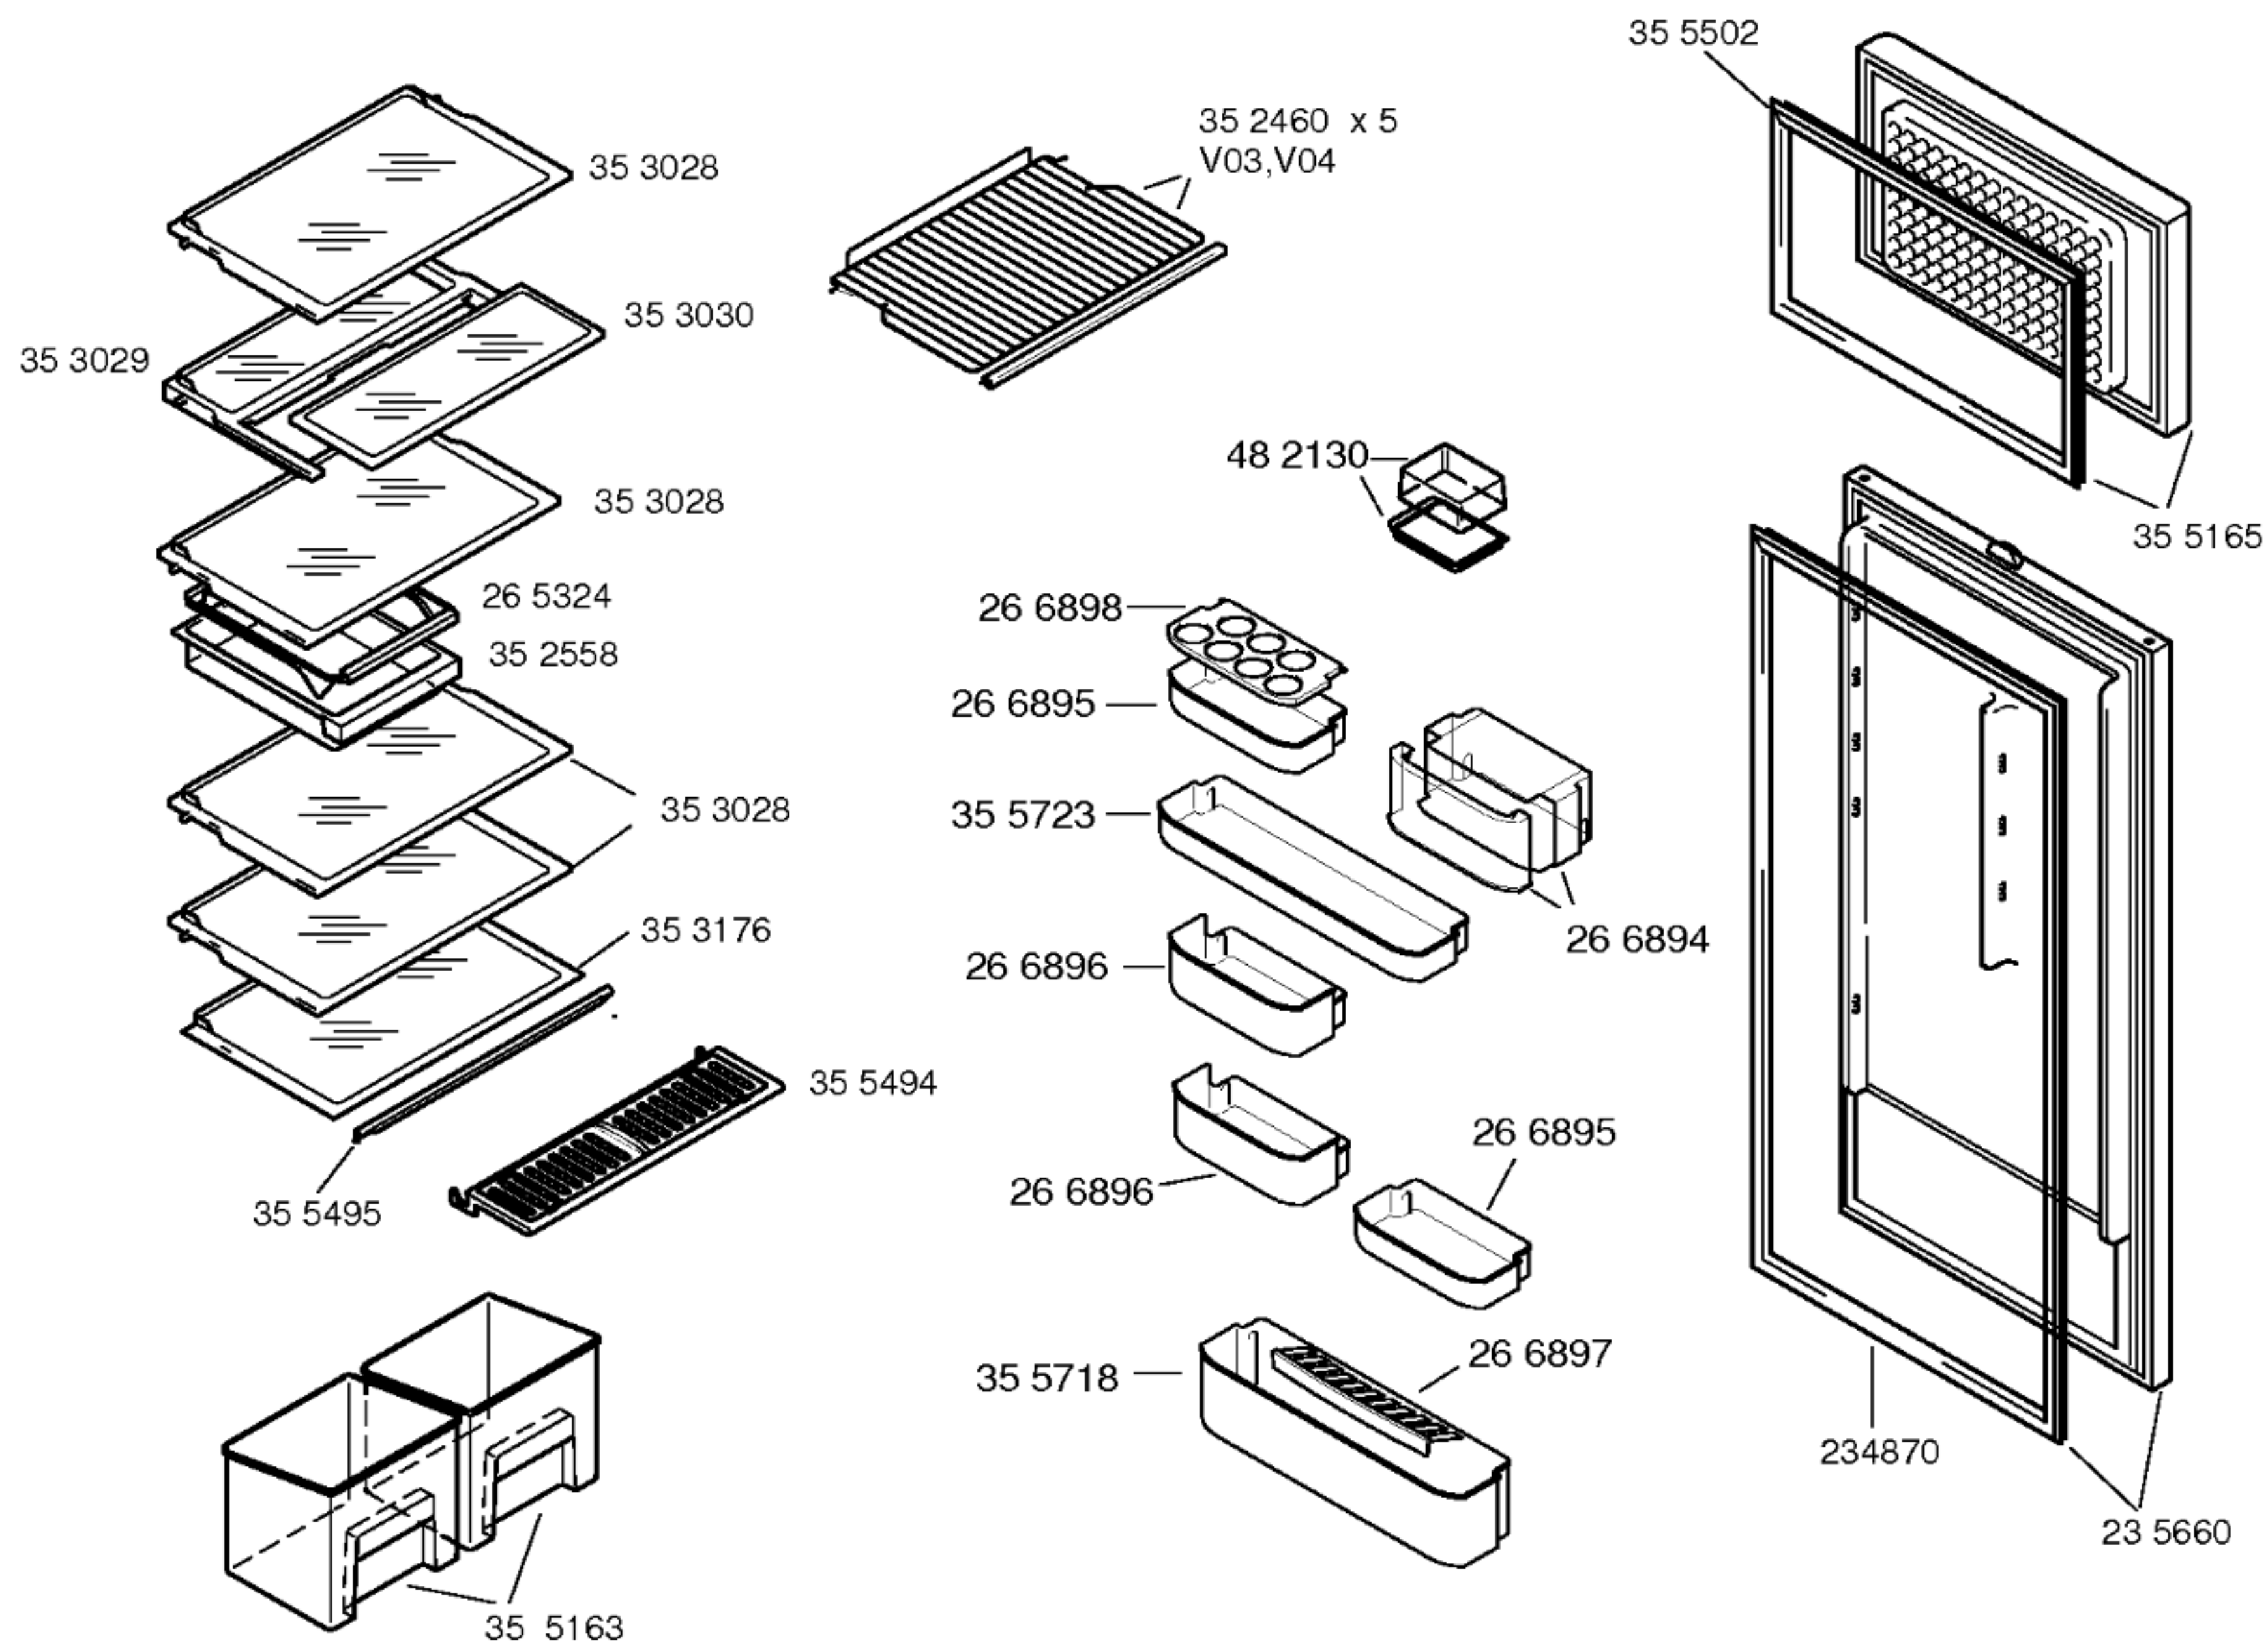

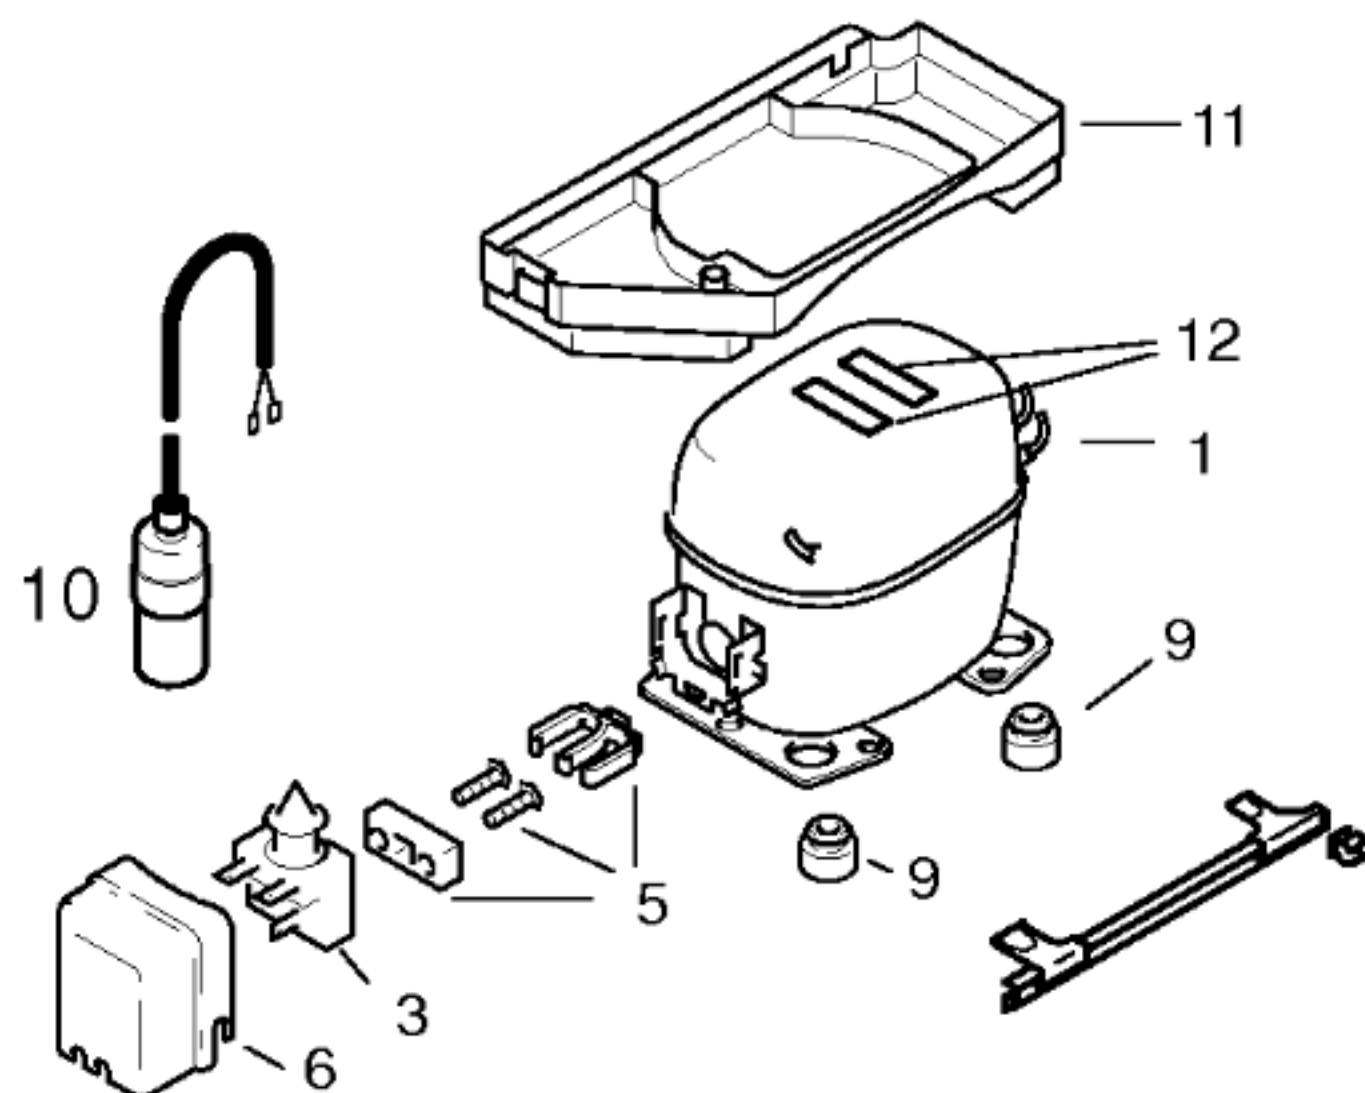

	V01	V02	
Pos.	Aspera NBT 1112Y	Danfoss NLY 9K	
1	14 1840	14 1951	
2			
3	16 9517	15 1055	
4			
5	16 8903	15 0760	
6	16 8902	15 1072	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10		16 5852	
11	26 6624	08 4744	
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Aspera NBT1112Y 1503	Danfoss NLY 9K 1512	
Typ/Type			
Förderleistung/Delivery/Débit	l/h		
Anlaufstrom/Starting current/Cour de démarrage	A	8,3	
Widerstand/Resistance/Résistance Ha/main/prin	W	16,0	
Hi/aux	W	15,1	
Temp.-Regler/Thermostat			
Typ/Type			
Regelstellung/Position			
Schaltwerte/Switching values	"warm"		
Valeurs de commutation	"kalt"		
	"alarm"		
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	85	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	W		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	W		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	W		
Spannung/Voltage/Tension	V		

* siehe Typenschild