




NEFF Herde und Kücheneinrichtungen

Elektroherd 1424/11 F
1424/11 LF

E-Nr. 11 1424 1201/1231
E-Nr. 11 1424 1301/1331

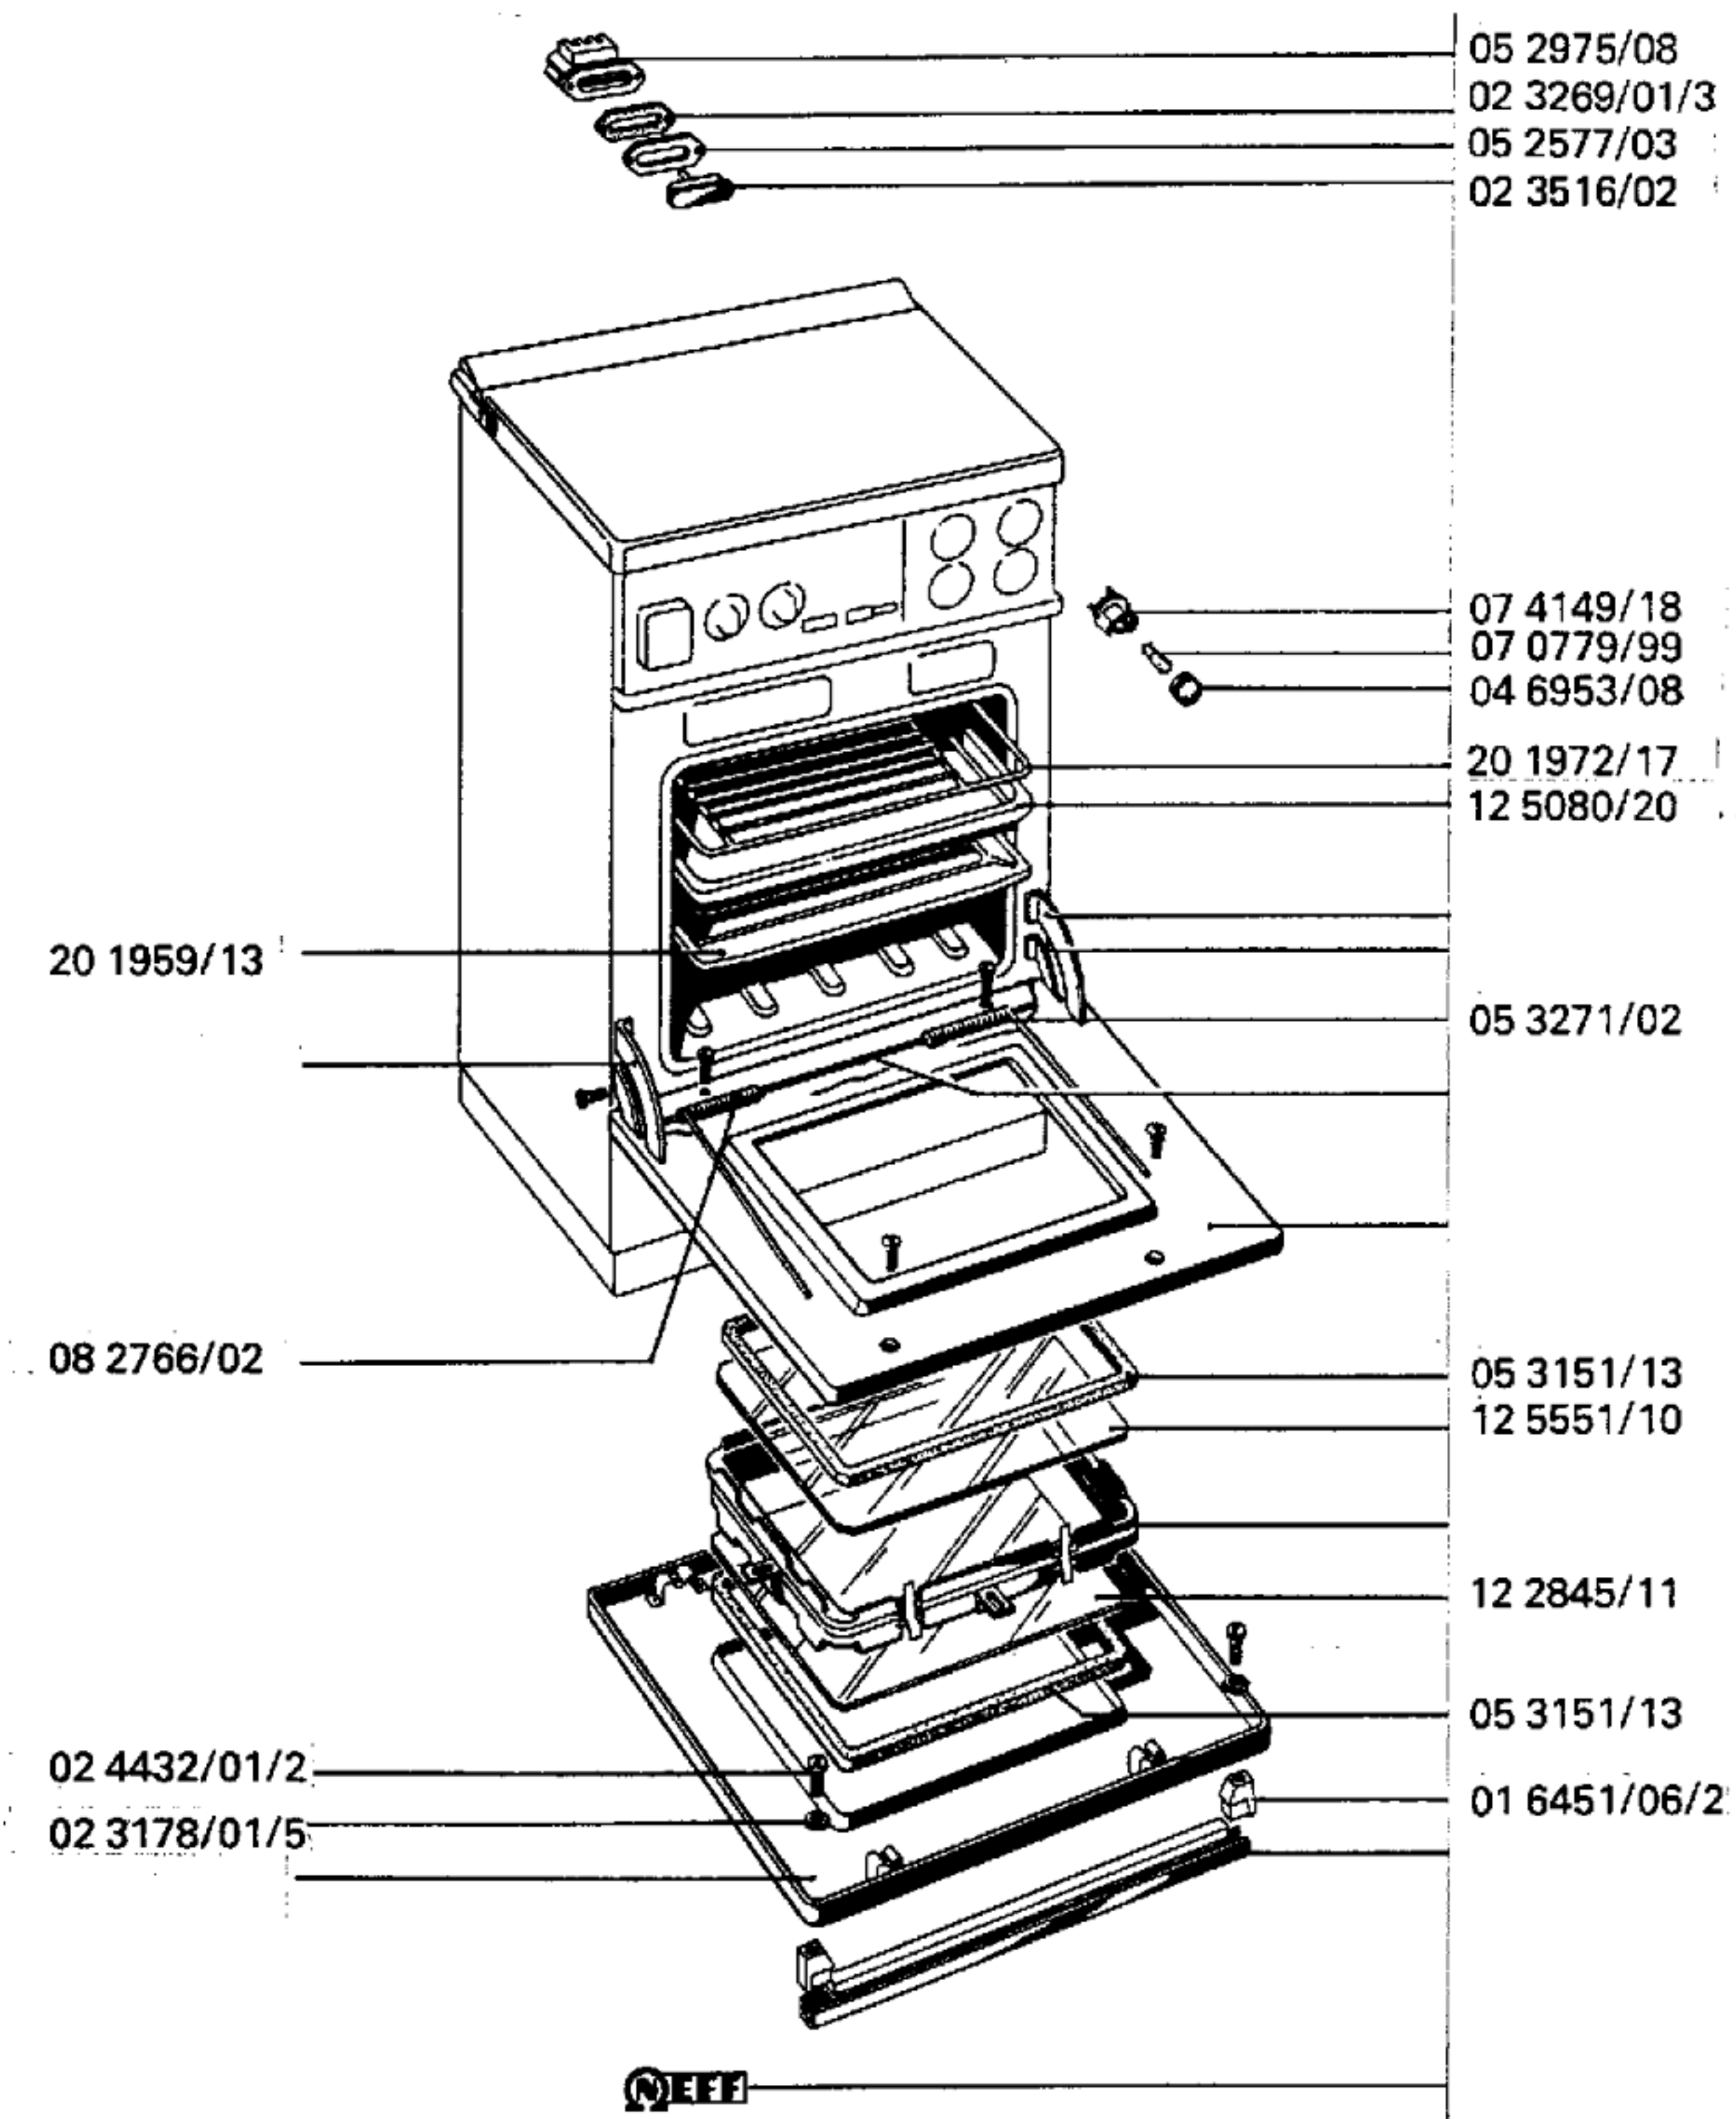



Herde und Kücheneinrichtungen

Elektroherd

1424/11 F

1424/11 LF

E-Nr. 11 1424 1201/1231

E-Nr. 11 1424 1301/1331

05 2445/01

12 5522/08¹⁾
07 4358/15²⁾
02 3658/01/3

12 2233/14

20 1506/20

02 2880/01/3
02 3024/01/5


05 2962/01/5

08 1756/26

02 5038/01/3

1) 220 V

2) 380 V

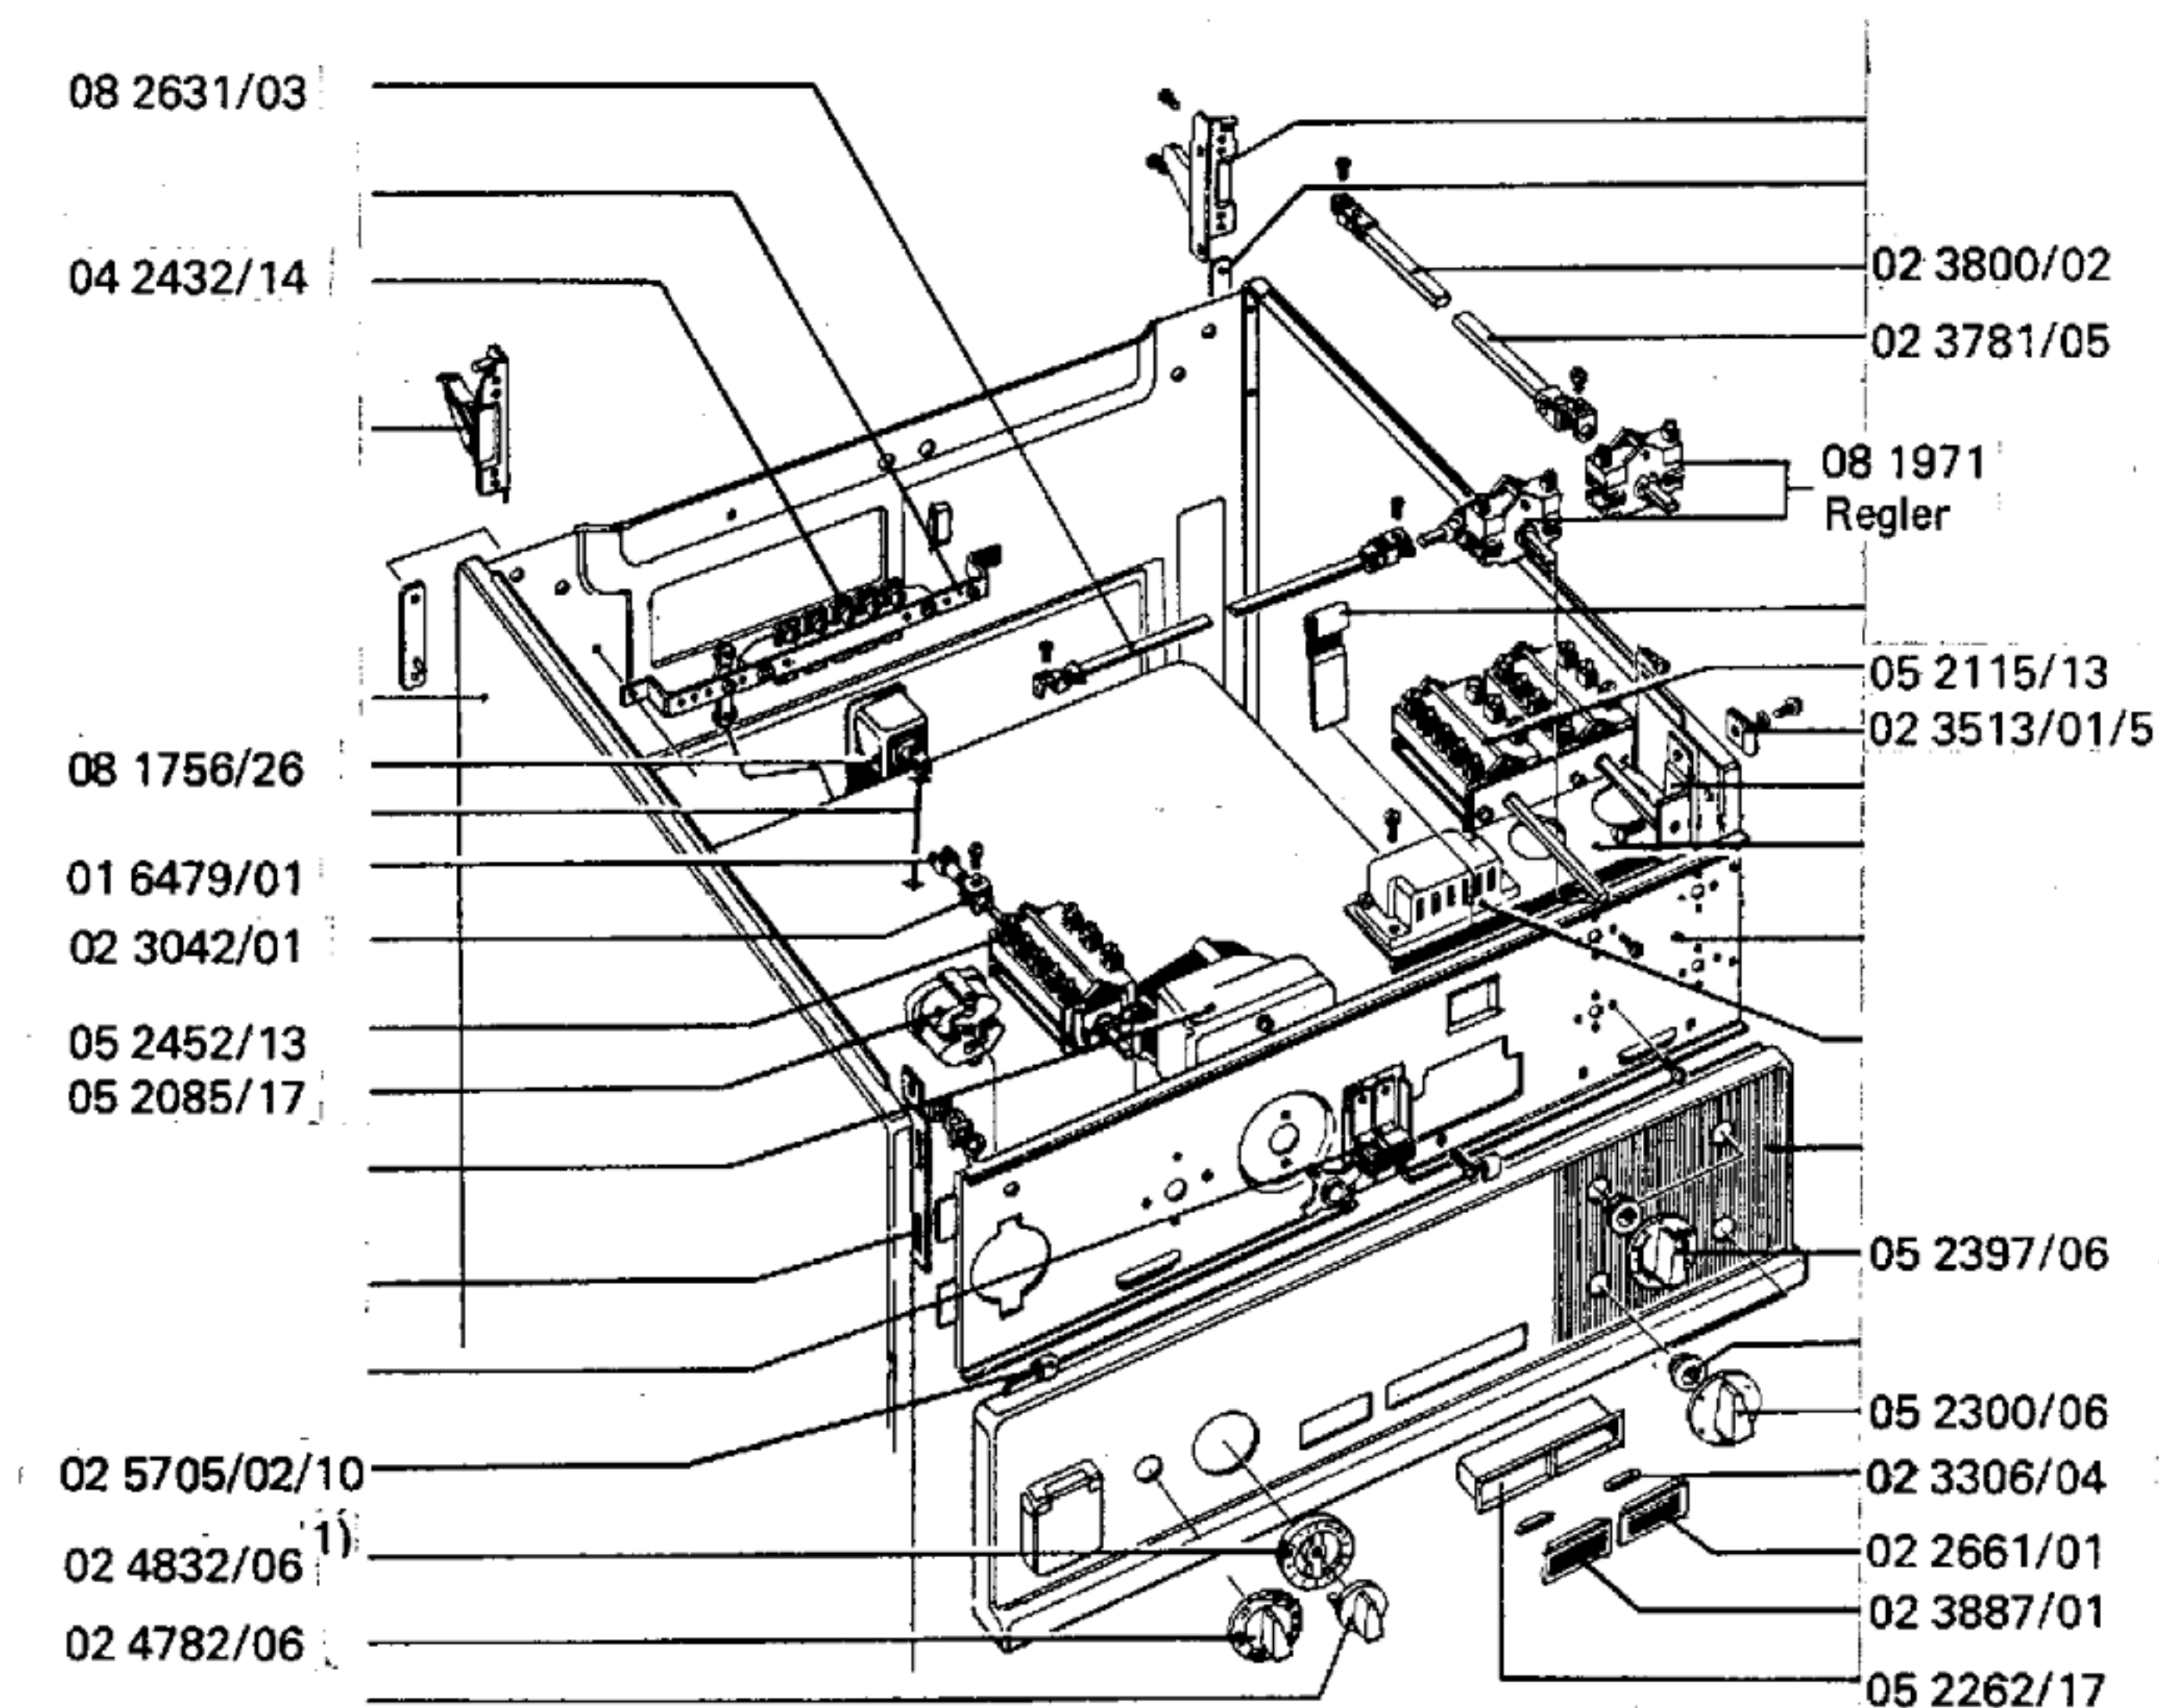

1) f. 1424/11 UF

Teile nicht im Bild

02 5000/01 | Sicherung: 10 A


01 8332/03/20 Feder f. Schalterknebel



Herde und Kücheneinrichtungen

Elektroherd 1424/11 F
1424/11 UF

E-Nr. 11 1424 1201/1231
E-Nr. 11 1424 1301/1331

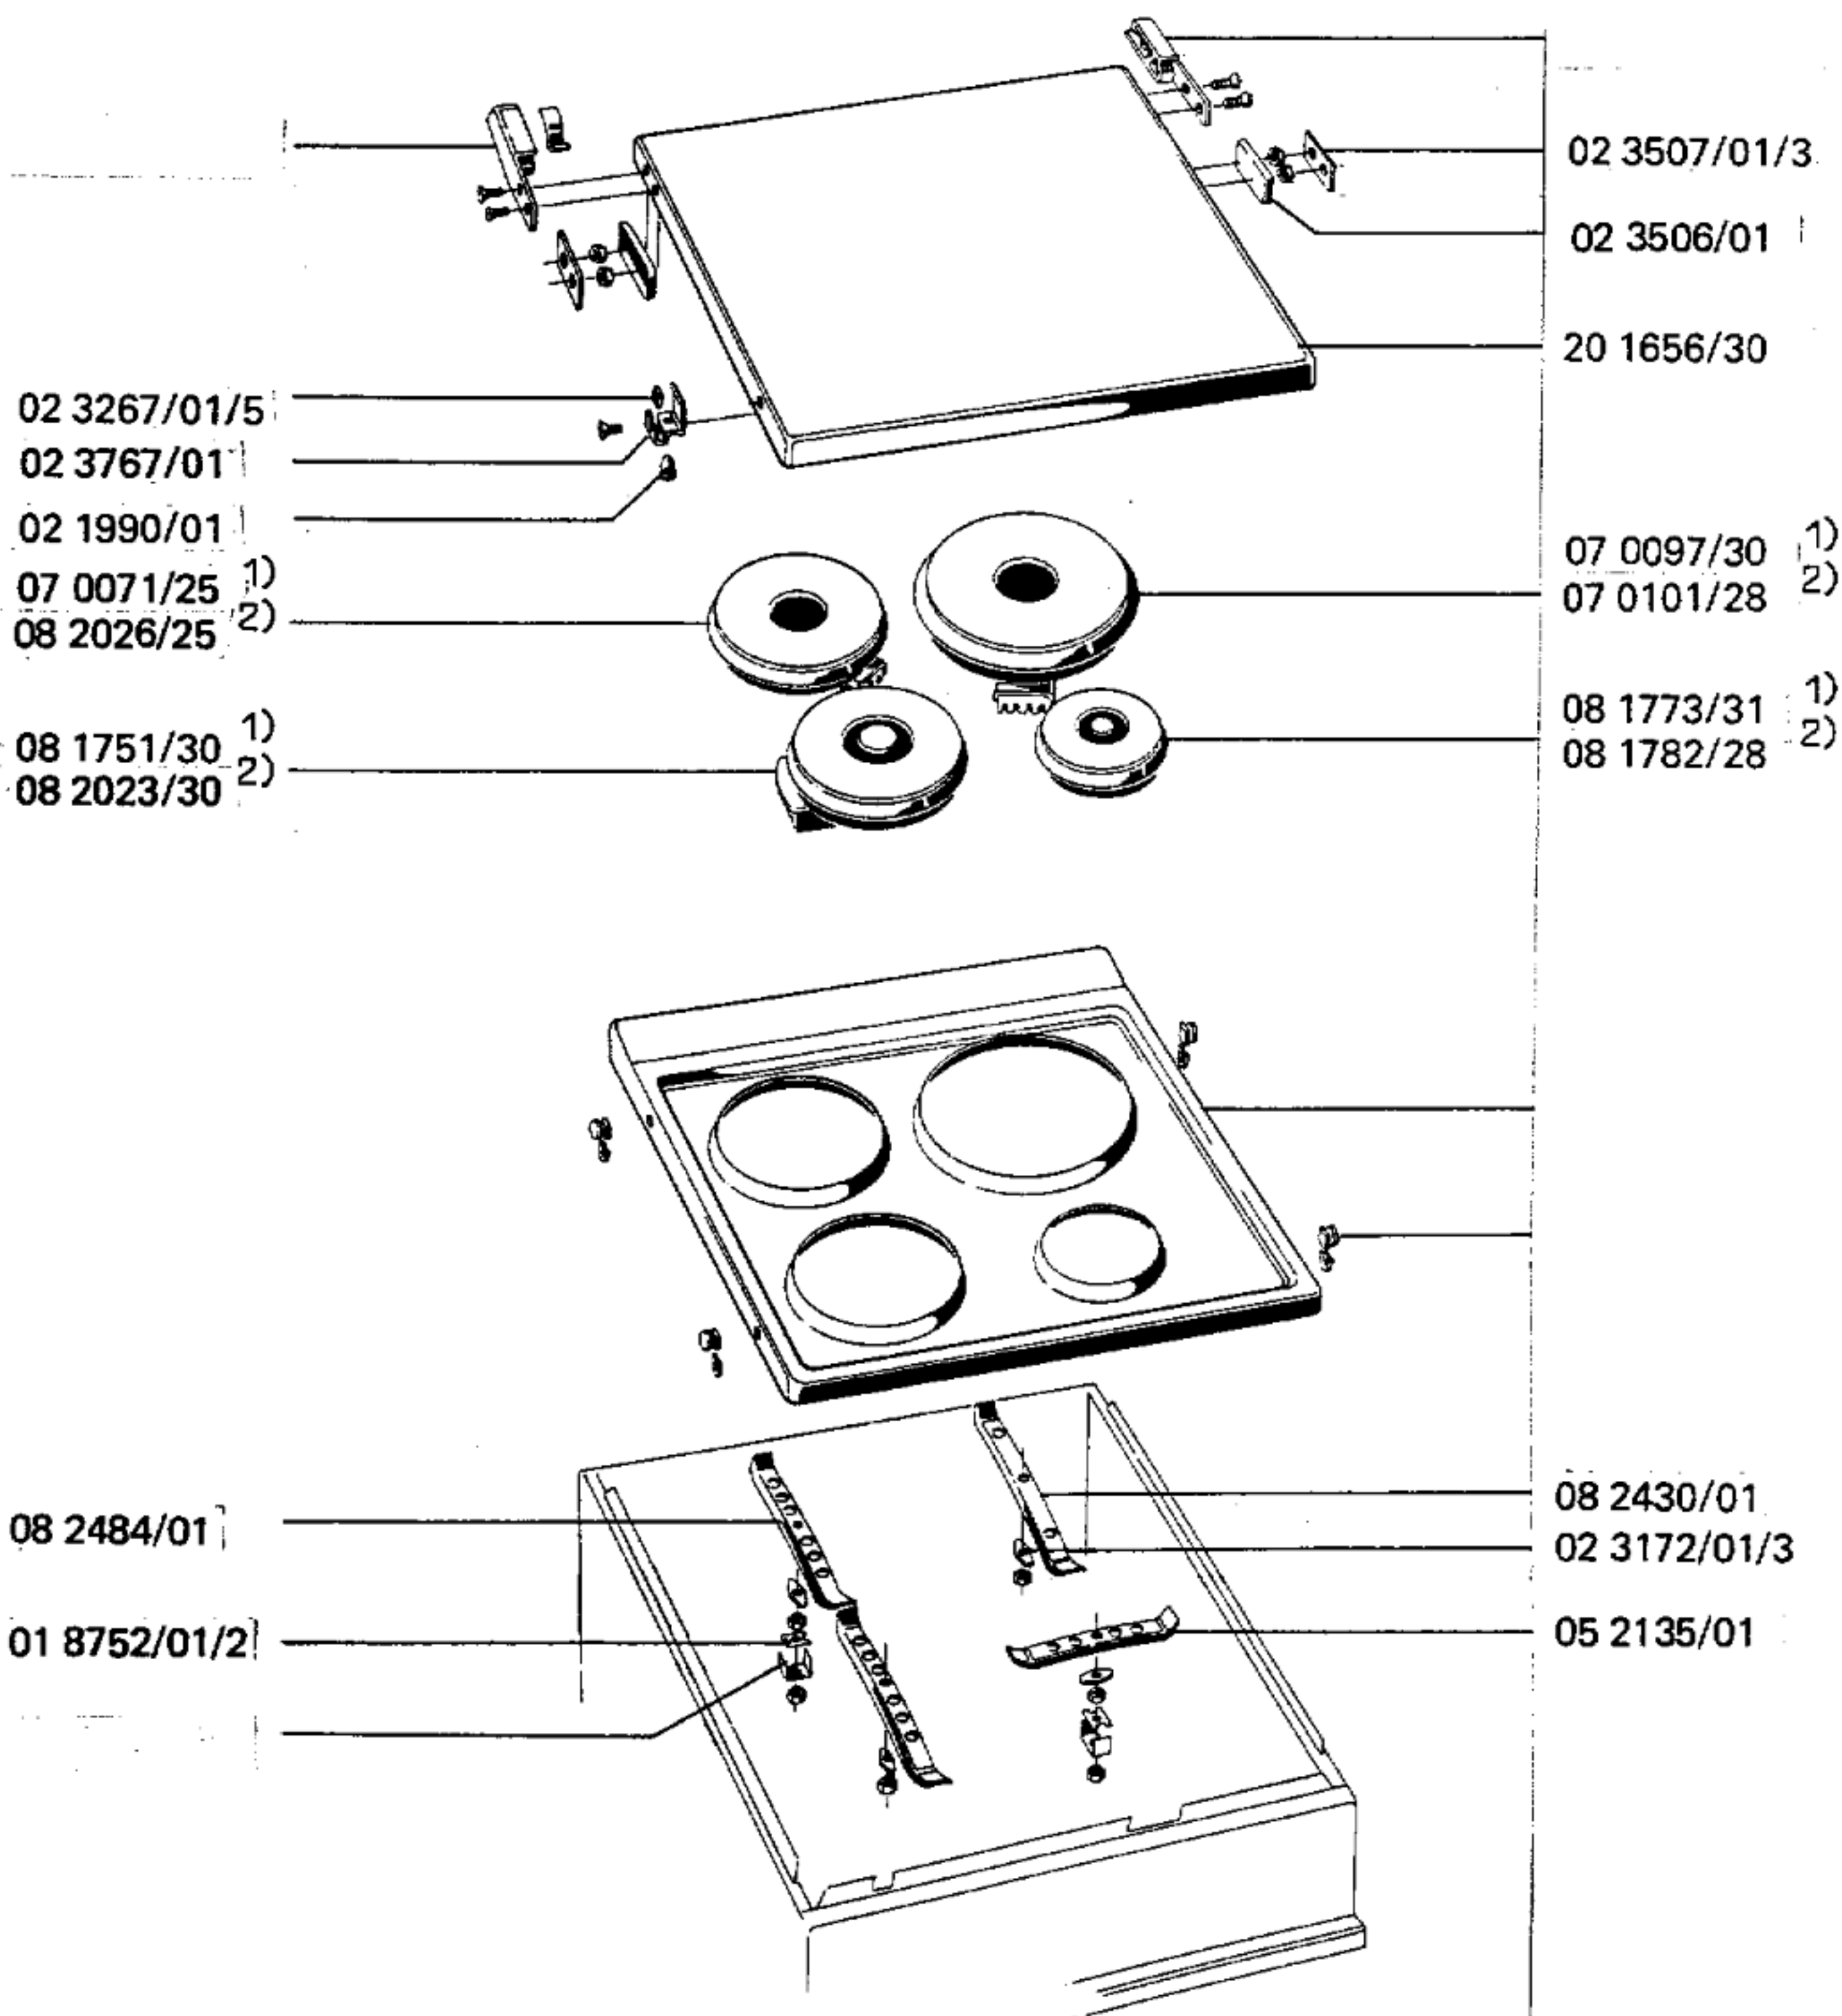

1) f. 220 V
2) f. 380 V