



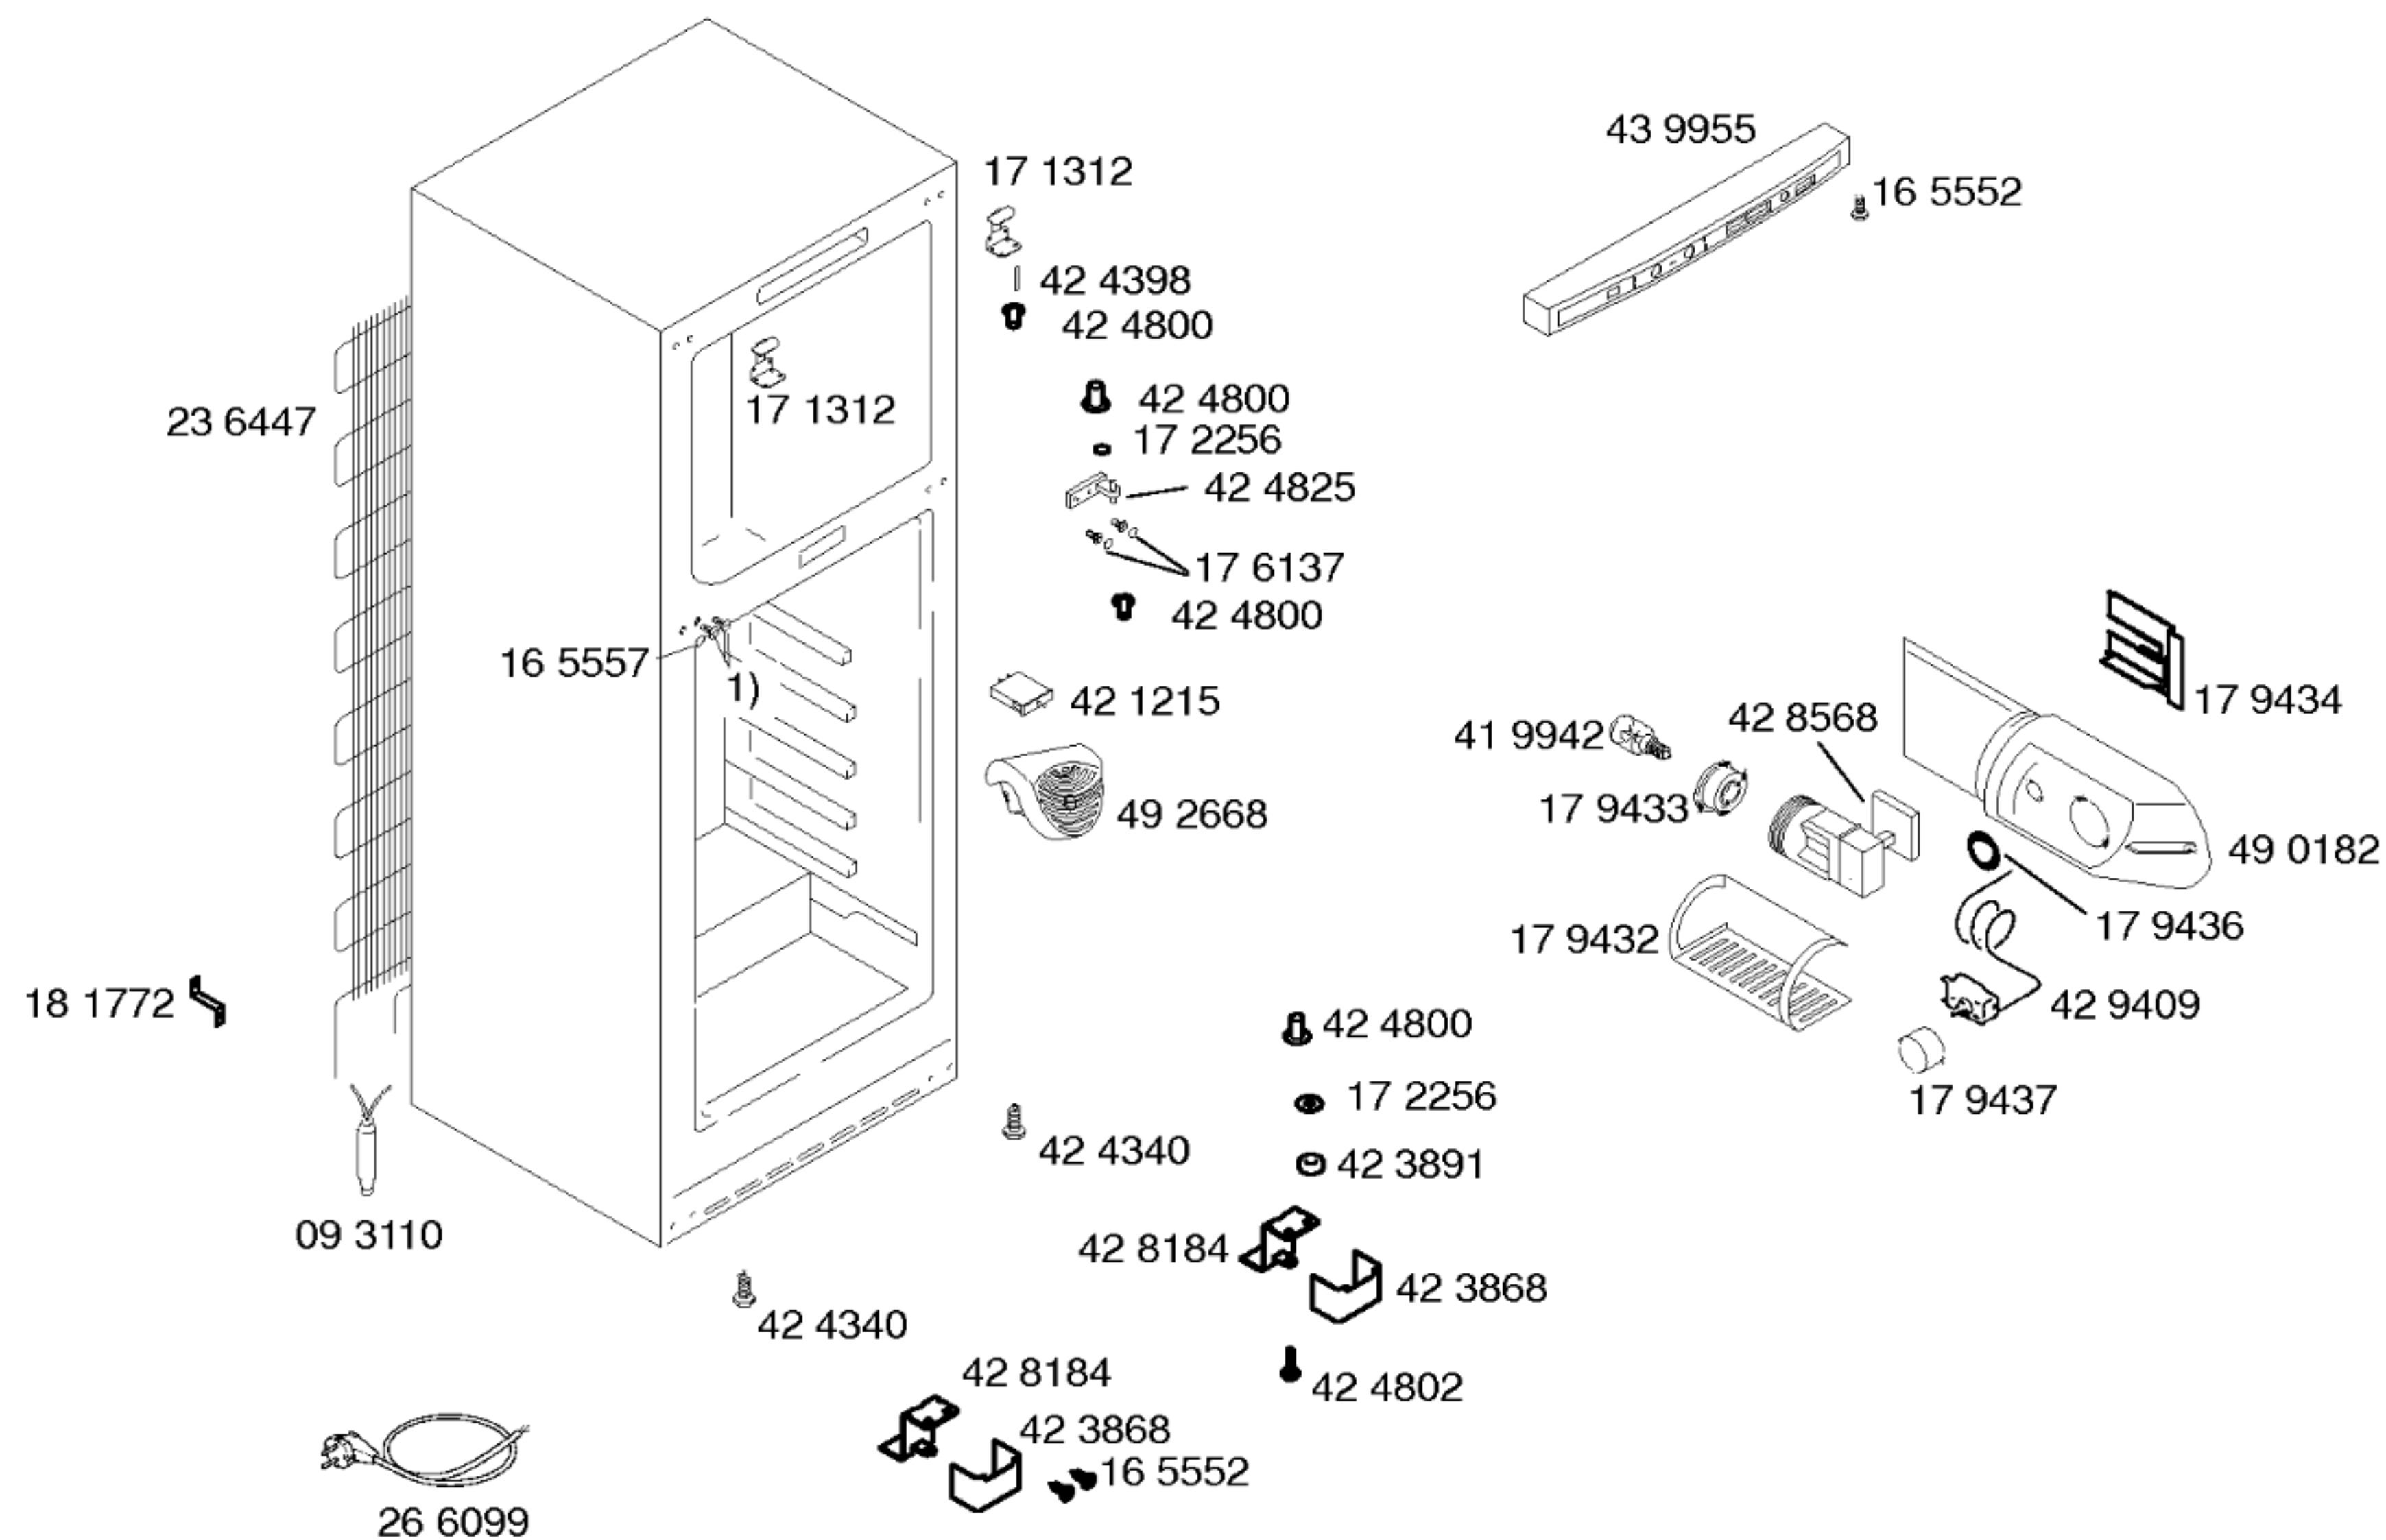


Gebrauchsanweisung
59 8361

(FR)

1) 16 5552
Thermometer 4°C
41 7877

43 4938

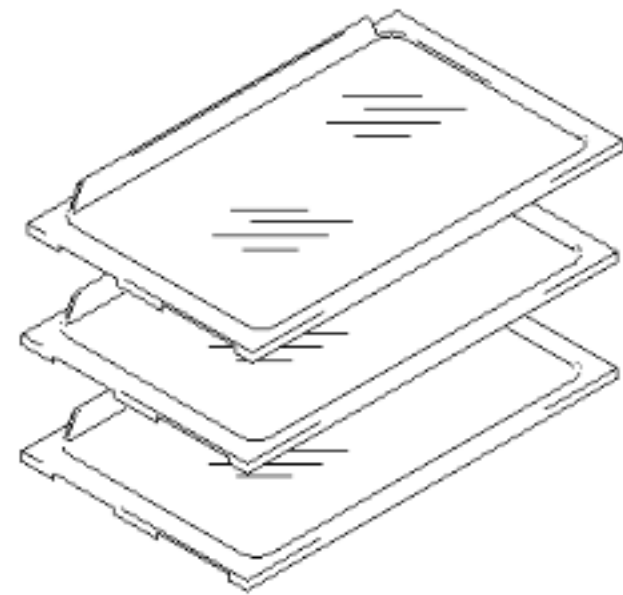
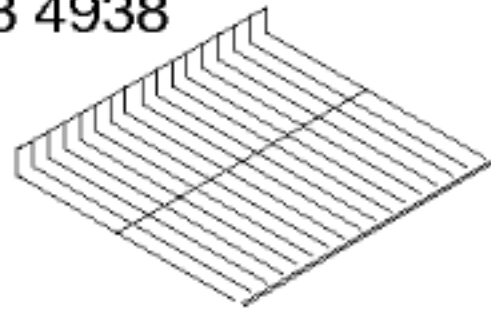


43 9138

43 9138

43 9138

43 9155

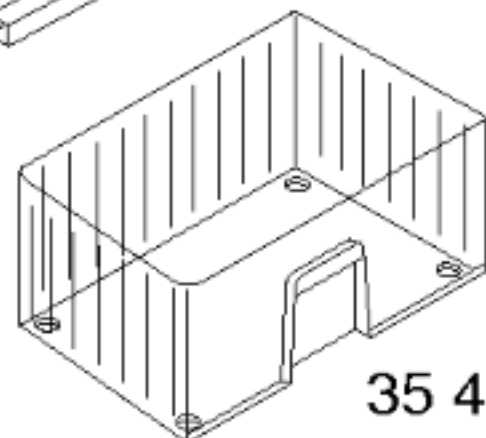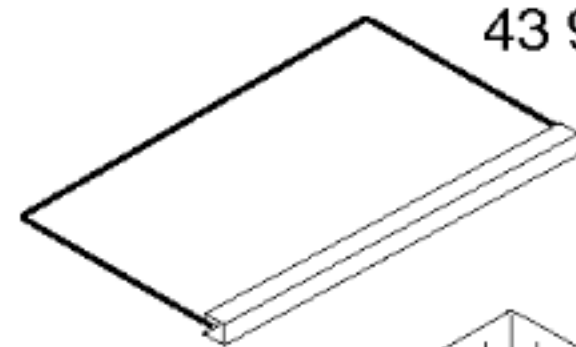


35 4327


26 6146




44 4127

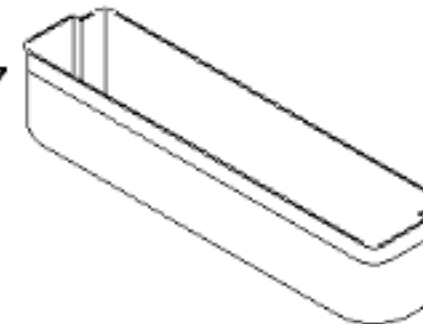


44 4127

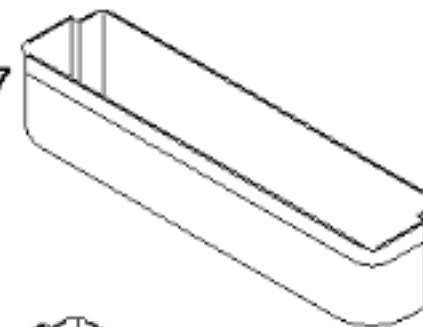

44 4841

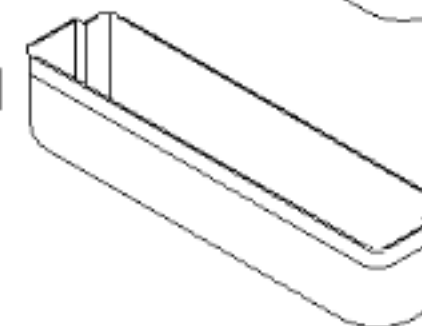

47 3886

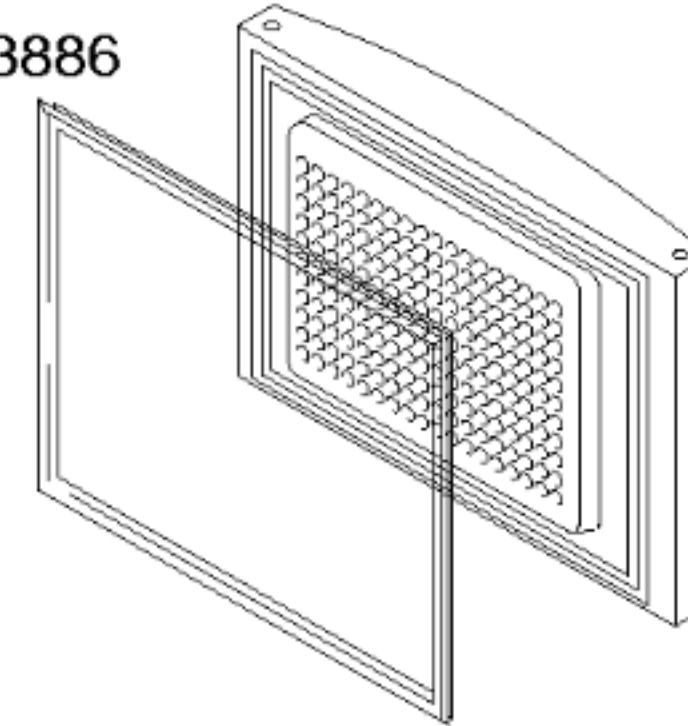


47 3374

35 6211




24 2236

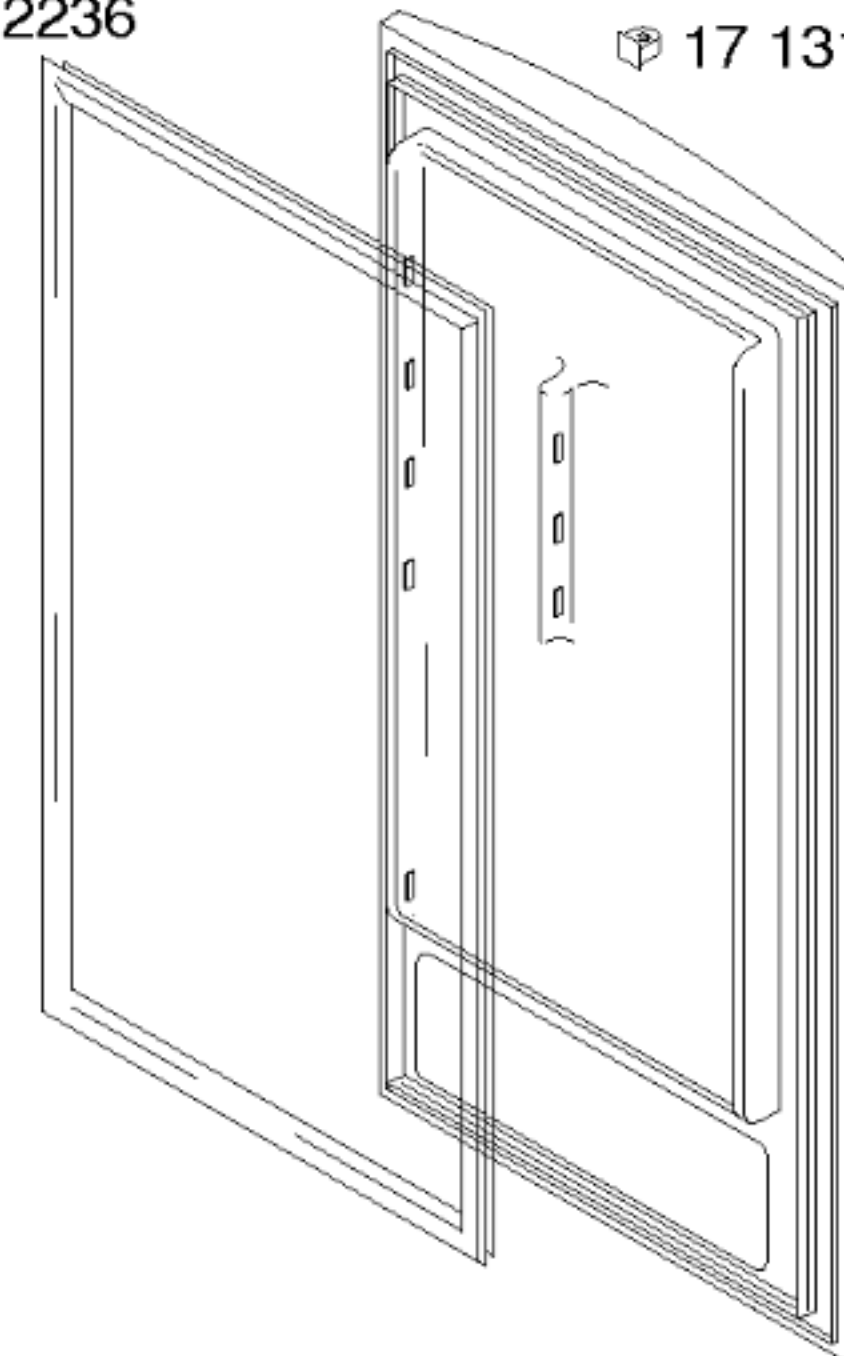

17 1319

24 1863

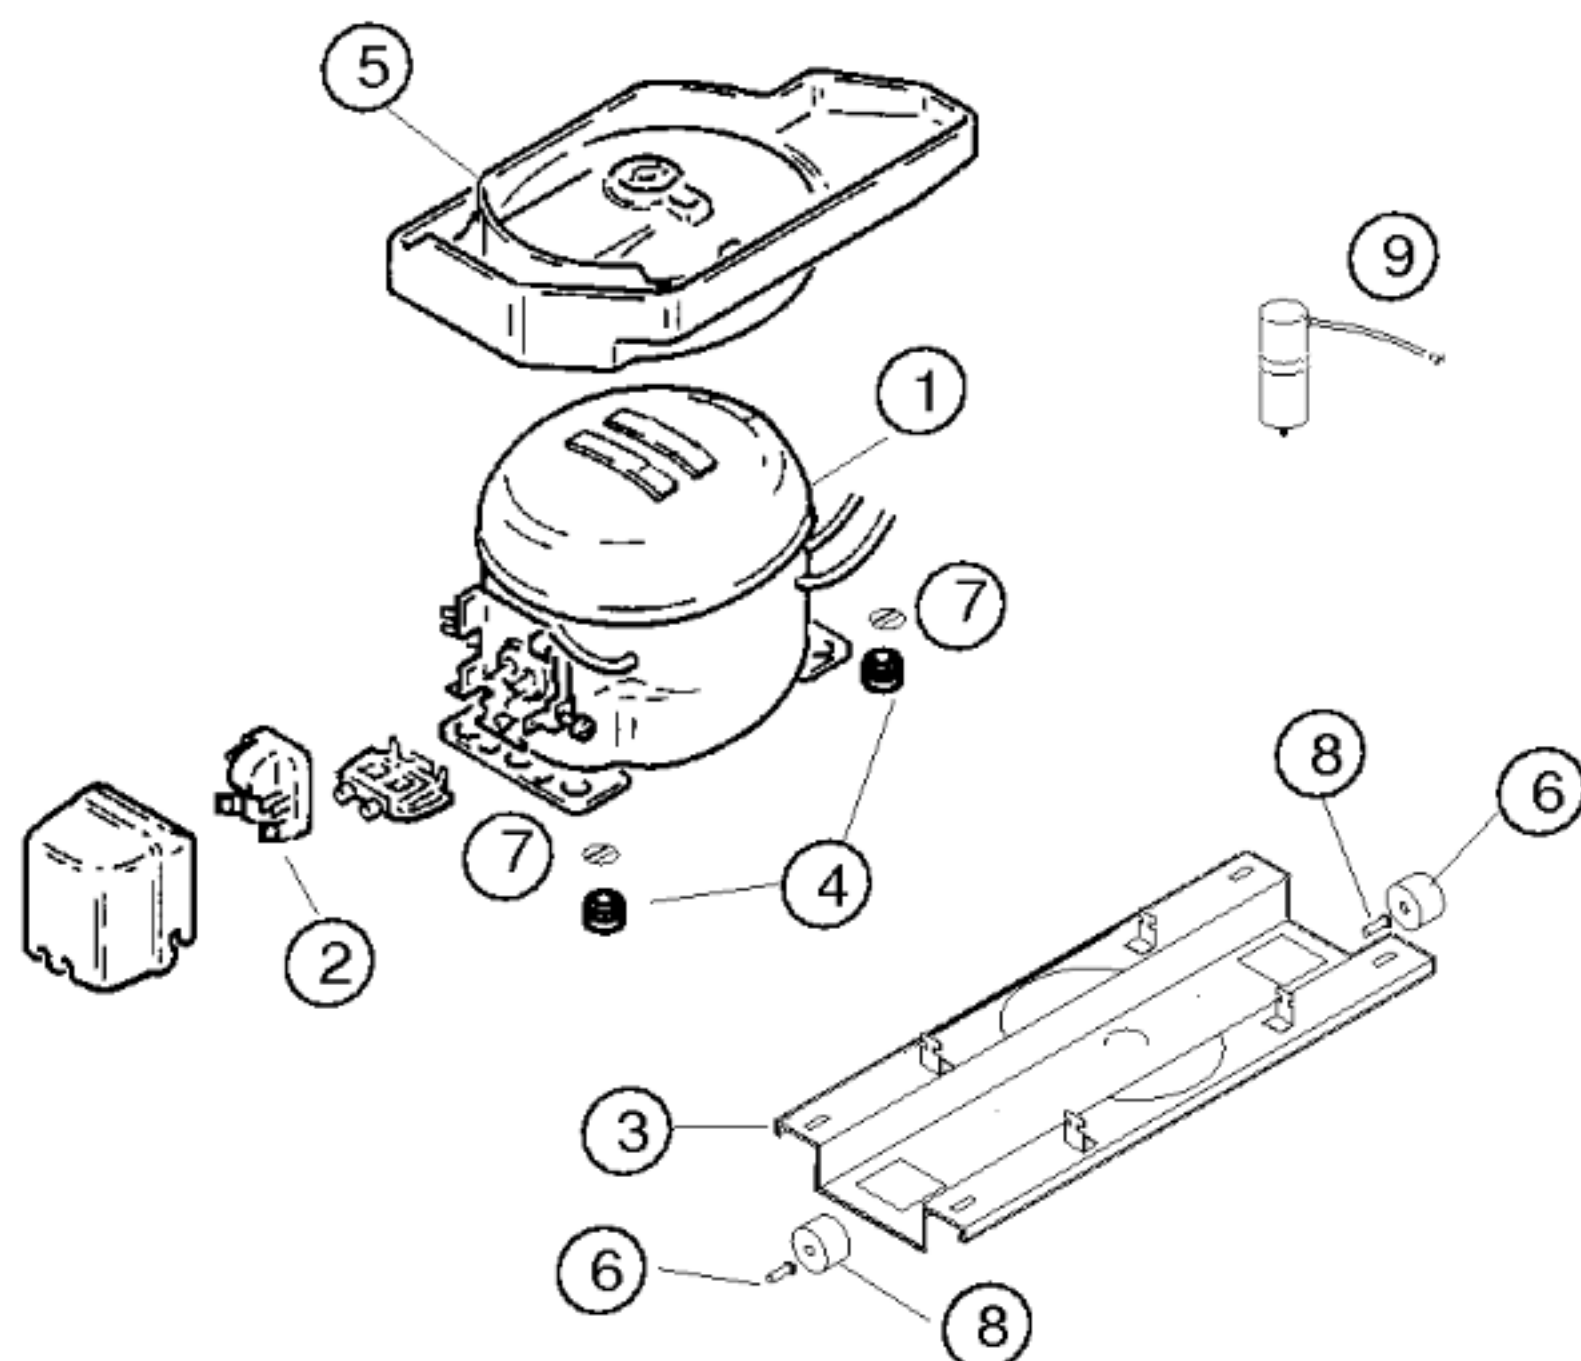

Pos.	Danfoss		
	NLX11KK		
1	14 3930		
2	42 6296		
3	35 4158		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	18 1014		
9	17 4093		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör		Danfoss	
Typ/Type/Tip		NLX11KK	
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A		
Widerstand/Resistance/Rezistans Ha/Hi/aux.	Ohm		
Temp.Reyler/Thermostat/Termostat			
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma °C	4.5 +4.5	
Valeurs de commutation/Termostat degeri	..aus"/kapama	-31 -18	
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari	R600a g	*	
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız