




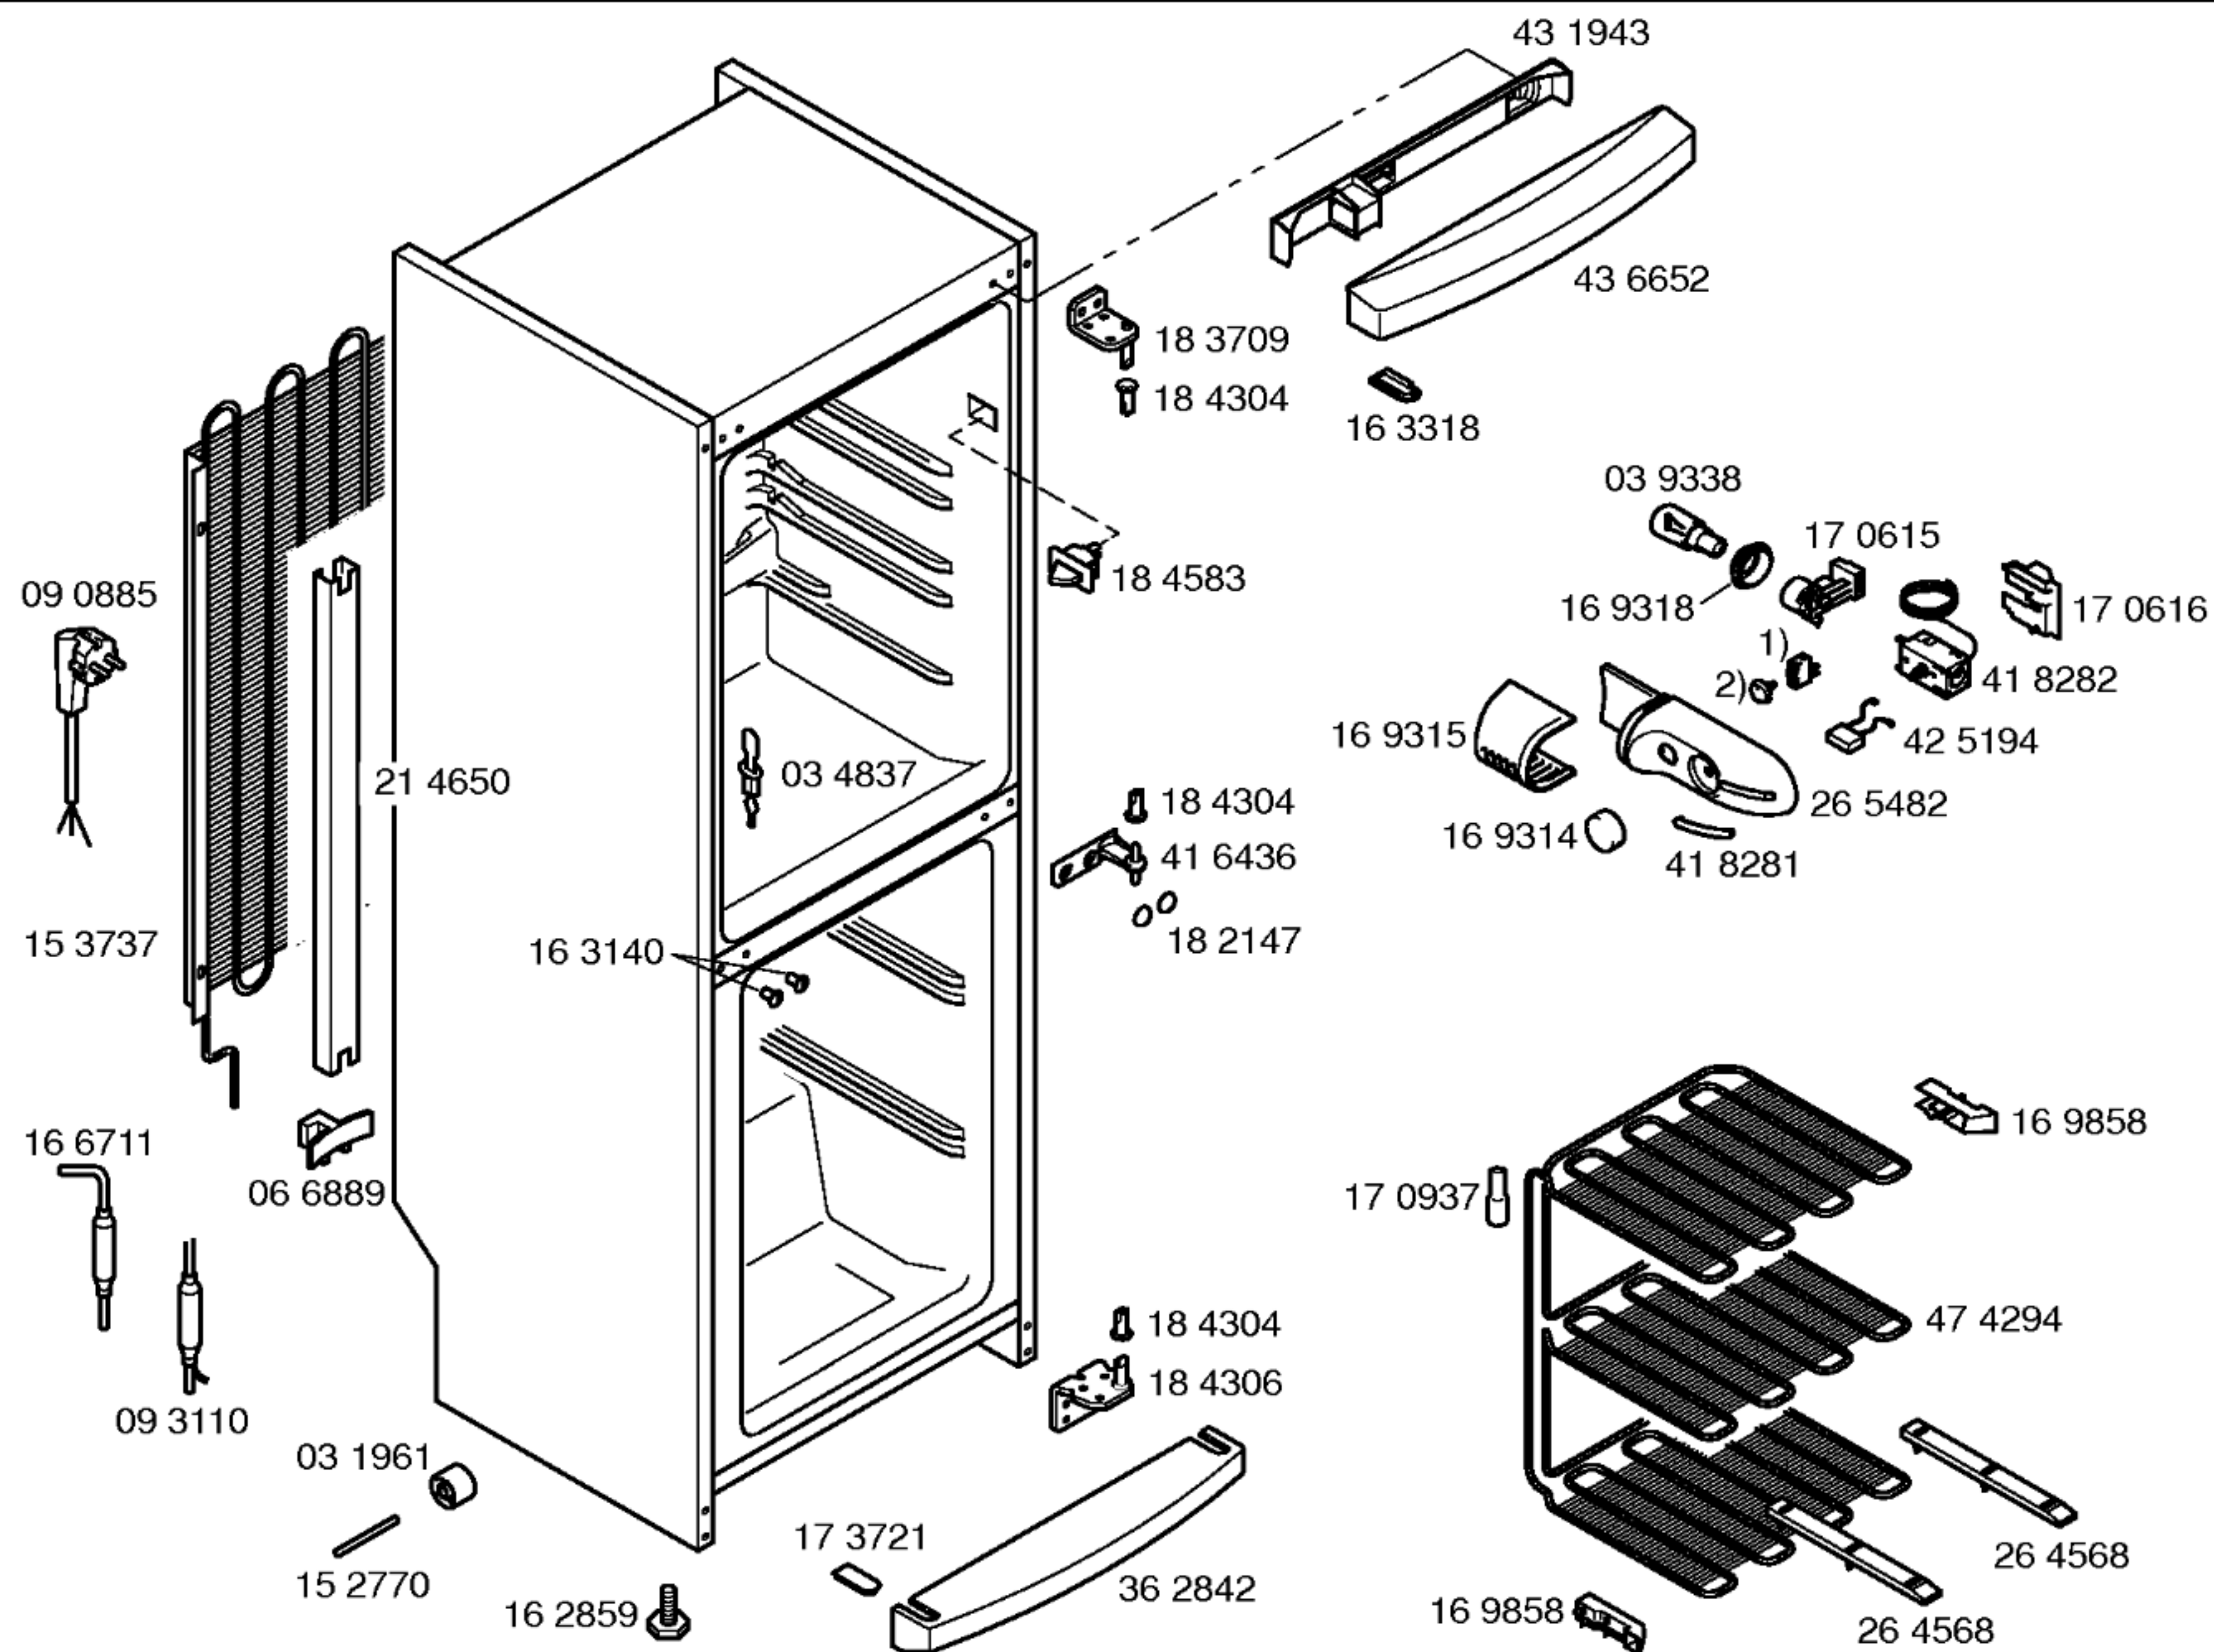

Gebrauchsanweisung
58 8055
(de,en)

1) 17 0617
2) 17 3206

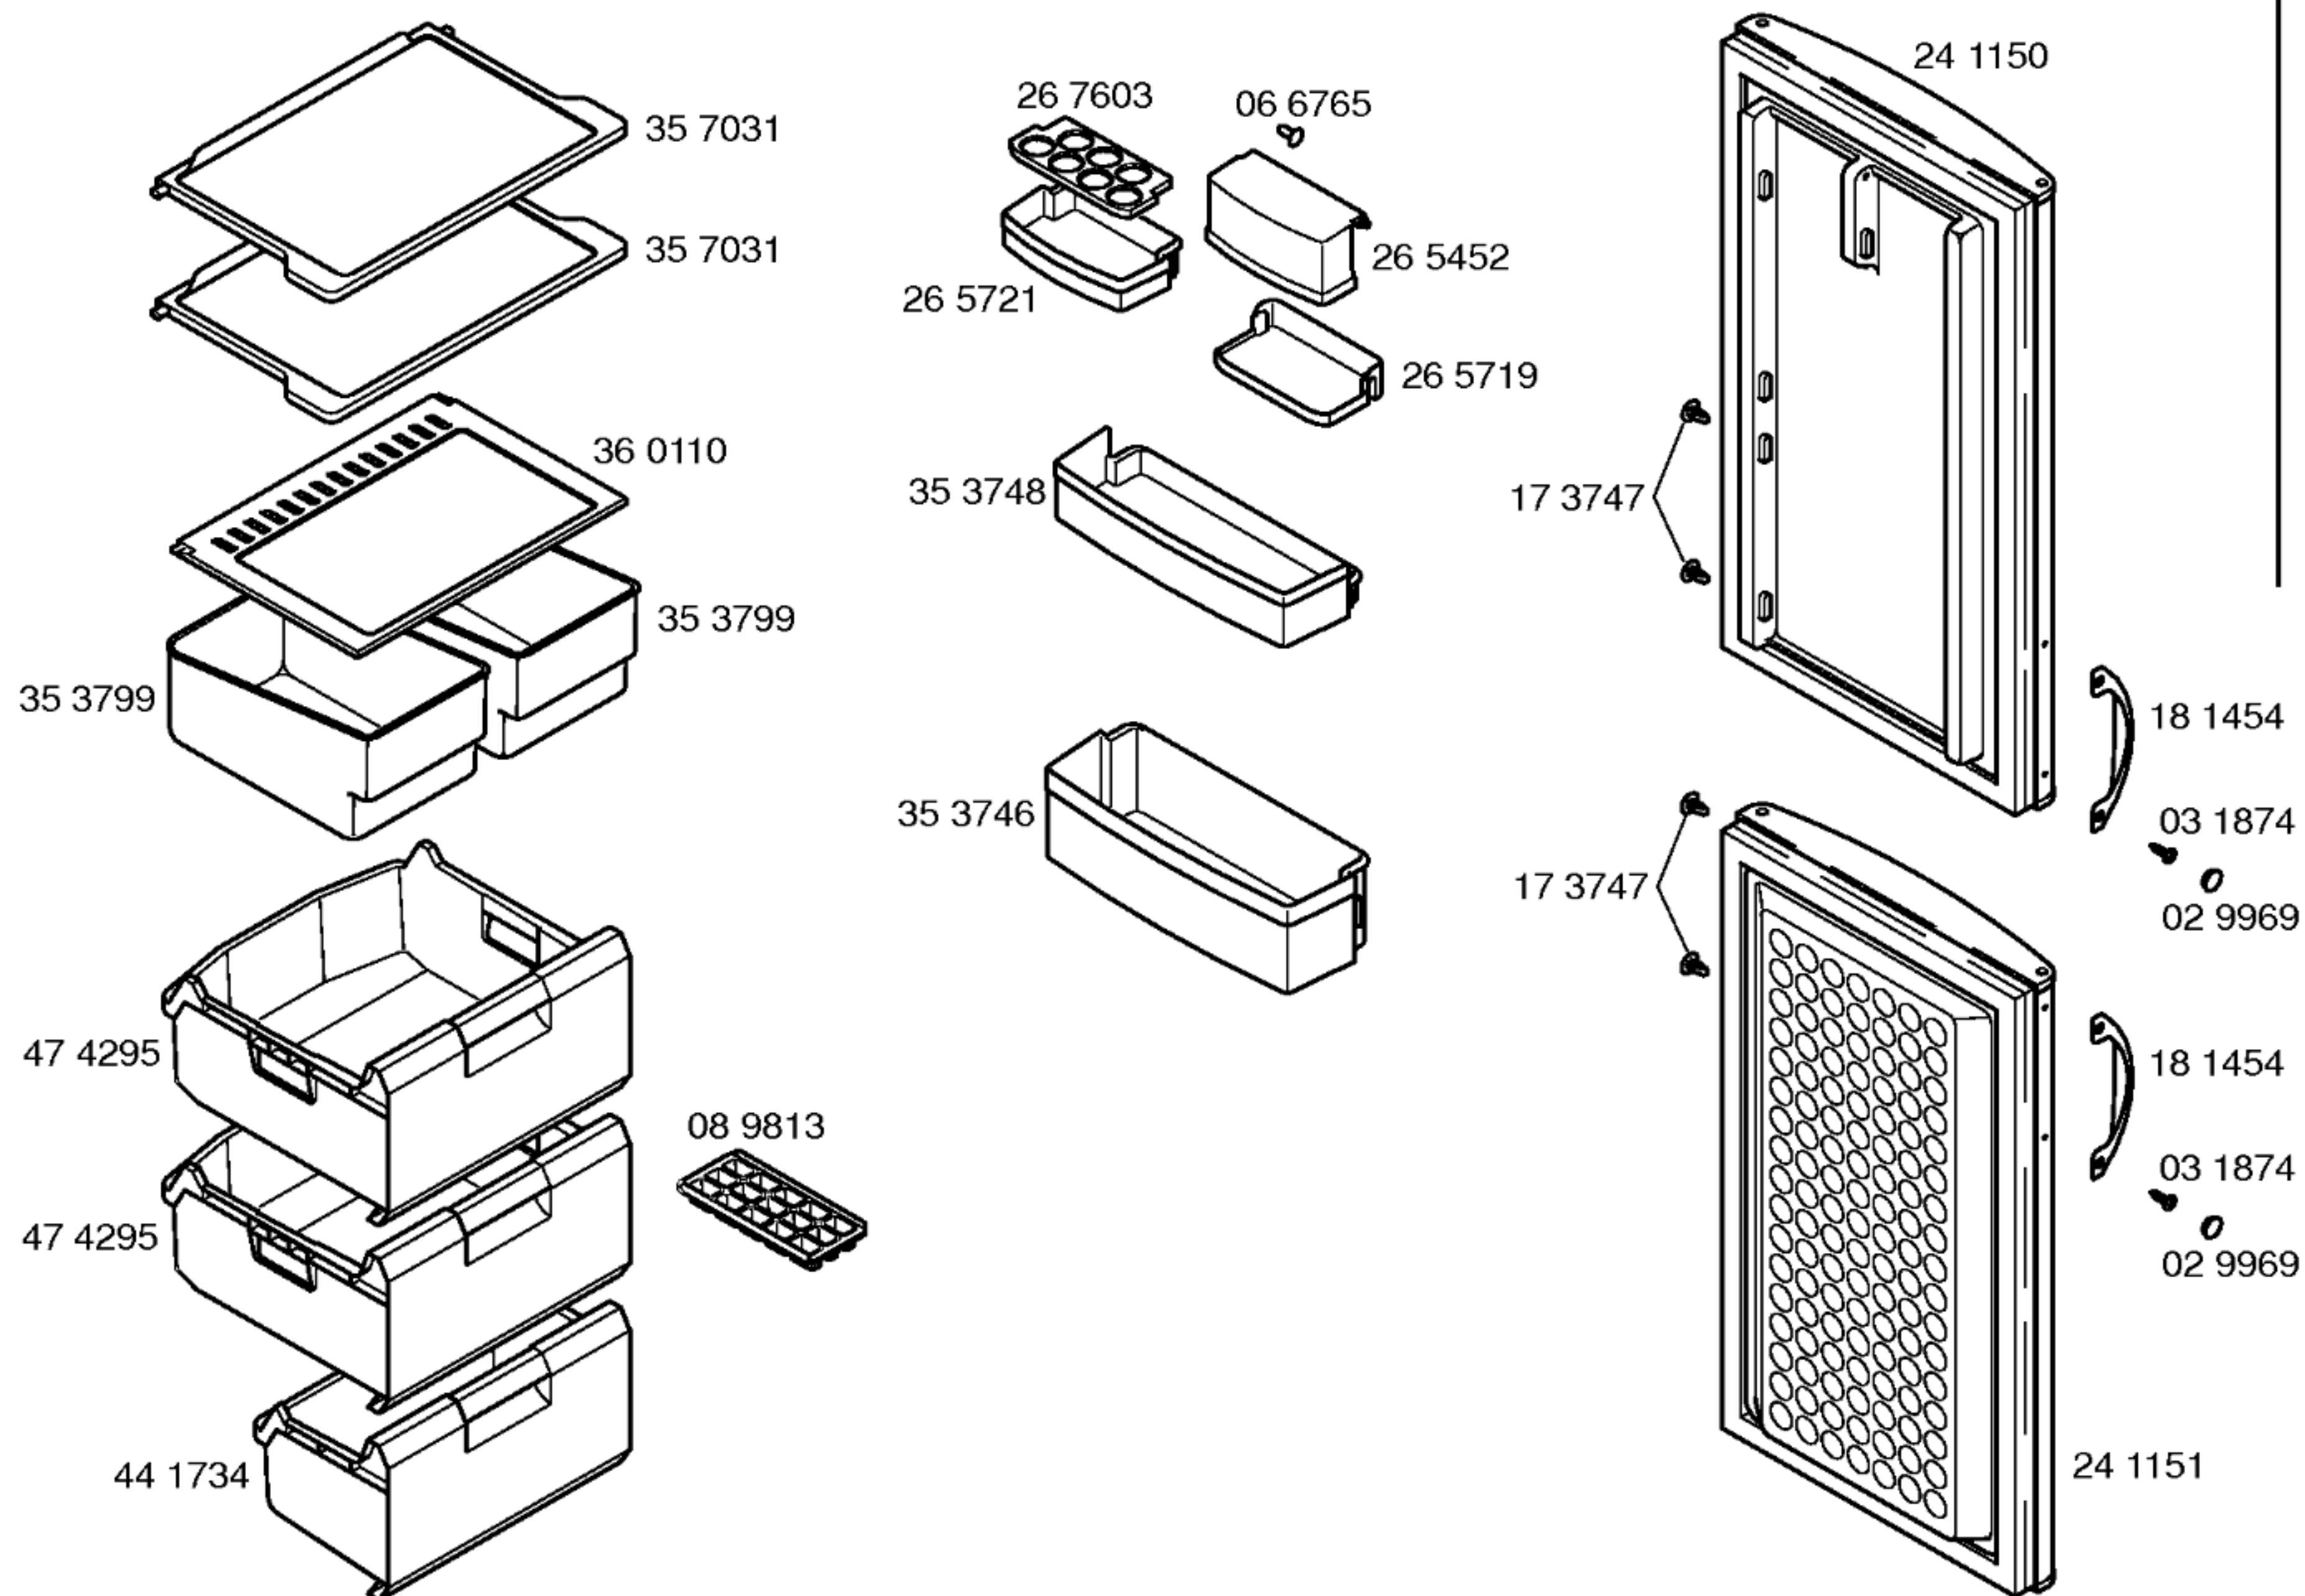

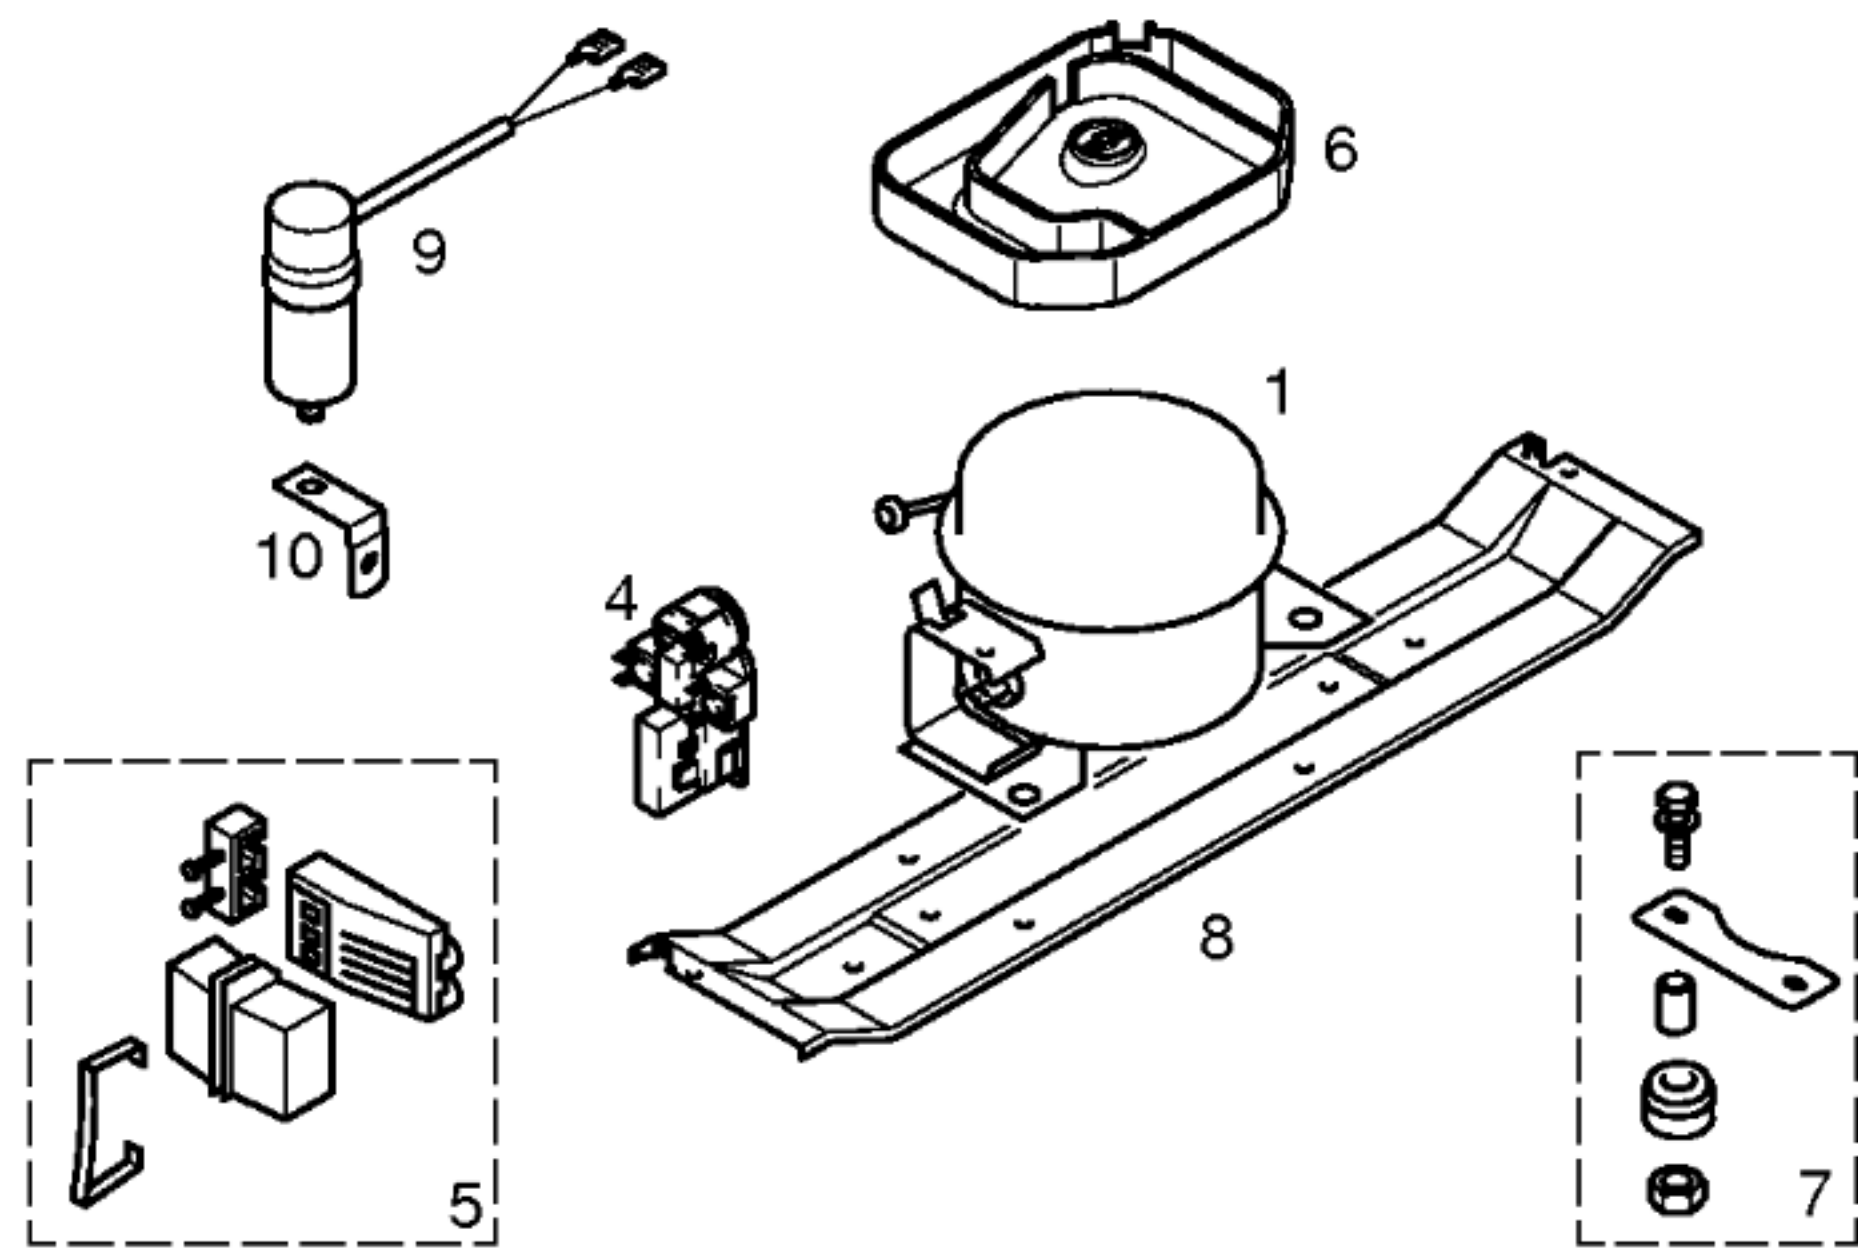

Pos.	Matsushita			
	DC110E			
1	14 2002			
2				
3				
4	17 4431			
5				
6	48 1077			
7	05 0166			
8	43 2652			
9	18 1236			
10	18 1237			
11				
12				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS				
Verdichter/Compressor/Compresseur/Compresor	Matsushita			
Typ/Type/Tipo	DC110E			
Förderleistung/Delivery/Debit/Aspiración l/h				
Anlaufstromm/Starting current/Cour.démarrage/Int.arranq. A	8,50			
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm	14,19			
Hi/aux. Ohm	12,80			
Temp.Reyler/Thermostat/Termostato	Danfoss			
Typ/Type/Tipo	077B6733			
Reglerstellung/Position/Conexión	MIN. MAX.			
Schaltwerte/Switching values/ ..ein/conex. °C	+5			
Valeurs de commutation/Desconex. ..aus"/descon. °C	-22 -34			
(..abtaven' od) ..alarm' °C				
Füllmenge/Fill. quantily/Charge/Carga R600a. g	*			
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	129			
Heizung/Heater/Chauflage/Resistenc.descong. Ohm				
Widerstand/Resistance/Resistencia W				
Leistung/Power/Puissance/Potencia				
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia Ohm				
Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente				

* Siehe Typenschild / See identification plate / Voir plaquette de caractéristiques / Ver plaqueta de características