


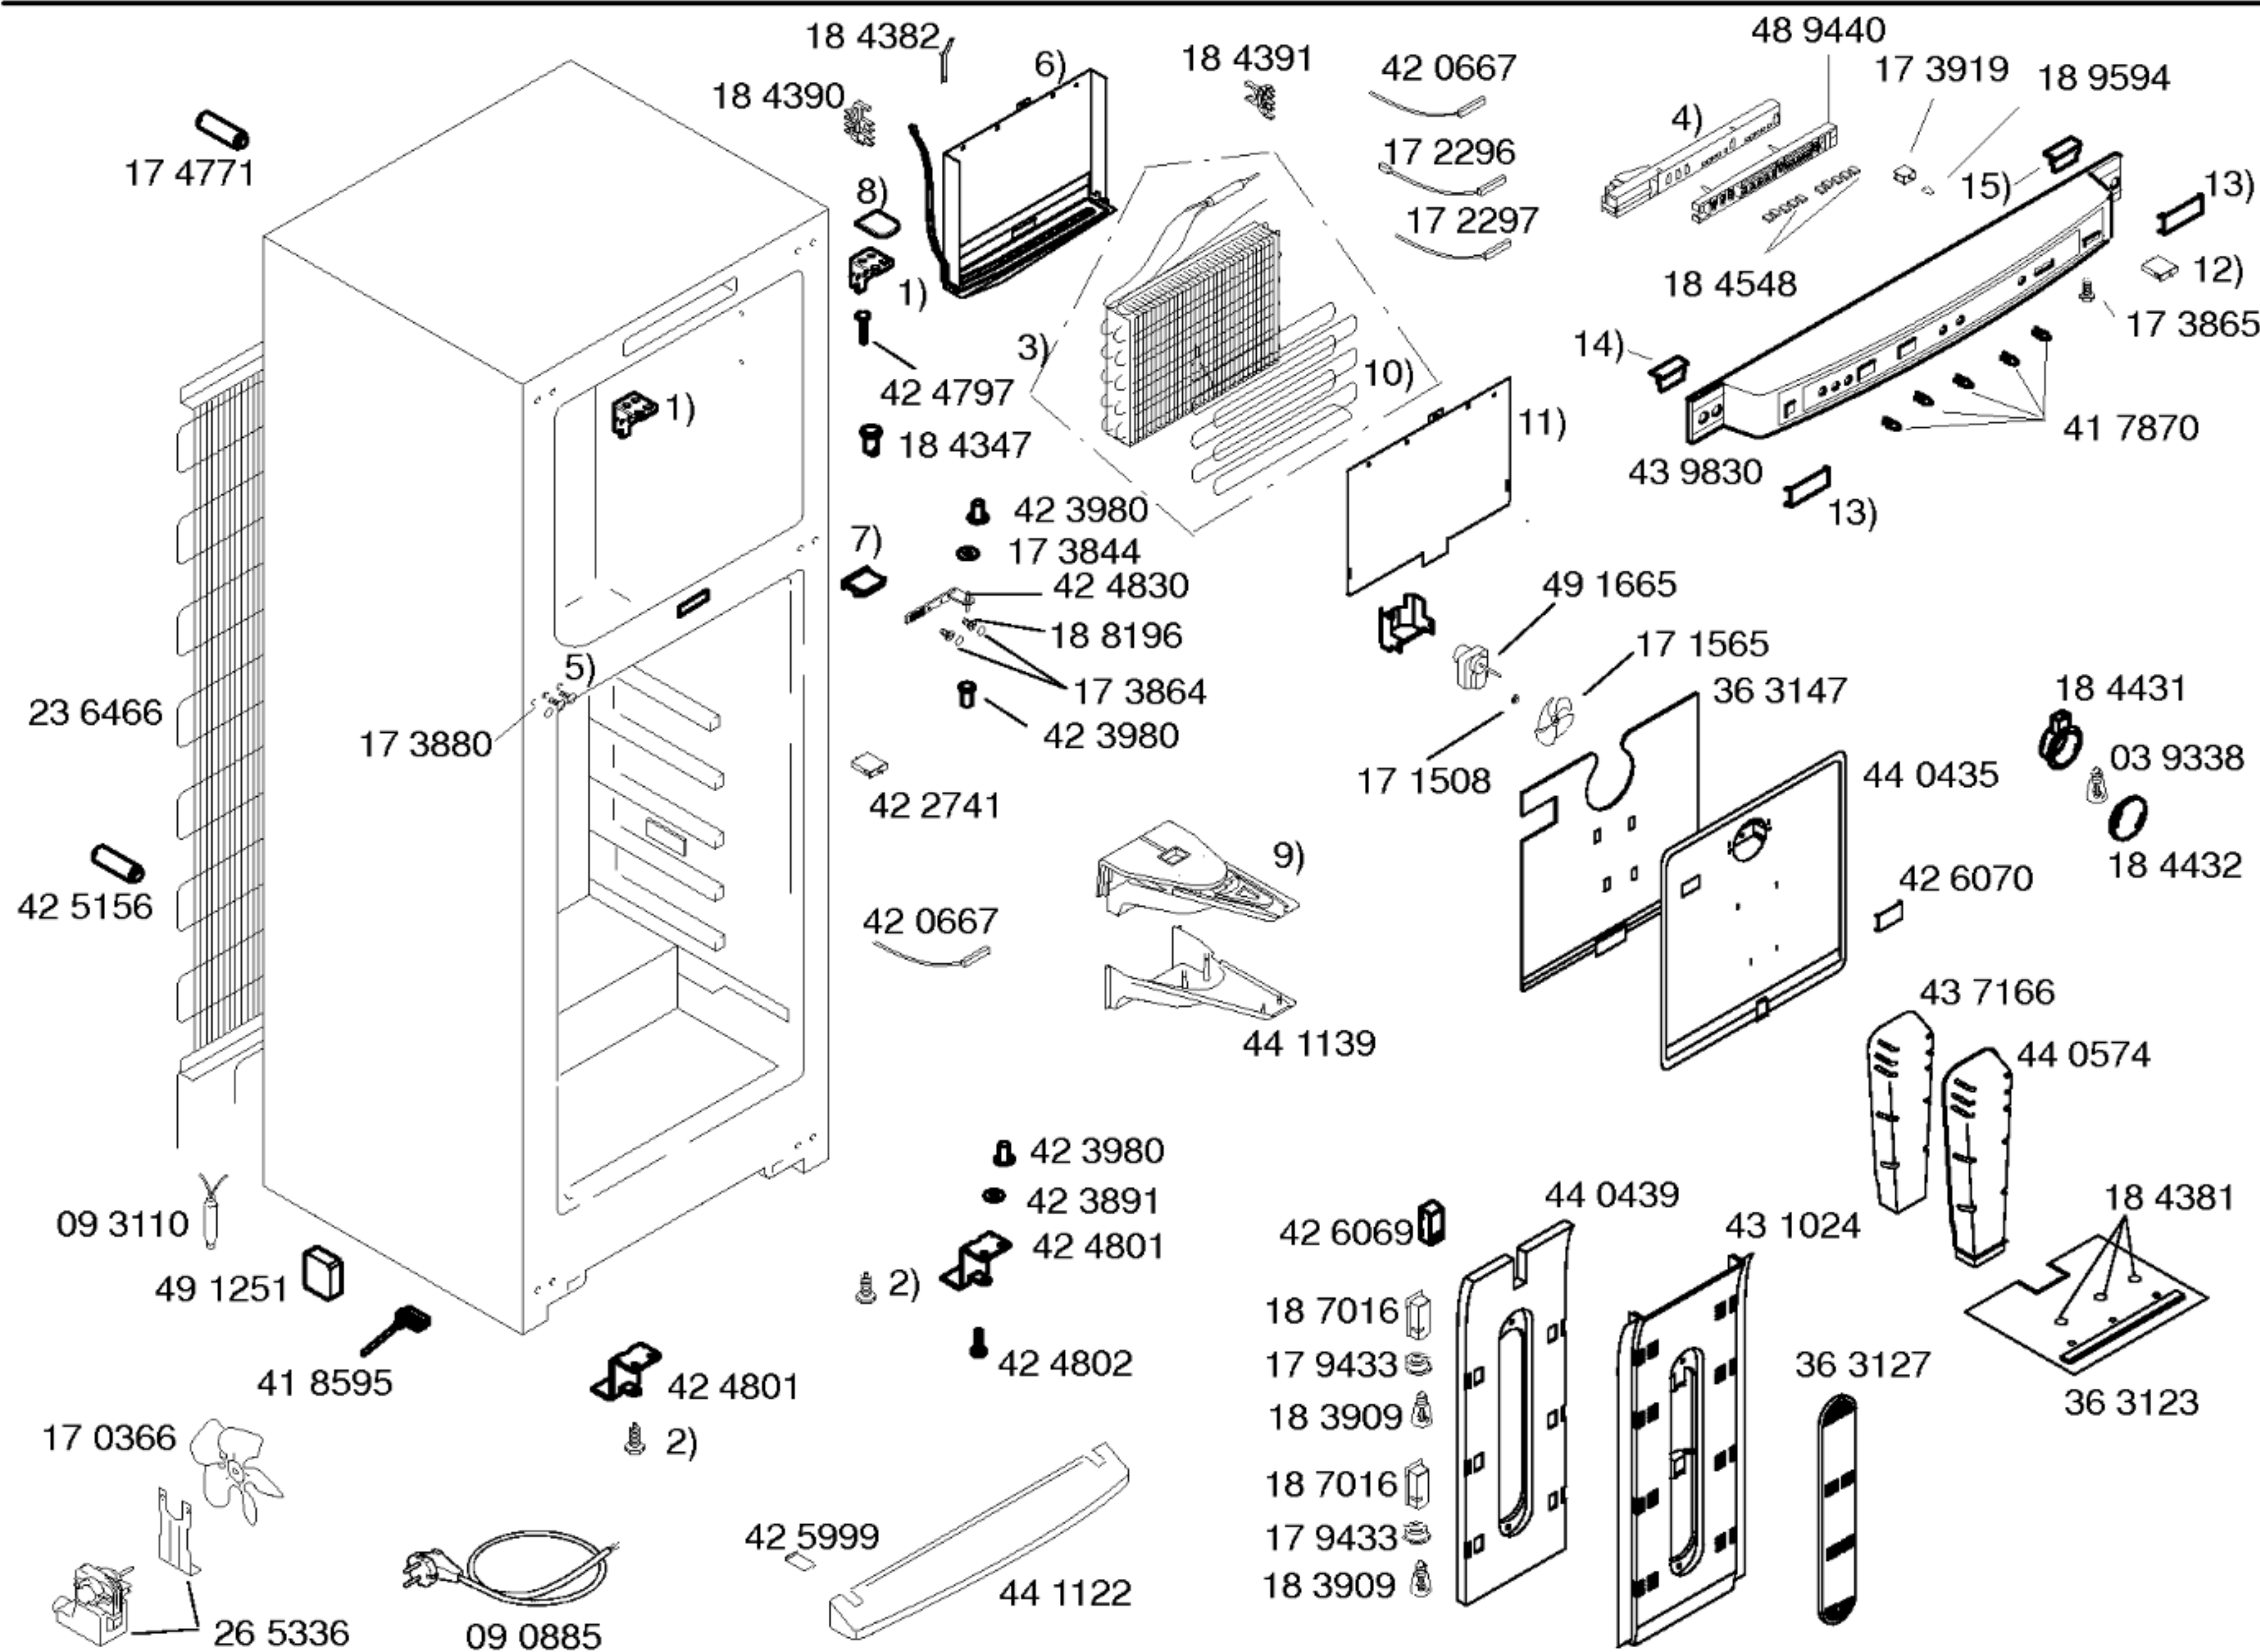

Gebrauchsanweisung

59 1155

(DE,TR)

1) 42 4798

2) 42 4340

3) 43 8726

4) 49 3812

5) 17 3865

6) 36 9905

7) 41 8165

8) 42 5515

9) 74 1550

10) 36 9816


11) 36 6902

12) 42 2741


13) 42 1535

14) 42 1529

15) 42 1531

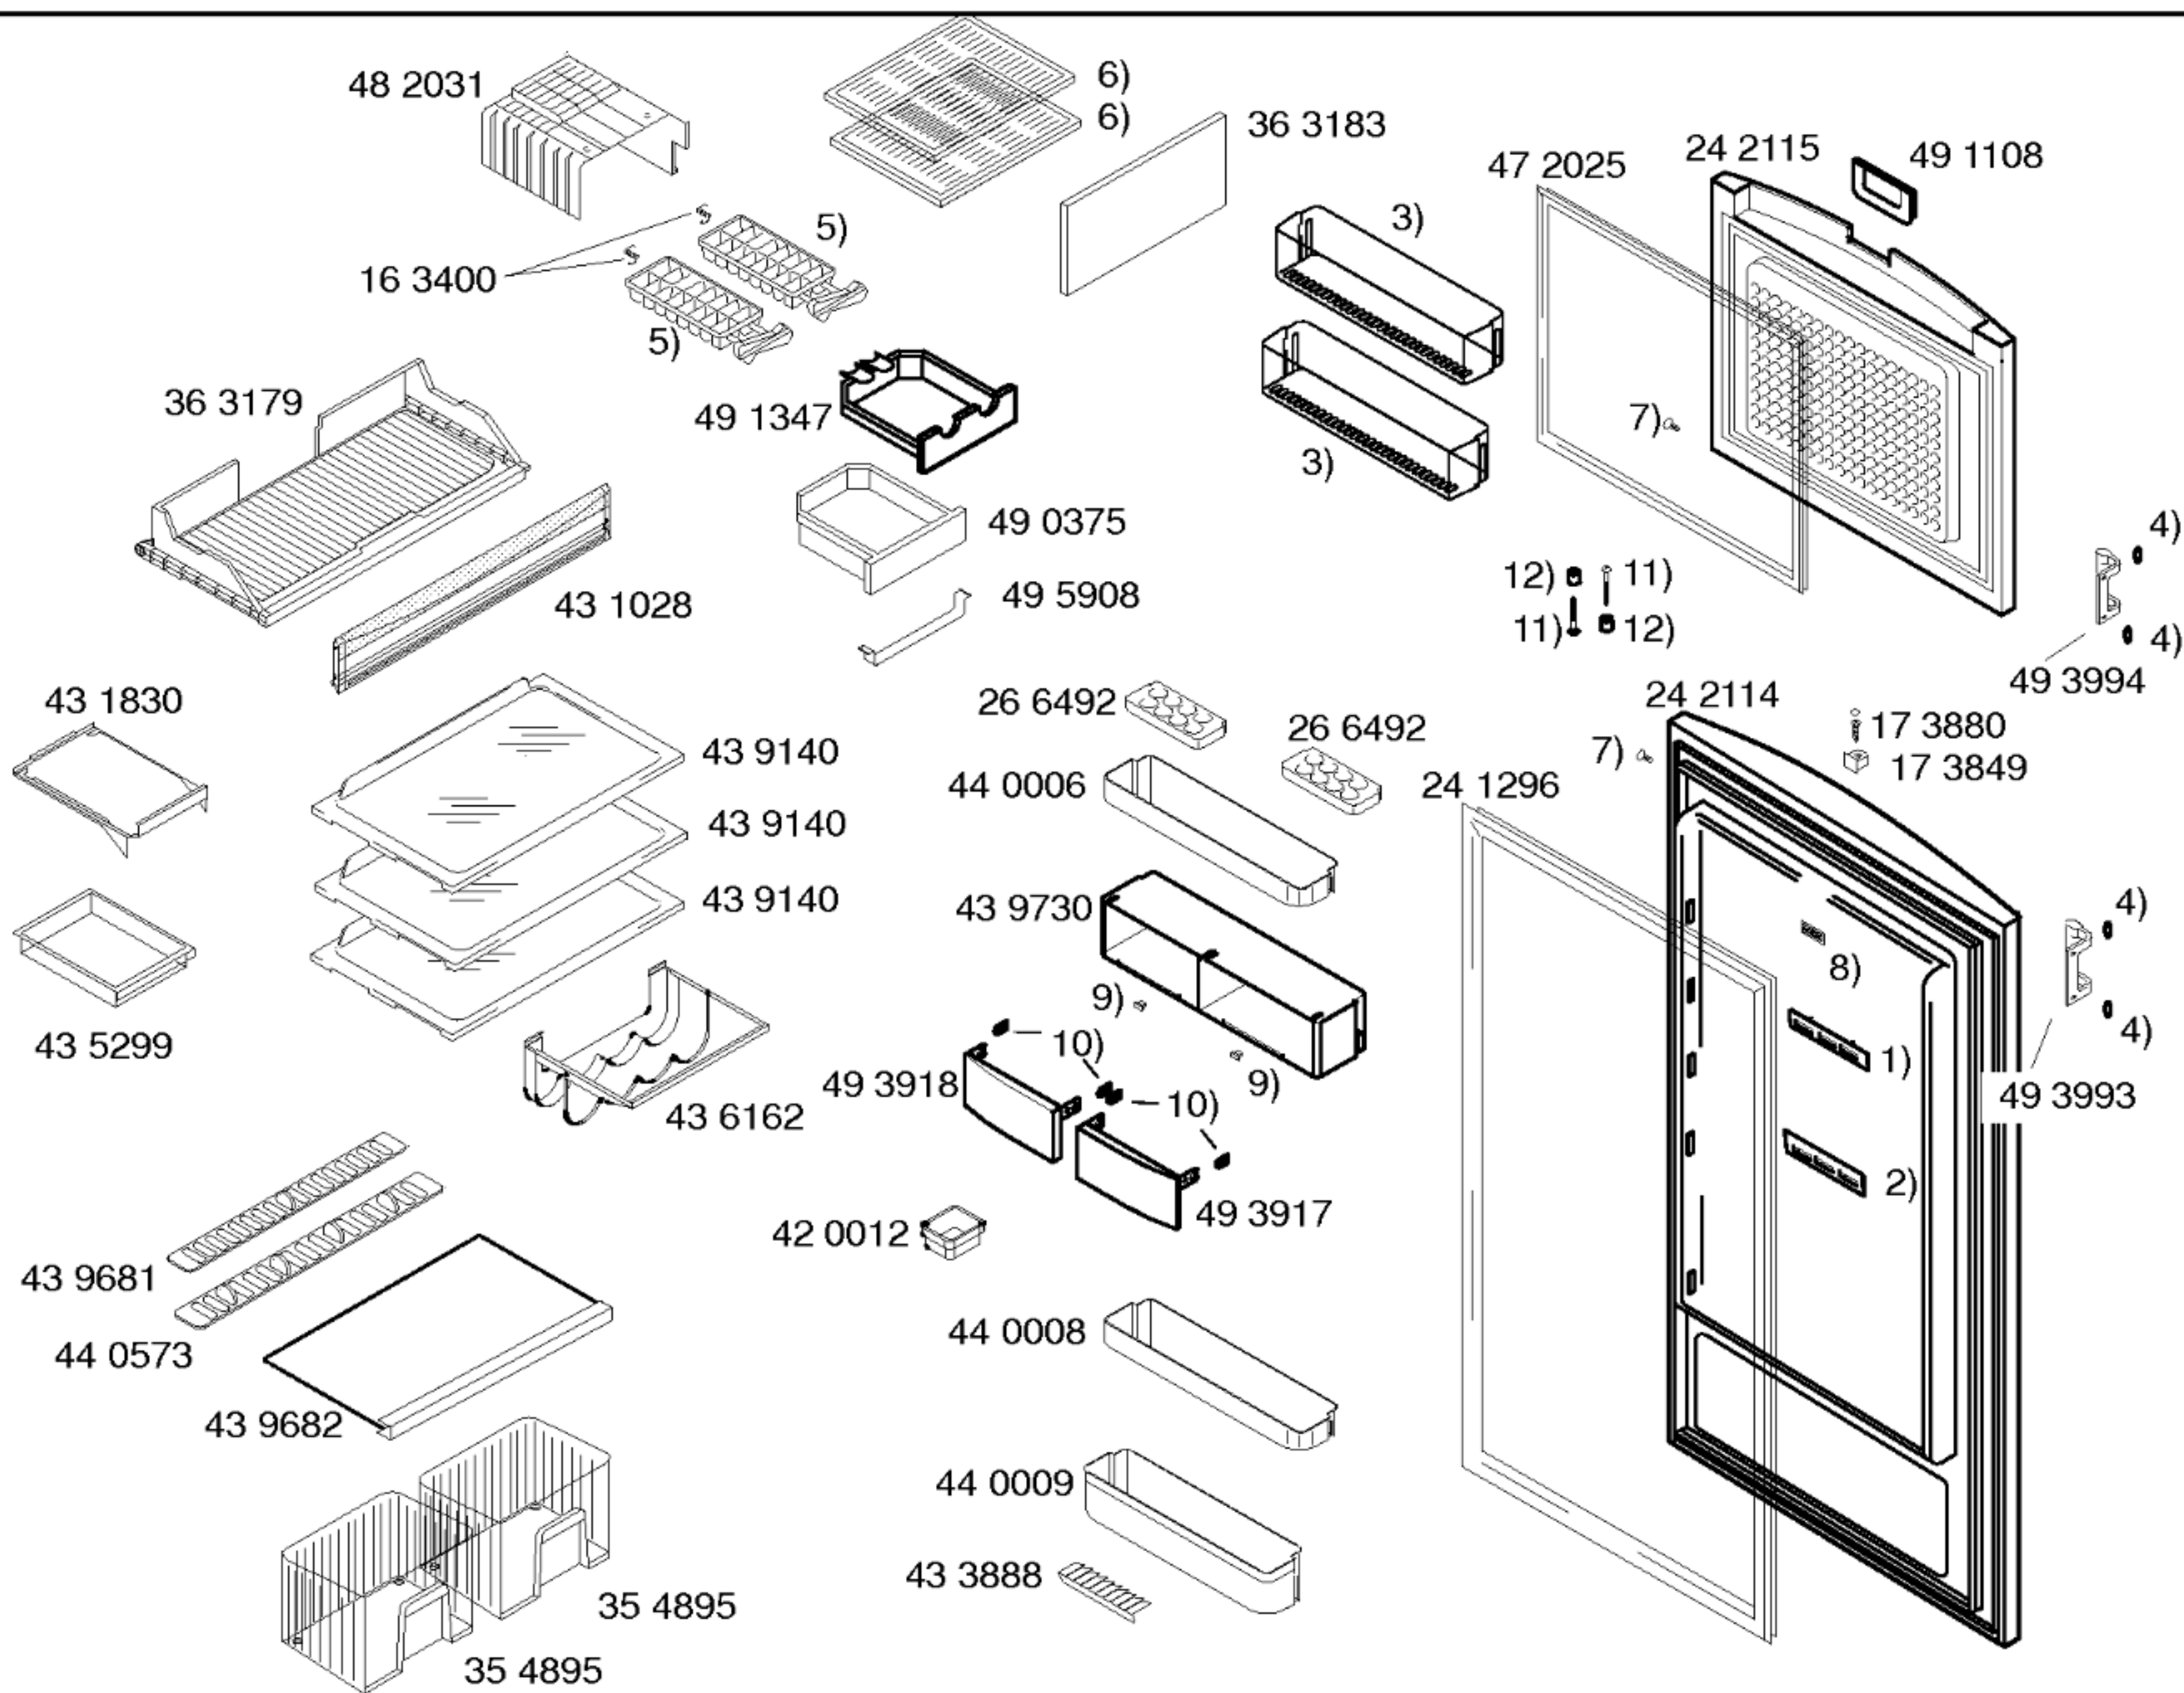

- 1) 49 4865
- 2) 49 4864
- 3) 43 4621
- 4) 42 5483
- 5) 49 1361
- 6) 36 3171
- 7) 17 3861
- 8) 49 4877
- 9) 42 0752
- 10) 42 4431
- 11) 18 8194
- 12) 18 8187

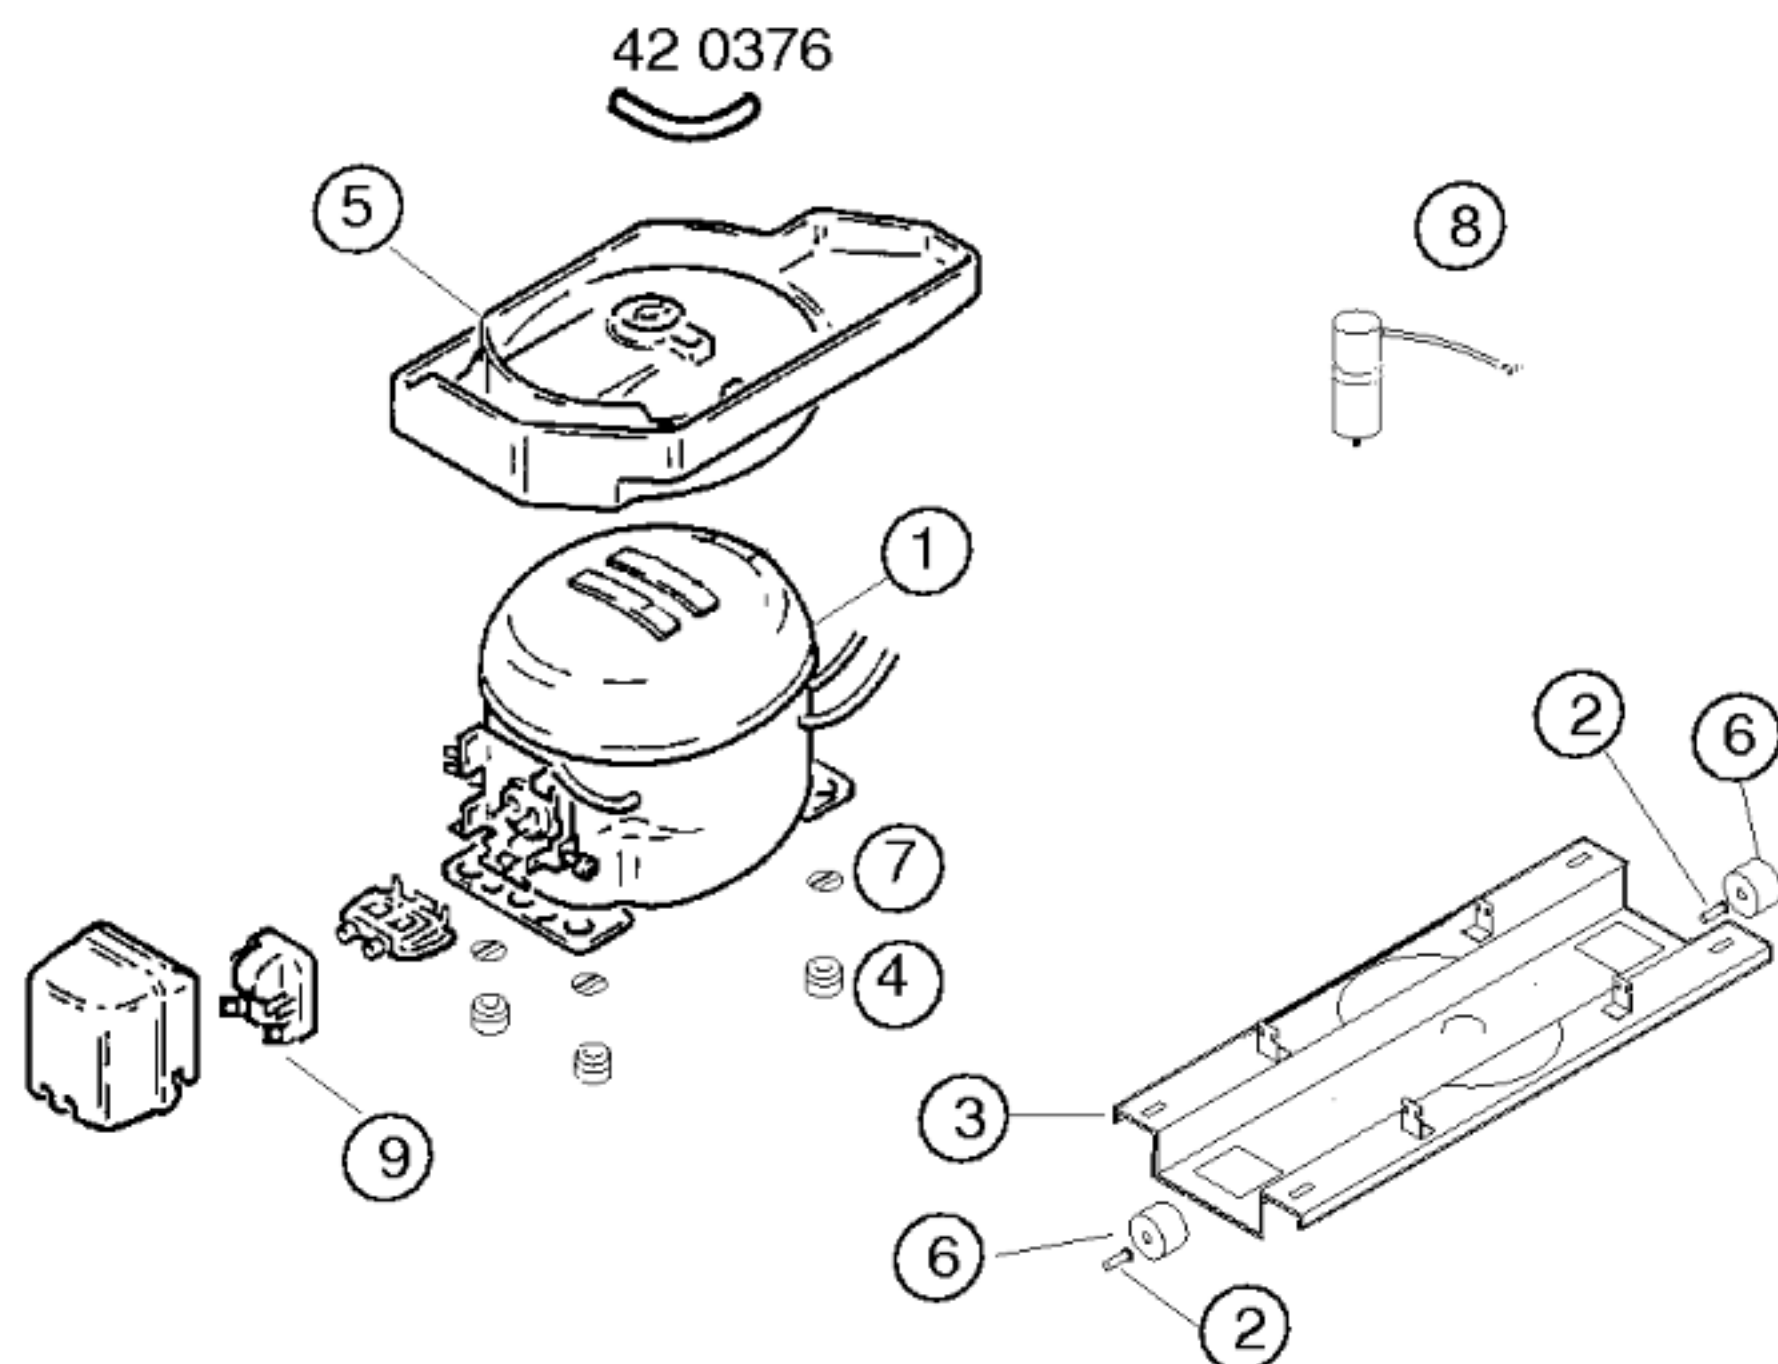

Pos.	Danfoss		
	NLE15KTK2		
1	14 2207		
2	18 1014		
3	35 4583		
4	16 3427		
5	49 4671		
6	17 1318		
7	17 1519		
8	17 4093		
9	42 6296		
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER				
Verdichter/Compressor/Kompresör		Danfoss		
Typ/Type/Tip		NLE15KTK2		
Förderleistung/Delivery/Verim/h		8		
Anlaufstrom/Starting current/Giris akimi		A		
Widerstand/Resistance/Rezistans Ha/		Ω		
Hi/aux.				
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Actua kapama degerleri		..ein/acma °C		
Valeurs de commutation/Termostat degeri		..aus"/kapama		
(..abtaven' od)		..alarm'		
Füllmenge/Fill. quantily/ Dolum miktari		R600a	g	58
Anschlusswert/Comm. load/Giris gucu		W	215	
Heizung/Heater/Rezistans		Ω	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc		W	267	81
Leistung/Power/Guc				Klappe
				4
Ventilador/Blower/Vantilatör				
Widerstand/Resistance/Rezistans		Ω		
Magnetventil/Magnetic valve/Manyetik valf				
Widerstand/Resistance/Rezistans		Ω		
Spannung/Voltage/Gerilim		V		
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz