 


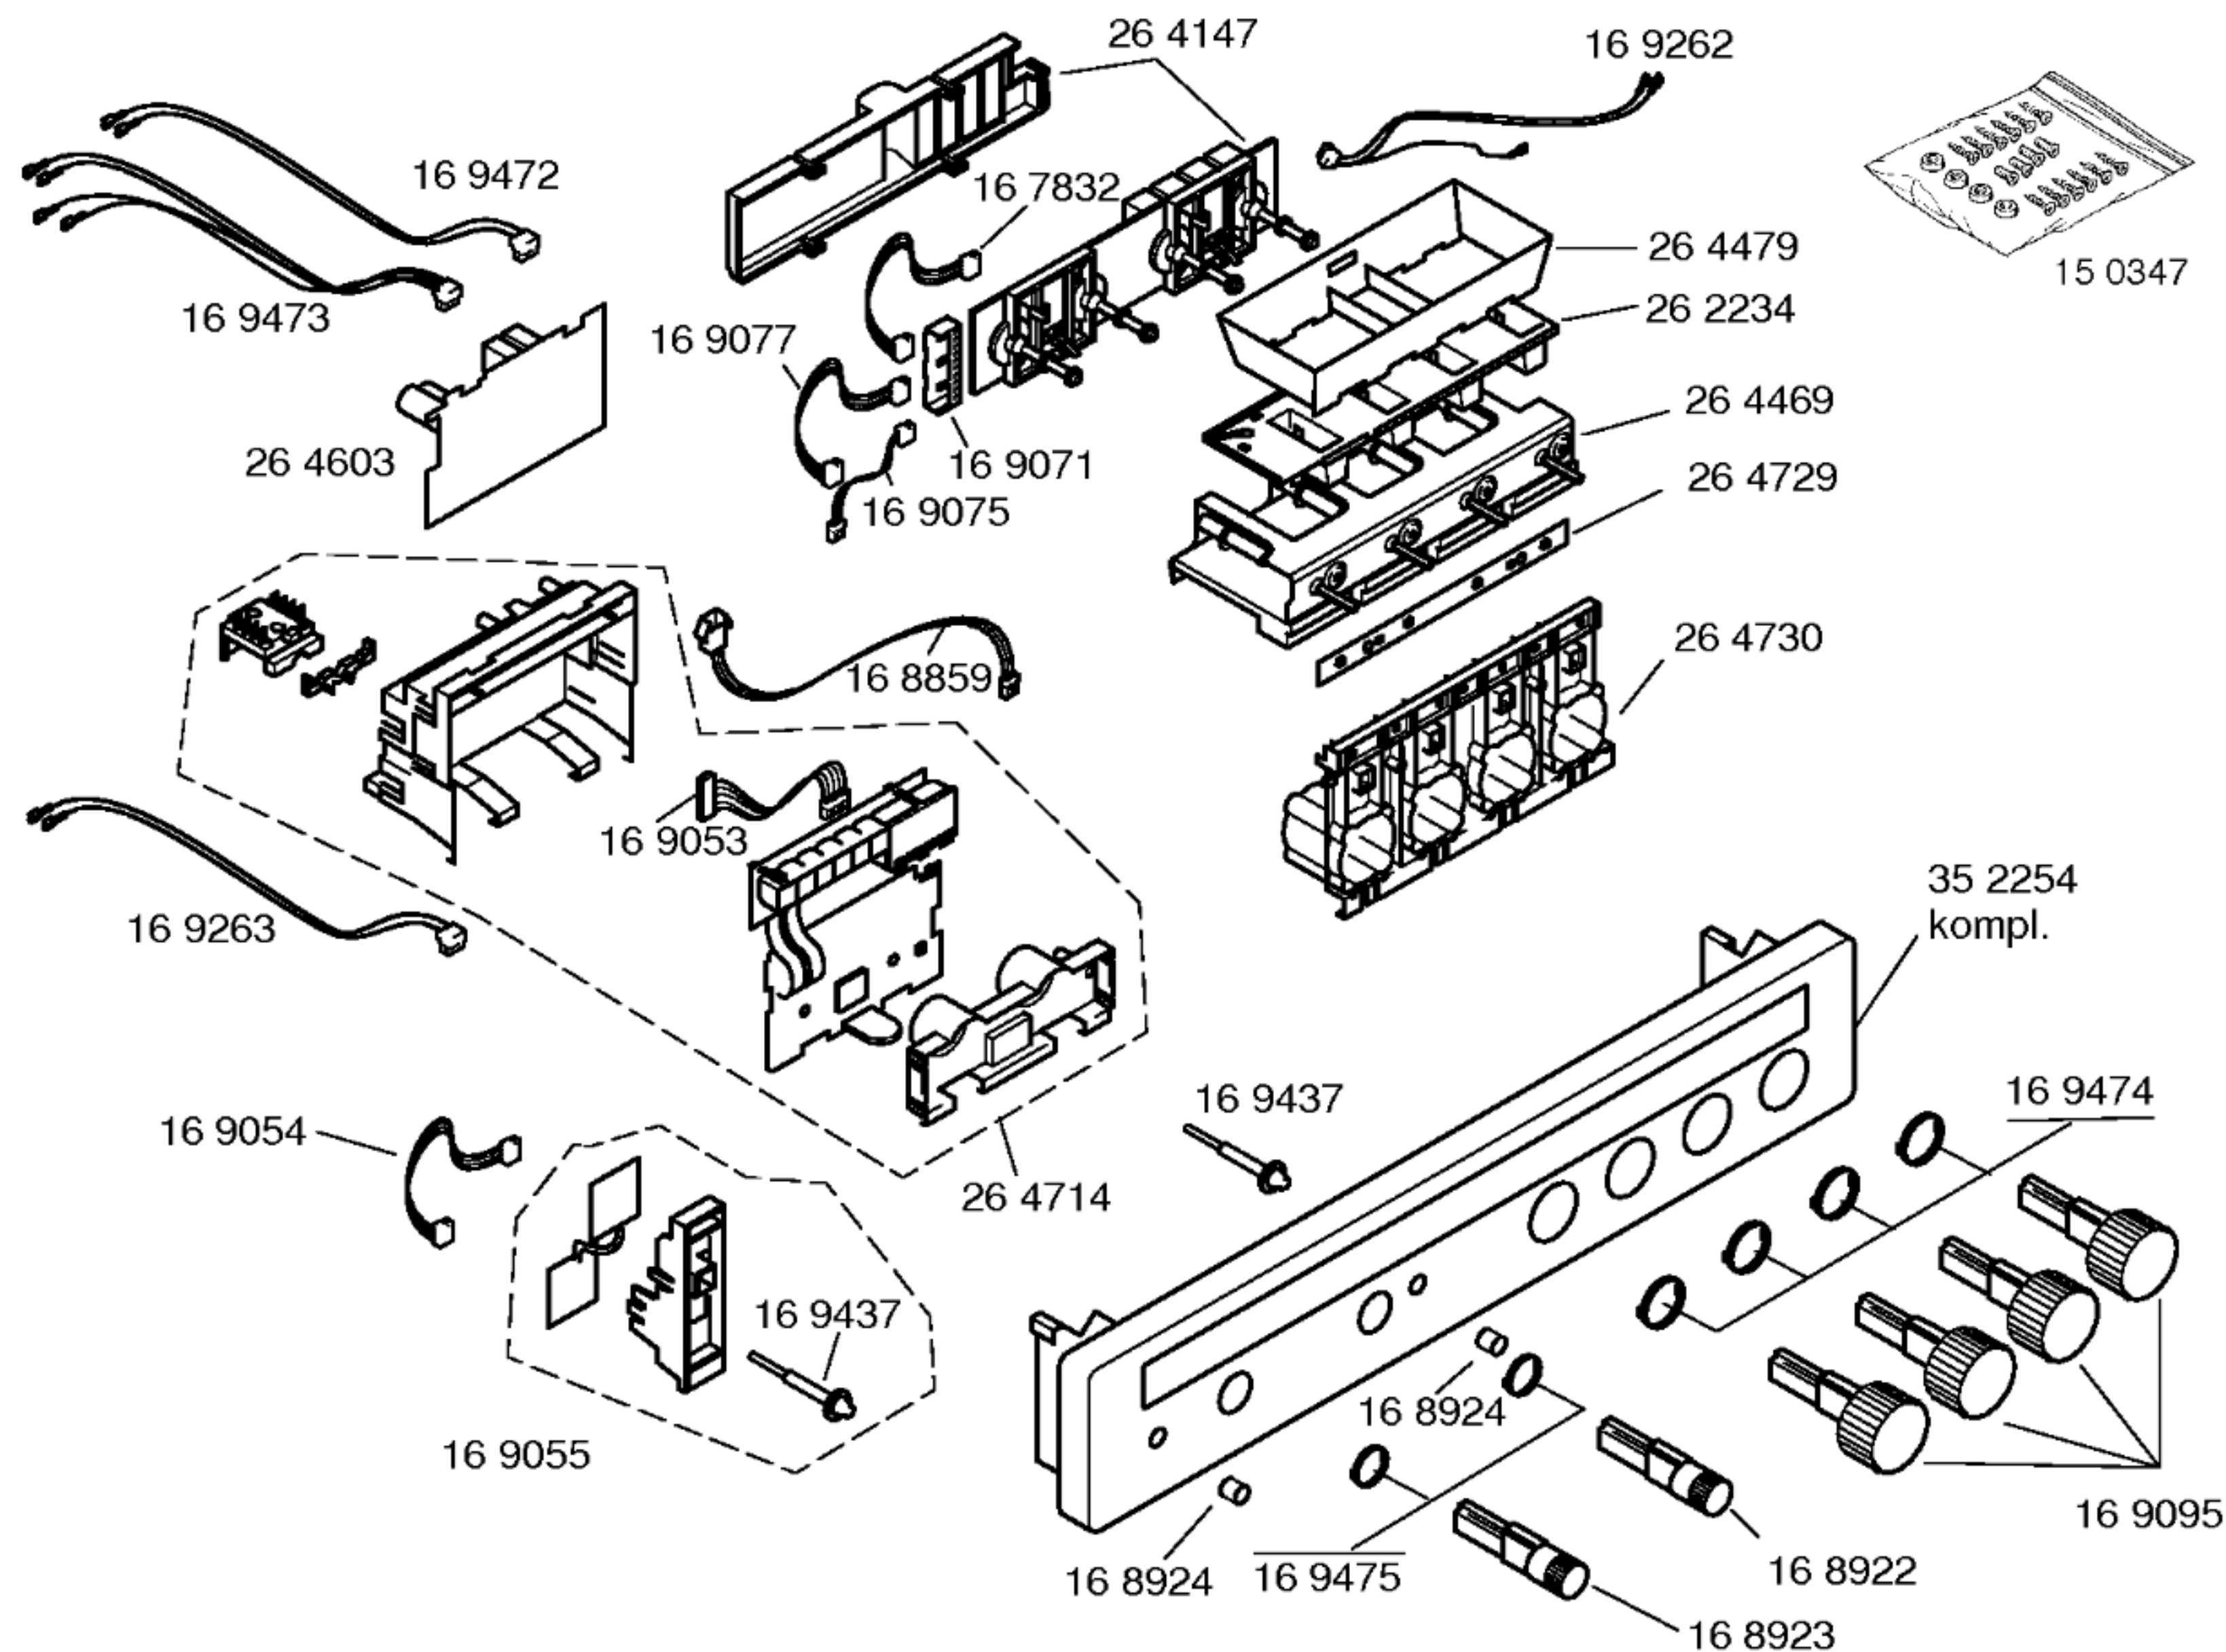

Gebrauchsanweisung

52 1719- (DE)
52 1720- (GB)
52 1721- (FR)
52 1722- (NL)
52 1723- (DK)
52 1724- (ES)
52 1725- (GR)

Montageanleitung


51 6443
(D,F,GB,NL,I,DK,E,P,
N,FIN,S,GR)


Kurzanleitung

52 0755
(D)
Kochbuch
52 1179
(D)
Einbausatz
06 8506


Zubehör:

  HZ23000
Backblech-Alu
HZ 23100
Backblech emailliert
HZ 22500
Grillblech
HZ 23300
Universalpfanne
HZ 23400
Kombirost
HZ 9150
Glasbräter
HZ 25070
CD-ROM-Rezepte
HZ 25001
Adapterkabel

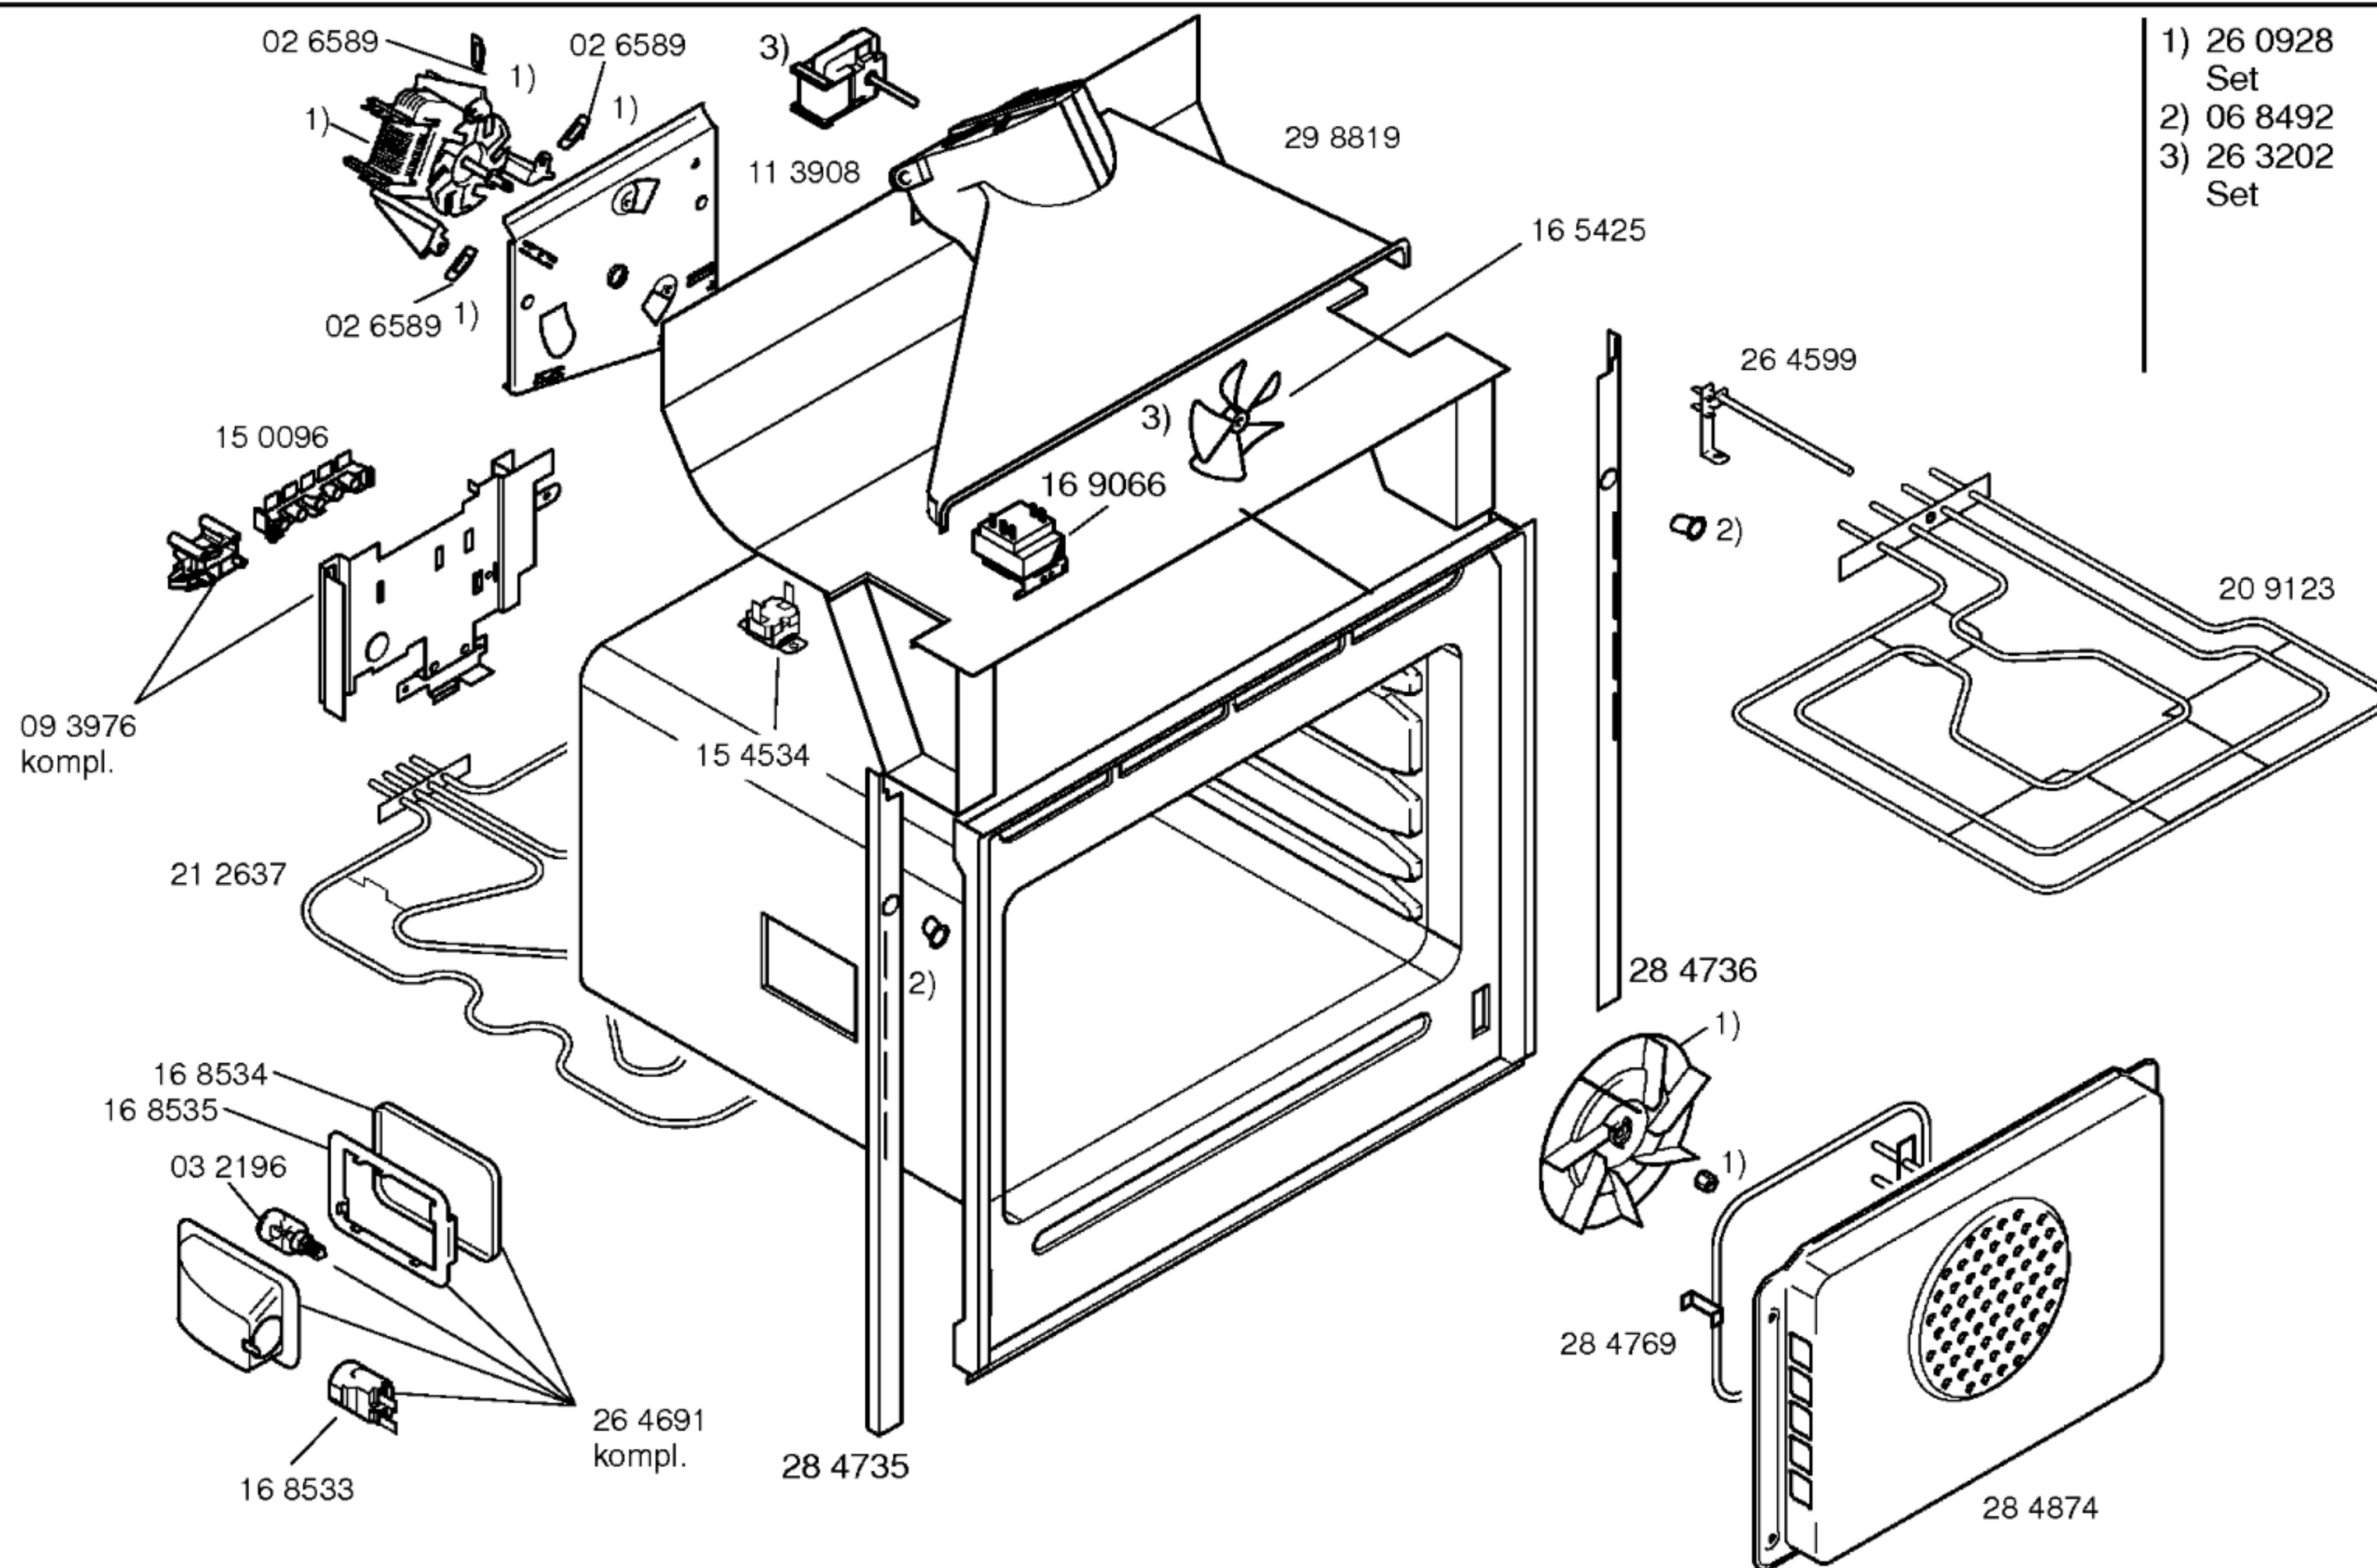

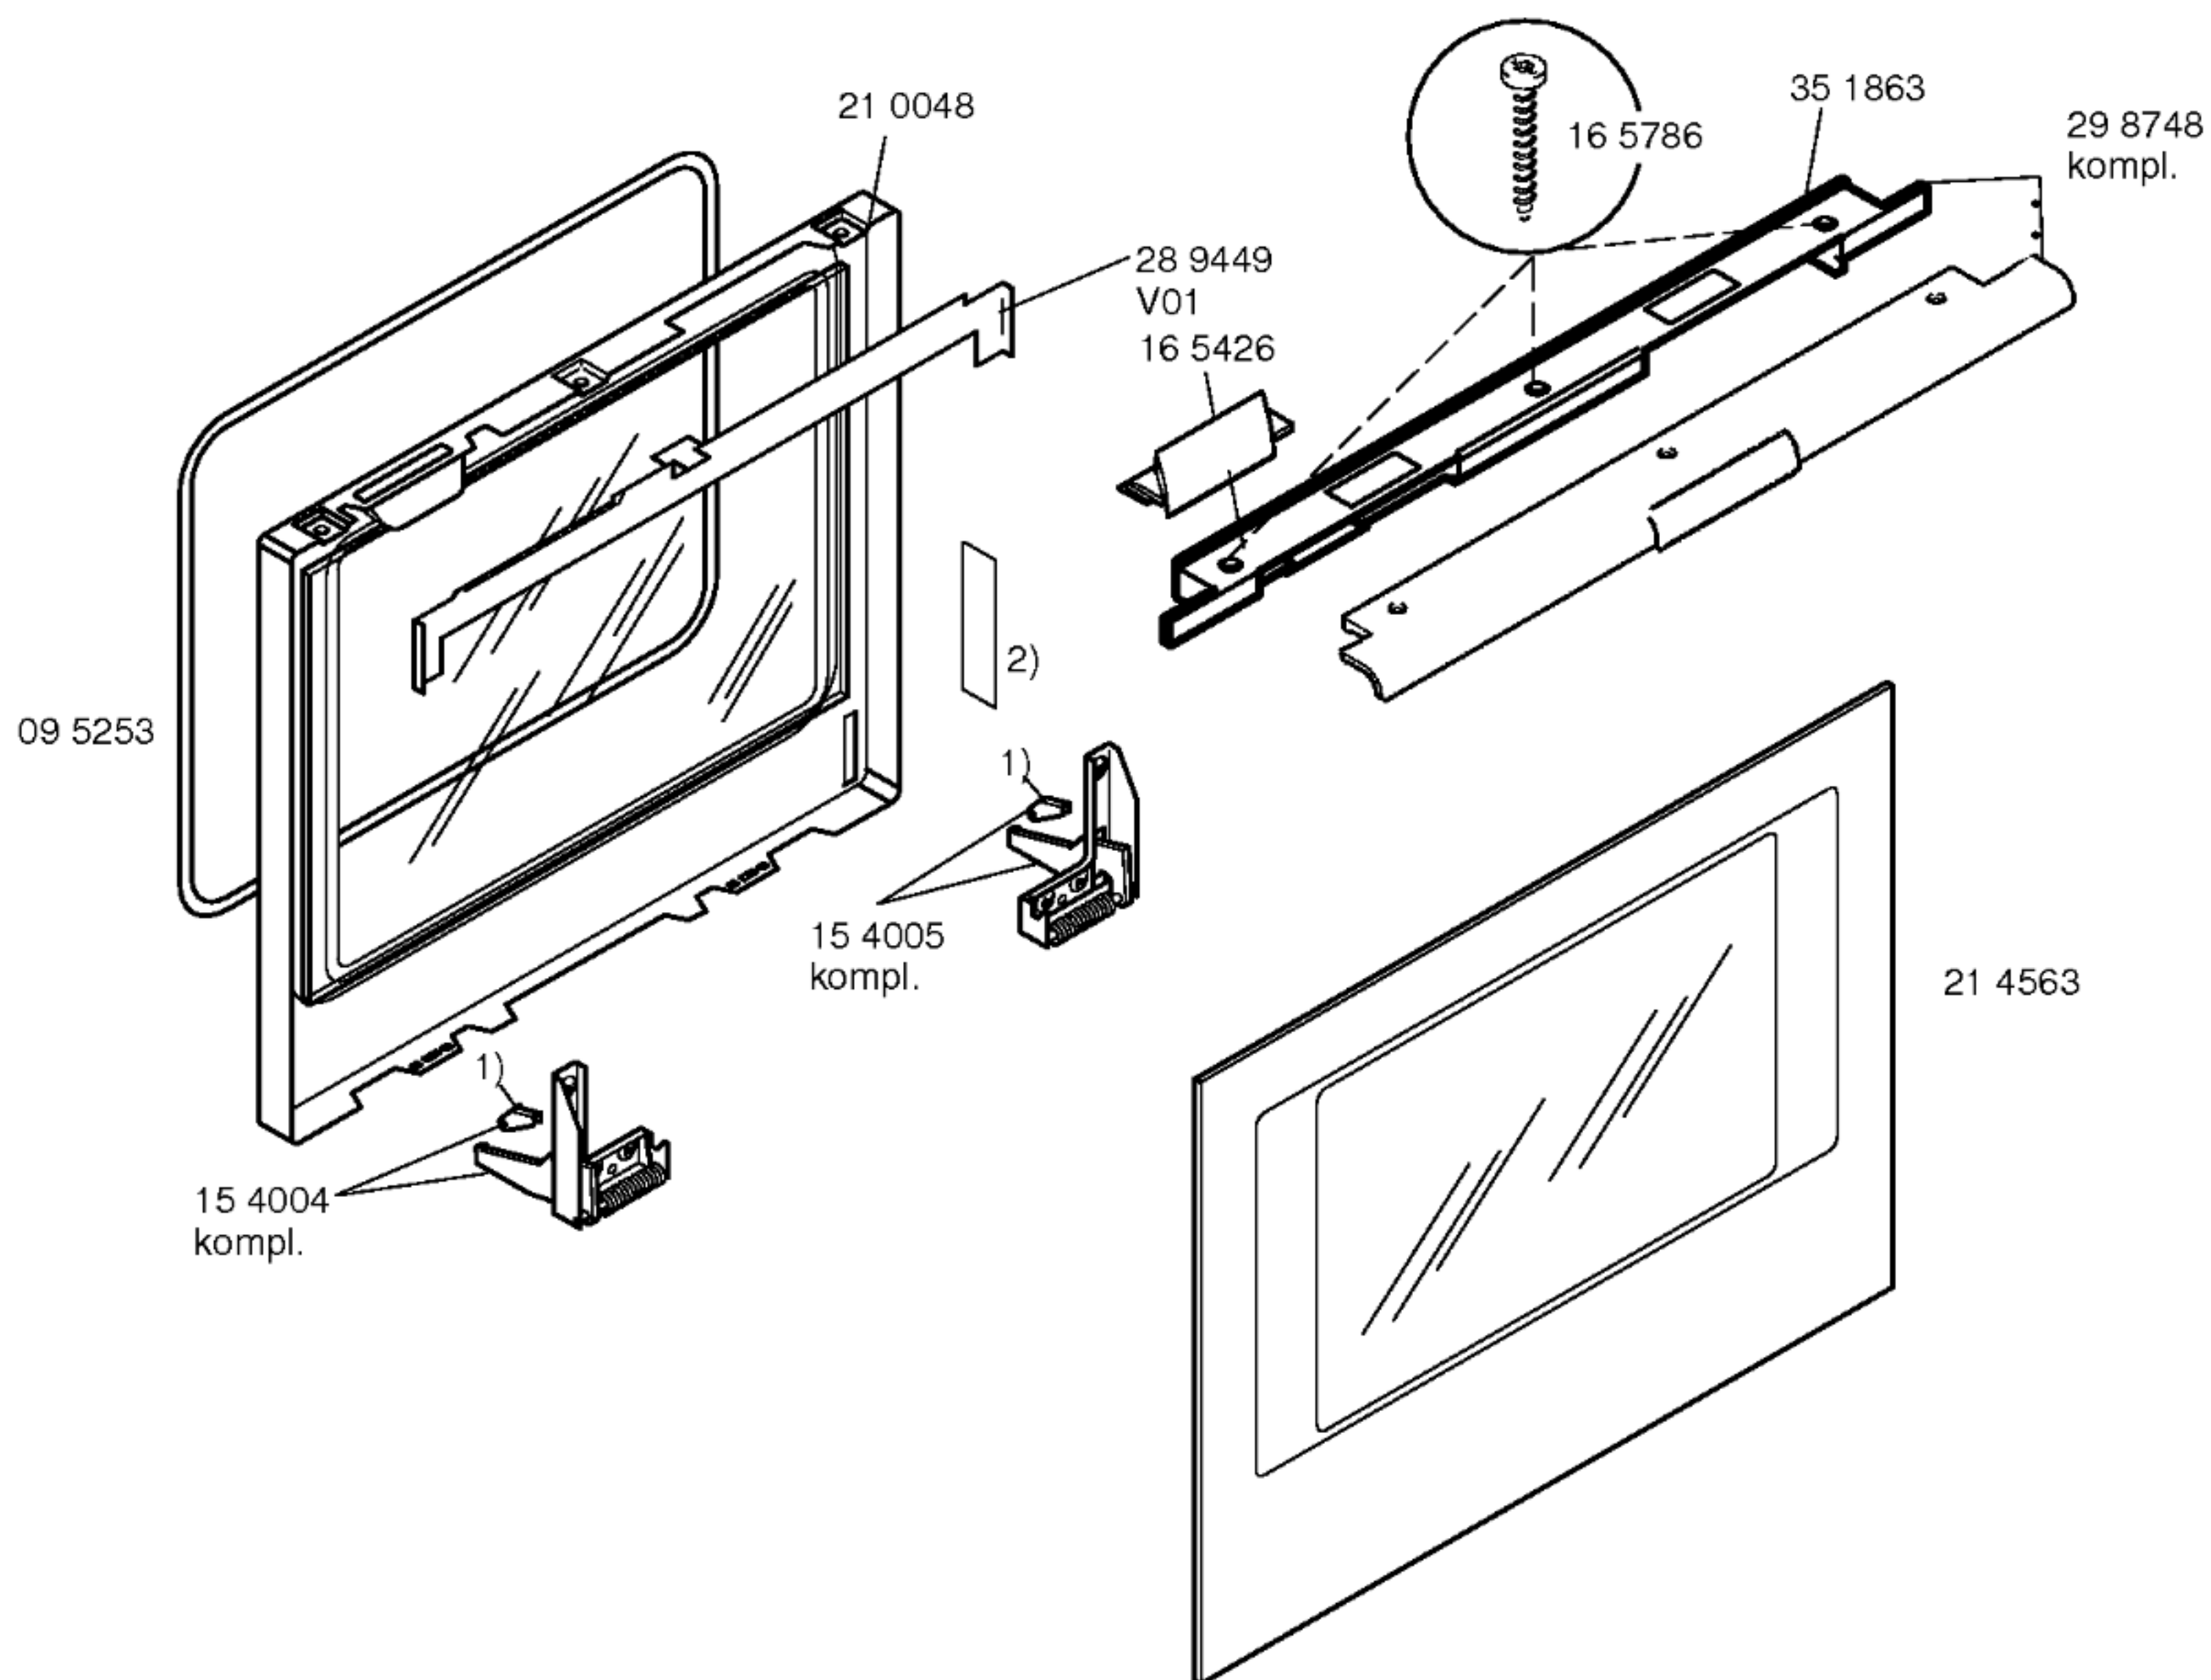

 - 1) 06 8581
2) 51 9252
Typenschild

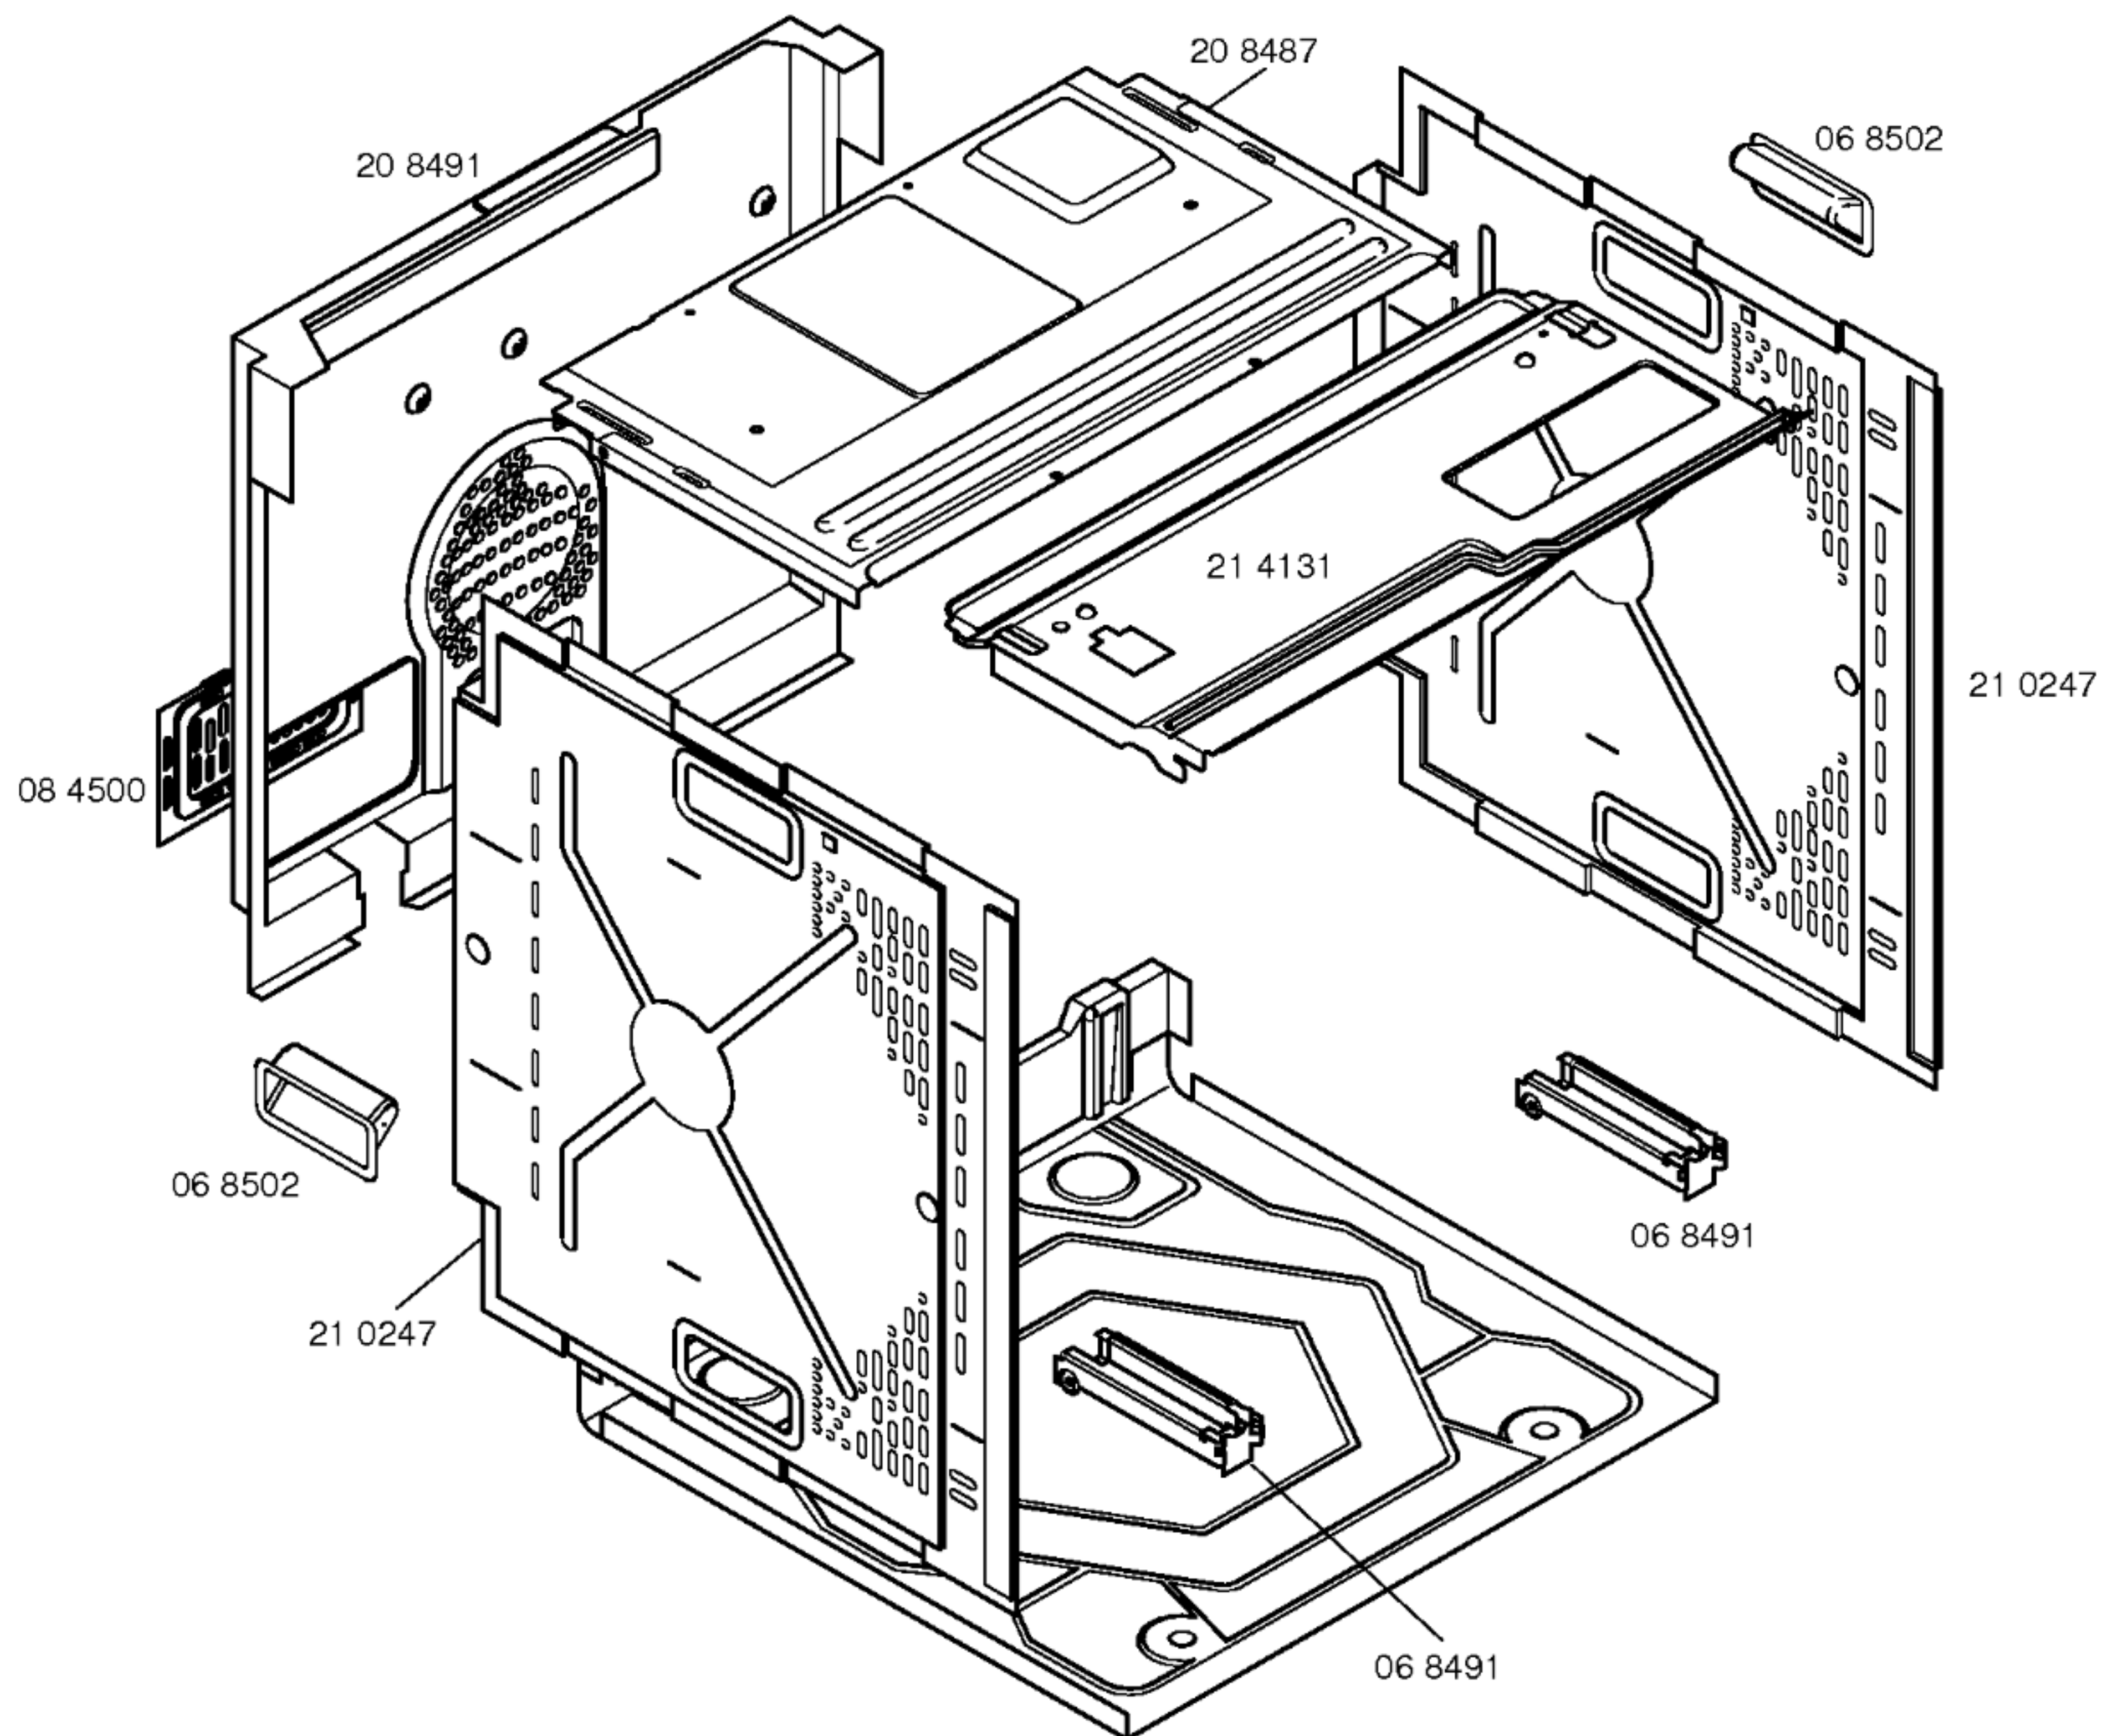

Ident – Nummern – Konstante
3740

Ident – Nummern – Konstante
3740

