
 



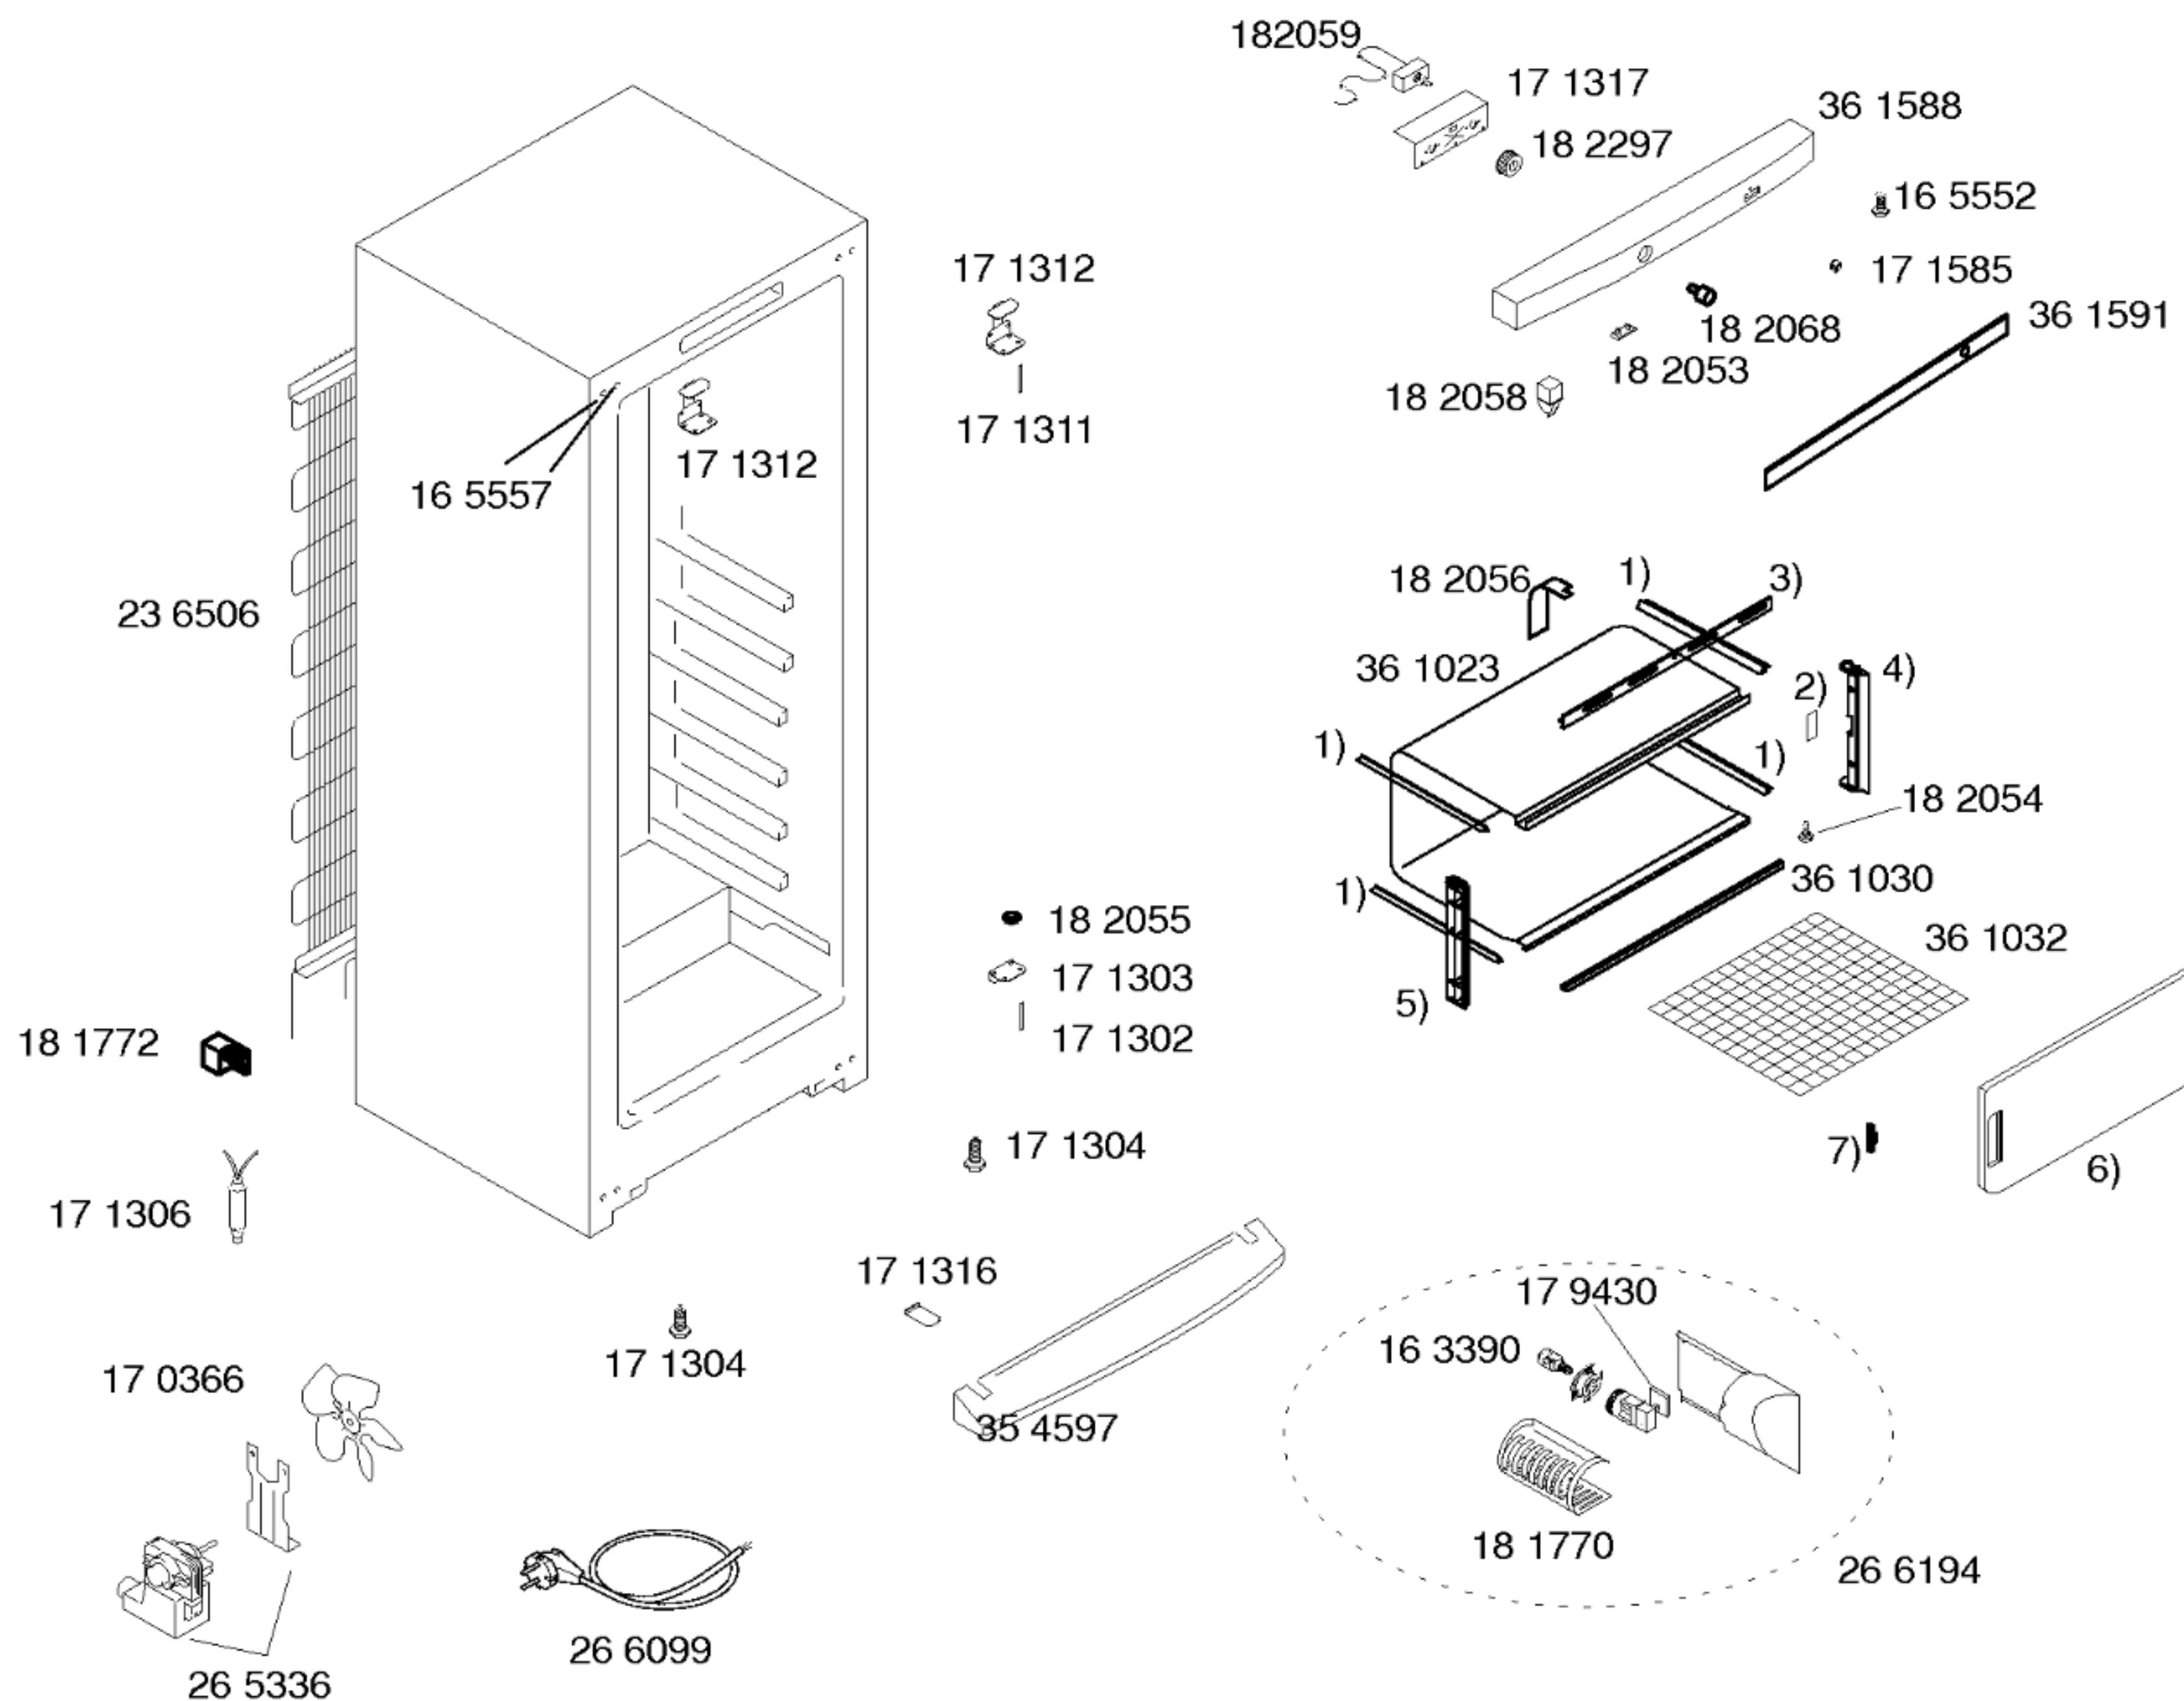

Gebrauchsanweisung
52 8111
(TR,DE)

- 1) 48 0752
- 2) 18 2057
- 3) 36 1597
V01,V02,V03,V04
36 1030
V05
- 4) 48 0753
V01,V02,V03,V04
48 4112
V05
- 5) 48 0754
V01,V02,V03,V04
48 4111
V05
- 6) 36 1586
V01,V02,V03,V04
36 7050
V05
- 7) 18 2026
V01,V02,V03,V04



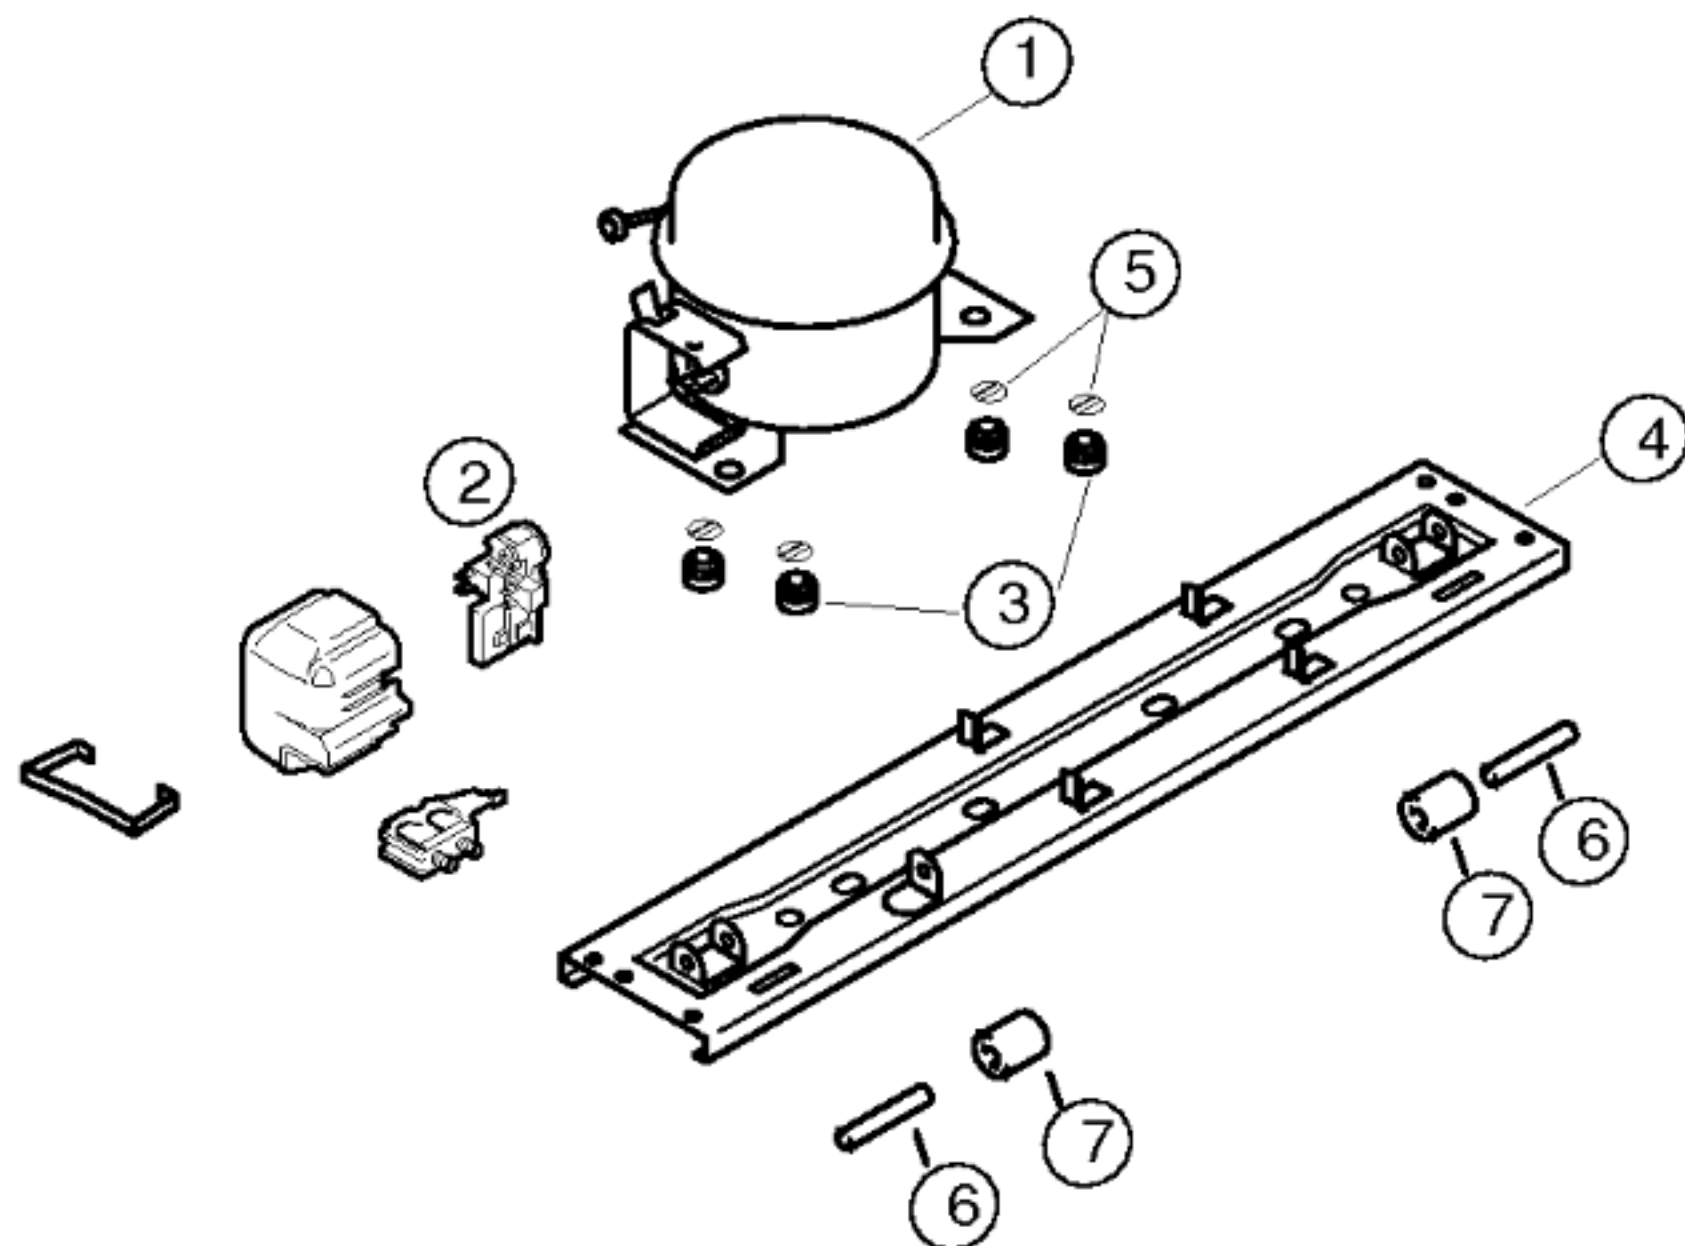

Pos.	V01	V02,V03,V04,V05	
	Danfoss	MATS	
	NL9FT	DD77C	
1	14 1811	14 2137	
2	16 5570	18 7958	
3	16 3427		
4	35 4583		
5	17 1519		
6	18 1014		
7	17 1318		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
	V01	V02,V03,V04,V05	
Verdichter/Compressor/Kompresör	Danfoss	Matsuchita	
Typ/Type/Tip	NL9FT	DD77C15GAX5	
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	12.8	9.52	
Widerstand/Resistance/Rezistans Ha/	8.9	10.70	
Hi/aux.	12	41.6	
Temp.Reyler/Thermostat/Termostat	RANCO		
Typ/Type/Tip	K50	K60	
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Actua kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R134a	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	213
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız