 
 
 


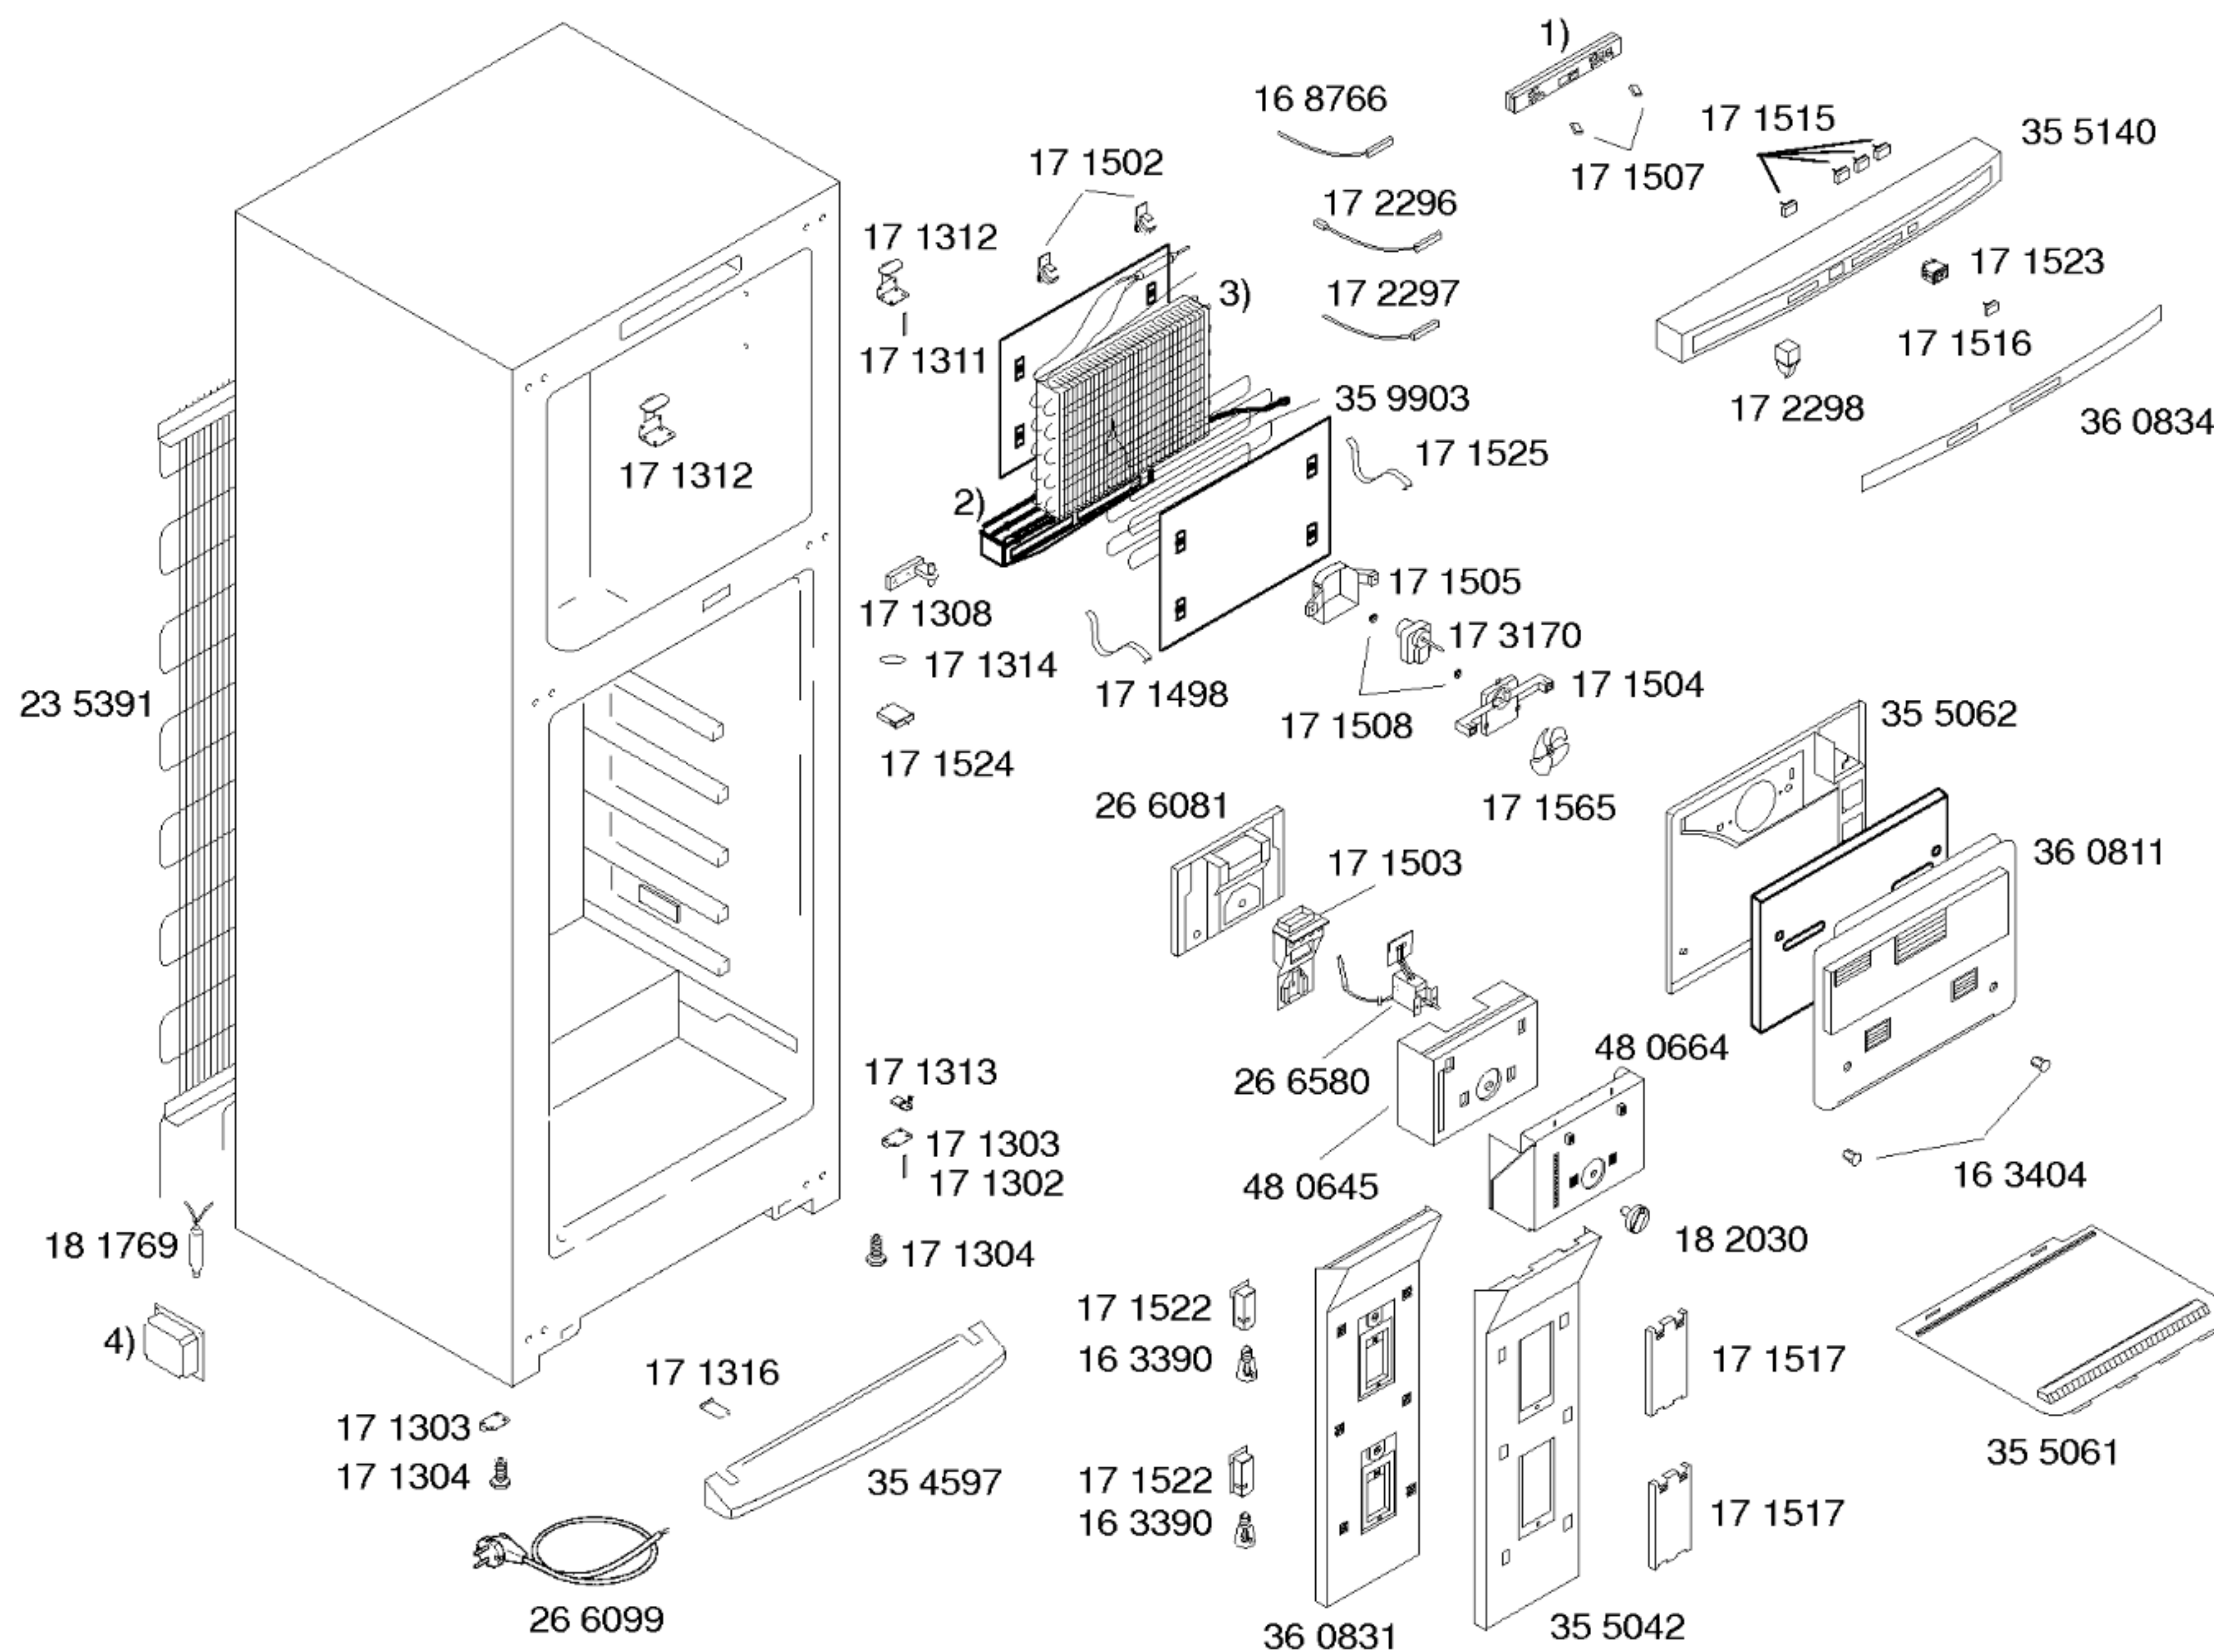

Gebrauchsanweisung
52 7800
(DE,GB,FR,IT,ES,PT,
GR,ND,DN,SE,NO,FI)

- 1) 48 0495
V01
48 1585
V02
- 2) 36 0849
- 3) 36 0820
- 4) 17 8140
V01
17 6128
V02

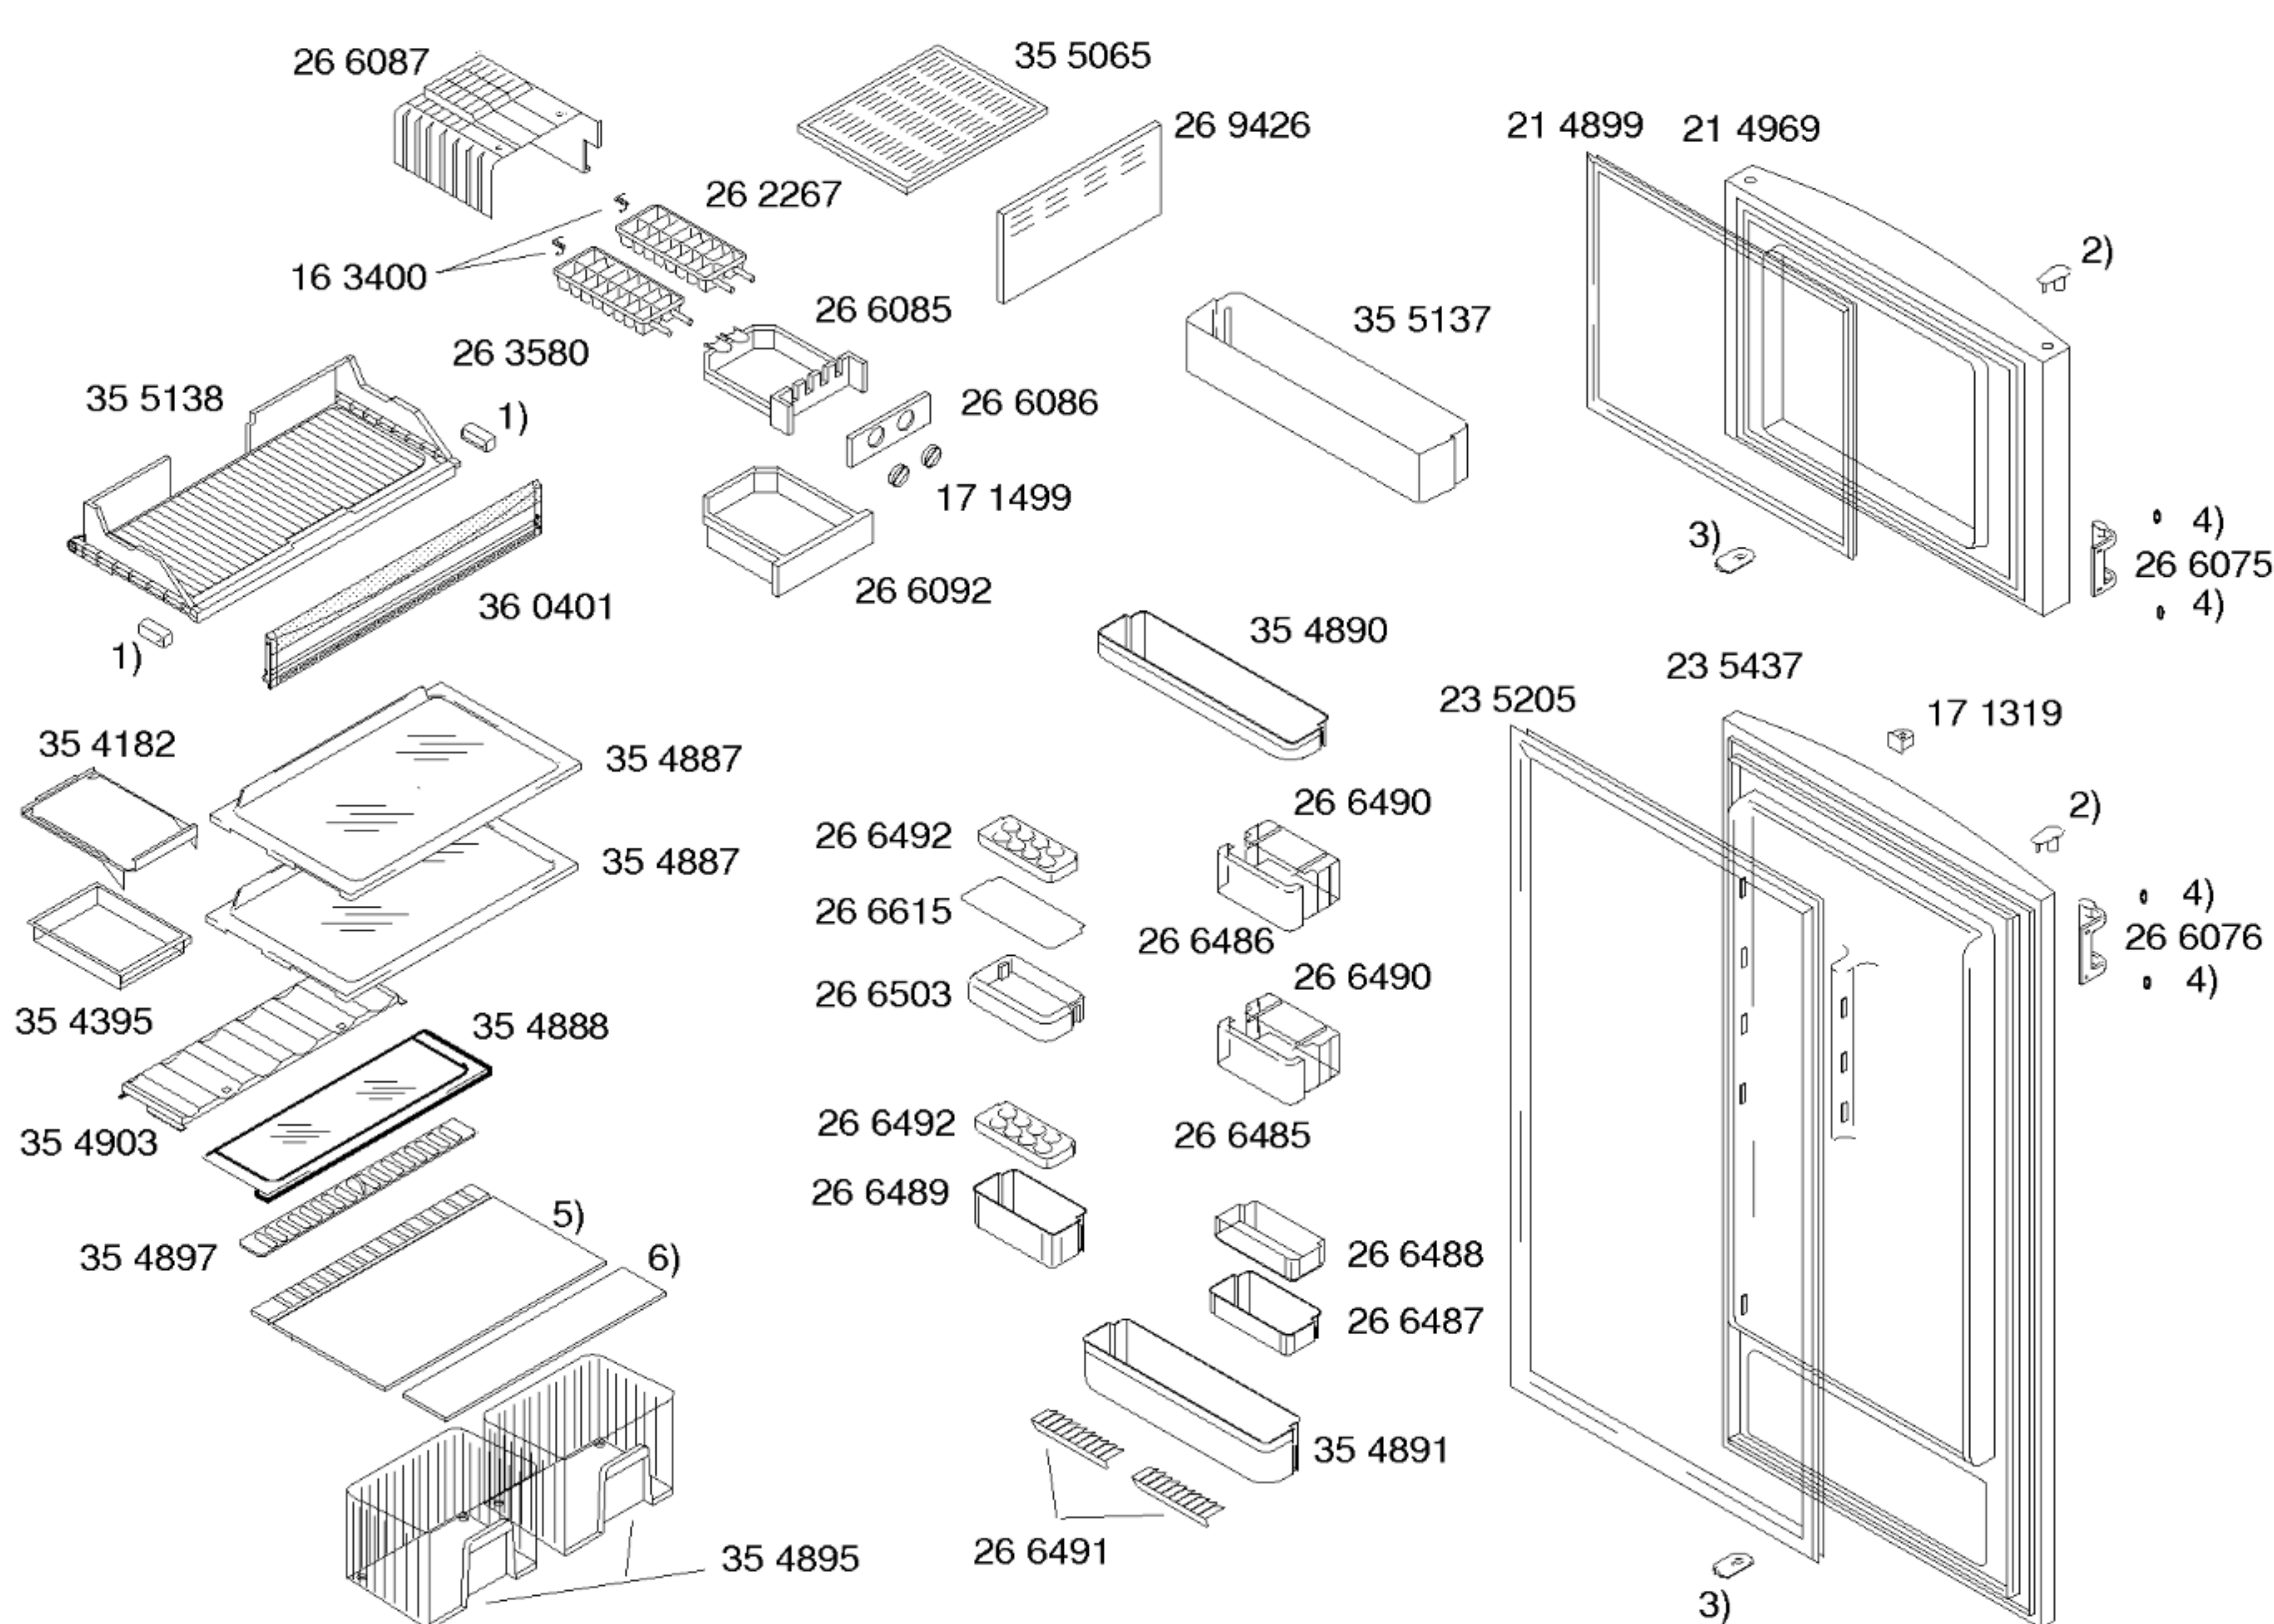

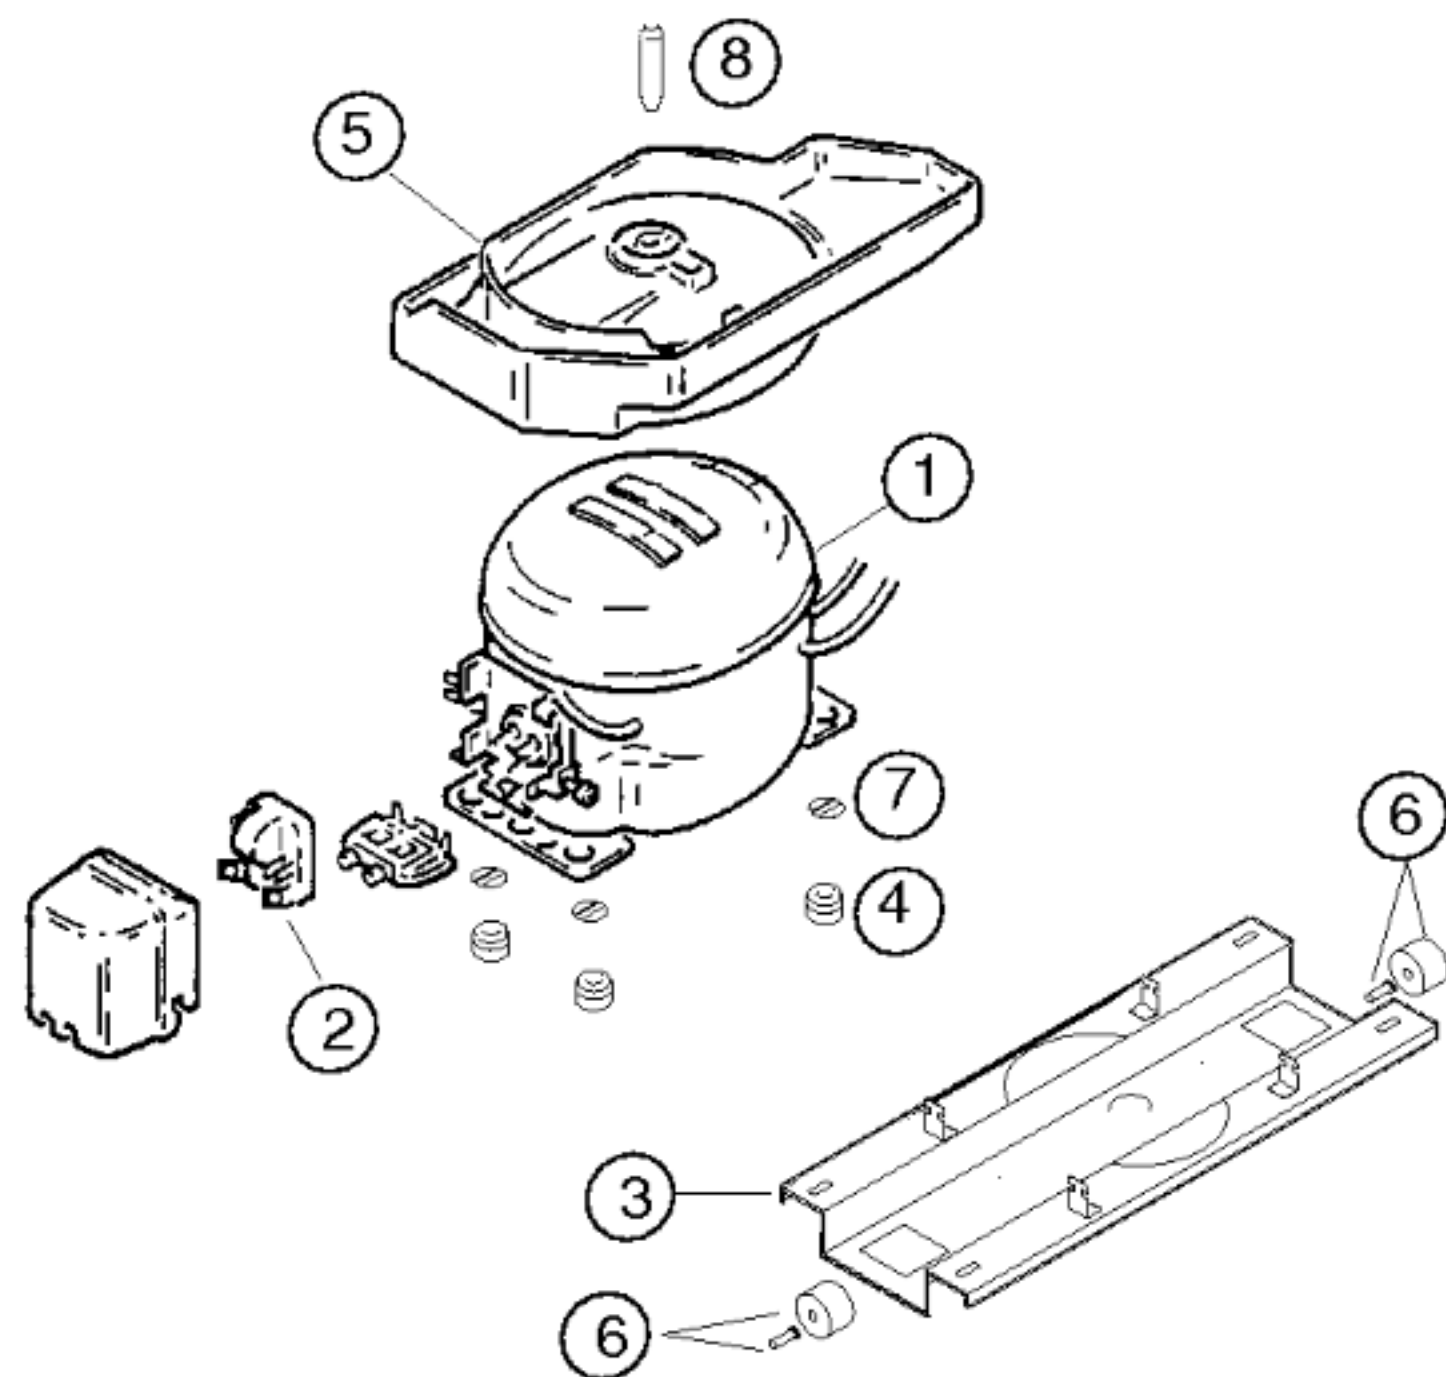

Pos.	Danfoss		
	NLE9F		
1	14 1932		
2	16 5570		
3	35 4583		
4	16 3427		
5	26 5327		
6	17 1318		
7	17 1519		
8	17 2776		
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER

Verdichter/Compressor/Kompresör		Danfoss		
Typ/Type/Tip		NLE9F		
Förderleistung/Delivery/Verim/h				
Anlaufstrom/Starting current/Giris akimi	A	10.7/6.4		
Widerstand/Resistance/Rezistans Ha/	Ohm	12.9		
Hi/aux.		18		
Temp.Reyler/Thermostat/Termostat		Elektronisch		
Typ/Type/Tip				
Reglerstellung/Position/Termostat pozisyonu				
Schaltwerte/Acma kapama degerleri	..ein/acma °C			
Valeurs de commutation/Termostat degeri	..aus"/kapama			
(..abtaven' od)	..alarm'			
Füllmenge/Fill. quantily/ Dolum miktari		R134a	g	*
Anschlusswert/Comm. load/Giris gucu		W	*	
Heizung/Heater/Rezistans		Ohm	Verdampfer	Ablaufrinne
Widerstand/Resistance/Direnc		W	140	67
Leistung/Power/Guc				
Ventilador/Blower/Vantilatör		Ohm	Verdampfer	
Widerstand/Resistance/Rezistans				
Magnetventil/Magnetic valve/Manyetik valf		Ohm		
Widerstand/Resistance/Rezistans		V		
Spannung/Voltage/Gerilim				
Temp.Reyler/Thermostat/Termostat				

* Siehe Typenschild/Mamul etiketine bakiniz