

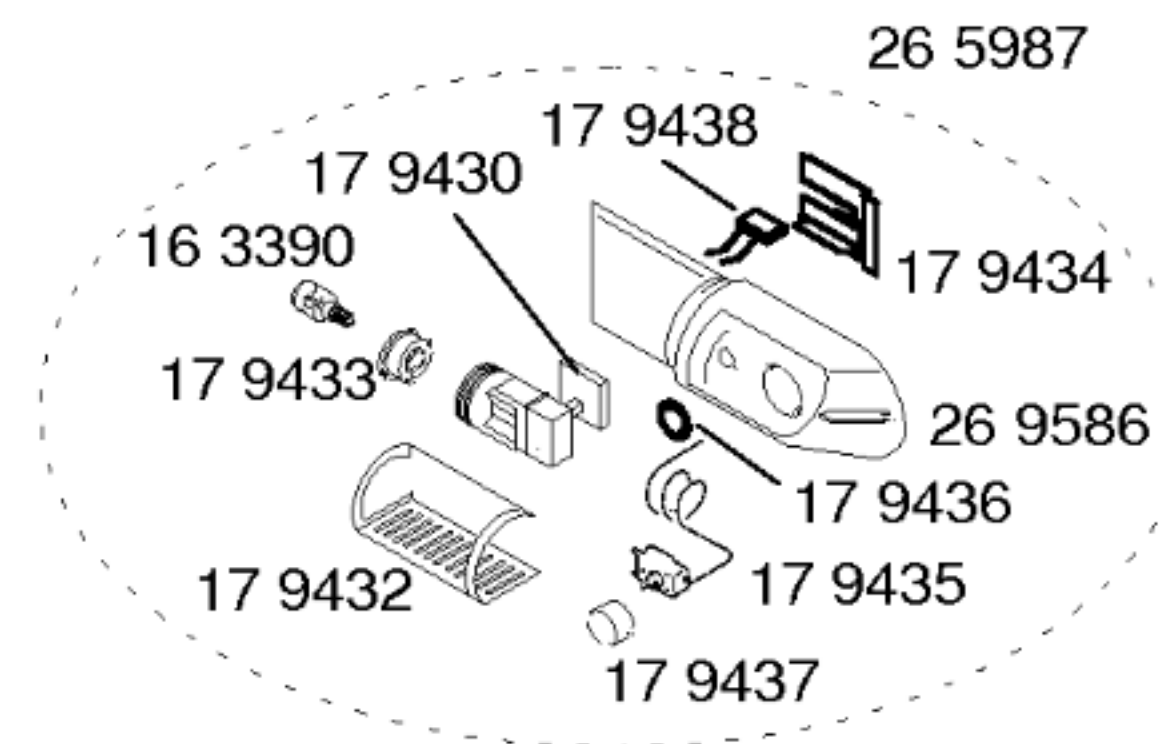


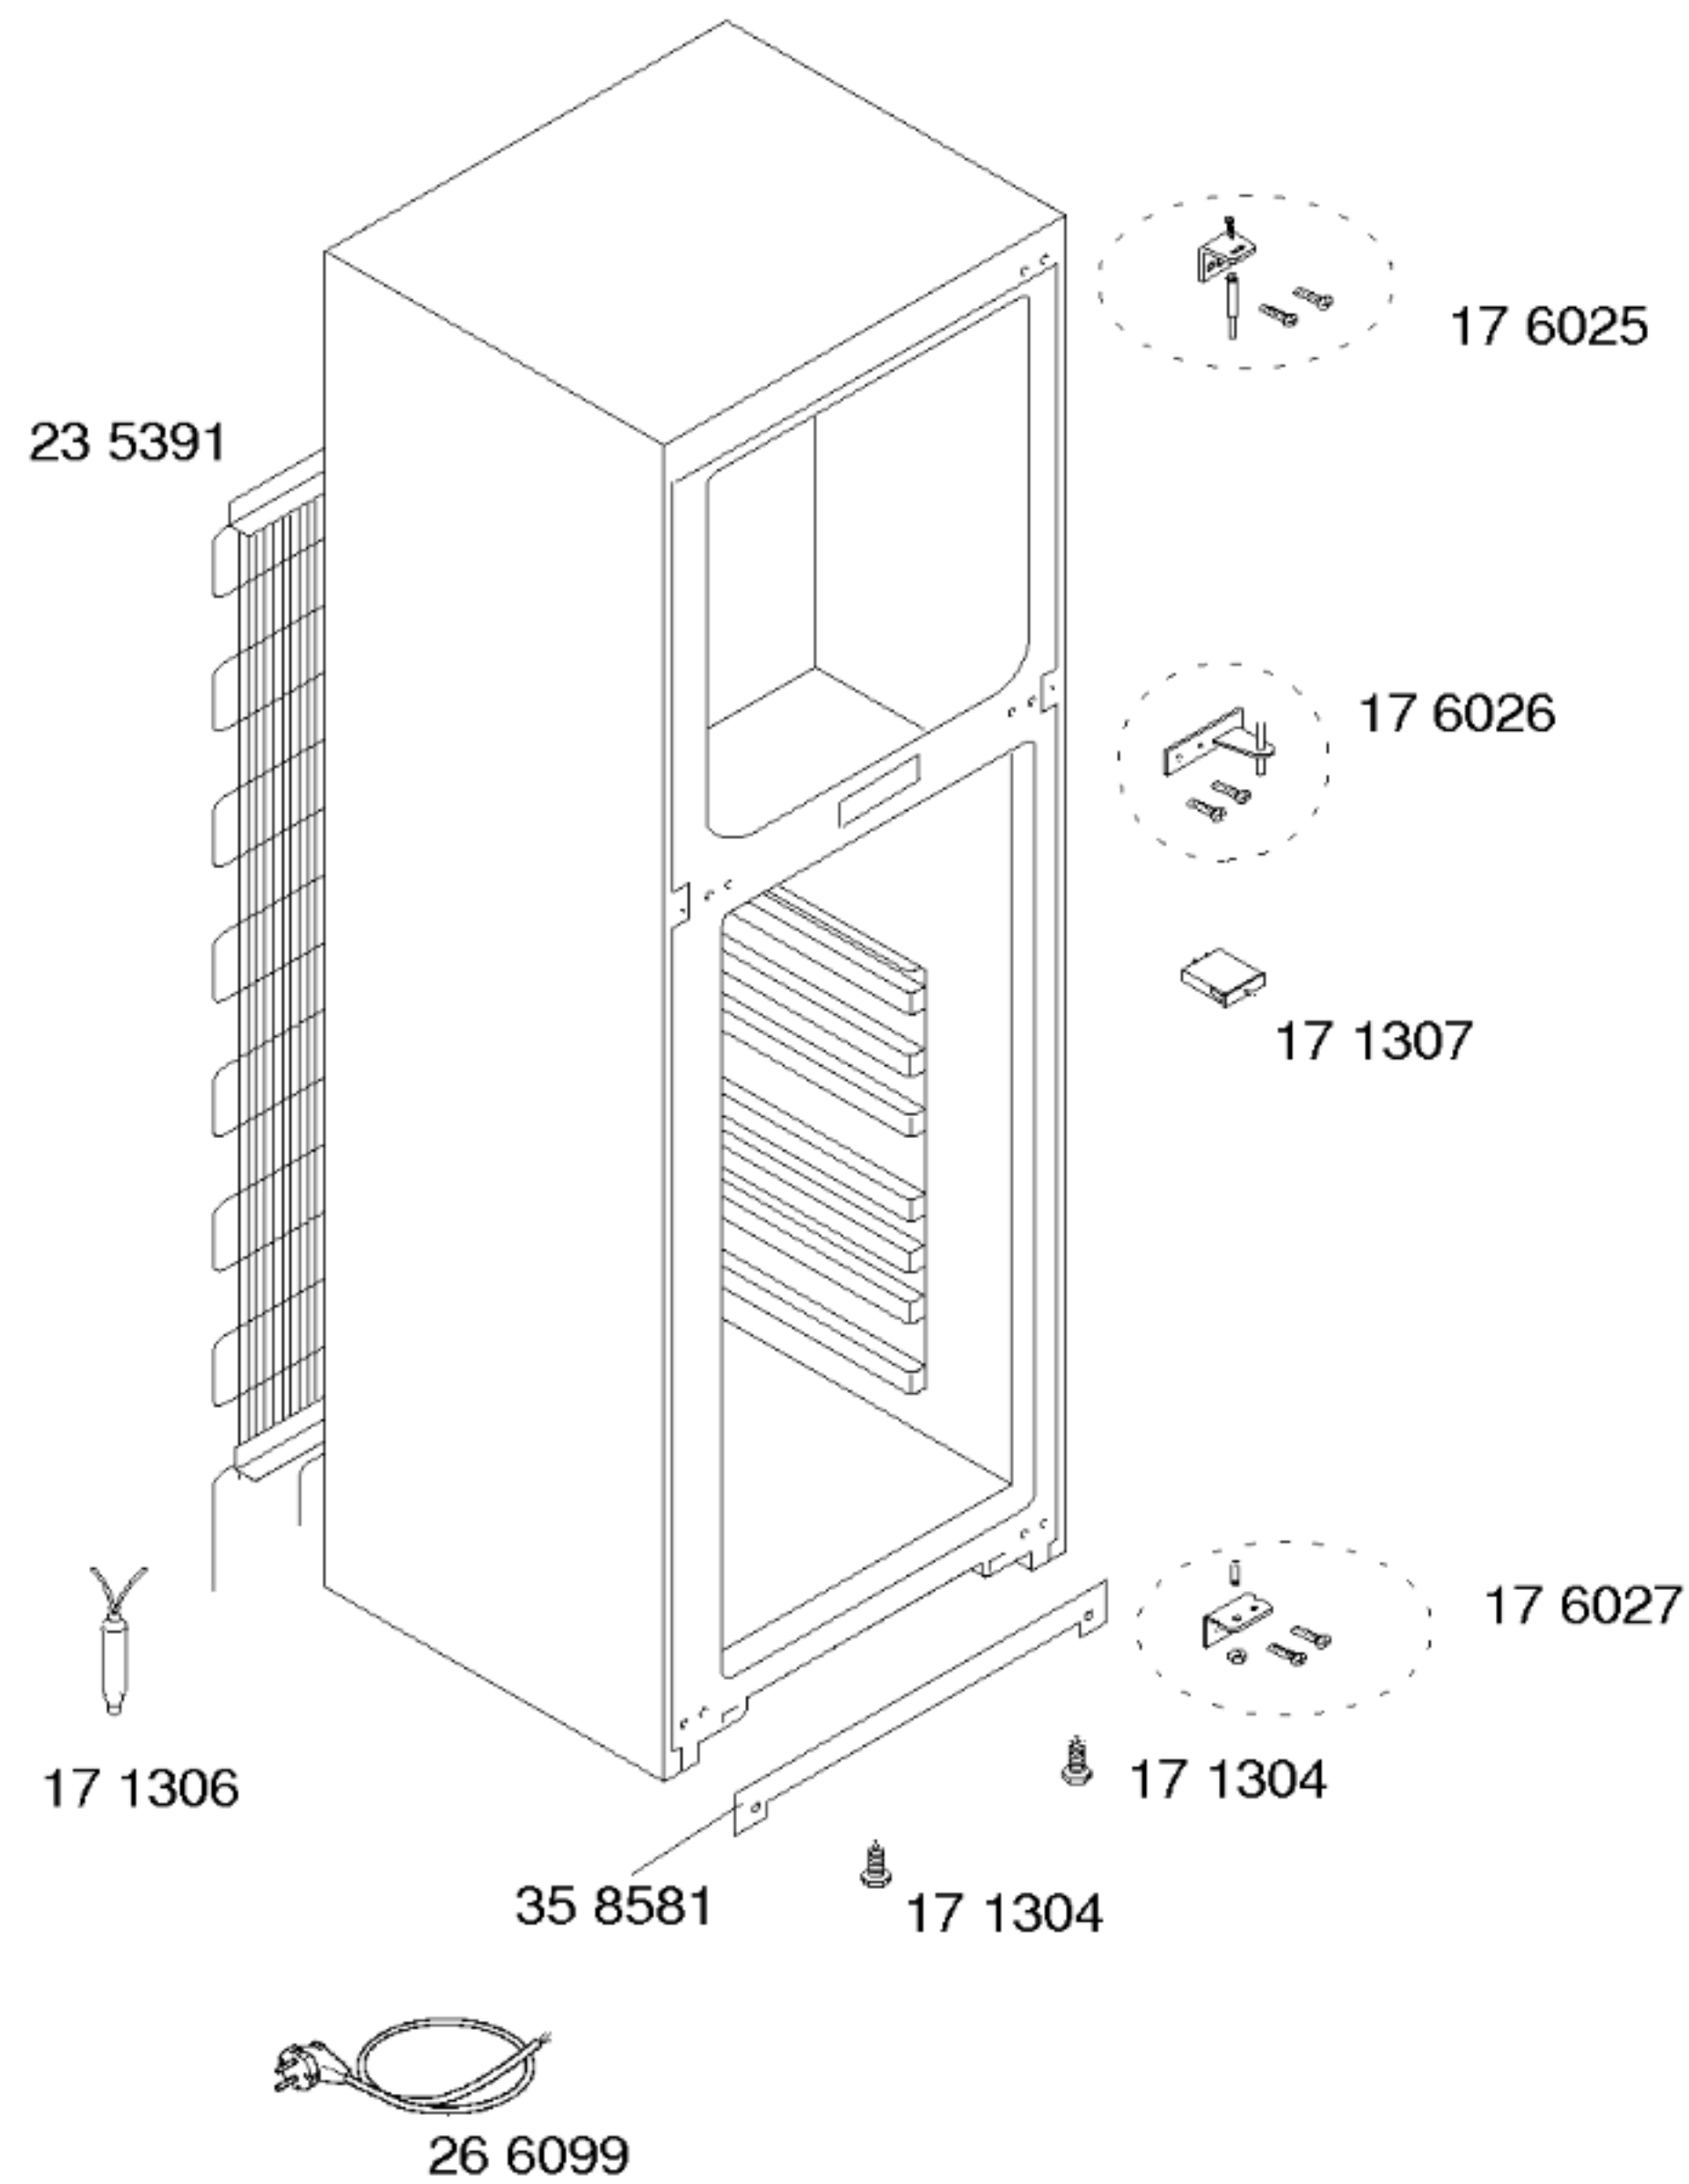


Gebrauchsanweisung
52 5376
(DE,GB,FR,NL,IT,ES,
PT,GR)

Montagesatz fuer
Scharnierwechsel
17 5513

1) 35 8584
2) 35 4895

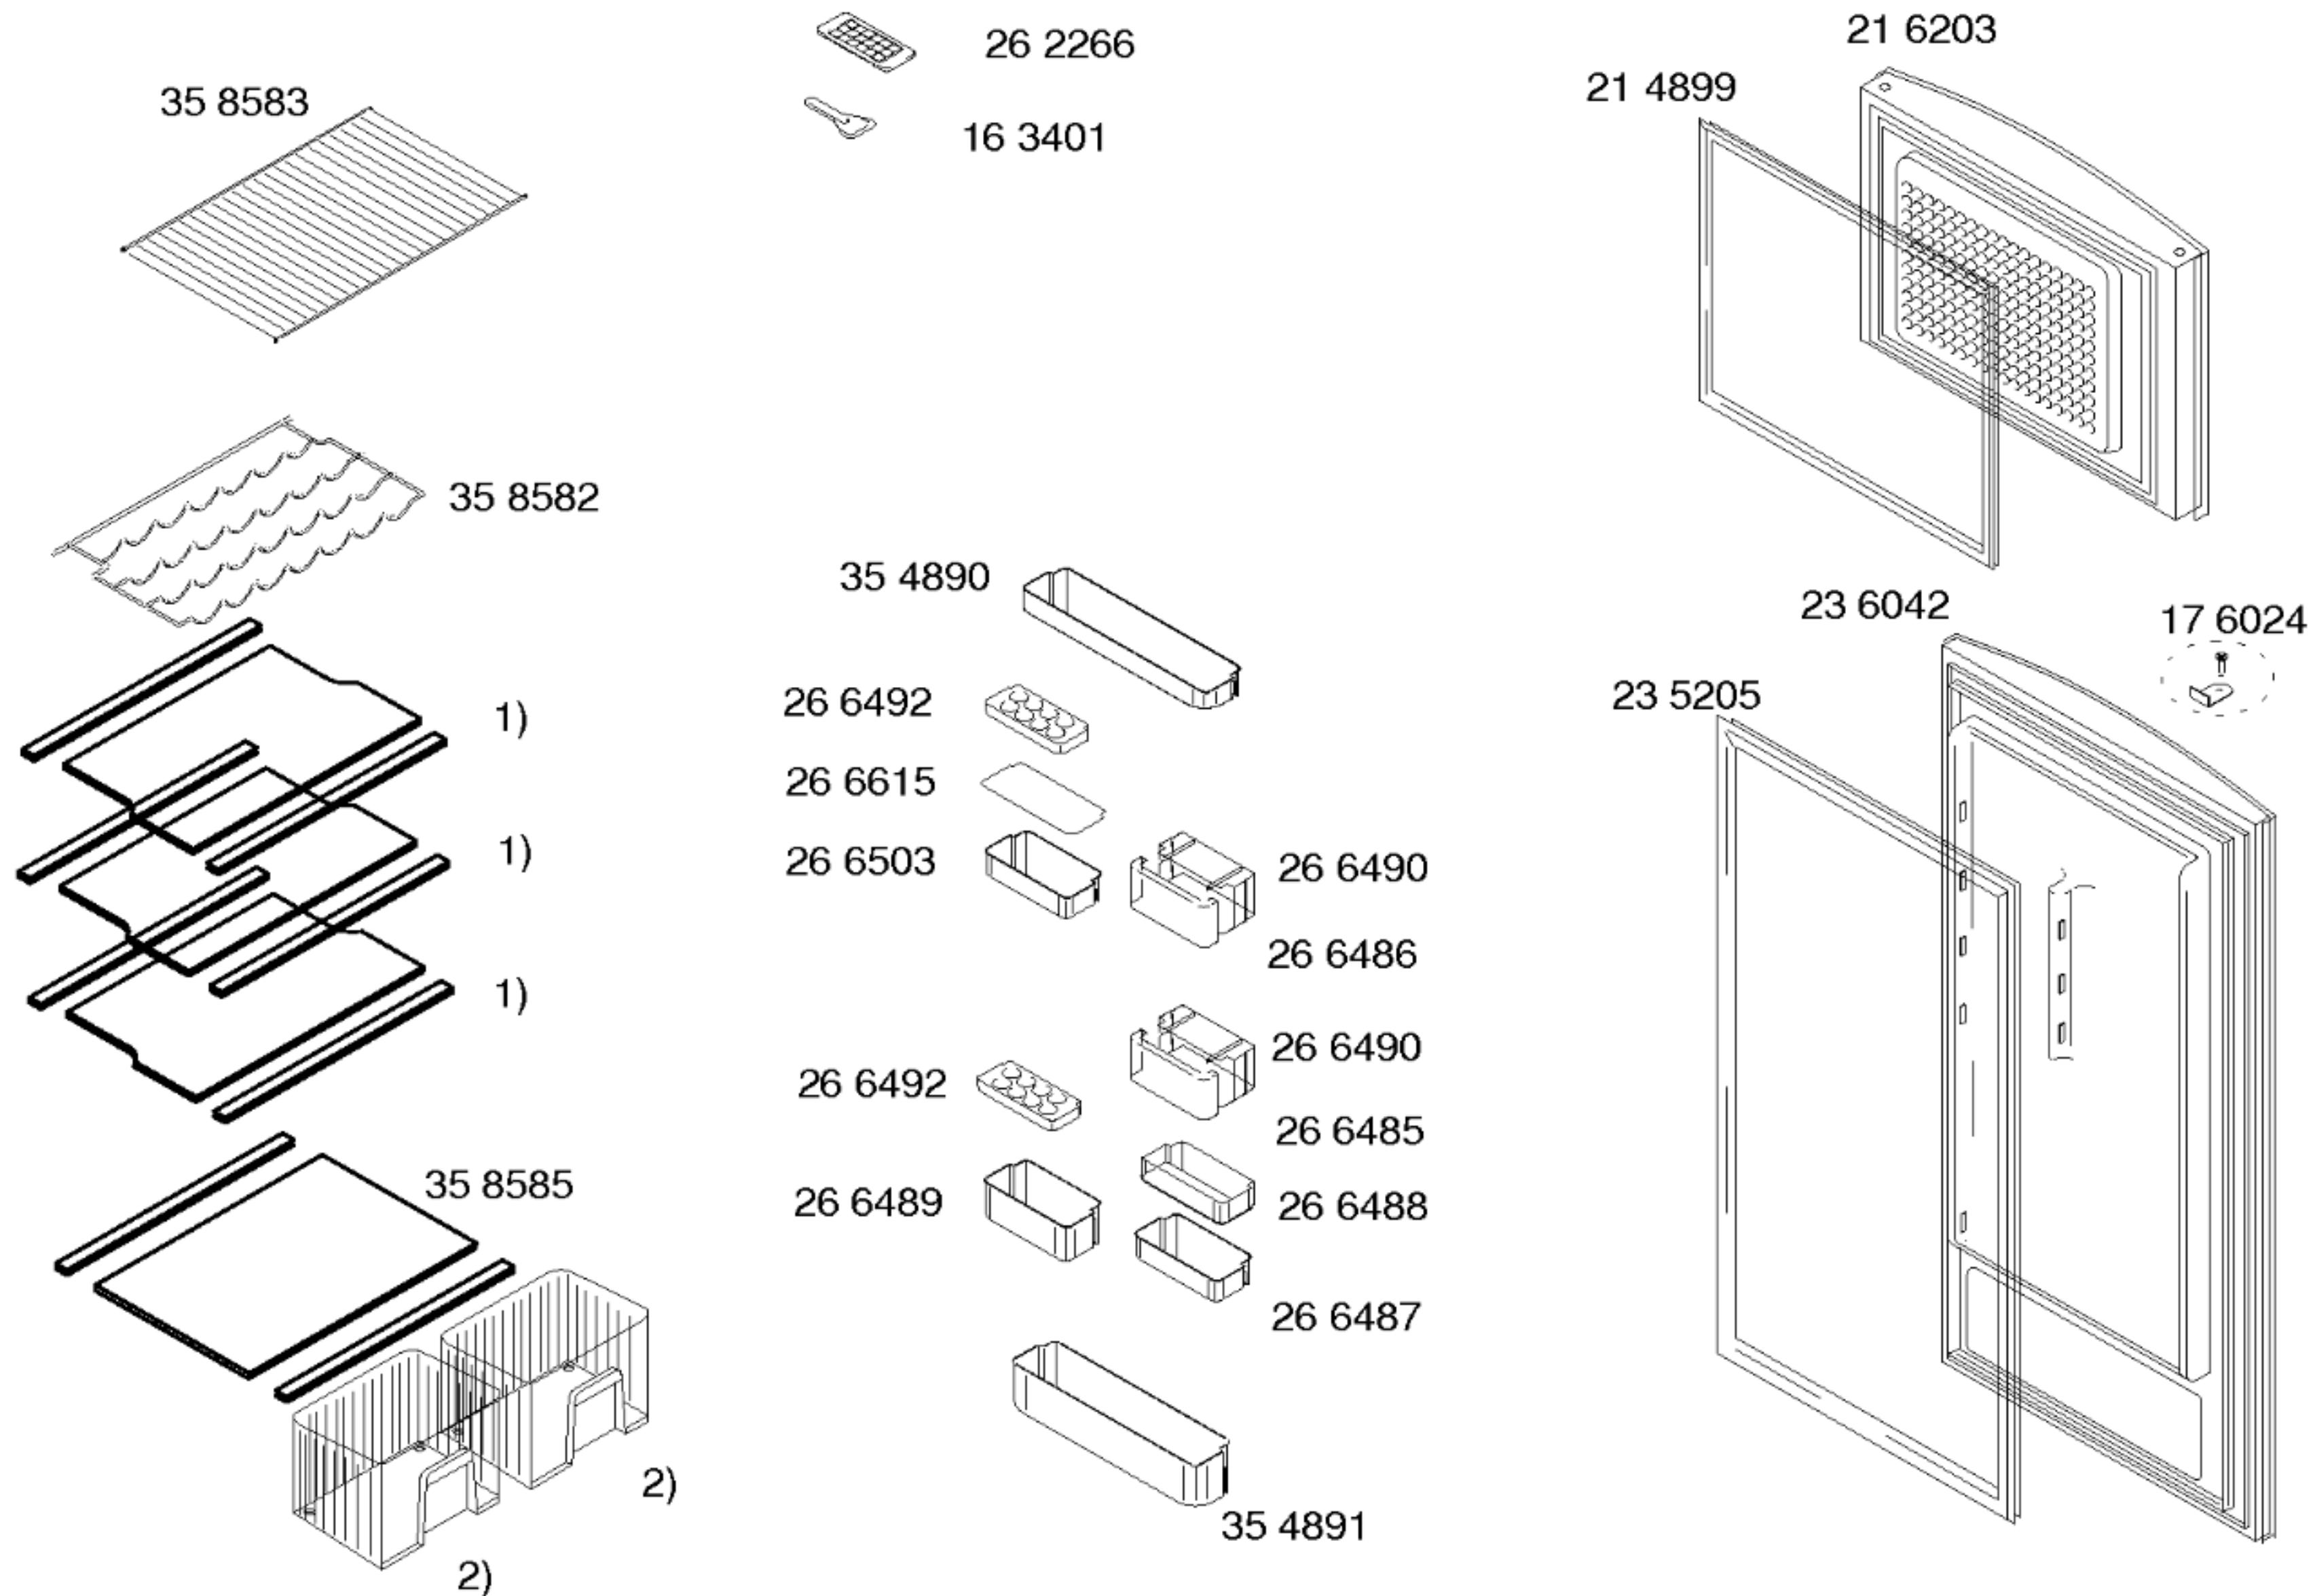

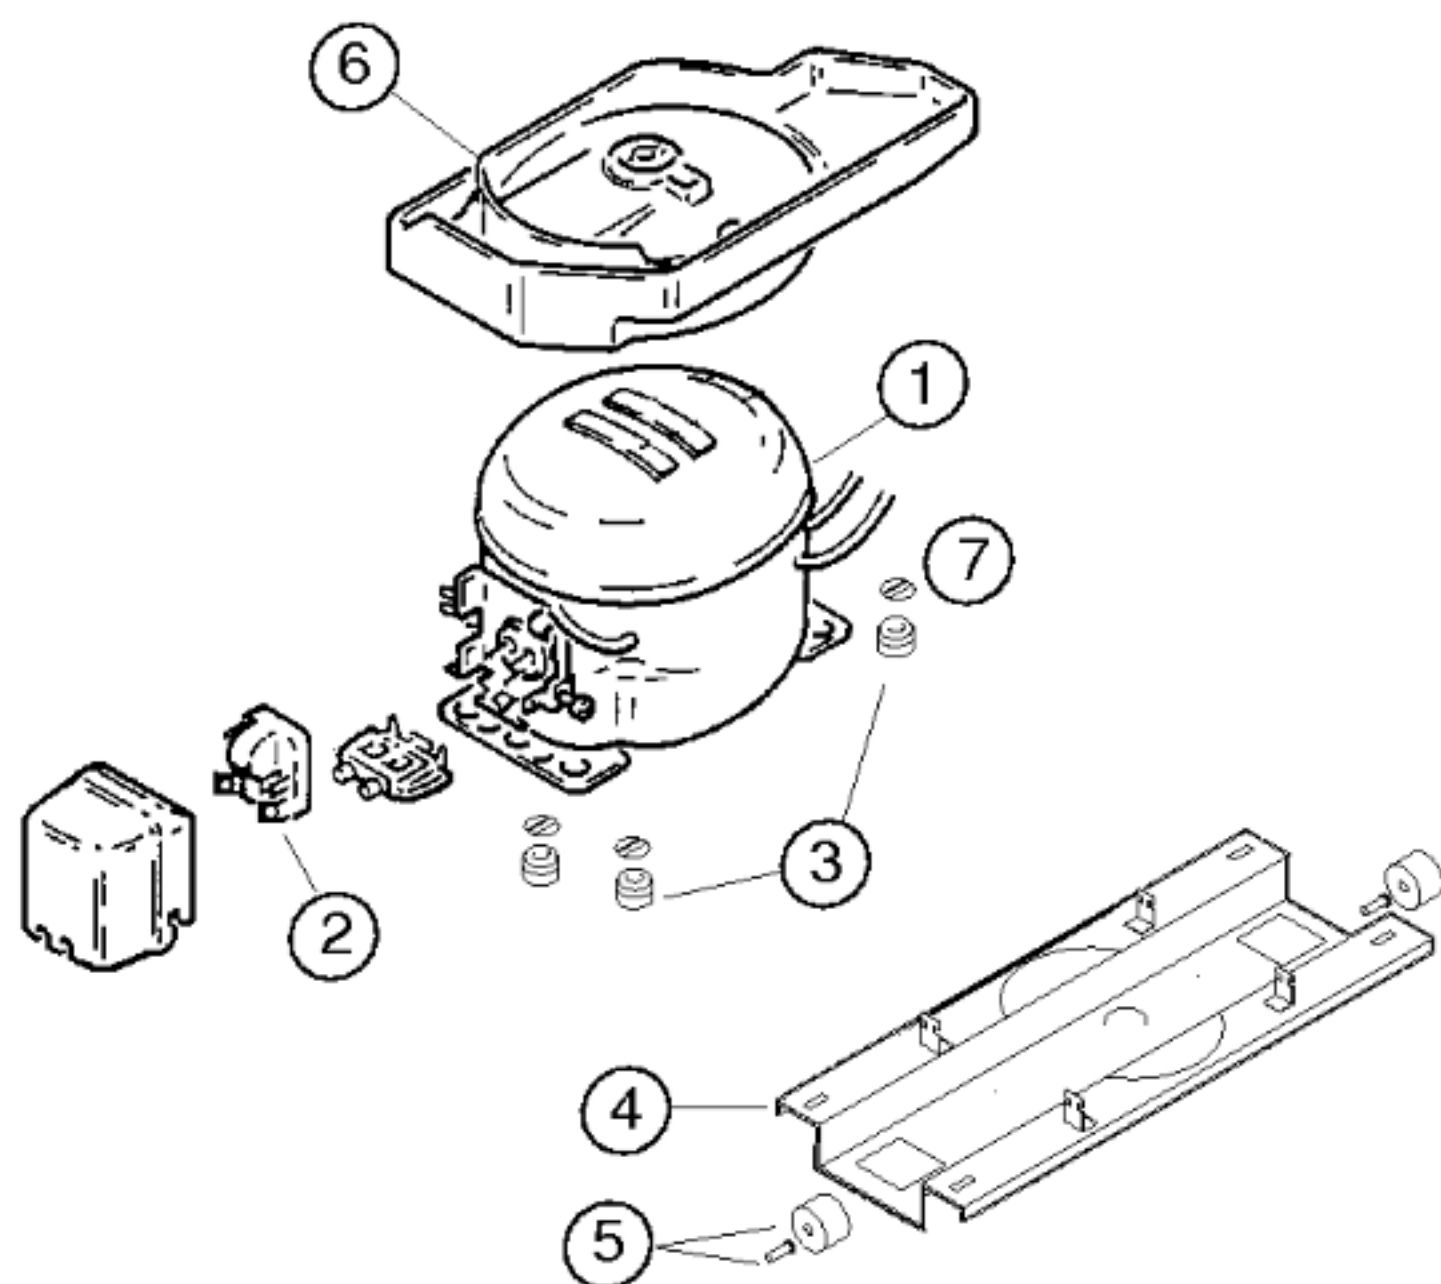

Pos.			
	Danfoss		
	NLE15K		
1	14 1926		
2	16 5570		
3	16 3427		
4	35 4583		
5	17 1318		
6	26 5327		
7	17 1519		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNİK BİLGİLER

Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NLE15K		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	10.9	
Widerstand/Resistance/Rezistans Ha/	Ohm	10.7	
Hi/aux.		13.0	
Temp.Reyler/Thermostat/Termostat	RANCO		
Typ/Type/Tip	K59/P1777		
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	..ein/acma °C	+3.5 +3.5	
Valeurs de commutation/Termostat degeri	..aus"/kapama	-31 -20	
(..abtaven' od)	..alarm'		
Füllmenge/Fill quantity/ Dolum miktarı	R600	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans	Ohm		
Widerstand/Resistance/Direnc	W		
Leistung/Power/Guc			
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakınız