




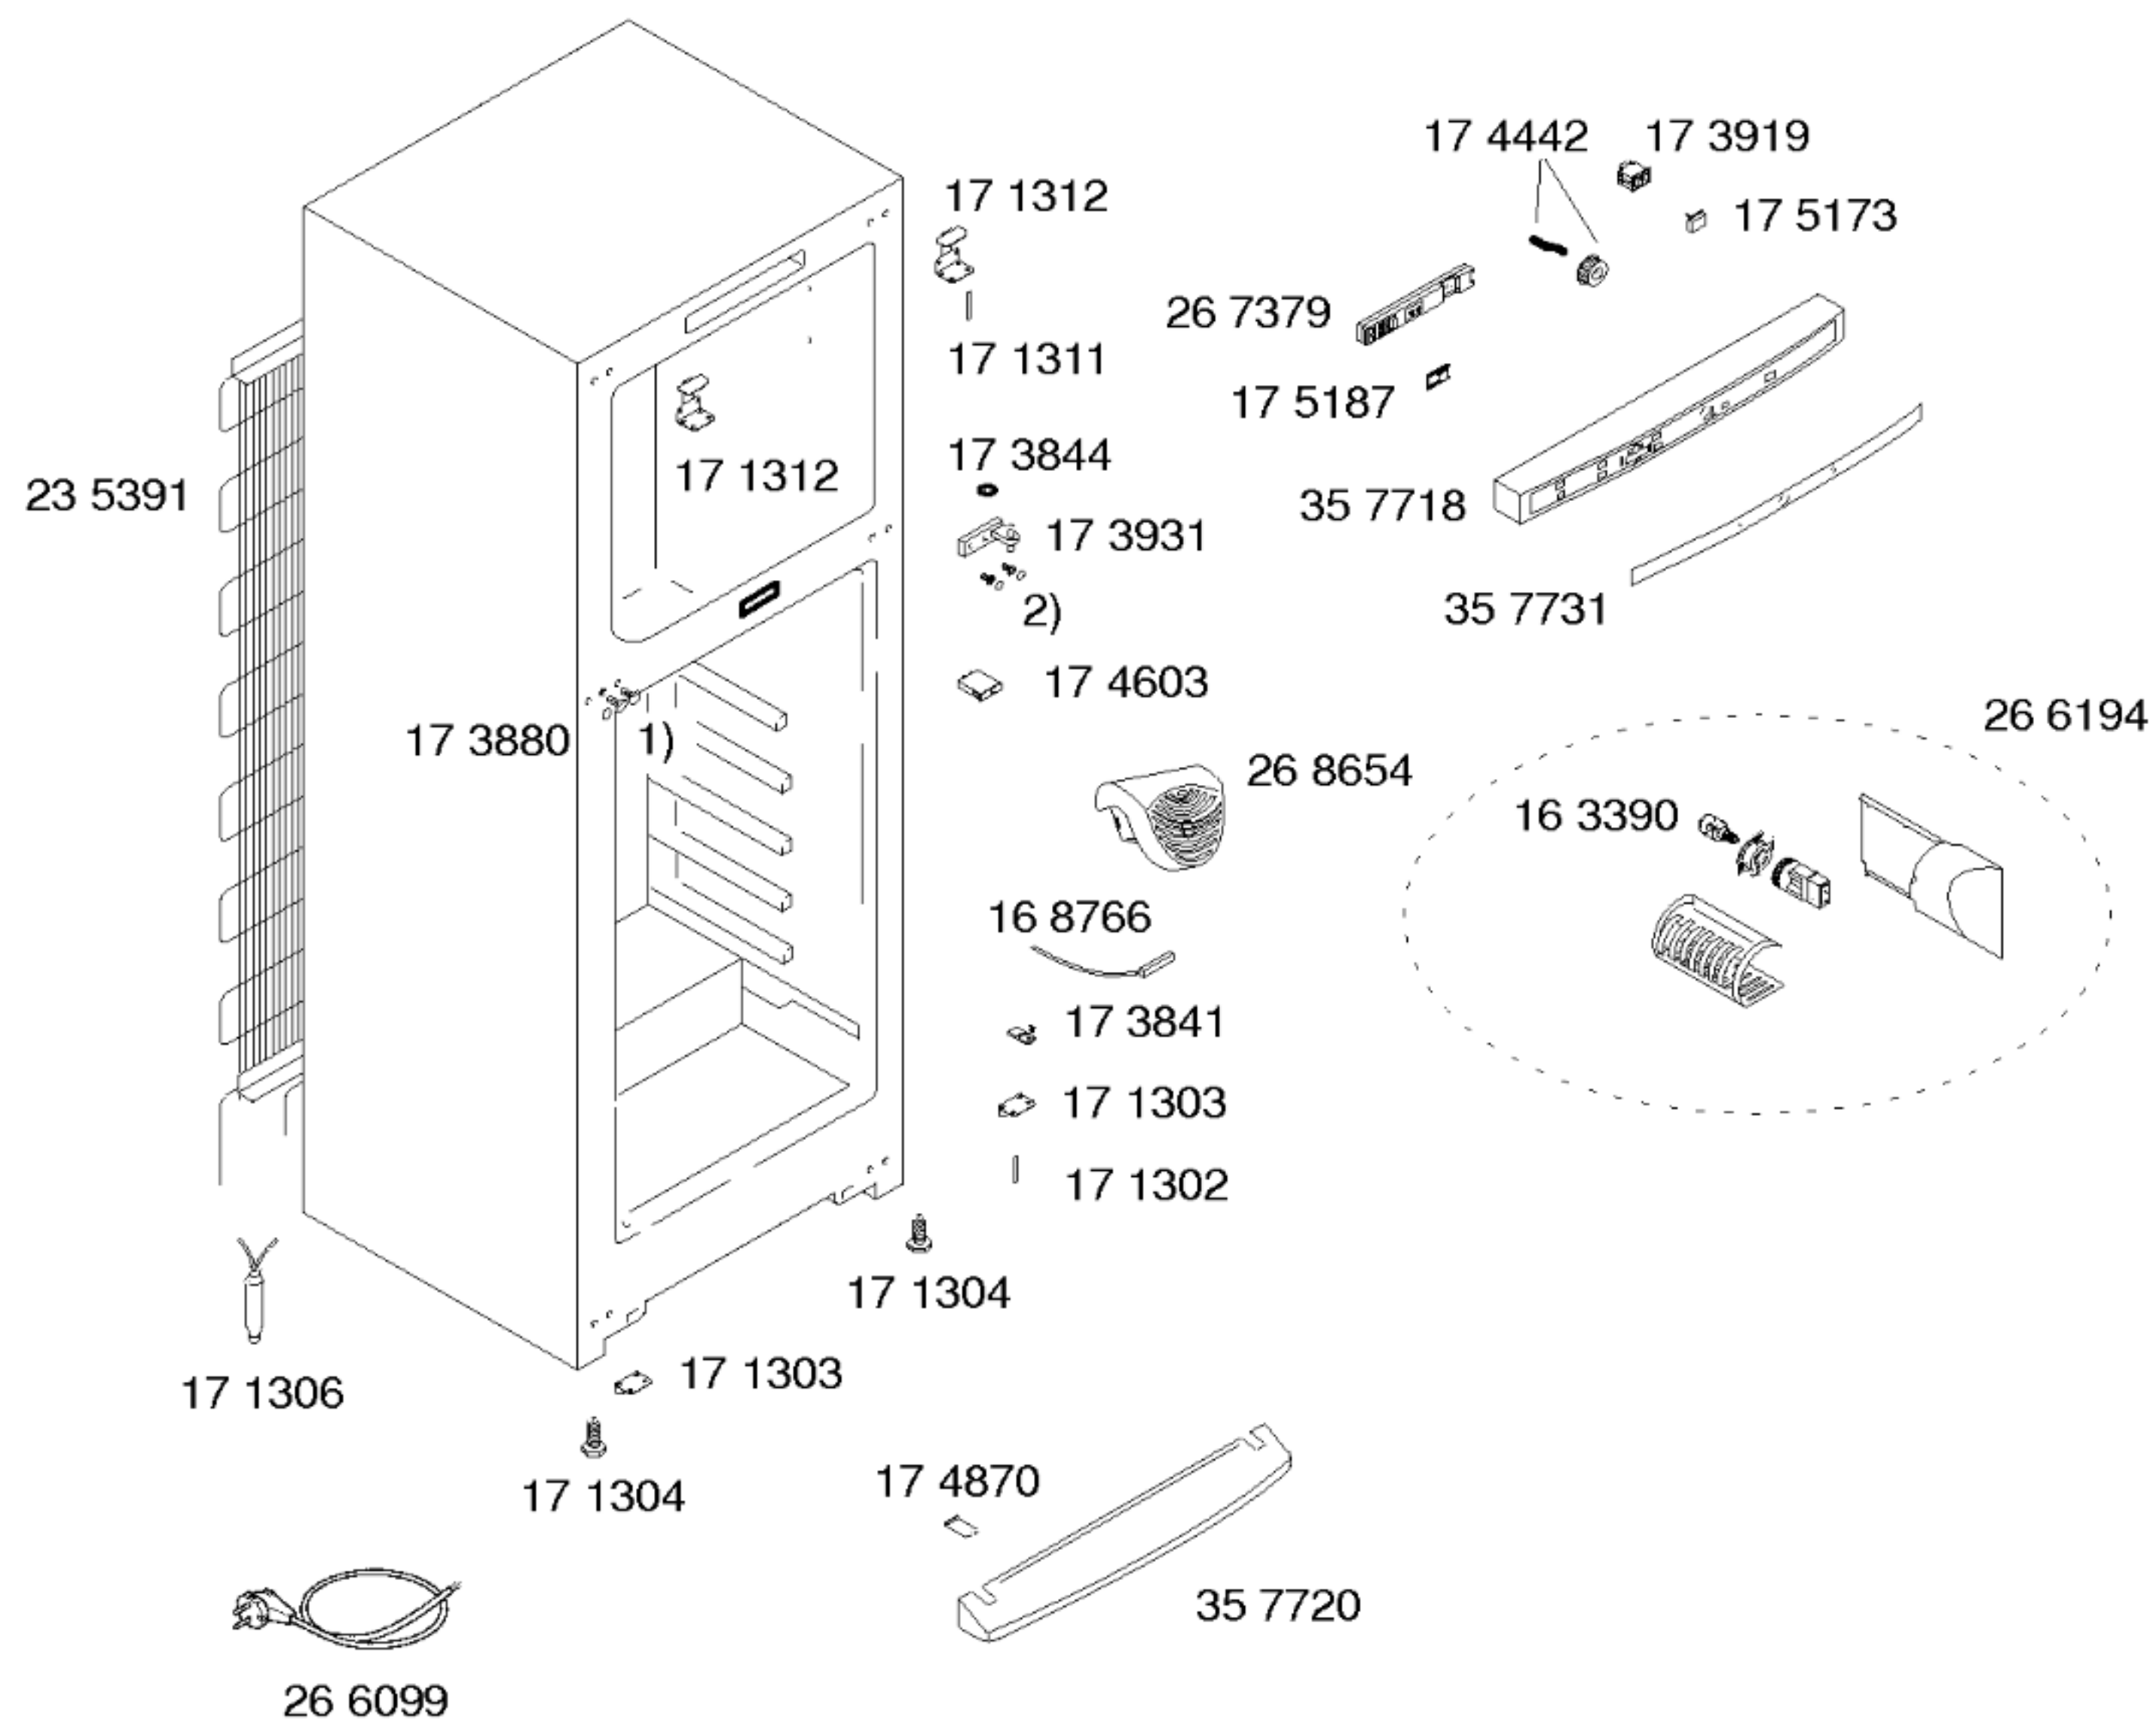

Gebrauchsanweisung
52 4298
(DE,GB,FR,NL,IT,
ES,PT,GR)

- 1) 17 3865
- 2) 17 3864

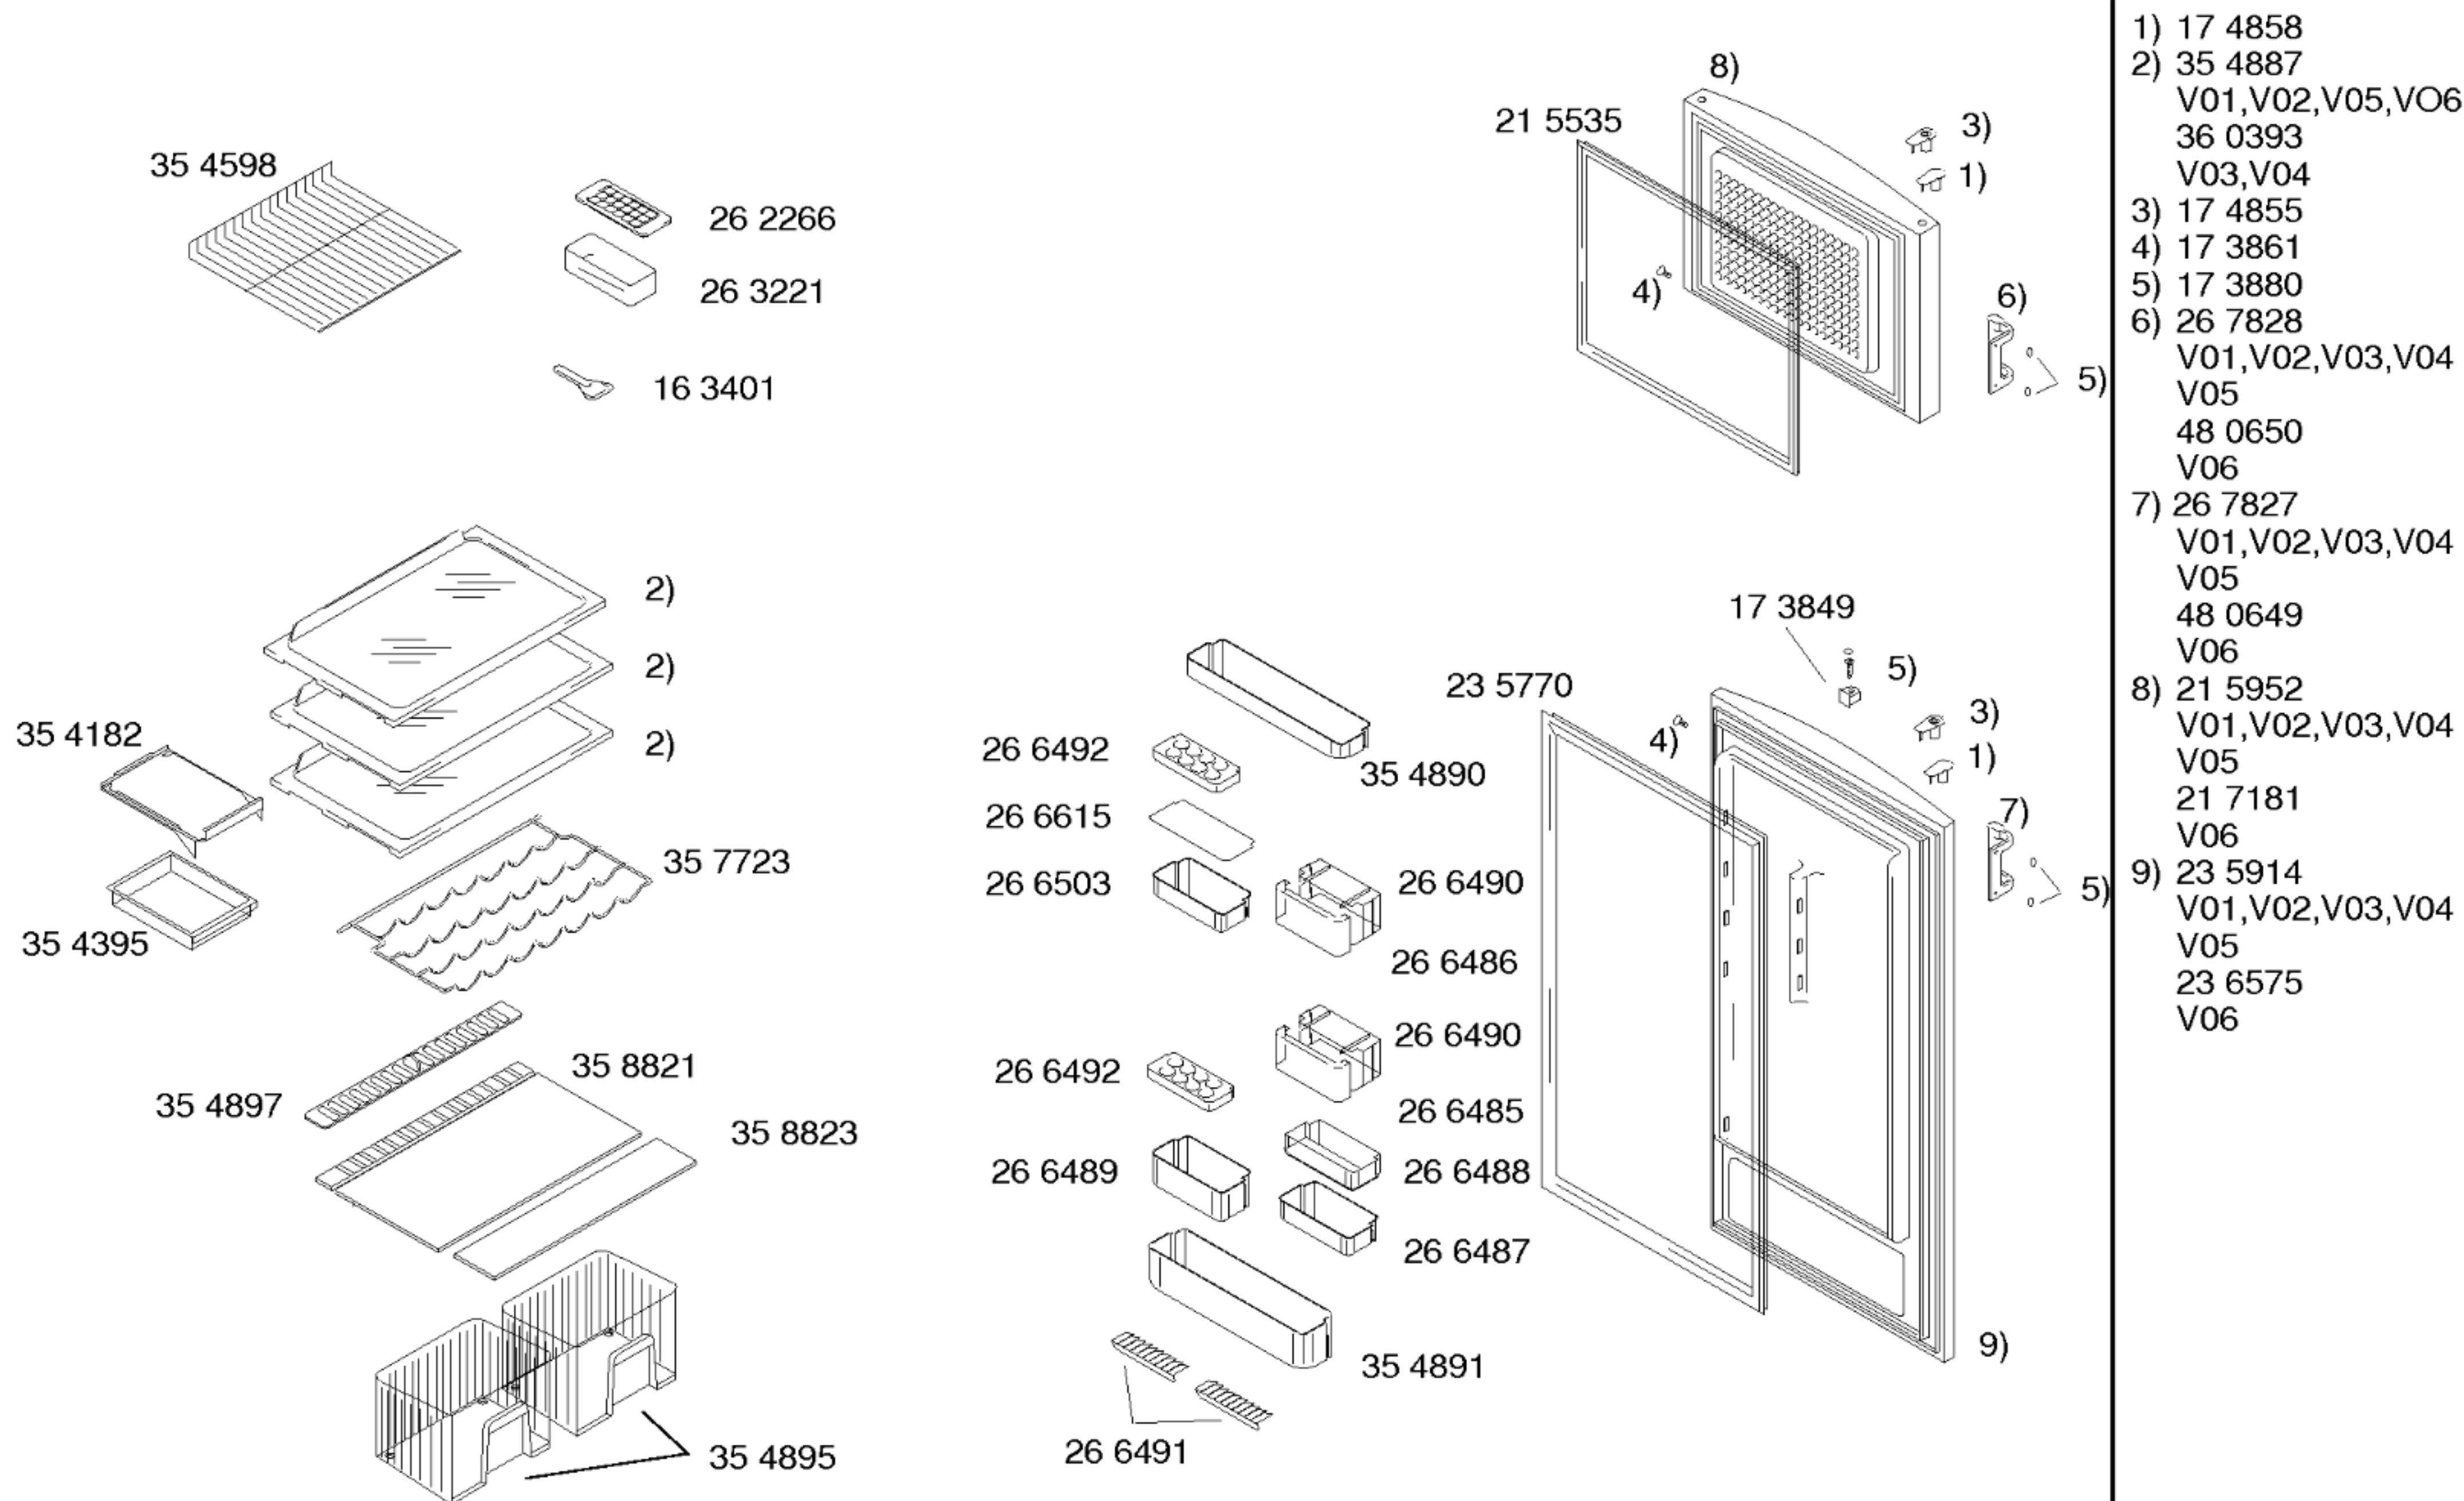

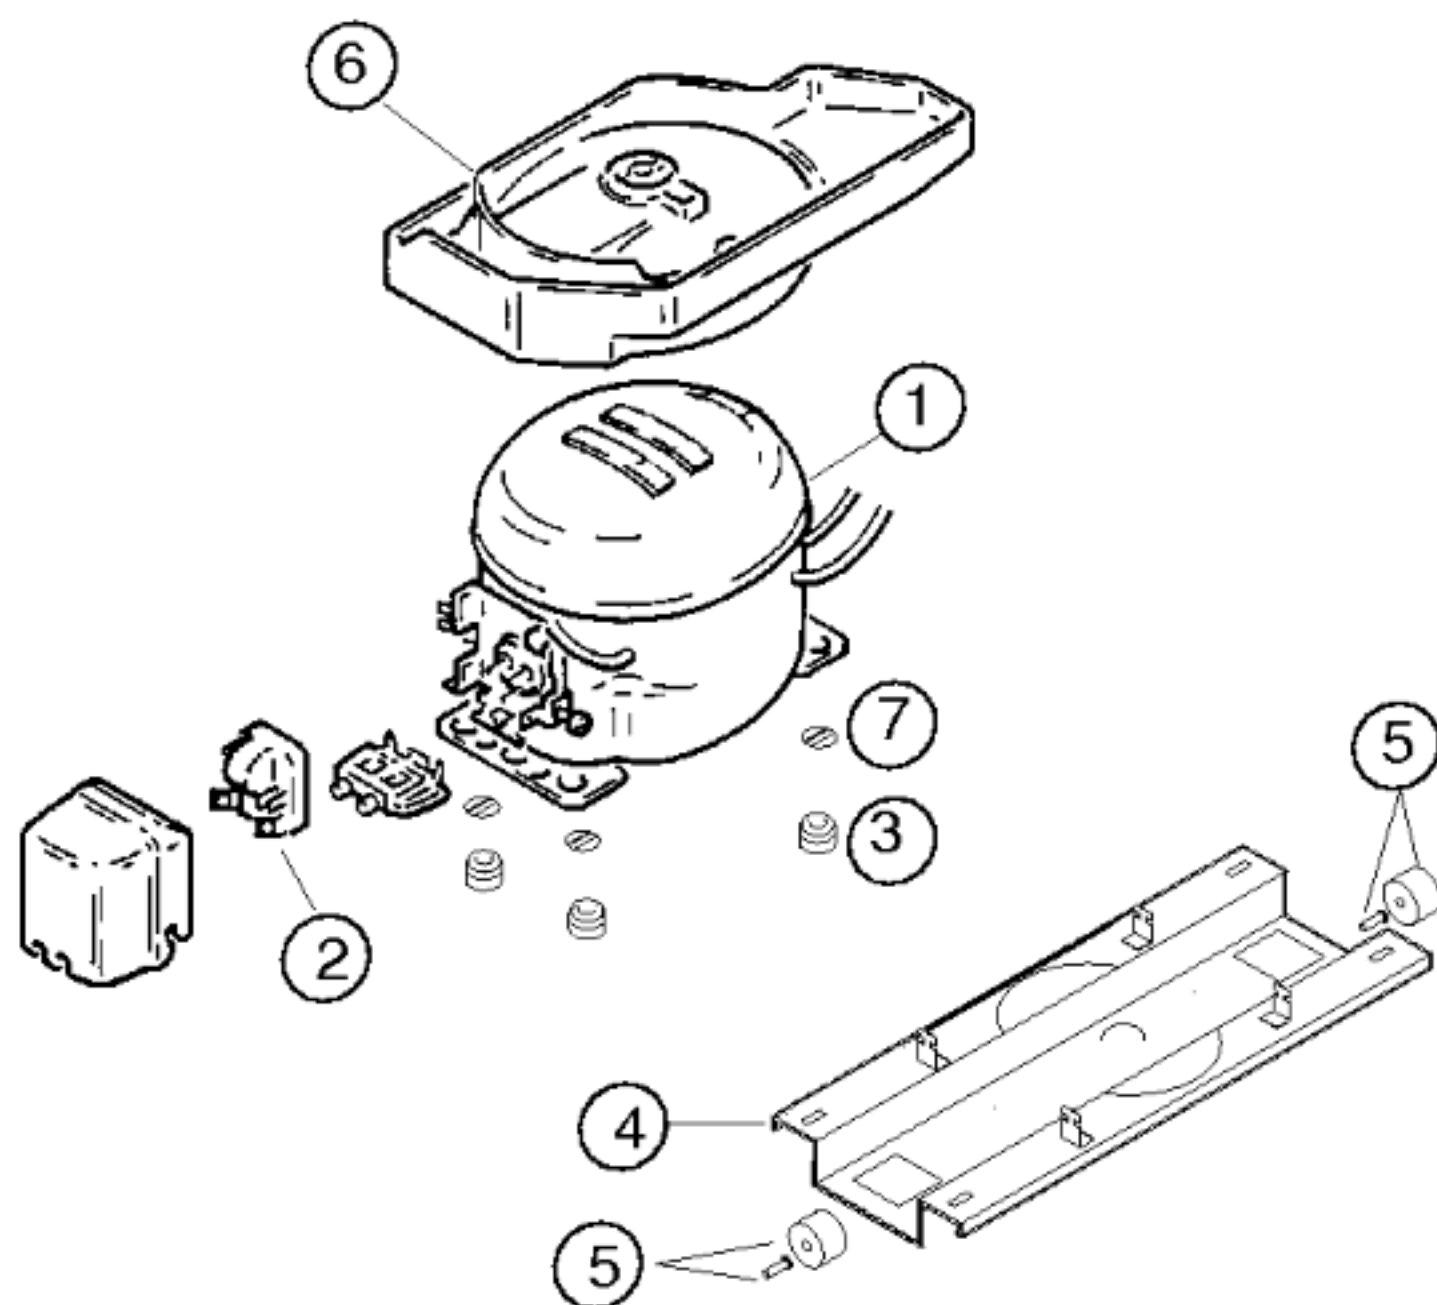

Pos.	Danfoss		
	NLE15K		
1	14 1926		
2	16 5570		
3	16 3427		
4	35 4583		
5	17 1318		
6	26 5327		
7	17 1519		
8			
9			
10			
11			
12			

TECHNISCHE DATEN/TECHNICAL DATA/TEKNIK BİLGİLER			
Verdichter/Compressor/Kompresör	Danfoss		
Typ/Type/Tip	NLE15K		
Förderleistung/Delivery/Verim/h			
Anlaufstrom/Starting current/Giris akimi	A	6.6/0.9	
Widerstand/Resistance/Rezistans Ha/Hi/aux.	Ohm	10.7	
		13	
Temp.Reyler/Thermostat/Termostat	Electronic		
Typ/Type/Tip			
Reglerstellung/Position/Termostat pozisyonu			
Schaltwerte/Acma kapama degerleri	..ein/acma °C		
Valeurs de commutation/Termostat degeri	..aus"/kapama		
(..abtaven' od)	..alarm'		
Füllmenge/Fill. quantily/ Dolum miktarı	R600	g	*
Anschlusswert/Comm. load/Giris gucu	W	*	
Heizung/Heater/Rezistans			
Widerstand/Resistance/Direnc	Ohm		
Leistung/Power/Guc	W		
Ventilador/Blower/Vantilatör			
Widerstand/Resistance/Rezistans	Ohm		
Magnetventil/Magnetic valve/Manyetik valf			
Widerstand/Resistance/Rezistans	Ohm		
Spannung/Voltage/Gerilim	V		
Temp.Reyler/Thermostat/Termostat			

* Siehe Typenschild/Mamul etiketine bakiniz