




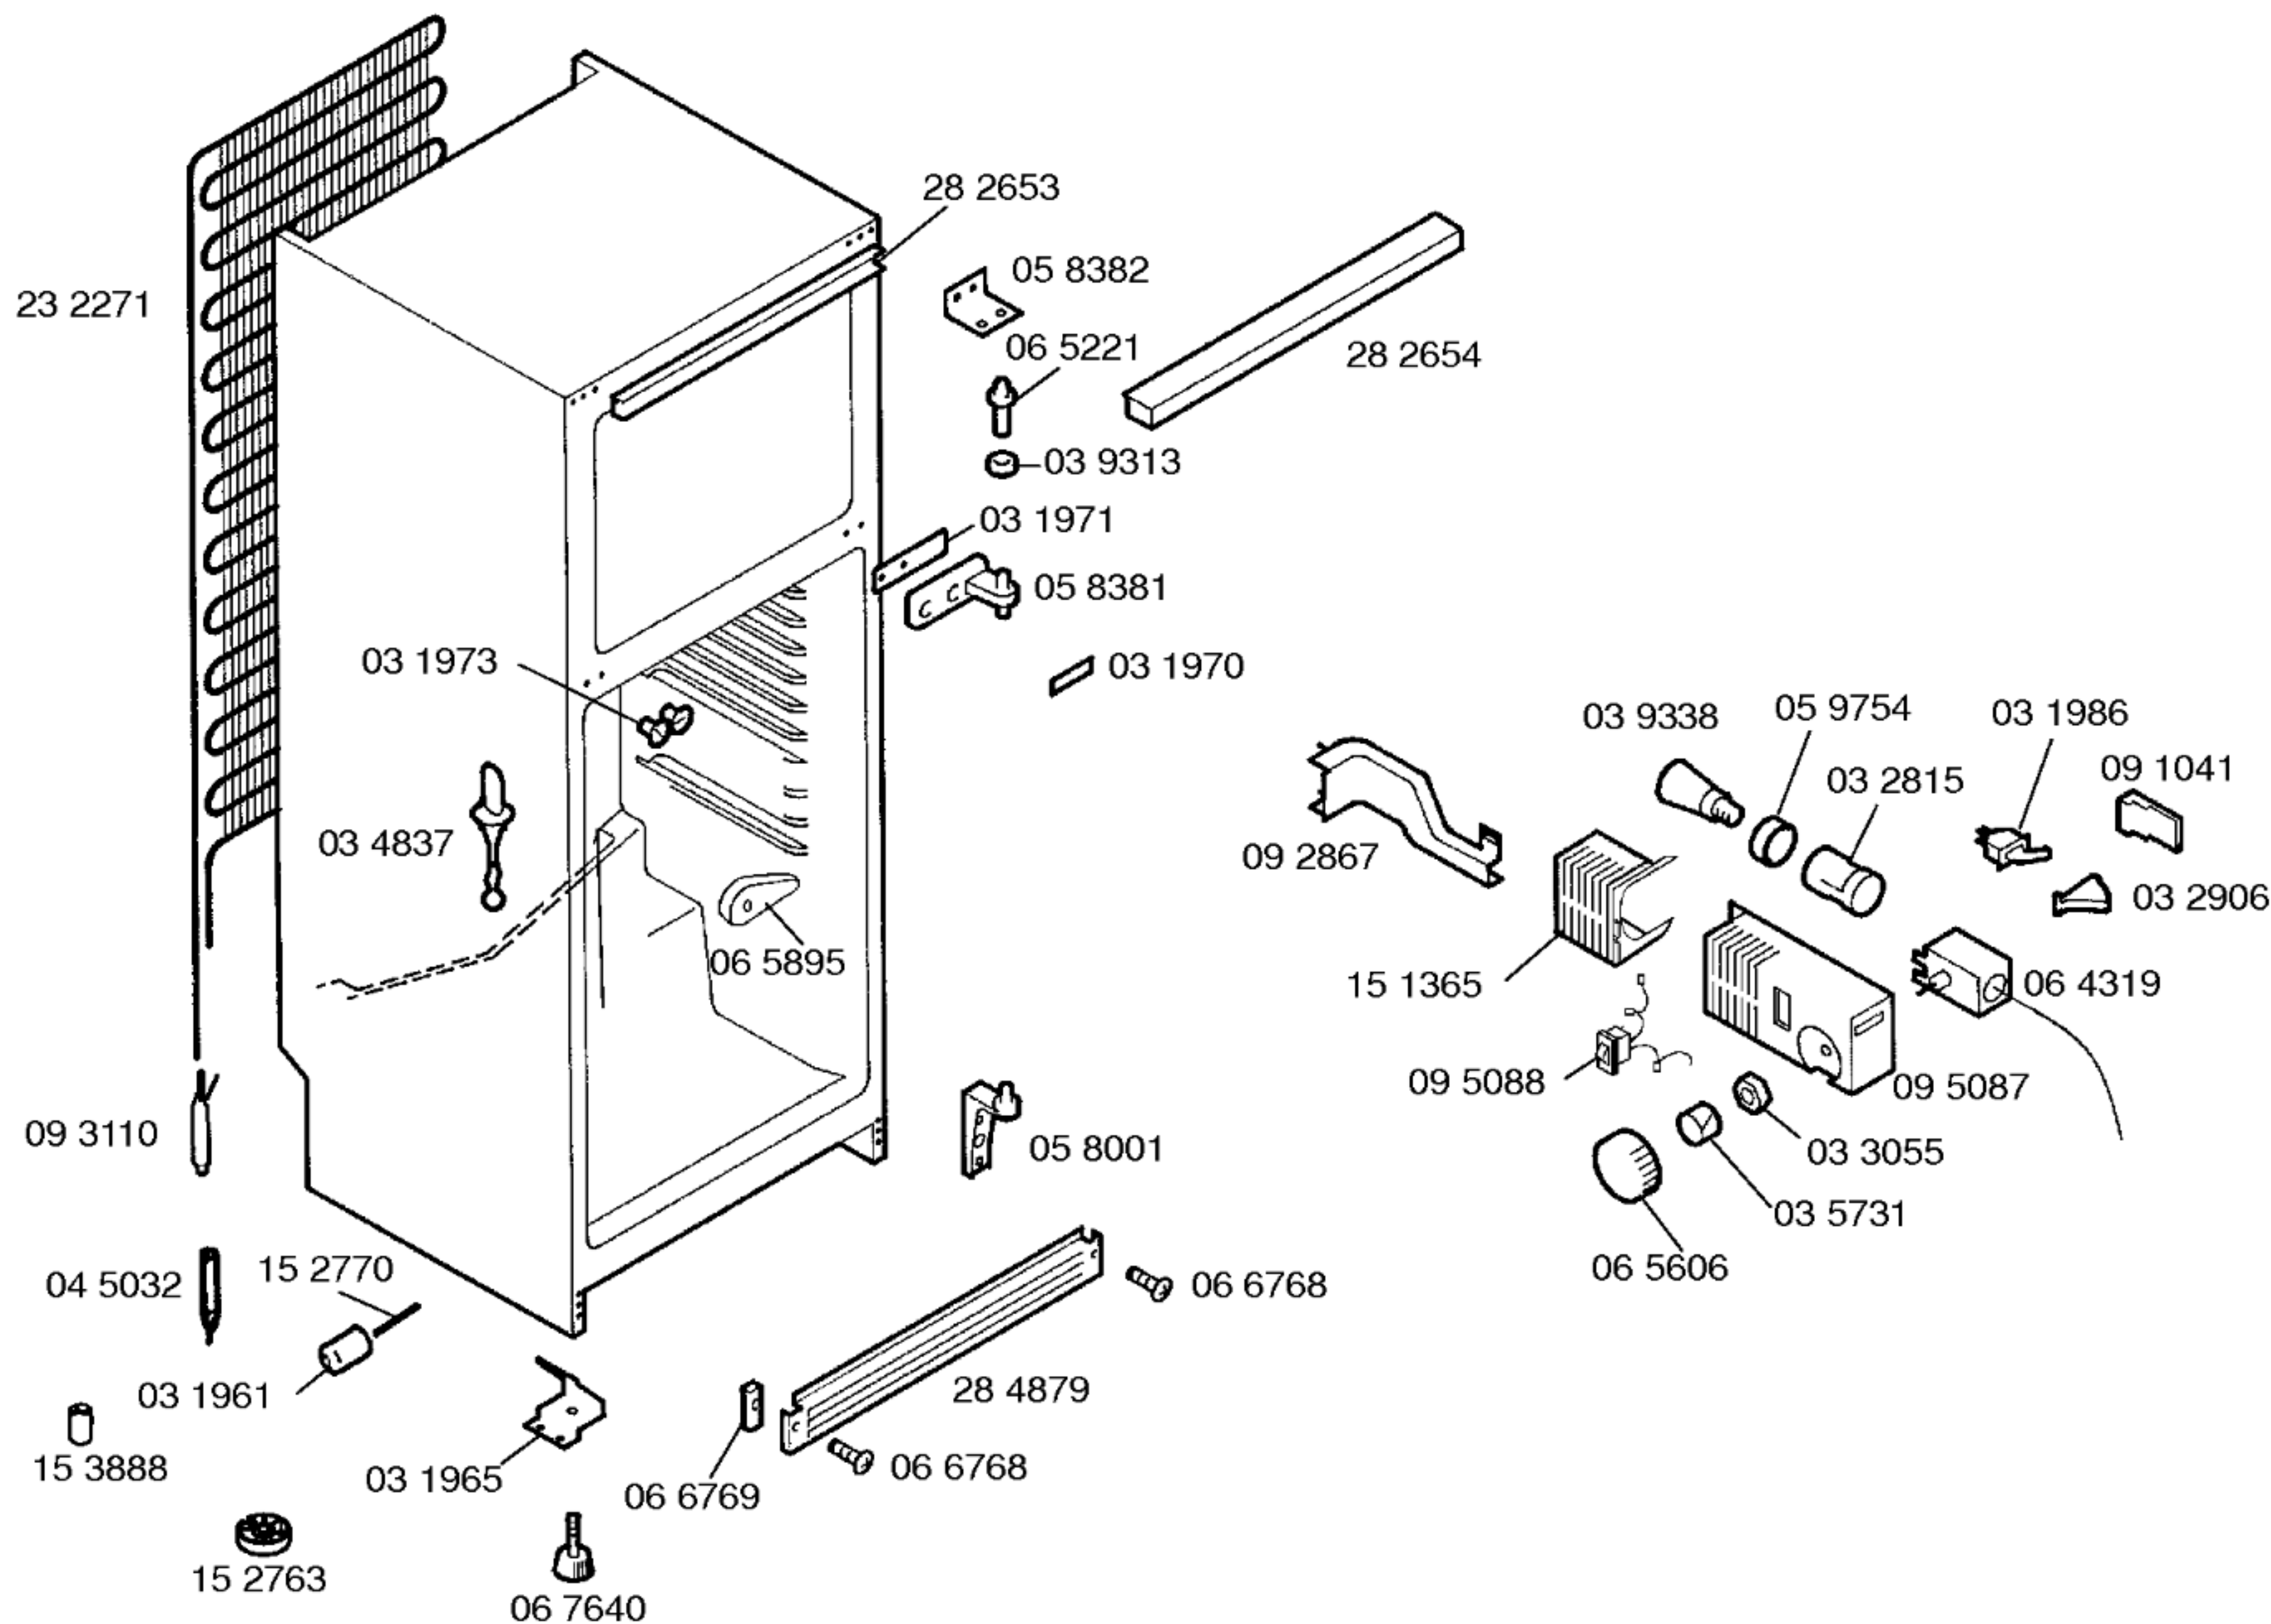

Gebrauchsanweisung
51 7220
(D, GB, F, I, NL, P, N,
S, SF).

Montageanweisung
51 6277
(D, GB, F, I, NL, P, N)

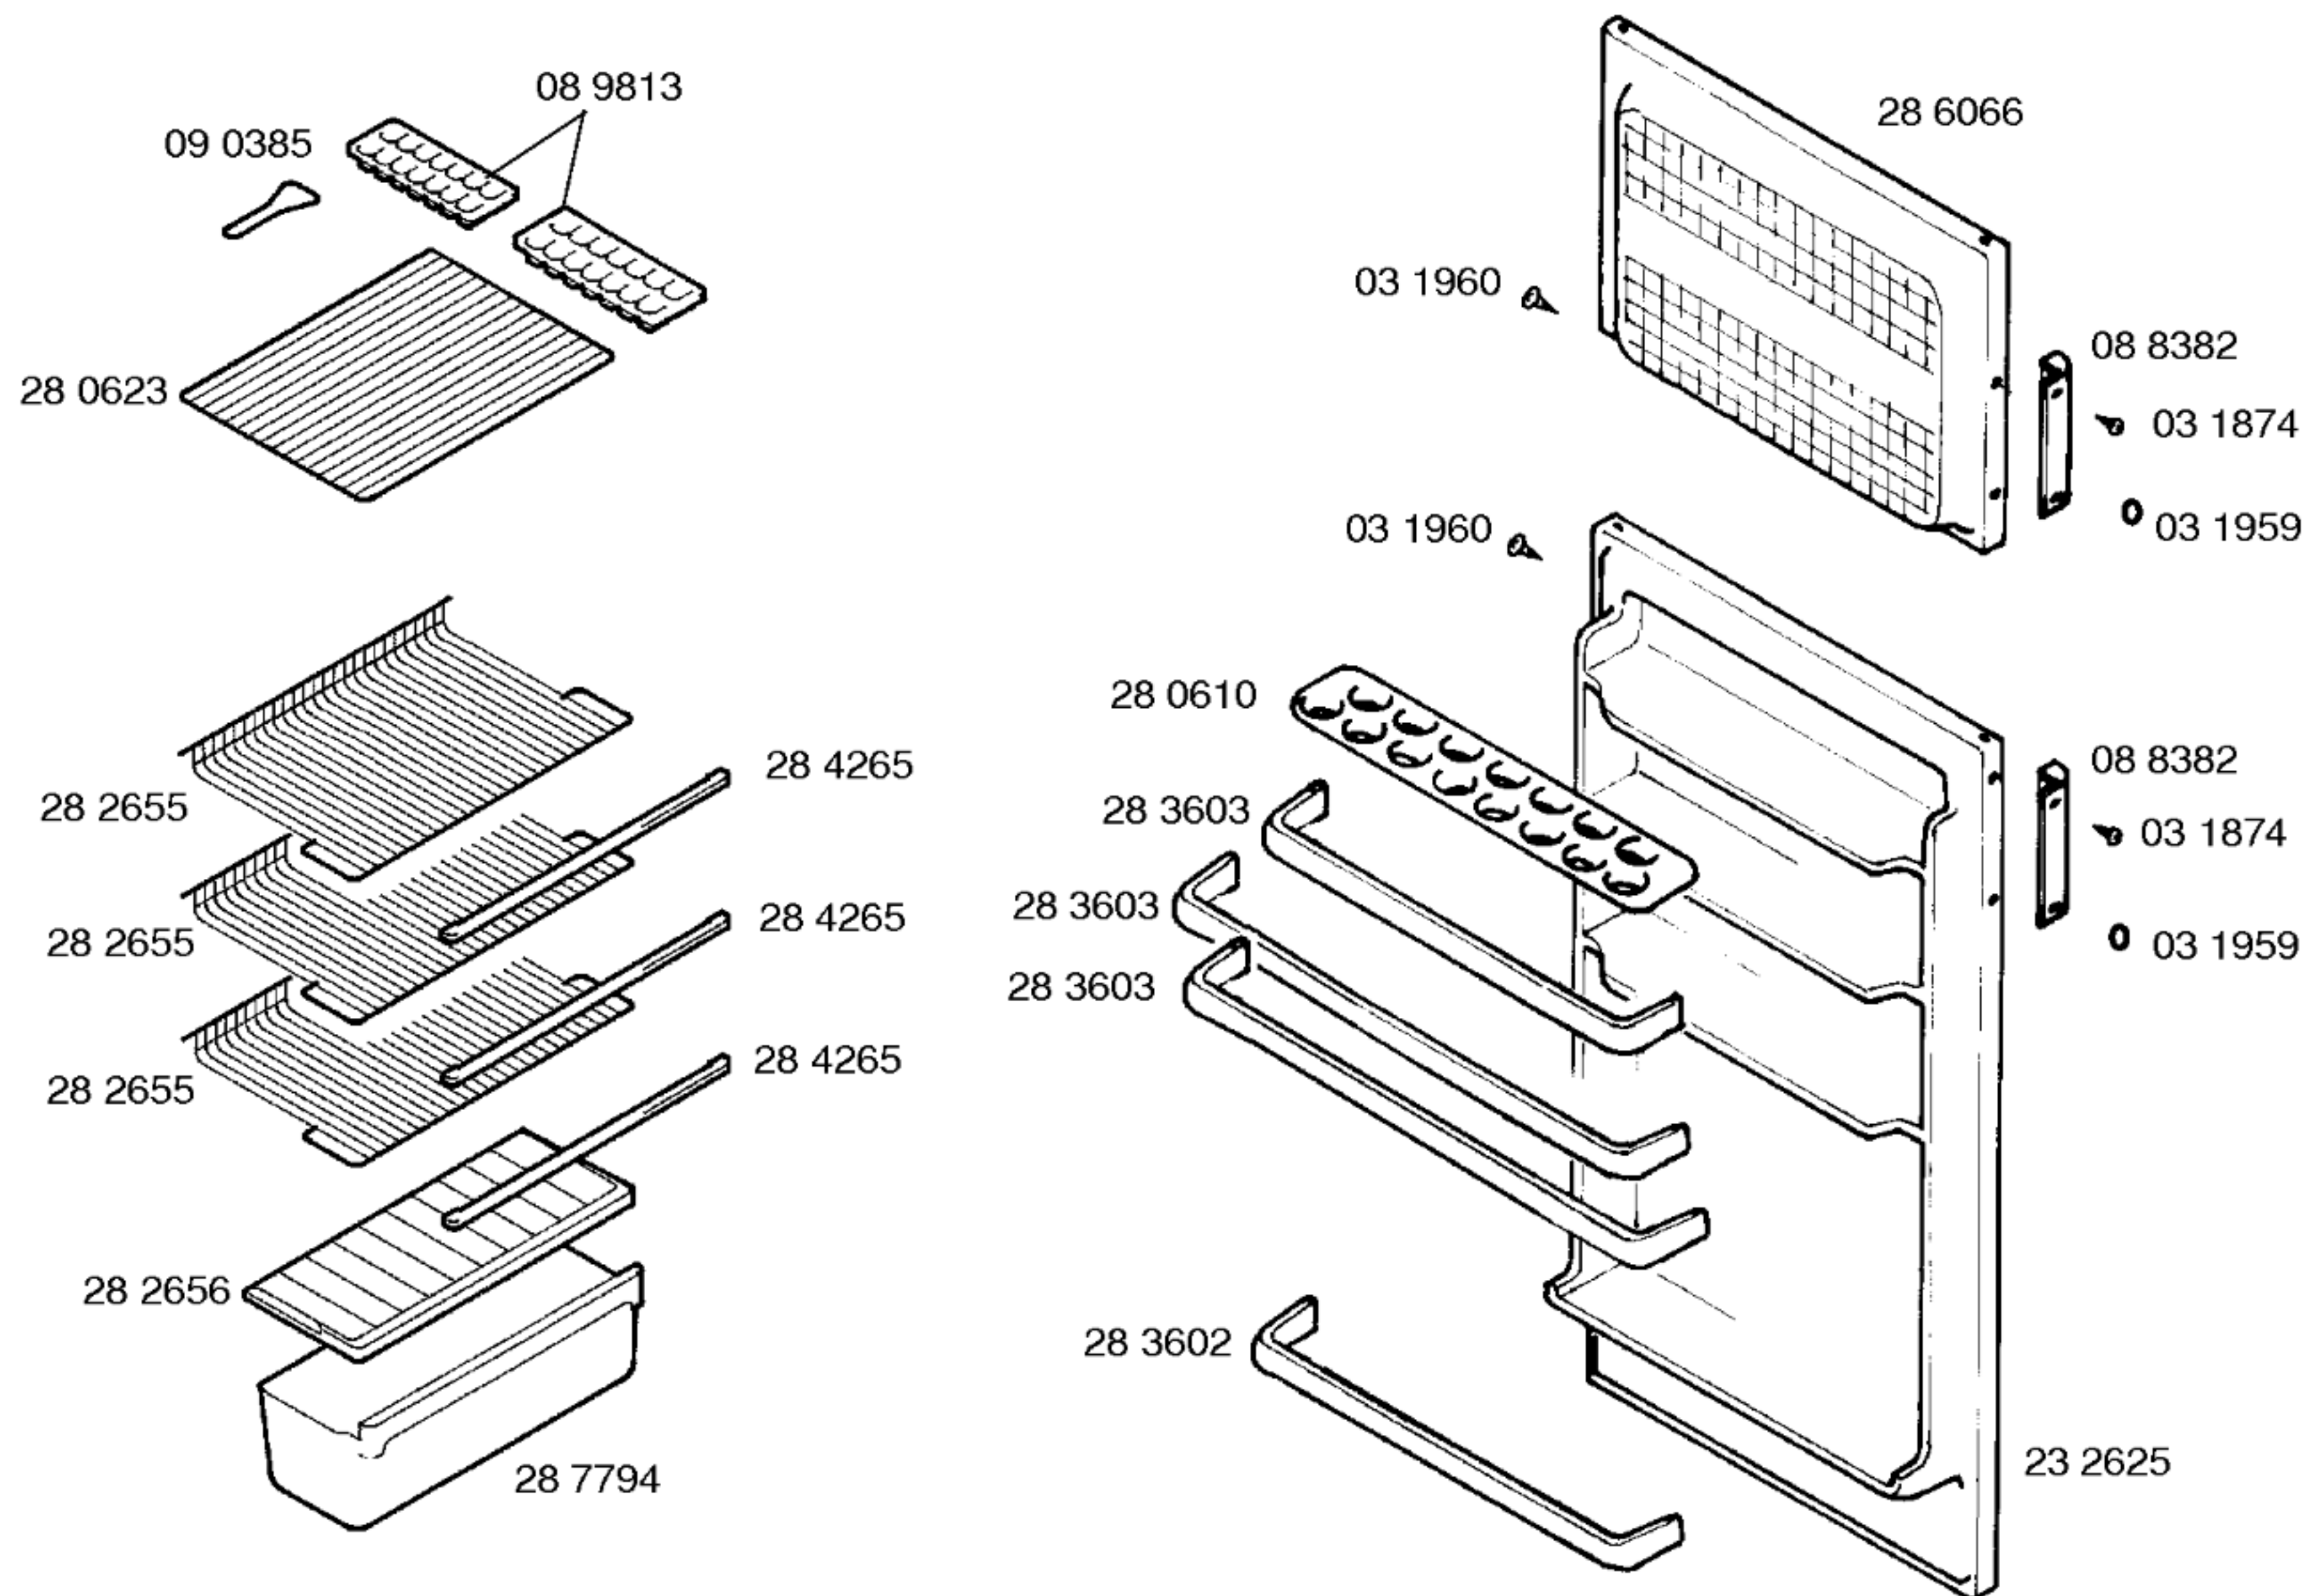

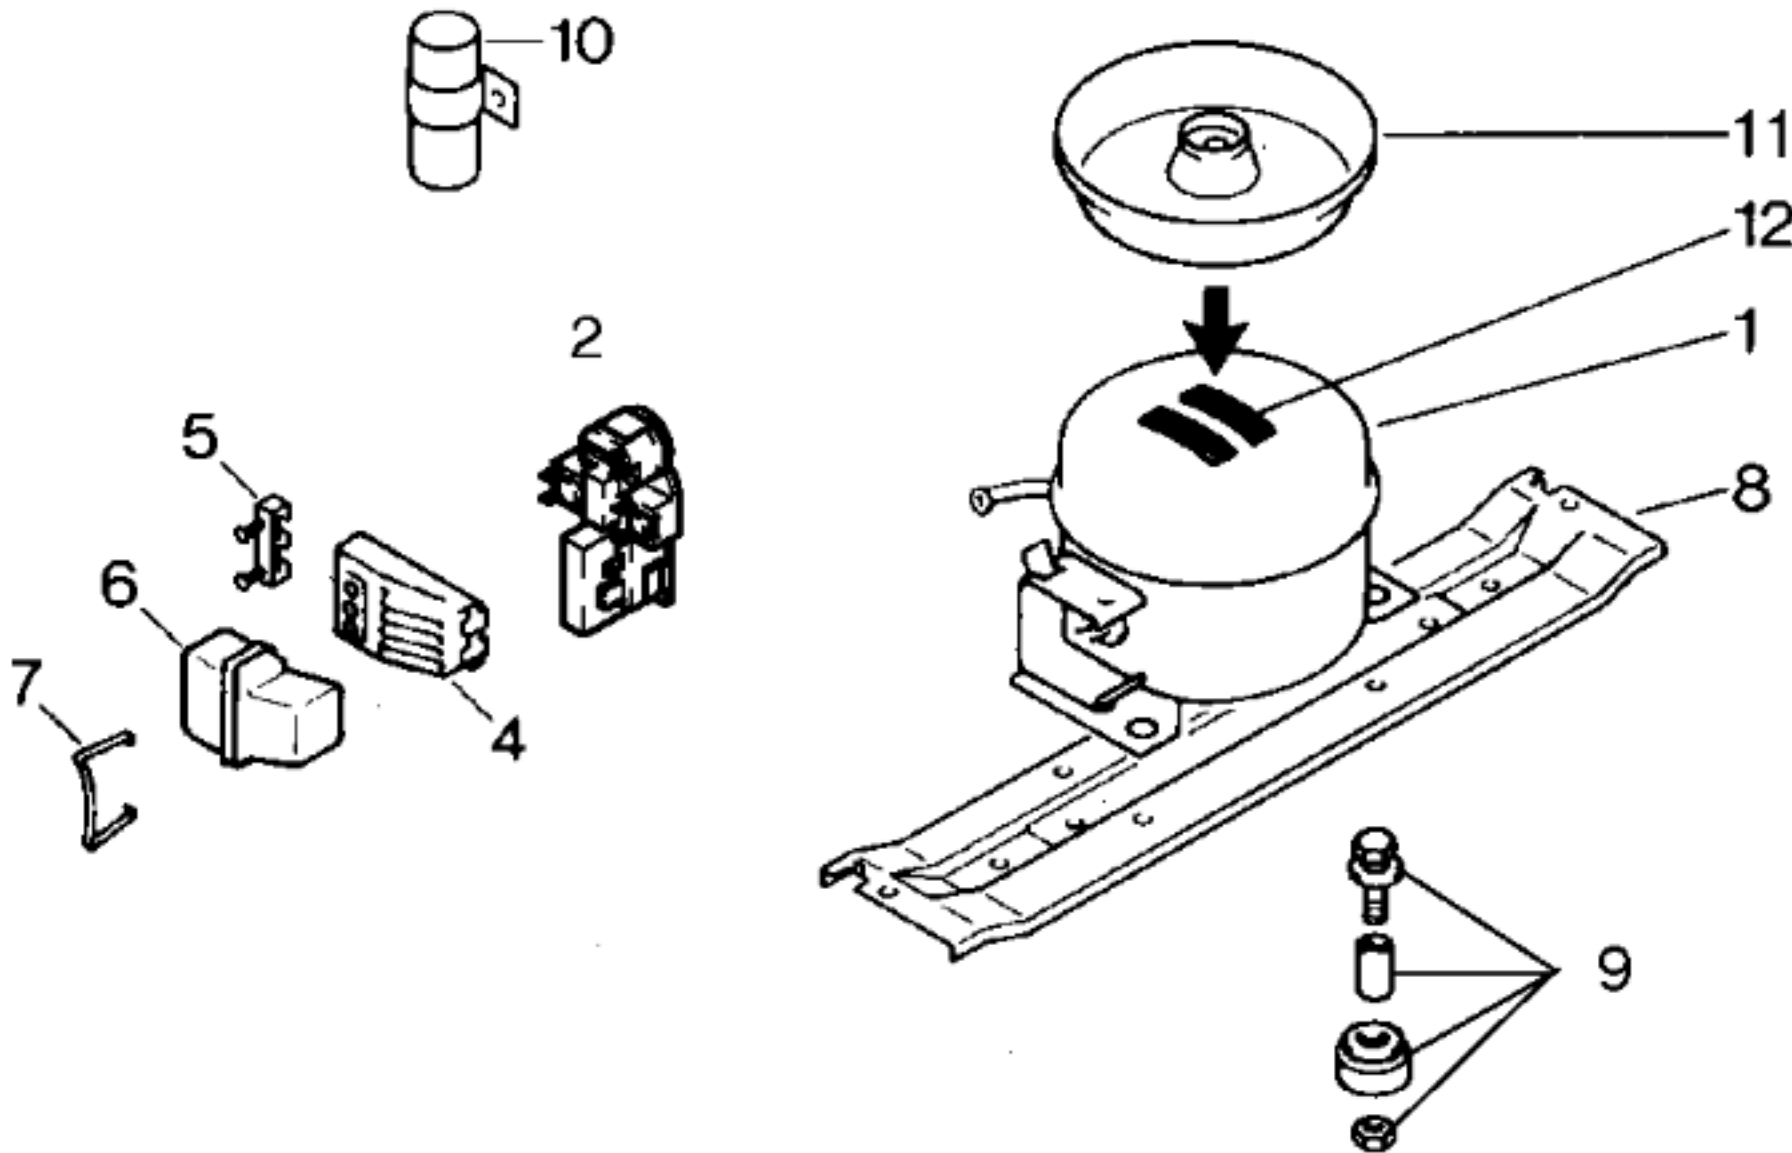

Pos.	KÜHLGERÄTE
	ZEM
1	14 1362
2	15 4818
3	
4	
5	
6	
7	
8	28 9409
9	05 0166
10	
11	09 6332
12	
13	

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNIQUES/DATOS TECNICOS			
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranque A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.		ZEM GL80AA 11,5 11,6 21,2	
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex.°C Valeurs de commutation/Desconex. ..aus"/descon. (..abtaven' od) ..alarm'		ATEA A130180 MIN. MAX +7° — -14°C -29°C	
Füllmenge/Fill. quantily/Charge/Carga 134a		g	165
Anschlusswert/Comm. load/Puiss. Connect./Potenc.		W	162
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia		Ohm W	
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia		Ohm	
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión		Ohm V	
Temp.Reyler/Thermostat/Termostato ambiente para ventilador refrigerador			