



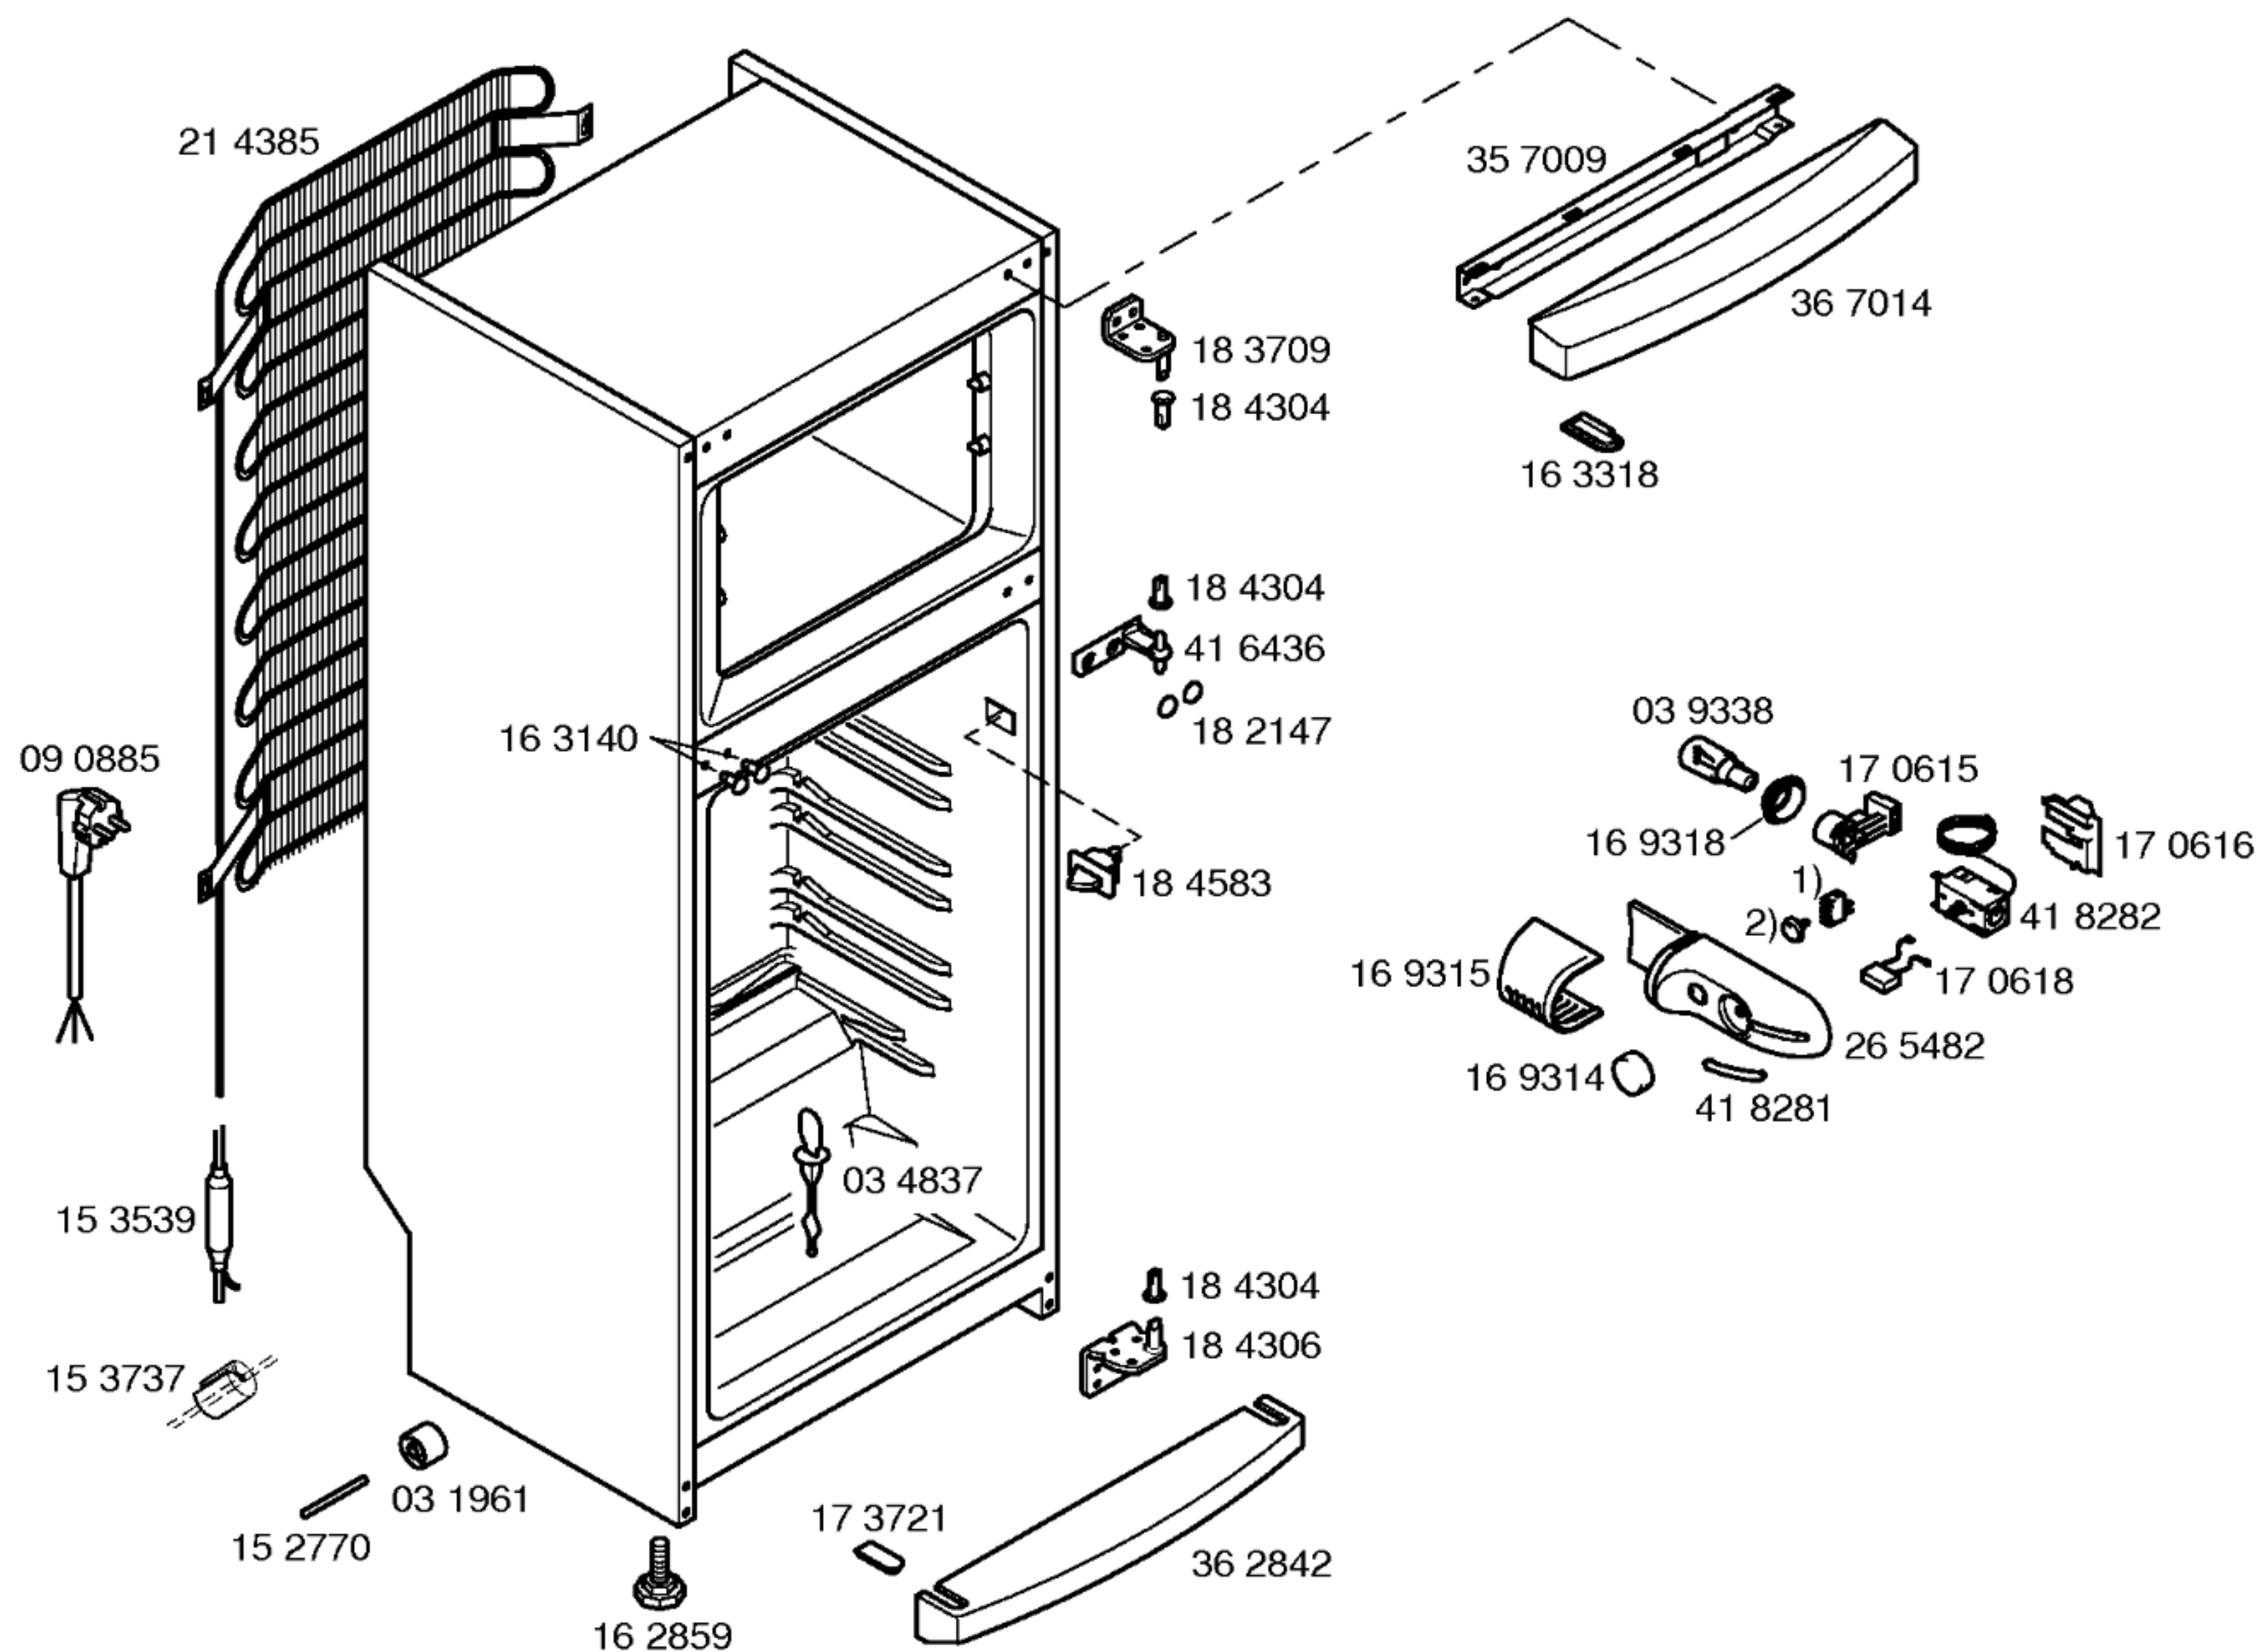


Gebrauchsanweisung
58 1400
(de,en)

Montageanweisung
52 9364
(de,en,fr,nl,es,it,pt,el,pl,
sv,no,fi,da,cs,hu)

- 1) 17 0617
- 2) 17 3206

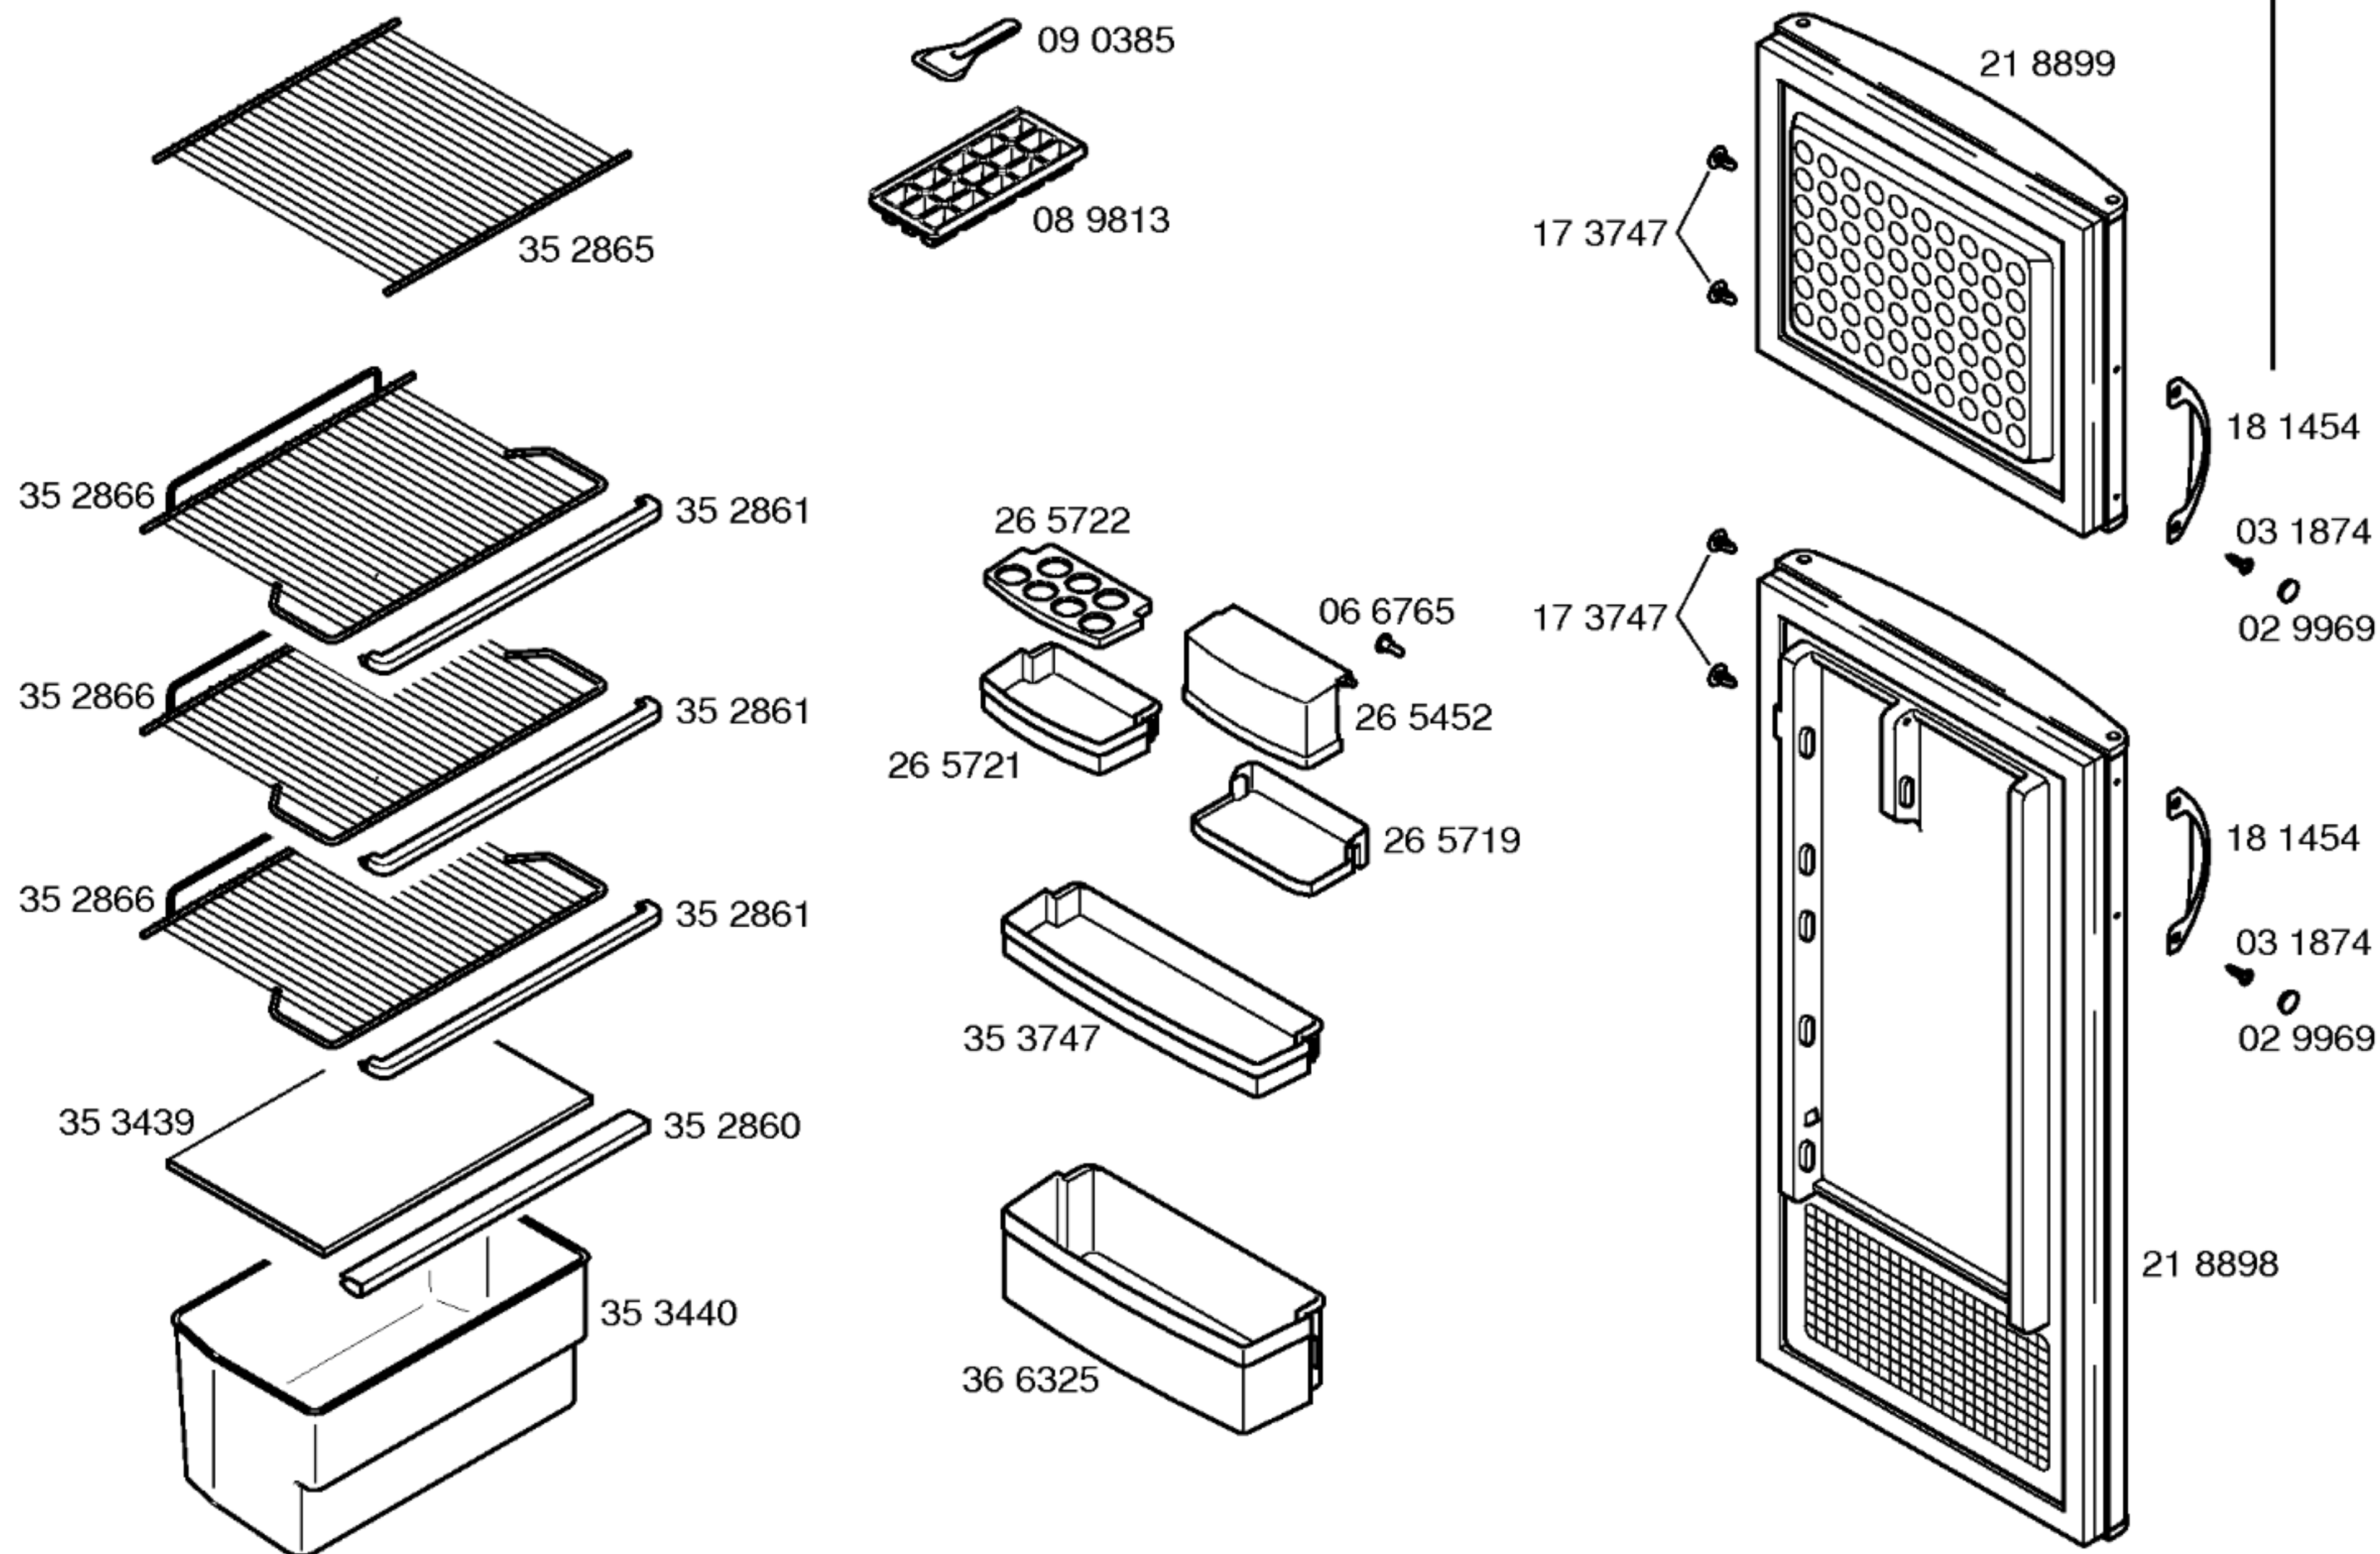

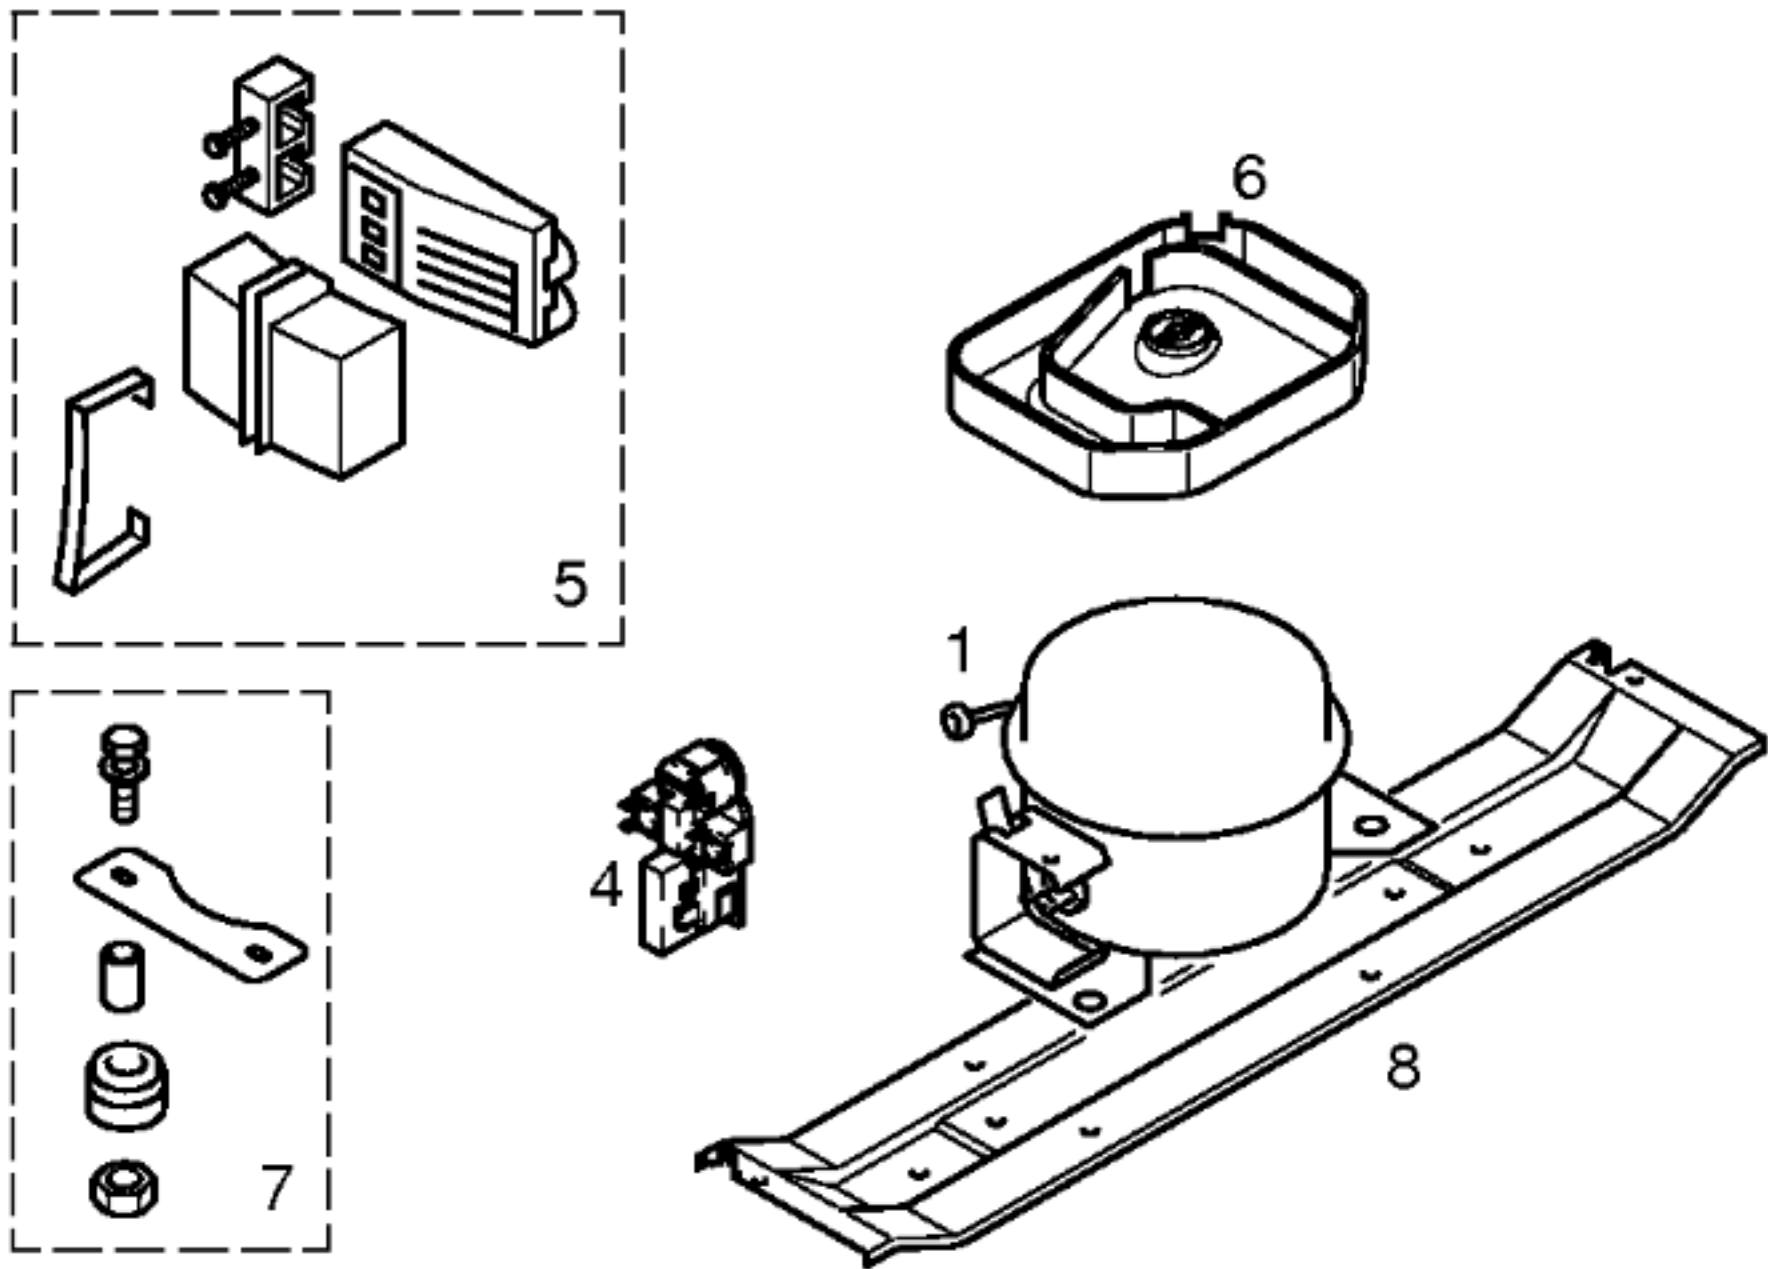

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES / DATOS TECNICOS				
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración l/h Anlaufstrom/Starting current/Cour.démarrage/Int.arranq. A Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux. Ohm		Matsushita DC110E 8,50 14,19 12,80		
Temp.Reyler/Thermostat/Termostato Typ/Type/Tipo Reglerstellung/Position/Conexión Schaltwerte/Switching values/ ..ein/conex. °C Valeurs de commutation/Desconex. ..aus"/descon. °C (..abtaven' od) ..alarm' °C		Danfoss 077B6734 MIN. MAX. +5 -22 -35		
Füllmenge/Fill. quantily/Charge/Carga R600a.		g	*	
Anschlusswert/Comm. load/Puiss. Connect./Potenc.		W	129	
Heizung/Heater/Chauflage/Resistenc.descong. Widerstand/Resistance/Resistencia Leistung/Power/Puissance/Potencia		Ohm W		
Ventilador/Blower/Ventilateur/Ventilador Widerstand/Resistance/Resistencia		Ohm		
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula Widerstand/Resistance/Resistencia Spannung/Voltage/Tension/Tensión		Ohm V		
Temp.Reyler/Thermostat/Termostato ambiente				

* Siehe Typenschild / See identification plate / Voir plaque de caractéristiques / Ver plaqueta de características

Pos.	Matsushita			
	DC110E			
1	14 2002			
2				
3				
4	17 4431			
5				
6	48 1077			
7	05 0166			
8	28 9409			
9				
10				
11				
12				