


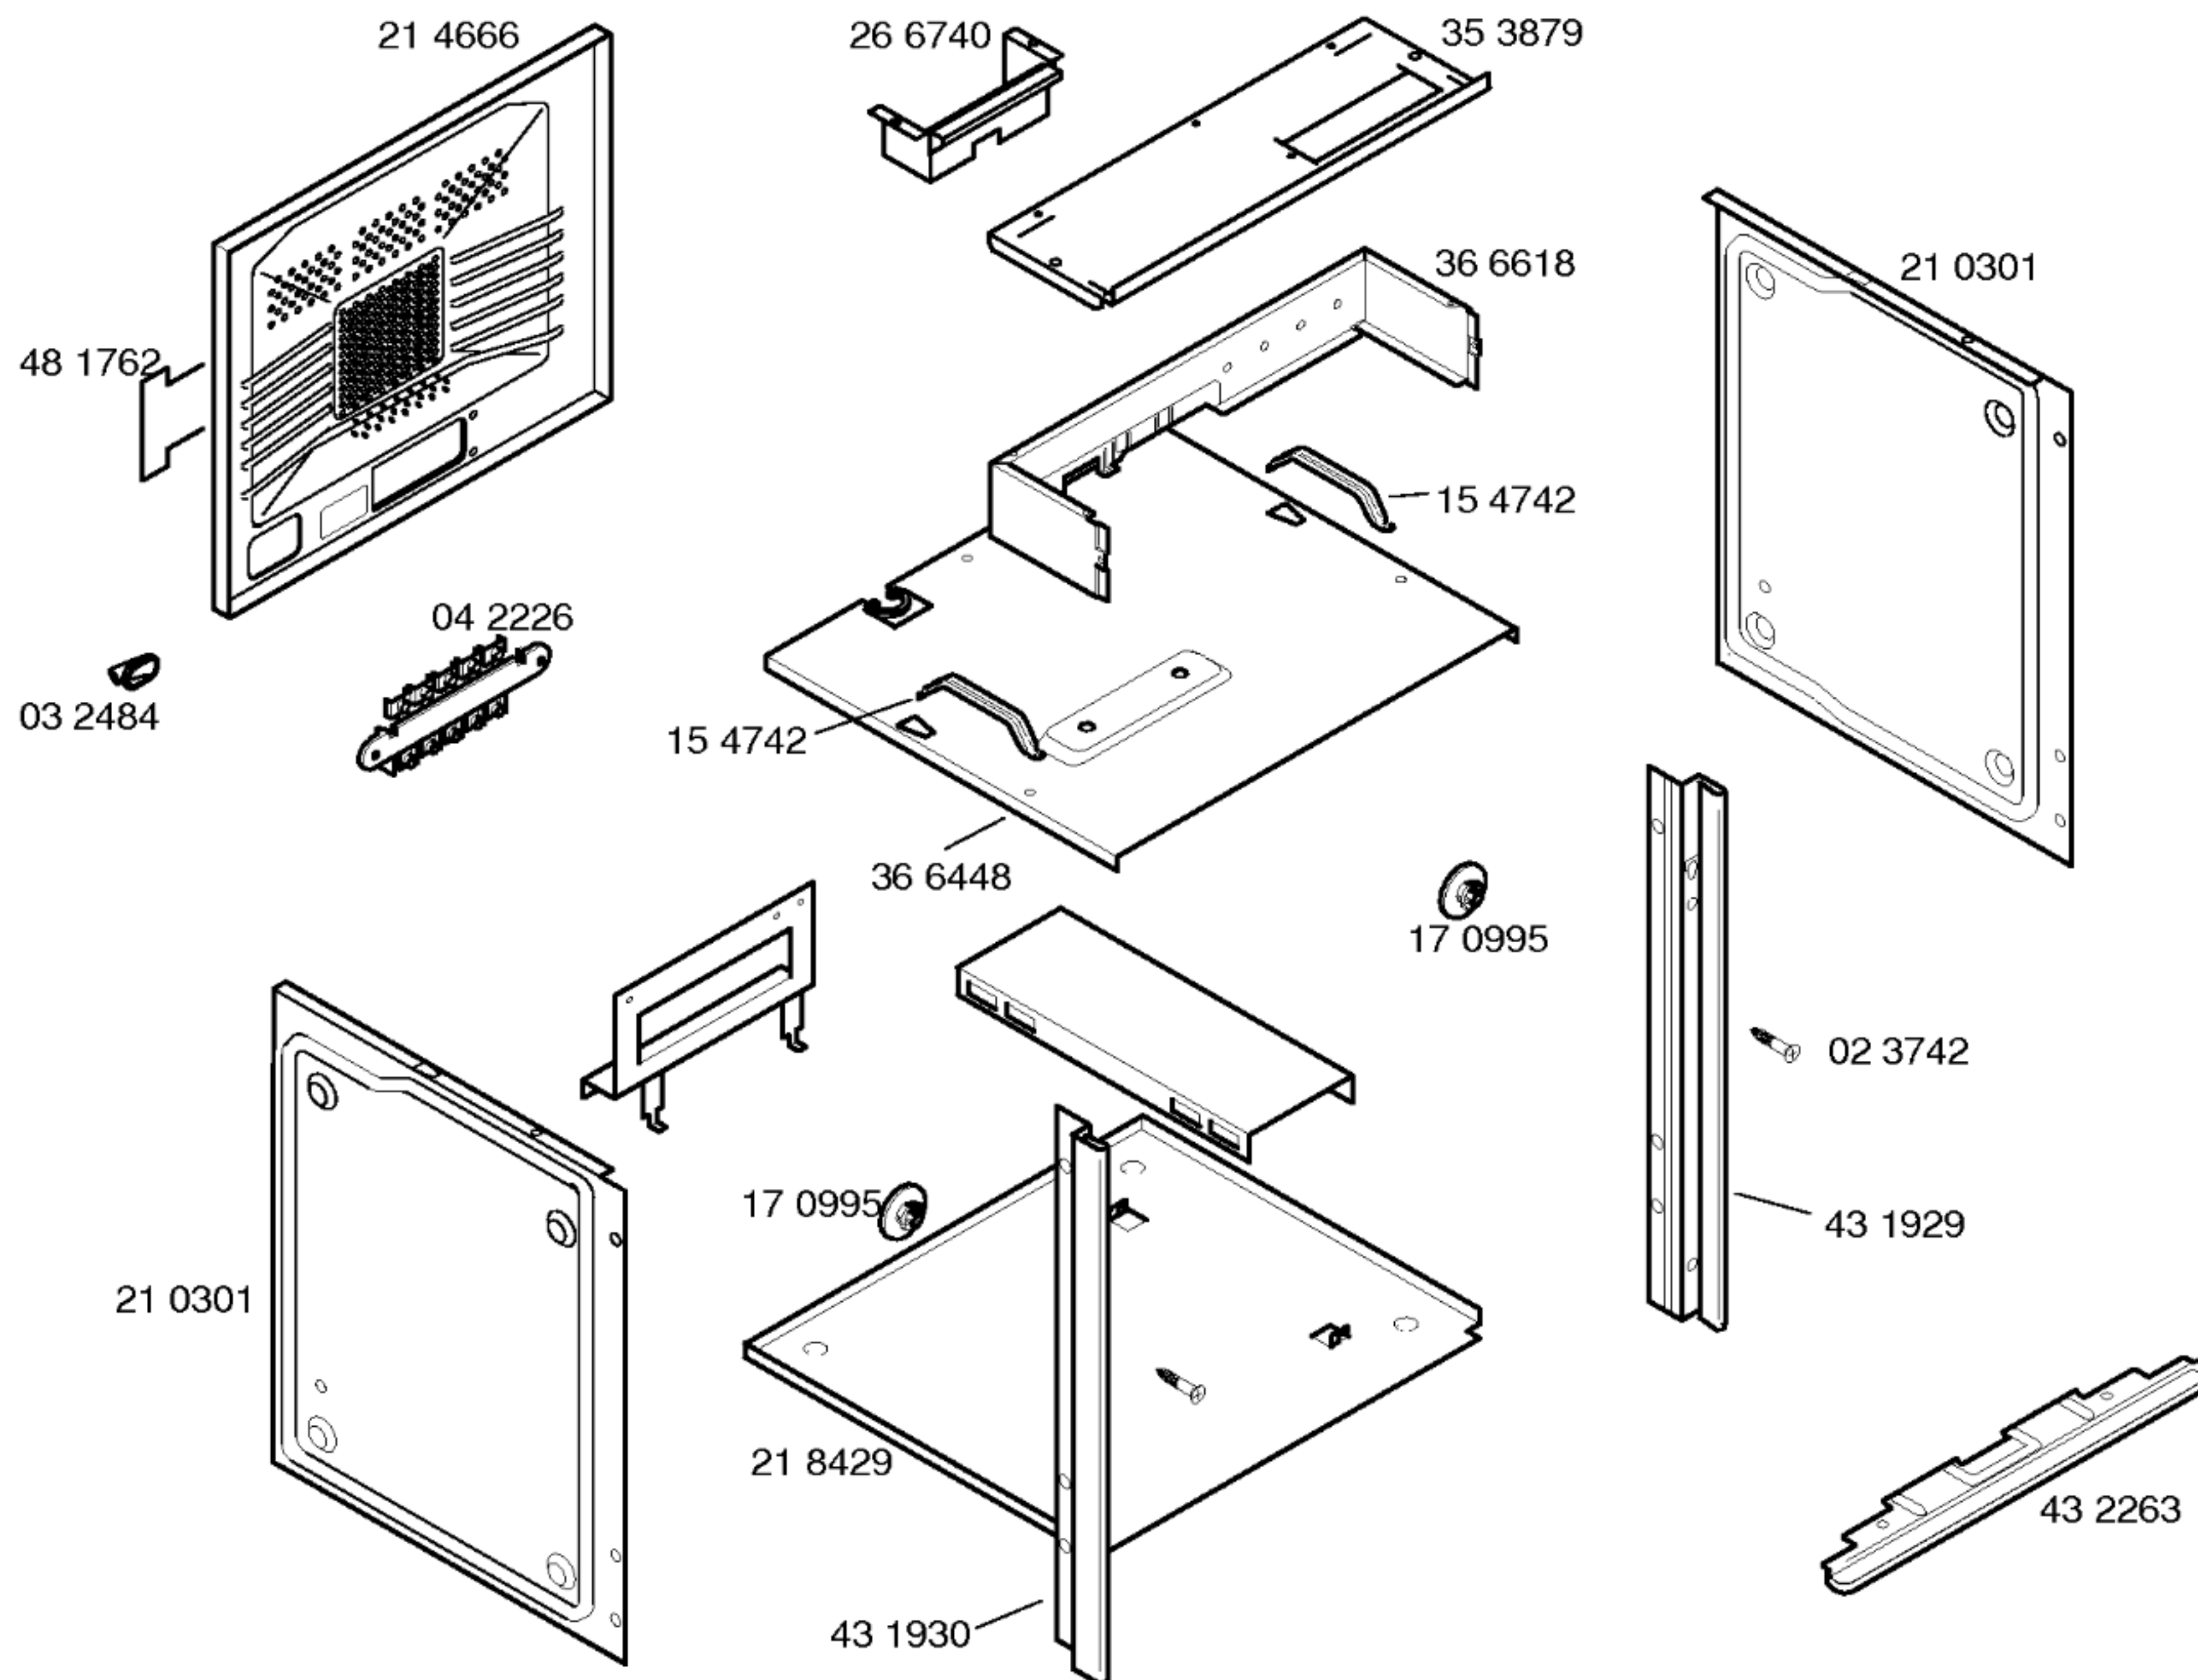


Gebrauchsanweisung
58 4759
(de)
Montageanleitung
51 7955
(de,en,fr,nl,it,es,el)

Kochbuch
58 4760
(de)


Zubehör:

Dampfgarer
N8640X2


Bratrost engmaschig
Z1440X0
Bratrost gekröpft
Z1430X2
Backblech, Alu
Z1330X0
Backblech Email
Z1340X0
Bratenblech
Z1510X2
Brotbackstein
Z1910X0
Grillpfanne u. Bratrost
Z1230X2
Auflaufform
Z1270X2

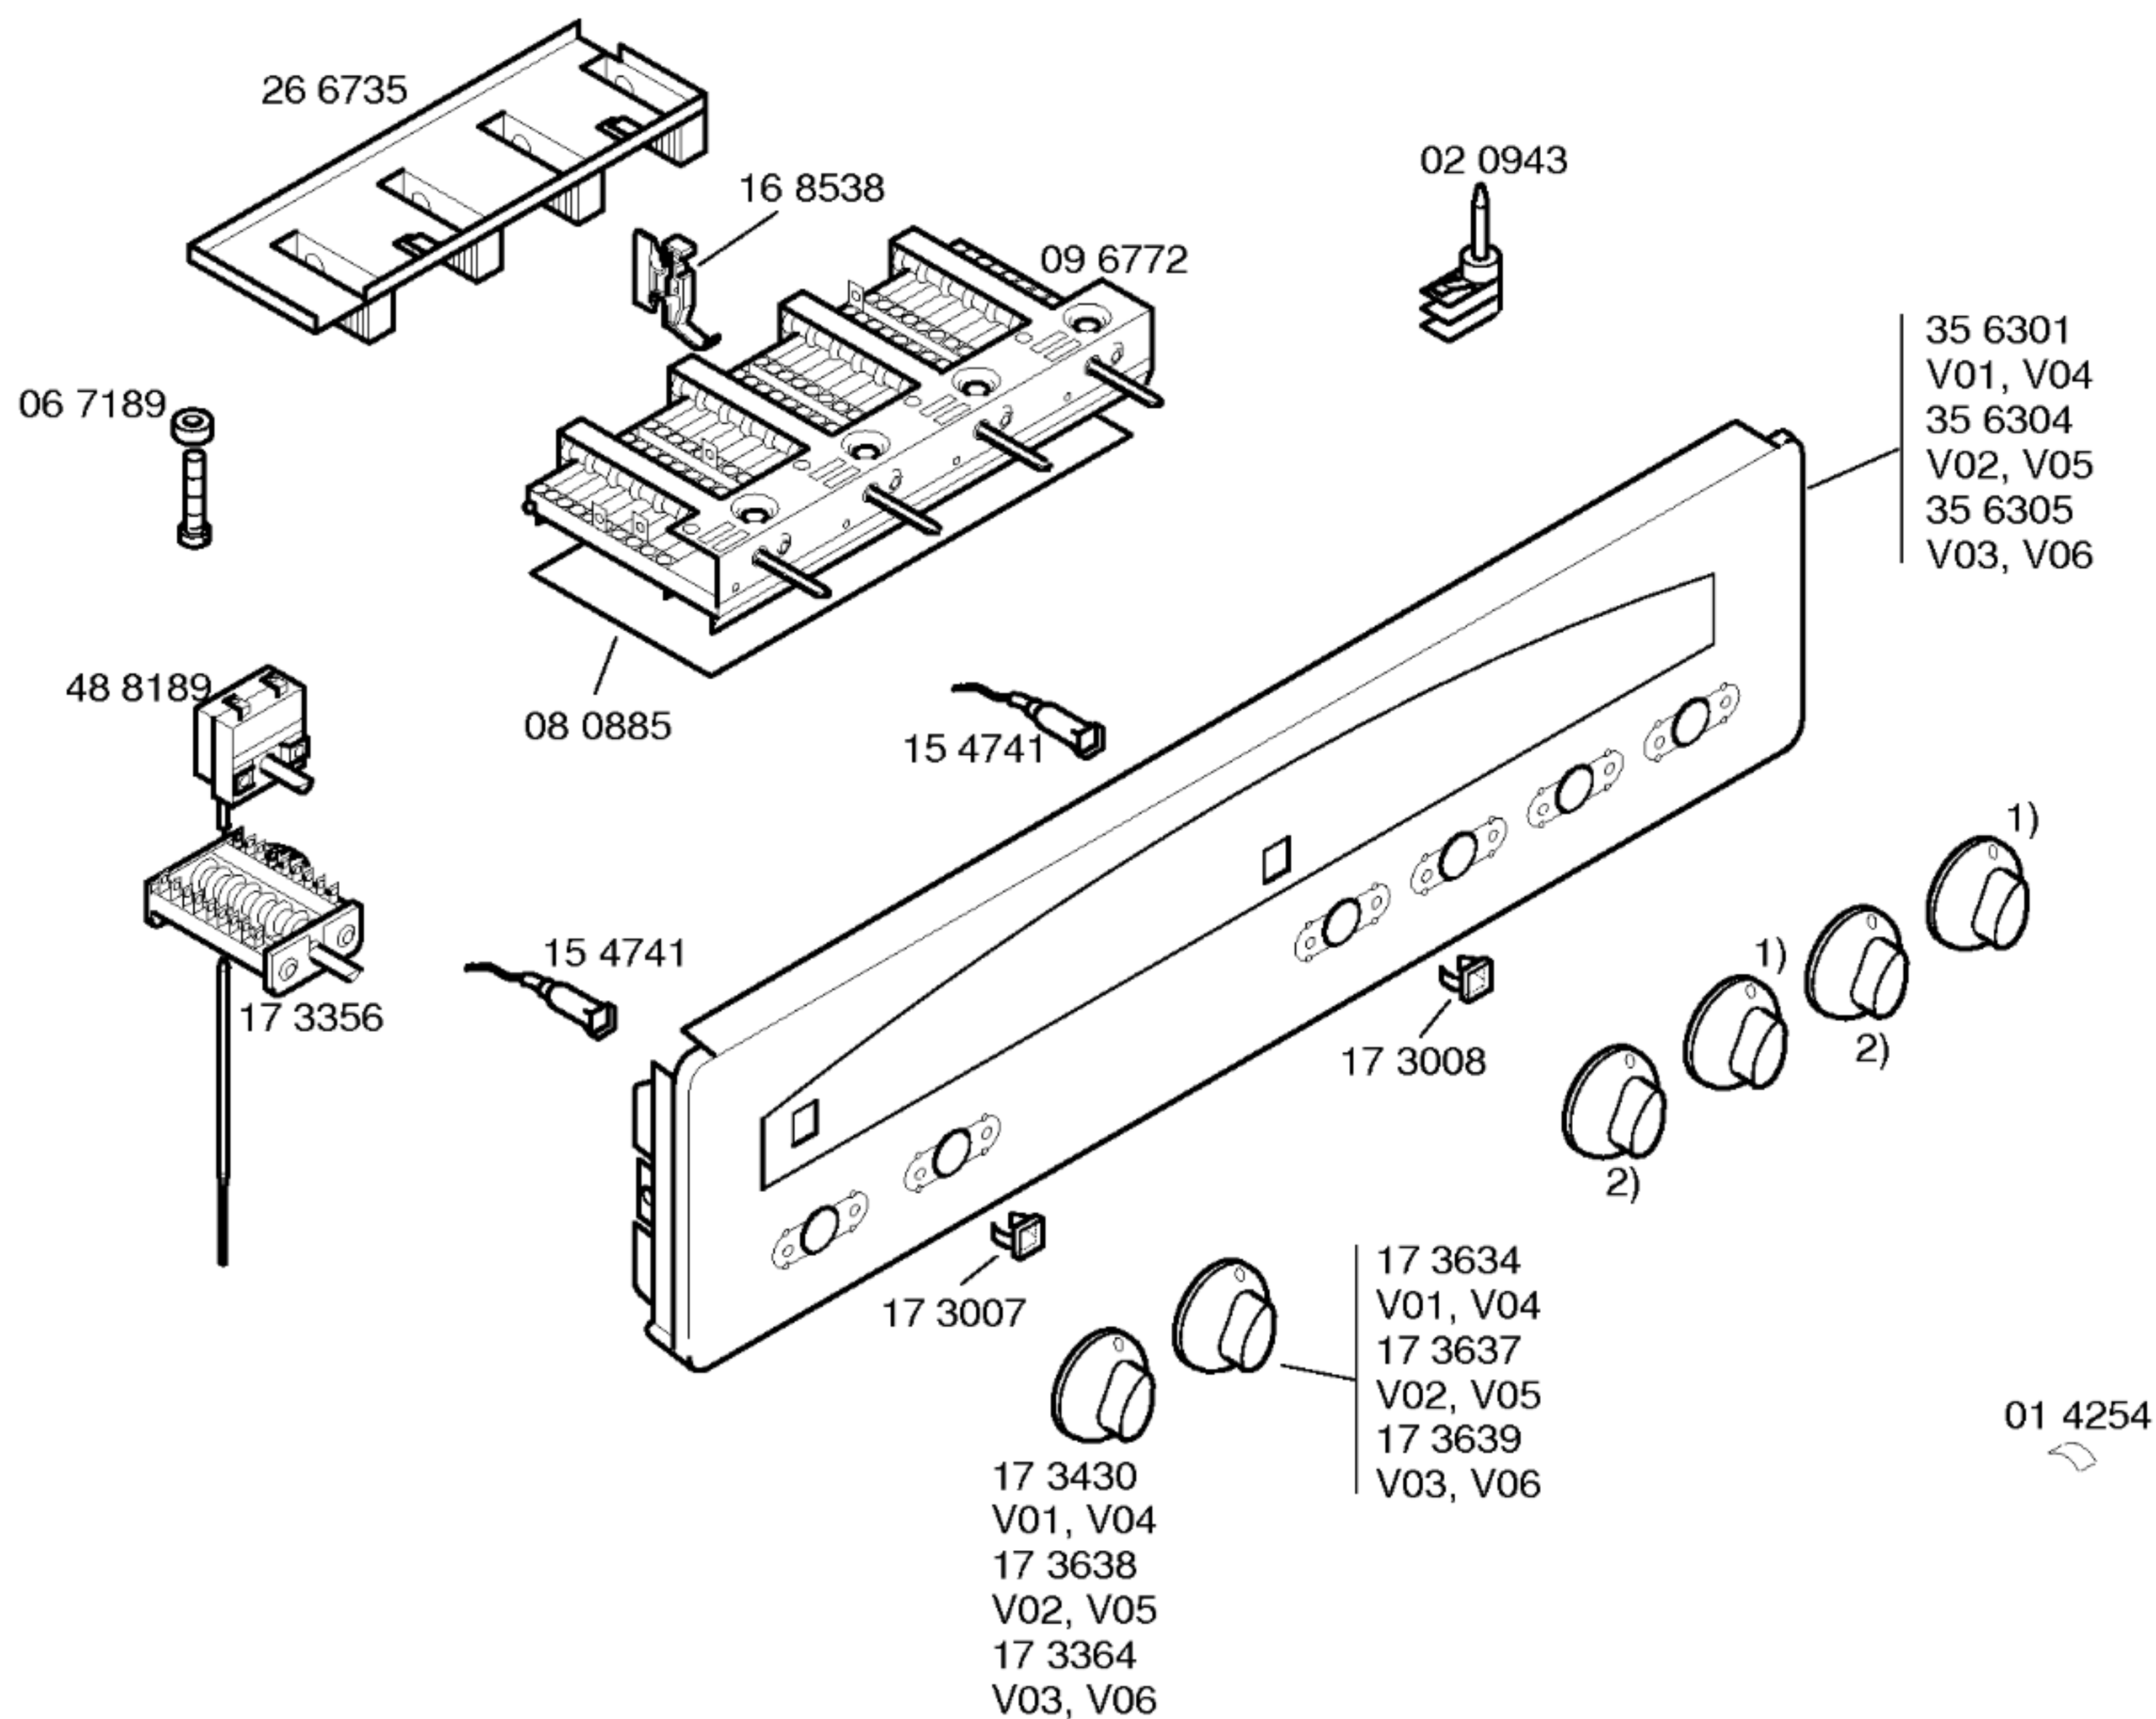

- 1) 17 3628
V01, V04
17 3620
V02, V05
17 2657
V03, V06
- 2) 17 3629
V01, V04
17 3624
V02, V05
17 2658
V03, V06

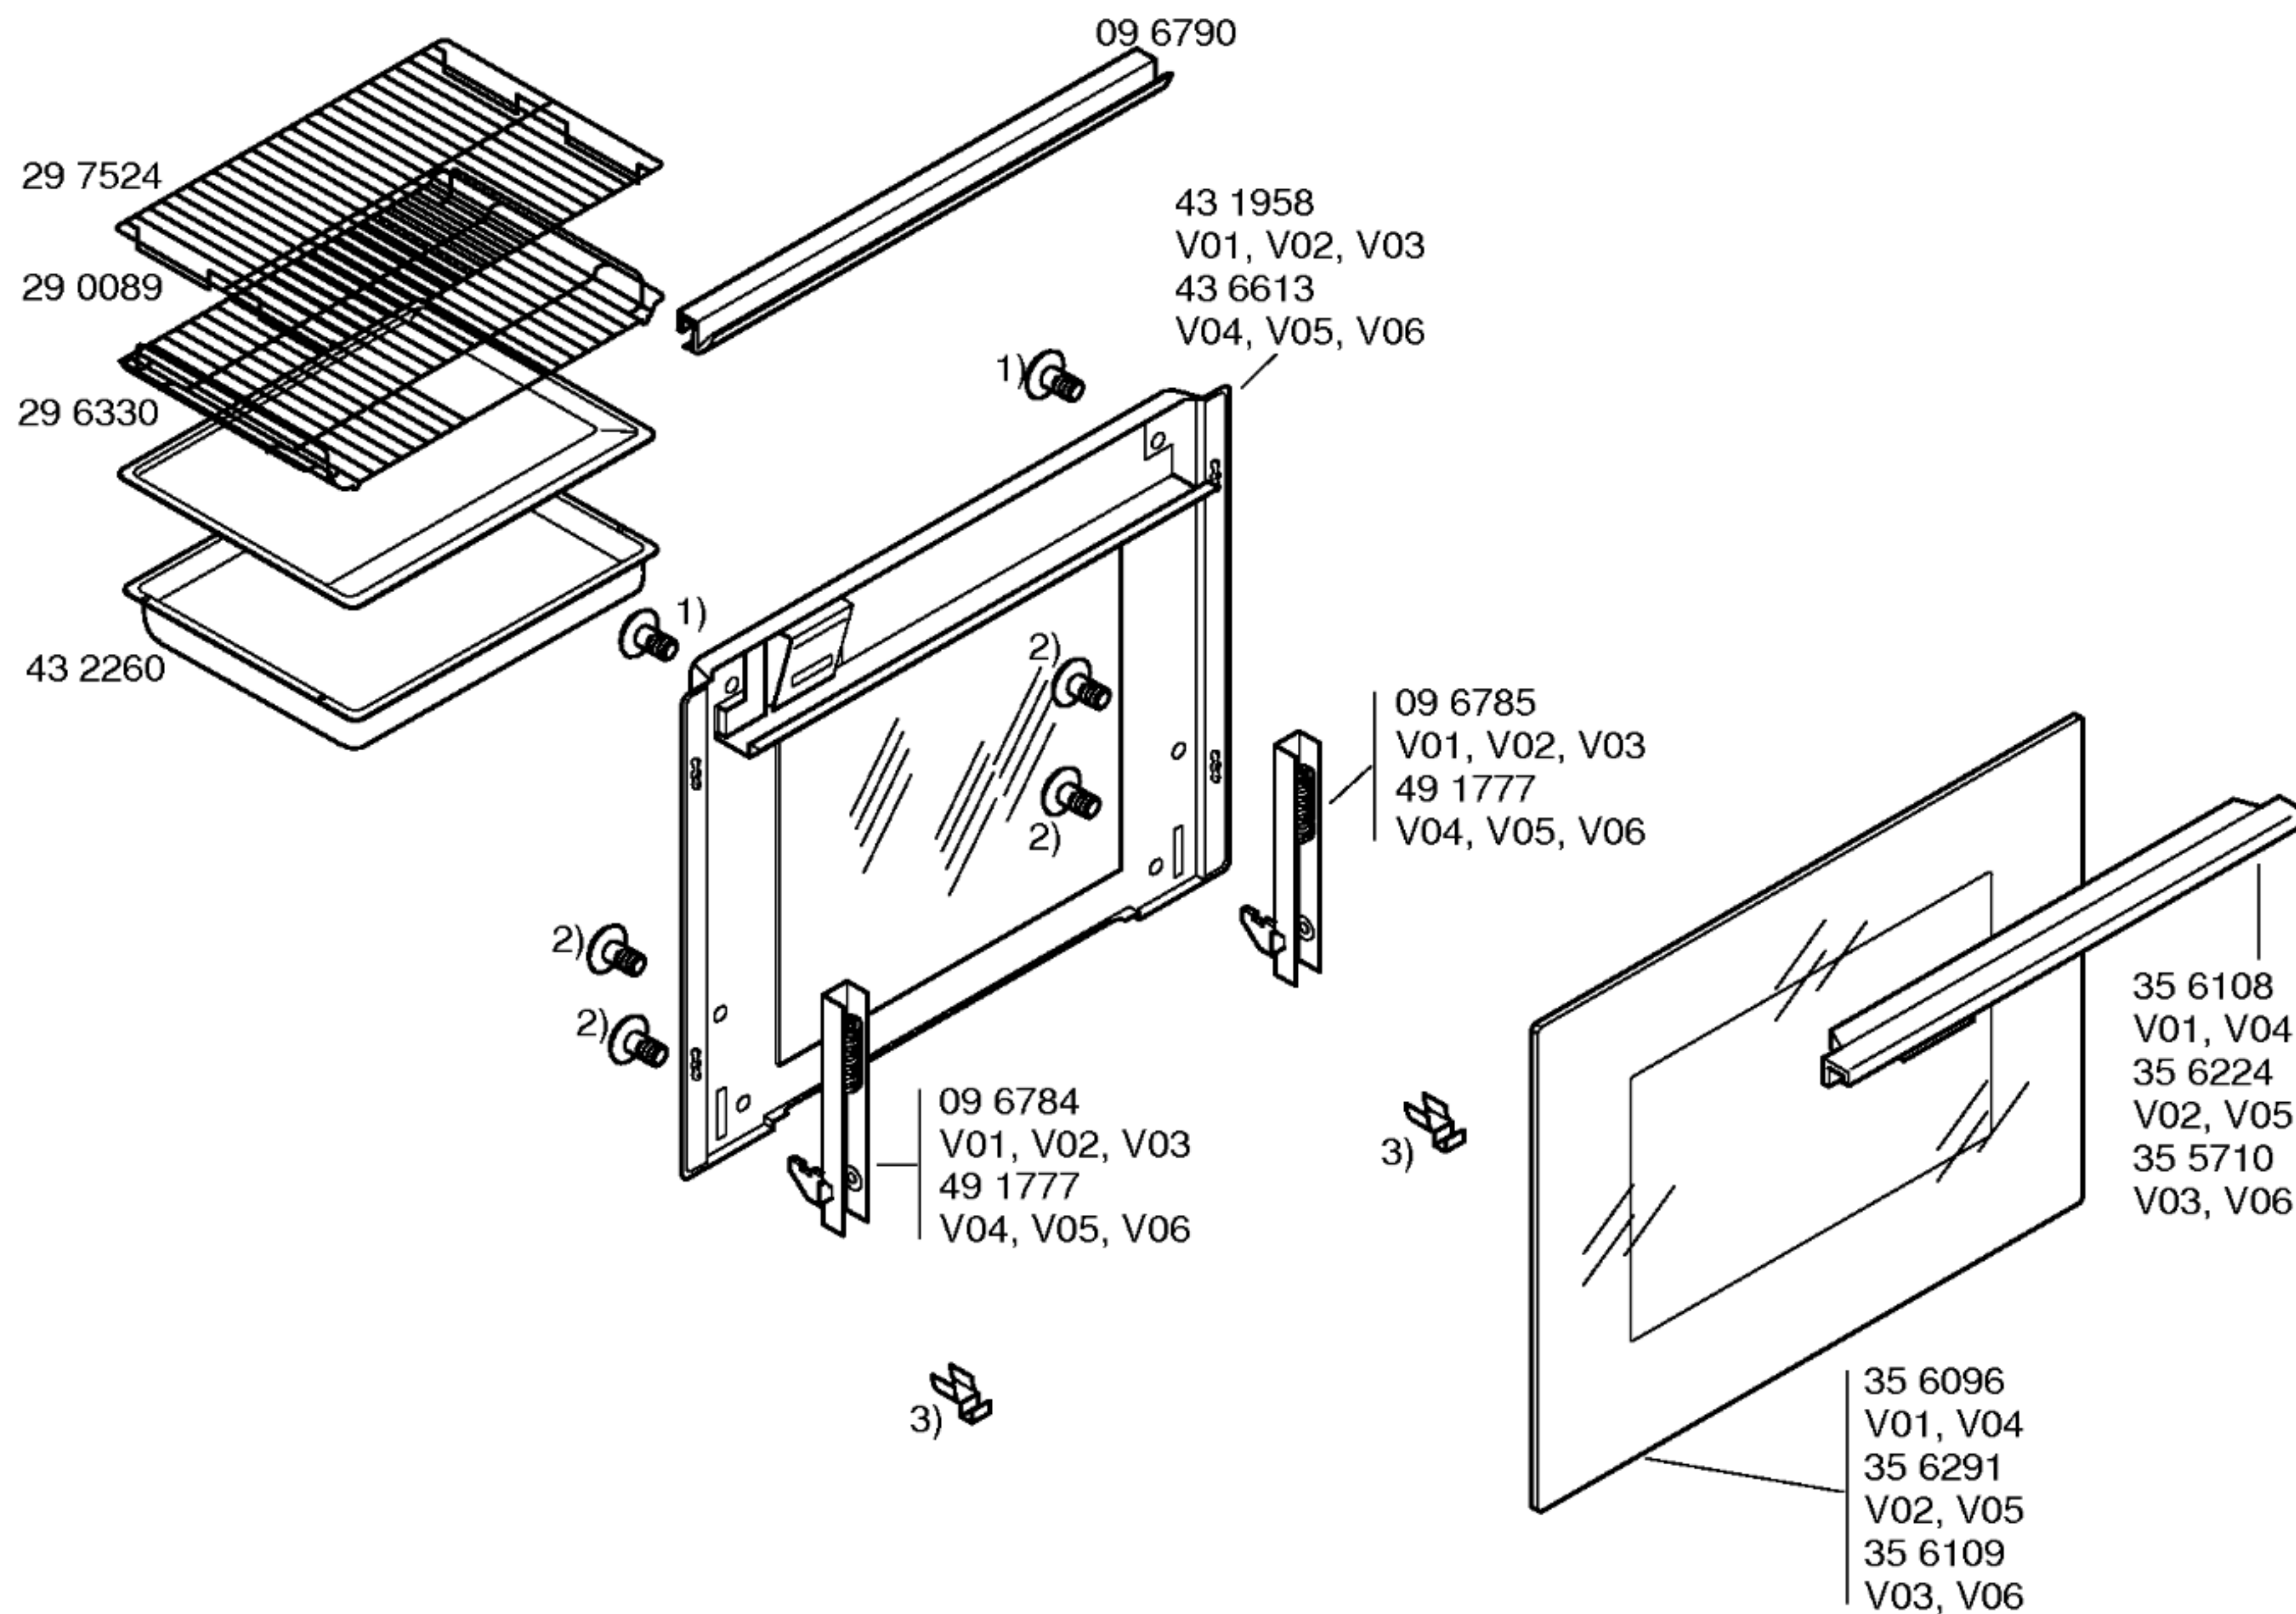

- 1) 15 4762
- 2) 15 4763
V01, V02, V03
17 2646
V04, V05, V06
- 3) 16 7255
V01
16 7262
V02, V03
18 2612
V04
18 2427
V05, V06

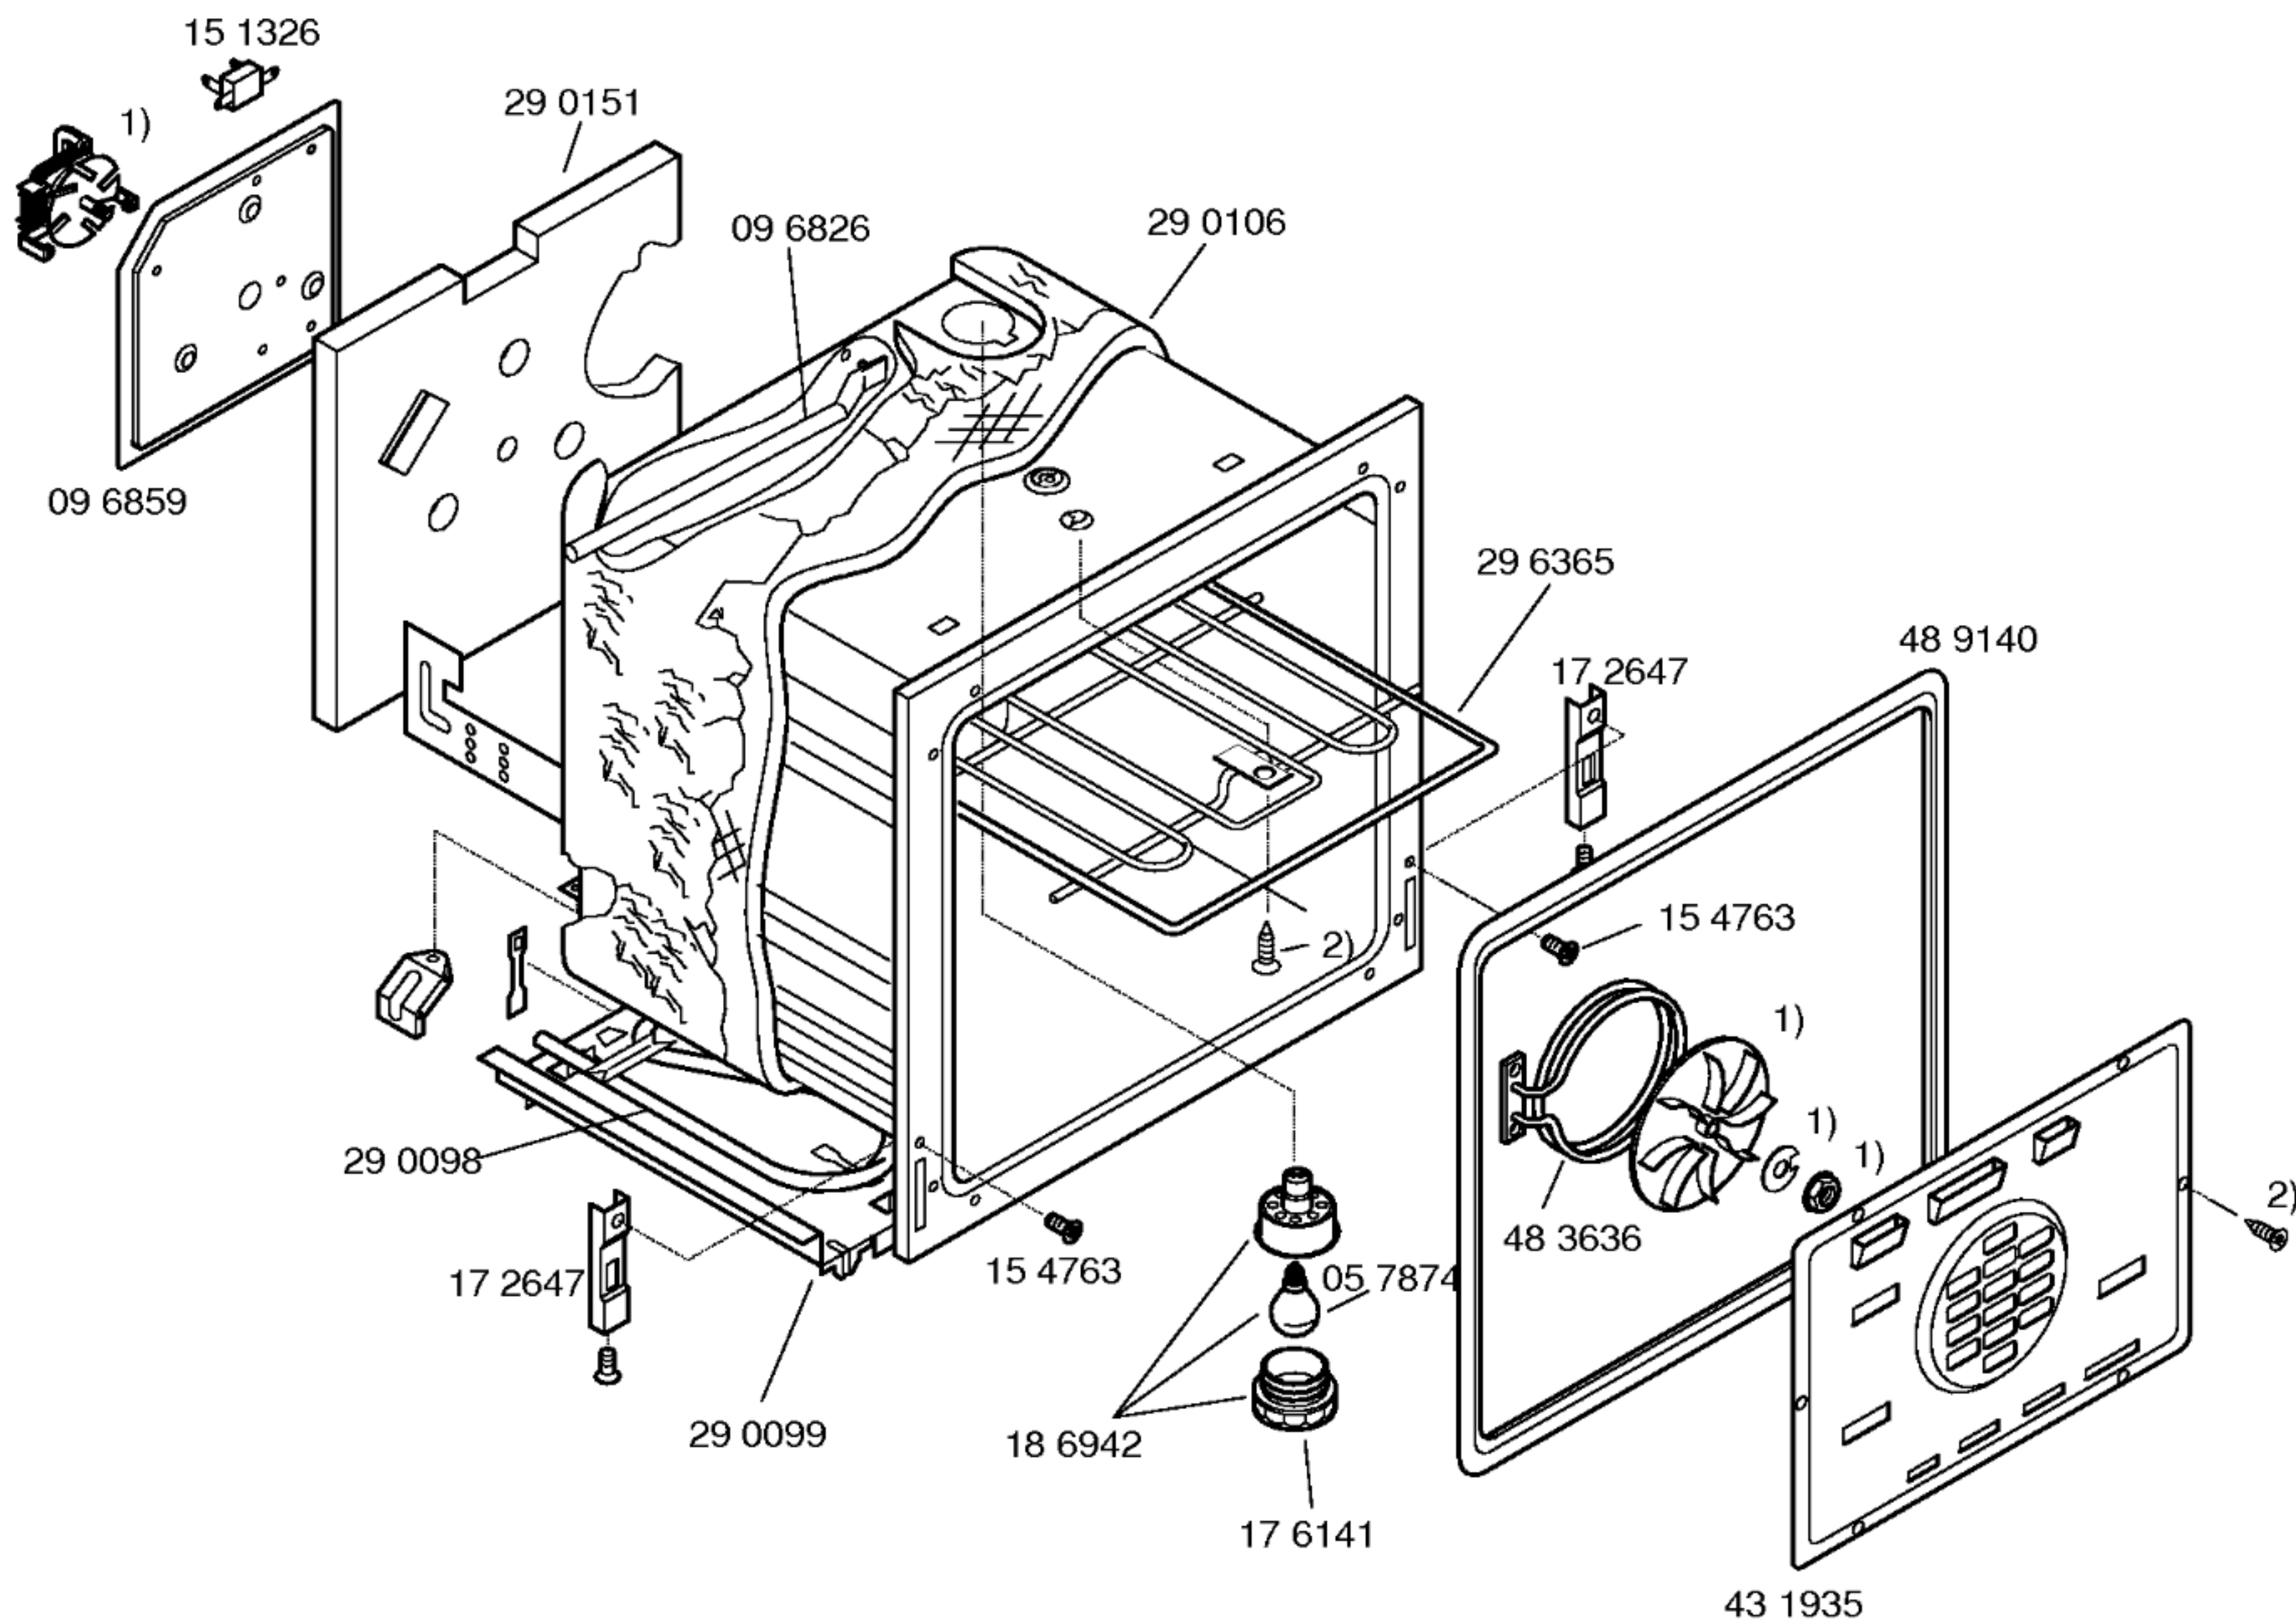

1) 26 1674
kompl.
2) 41 8562