

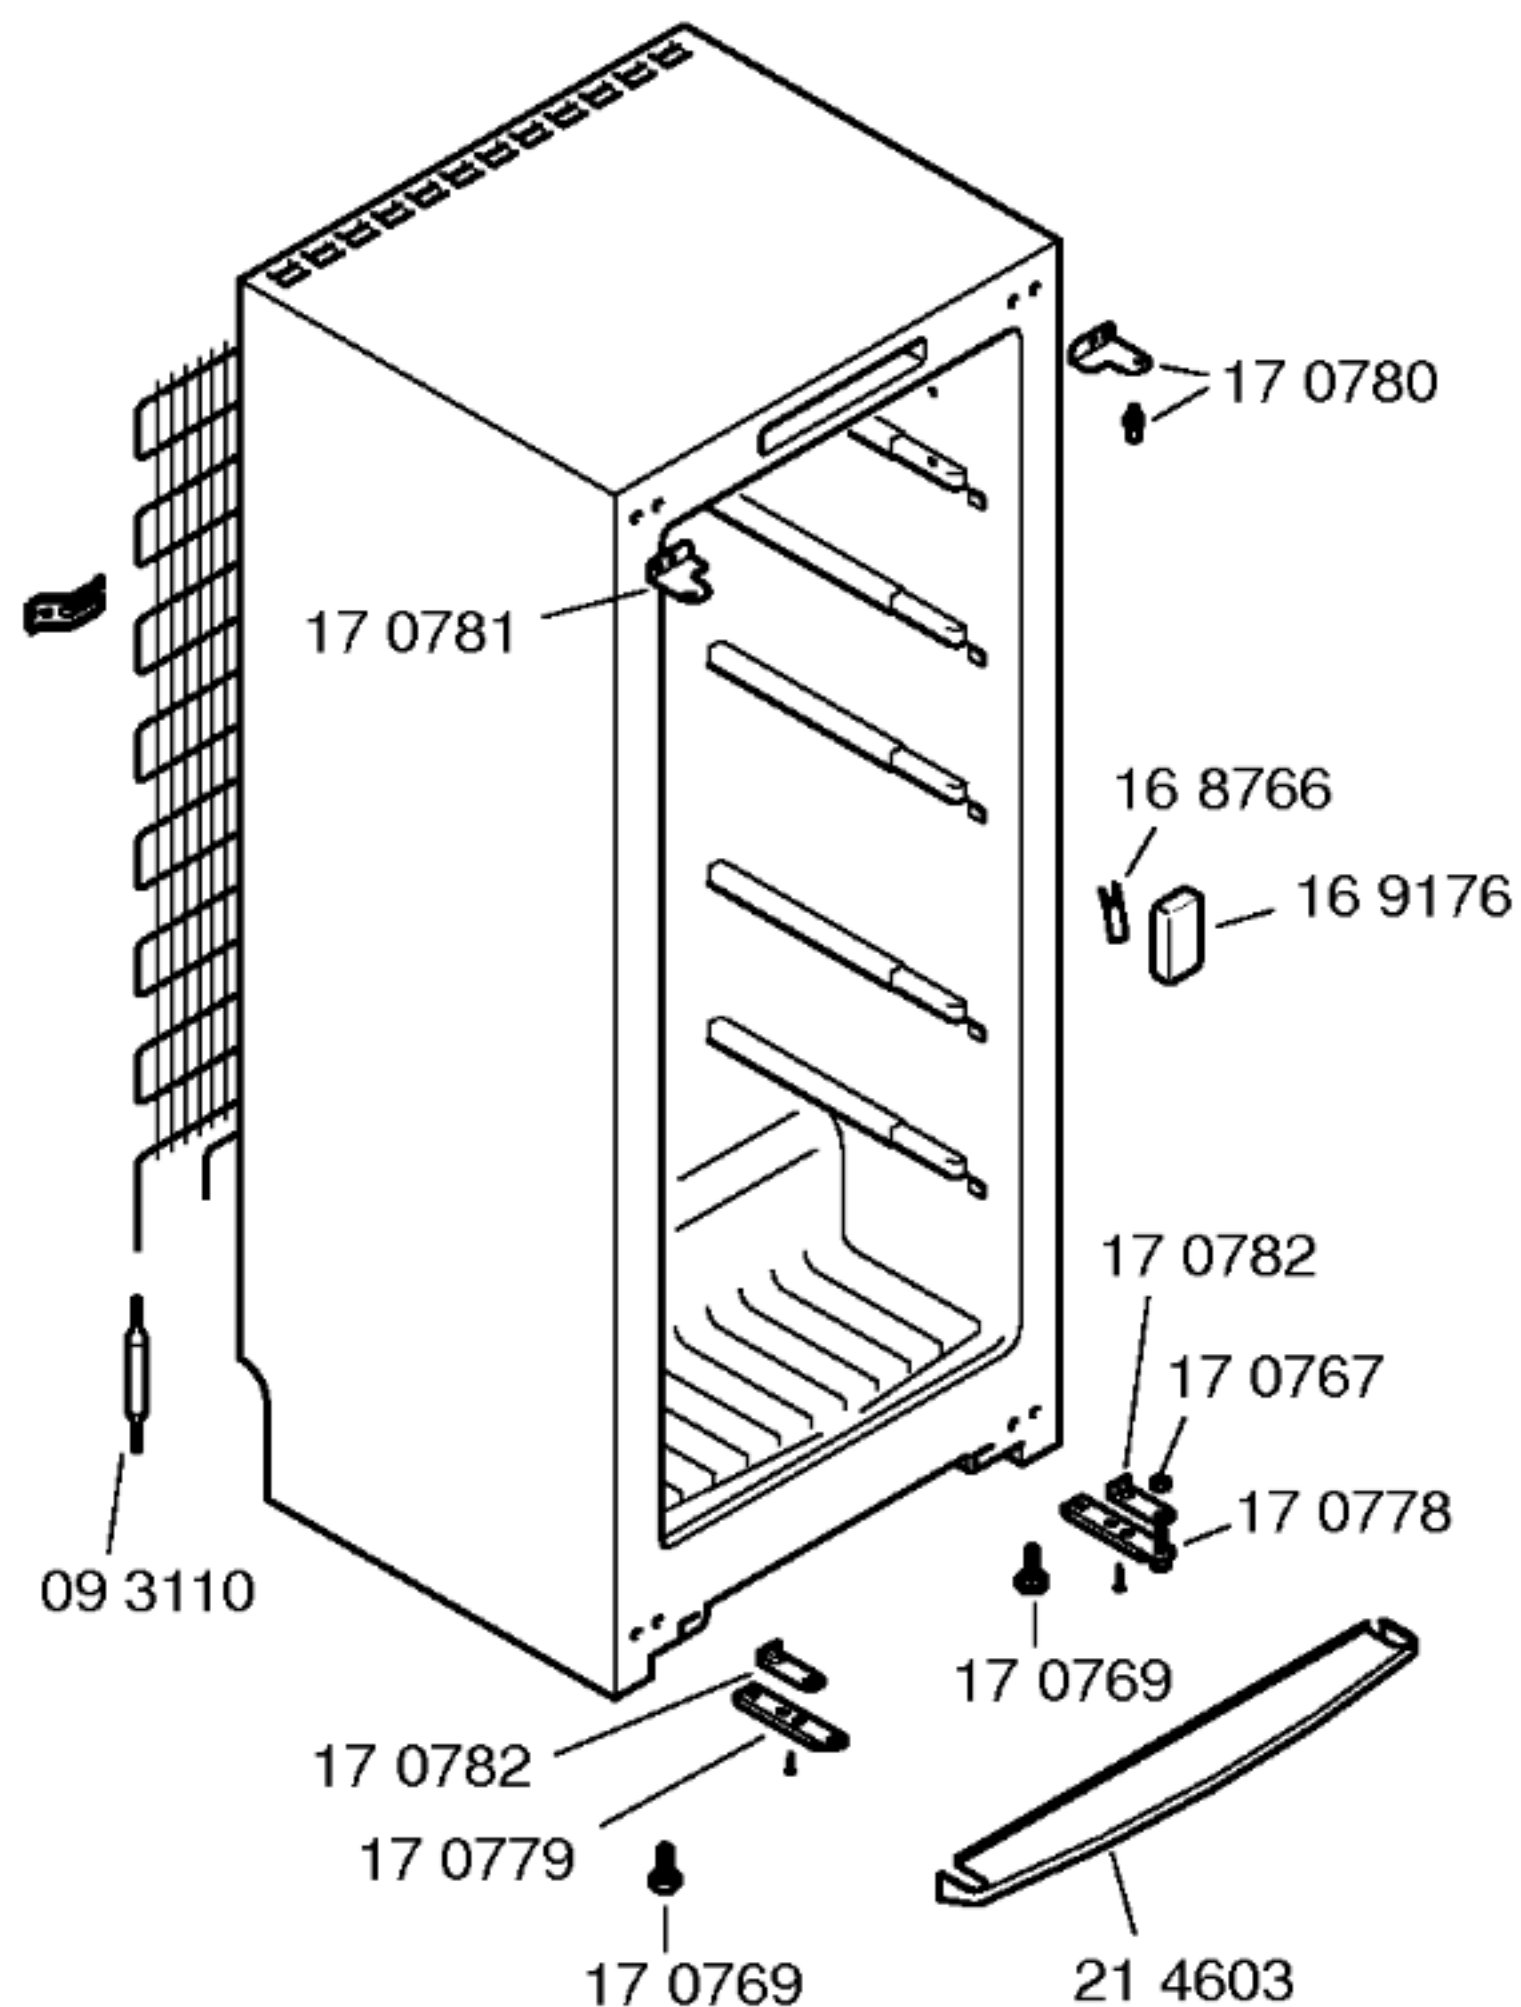


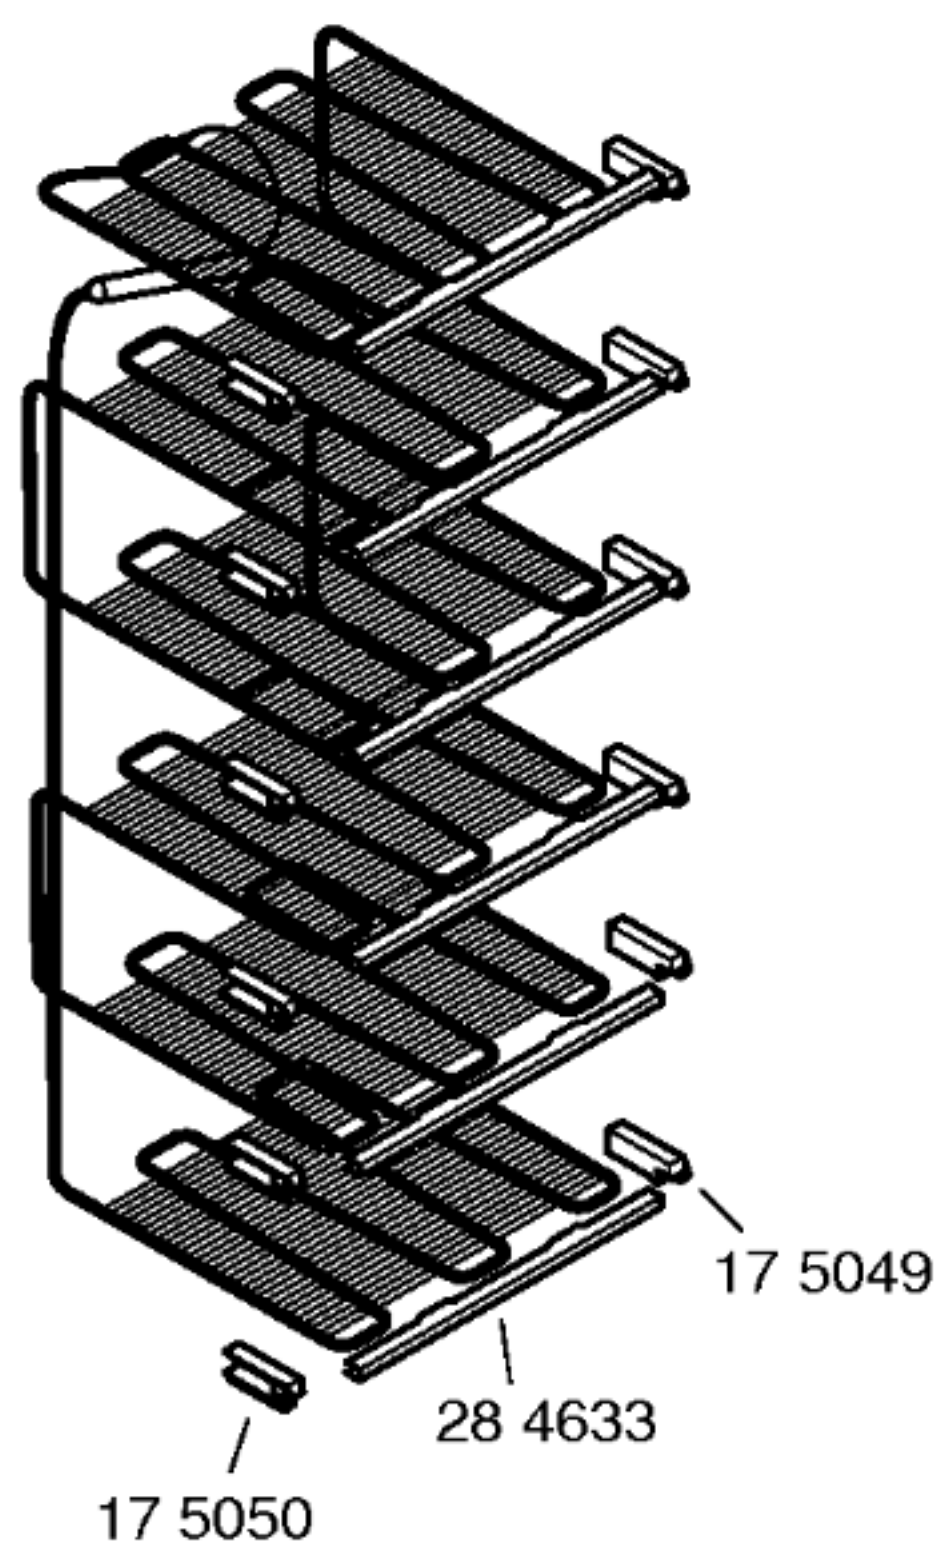

07 4445
V01-V03,
V06
09 6572
V04,V05

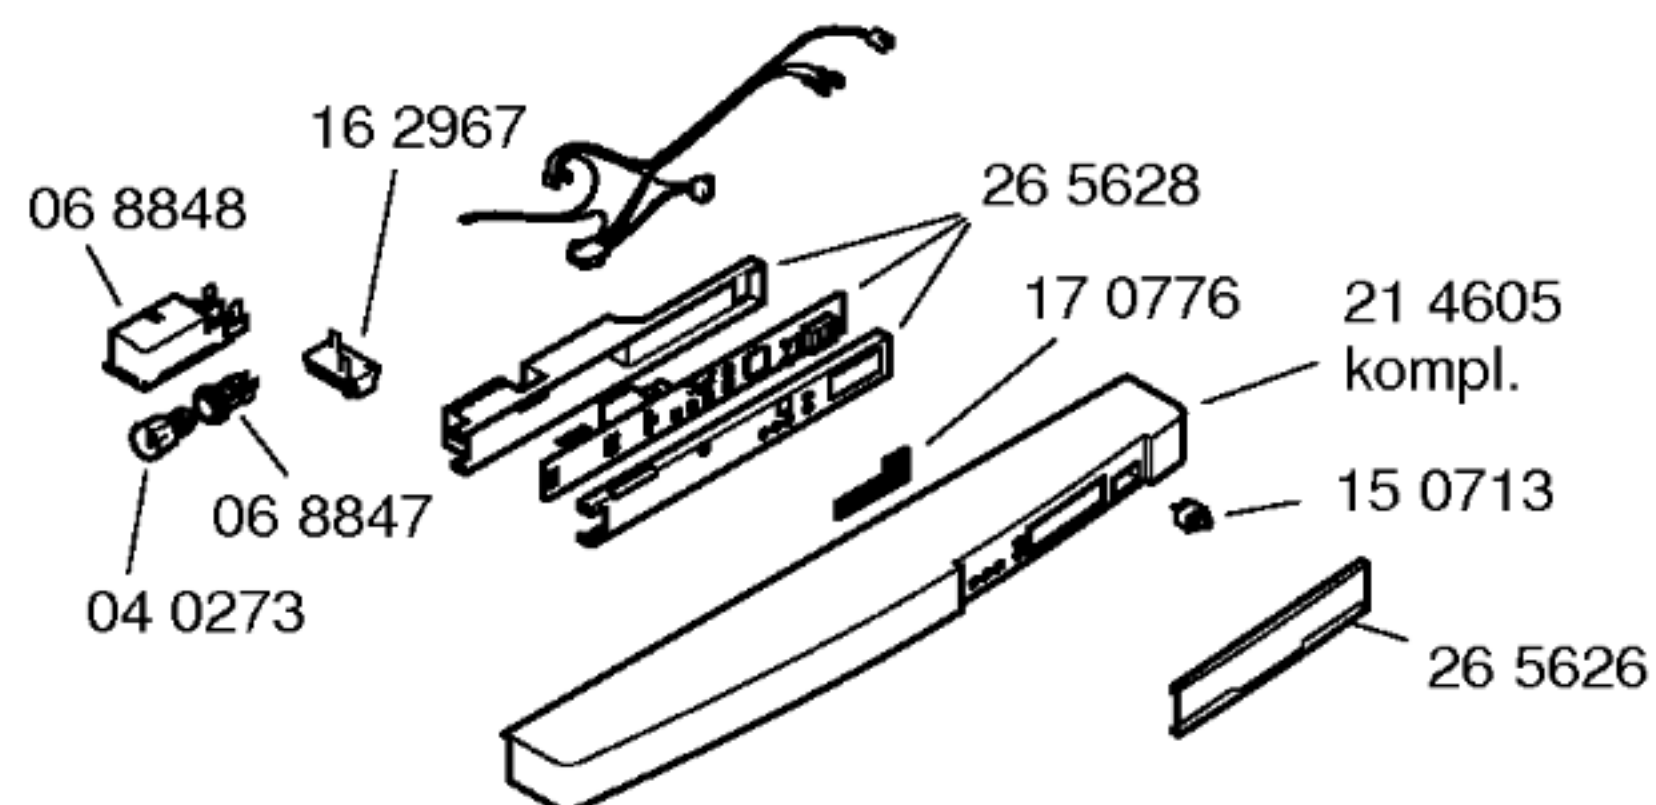


Mat. - Nr. - Konstante
3740


Gebrauchsanweisung
52 2790
(D,GB,F,I,NL)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5629

Side by Side
Beistellsatz zu KSR/KSK
48 1044

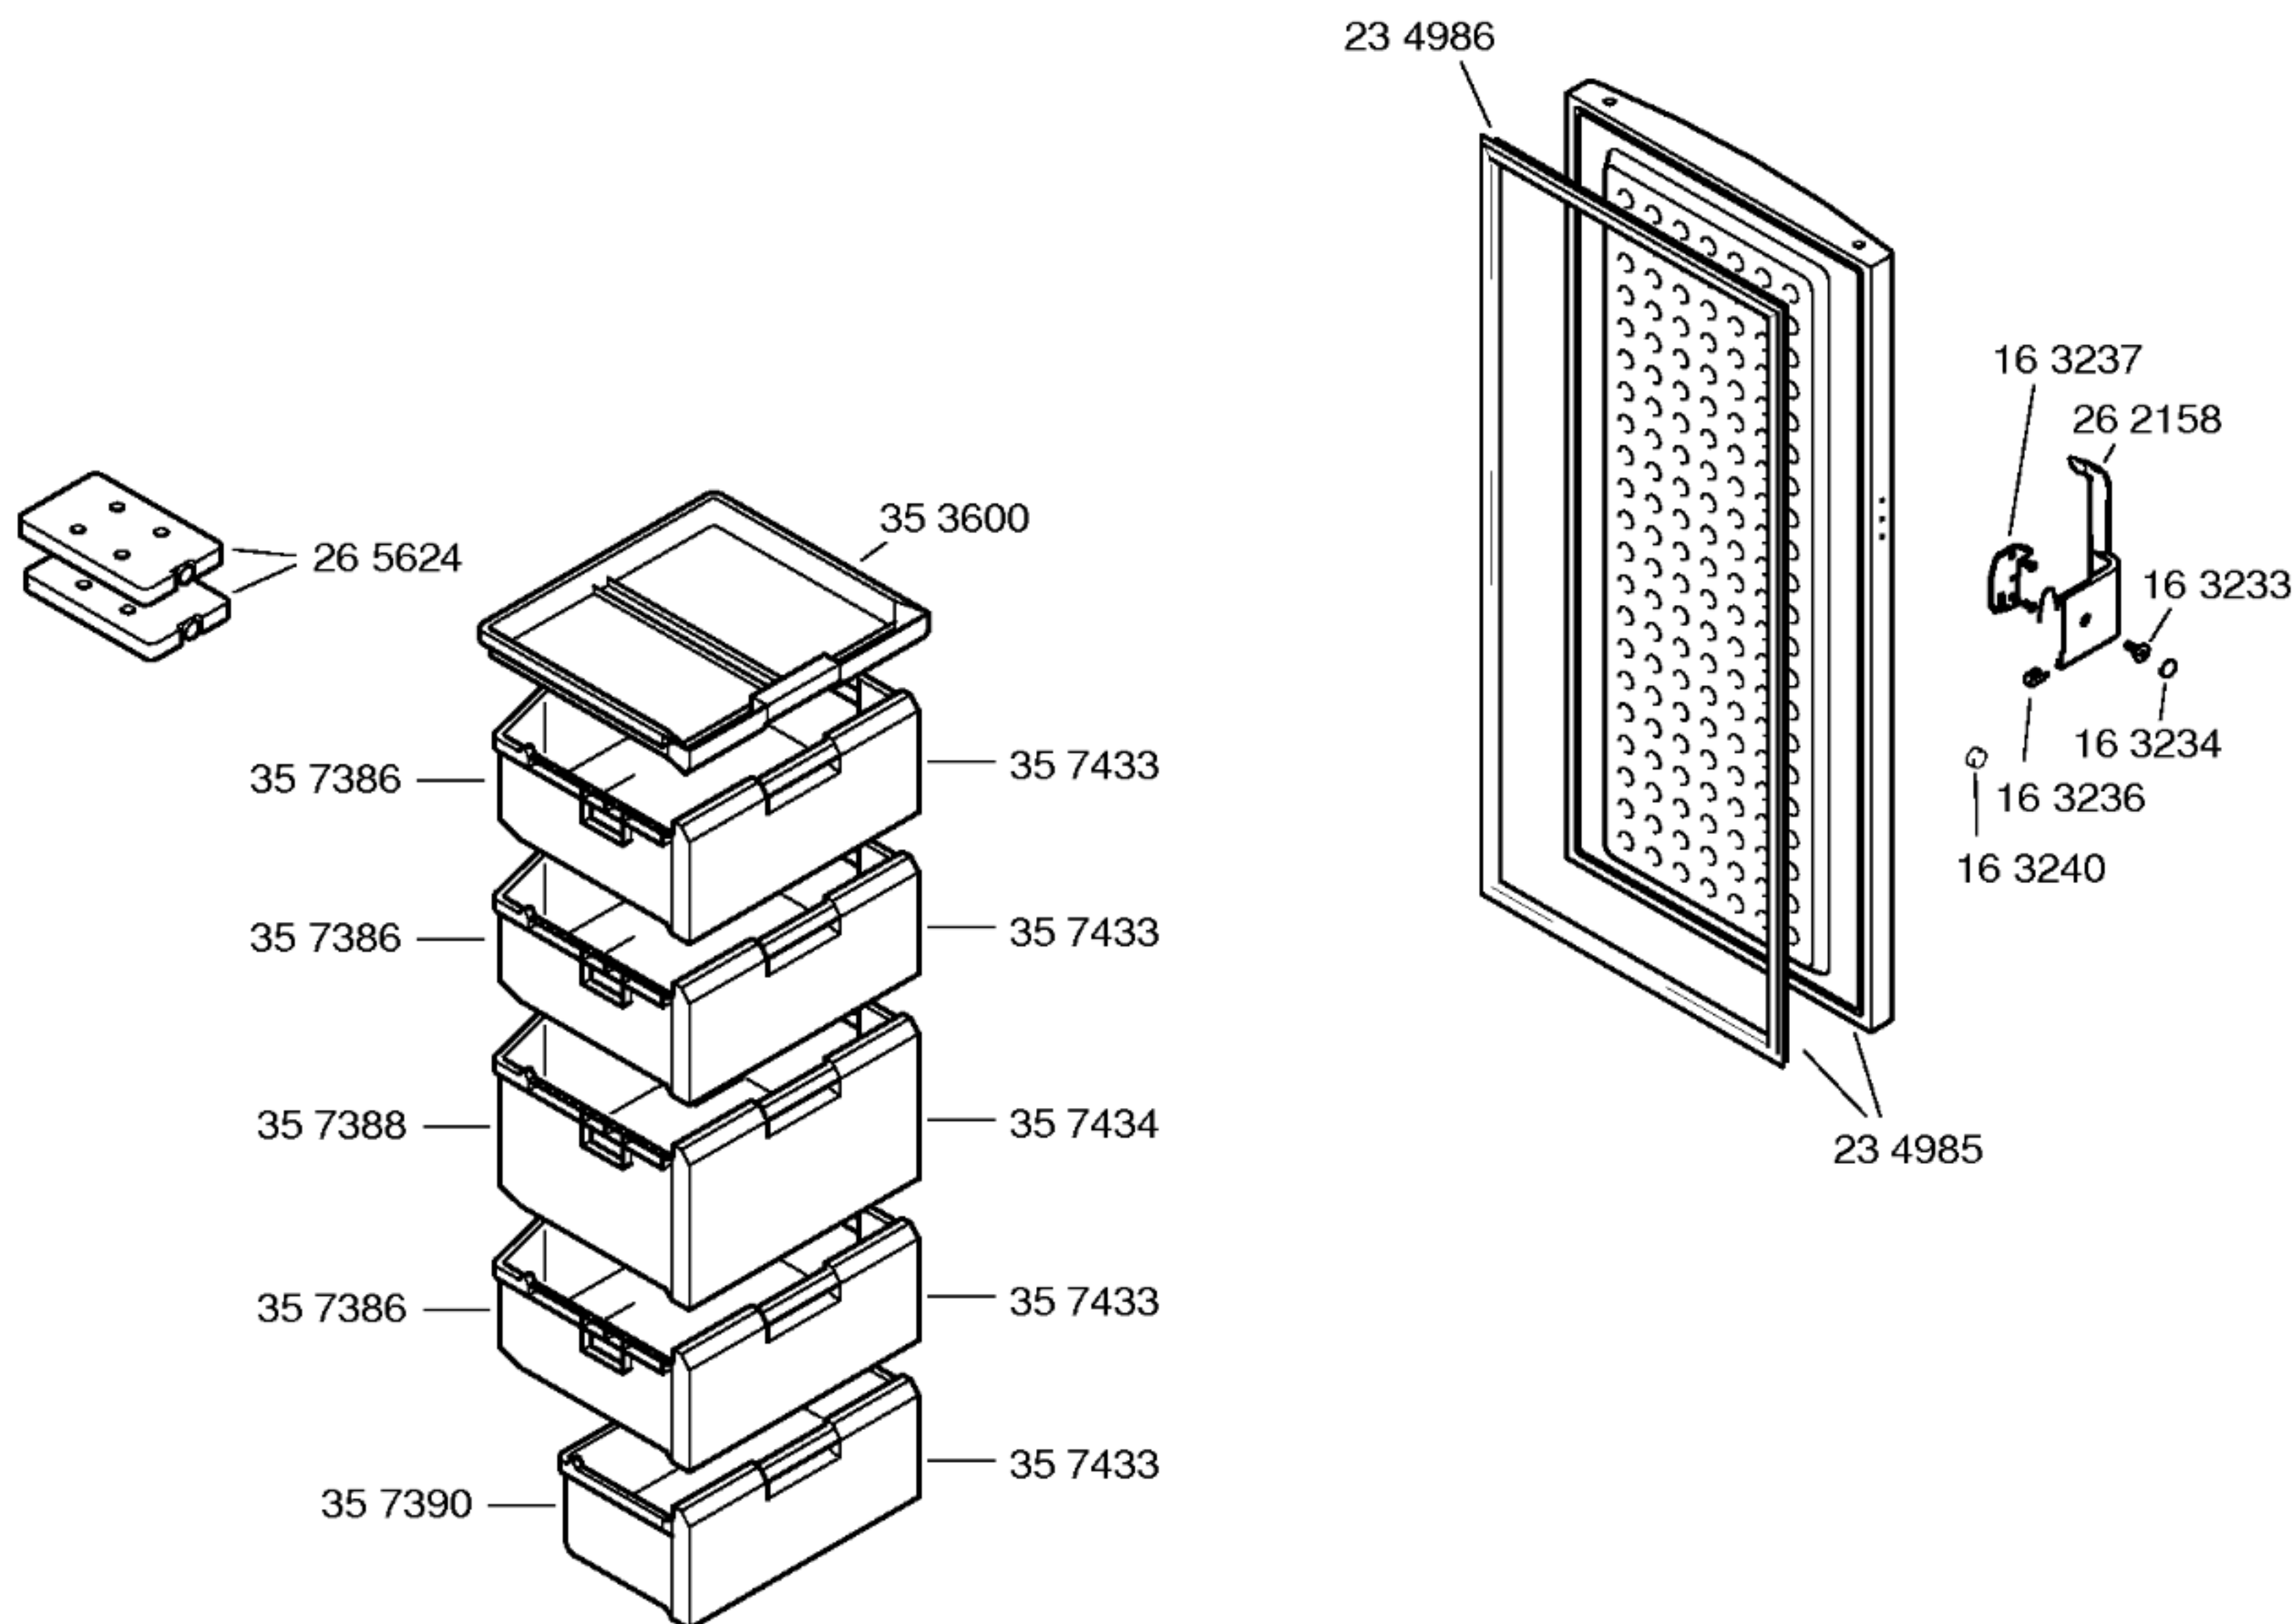

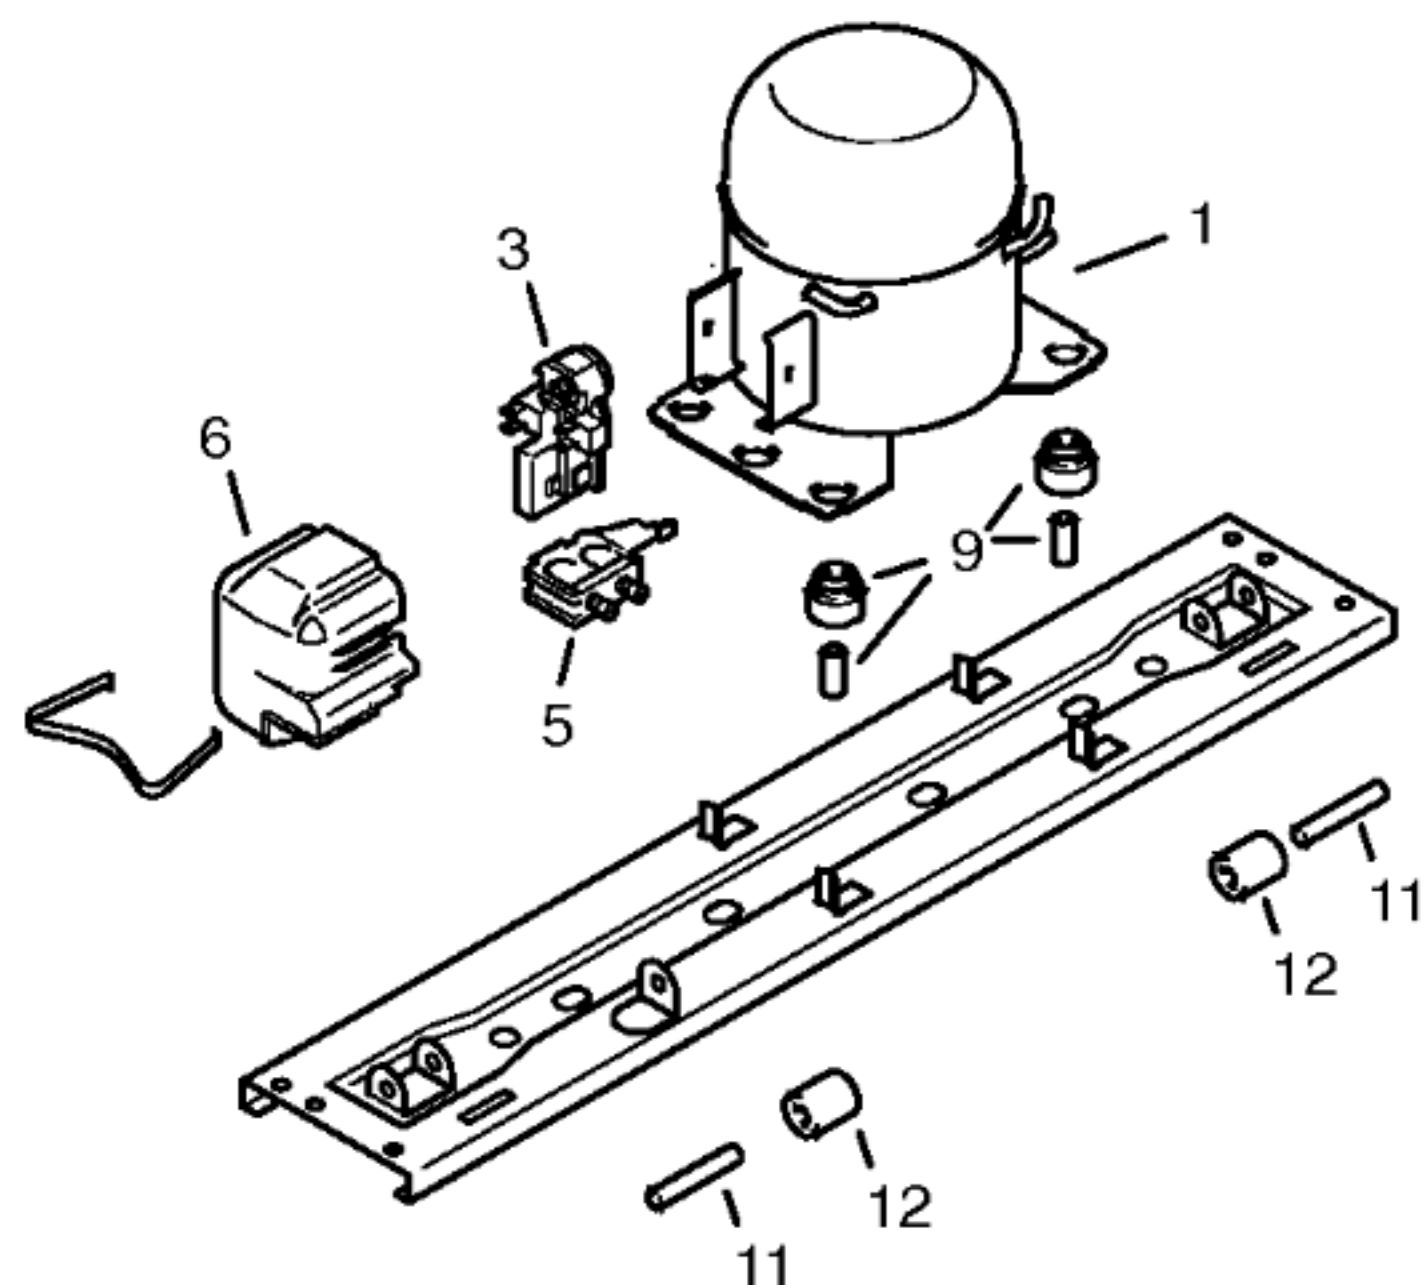

Pos.	V01	V02,V05	V03,V04	V06
	Aspera	Matsushita	Danfoss	Matsushita
	NBK1114Y	DC 110 E	NLE 11K	DC 110 E
1	14 1784	14 1946	14 1750	14 2130
2				
3	16 9517	17 2671	15 1055	17 2671
4				
5	16 8903	16 2549	15 0762	16 2549
6	16 8902	16 6782	15 1072	16 6782
7				
8	21 4604	21 4604	21 4604	21 4604
9	05 0166	05 0166	05 0166	05 0166
10				
11	01 9017	01 9017	01 9017	01 9017
12	01 9016	01 9016	01 1916	01 9016

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Aspera	Matsushita	Danfoss
Typ/Type	NBK1114Y	DC 110 E	NLE 11K
Förderleistung/Delivery/Débit	1800	1954	2007
Anlaufstrom/Starting current/Cour de démarrage	5,1	8,6	10,7
Widerstand/Resistance/Résistance Ha/main/prin	13,8	14,2	12,9
Hi/aux	25,1	12,8	18,0

Temp.-Regler/Thermostat			
Typ/Type			
Regelstellung/Position			
Schaltwerte/Switching values	"warm"		
Valeurs de commutation	"kalt"		
	"alarm"		

Füllmenge/Fill.quantity/Charge	R600a		
--------------------------------	-------	--	--

Anschlußwert/Conn.load/Puiss. connectée	W	96	106	114
---	---	----	-----	-----

Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		

Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		

NTC-Fühler / Sensor	°C	kΩ	°C	kΩ
	+10	9,95 ± 0,18	-18	43,31 ± 1,10
	+5	12,70 ± 0,18	-22	54,66 ± 1,59
	0	16,33 ± 0,16	-26	69,42 ± 2,29

Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		