

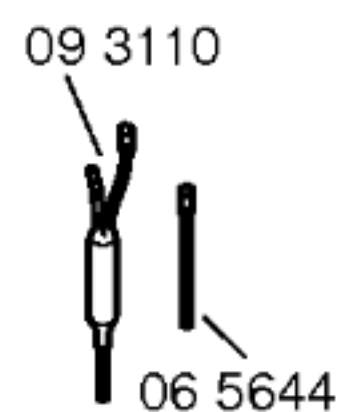


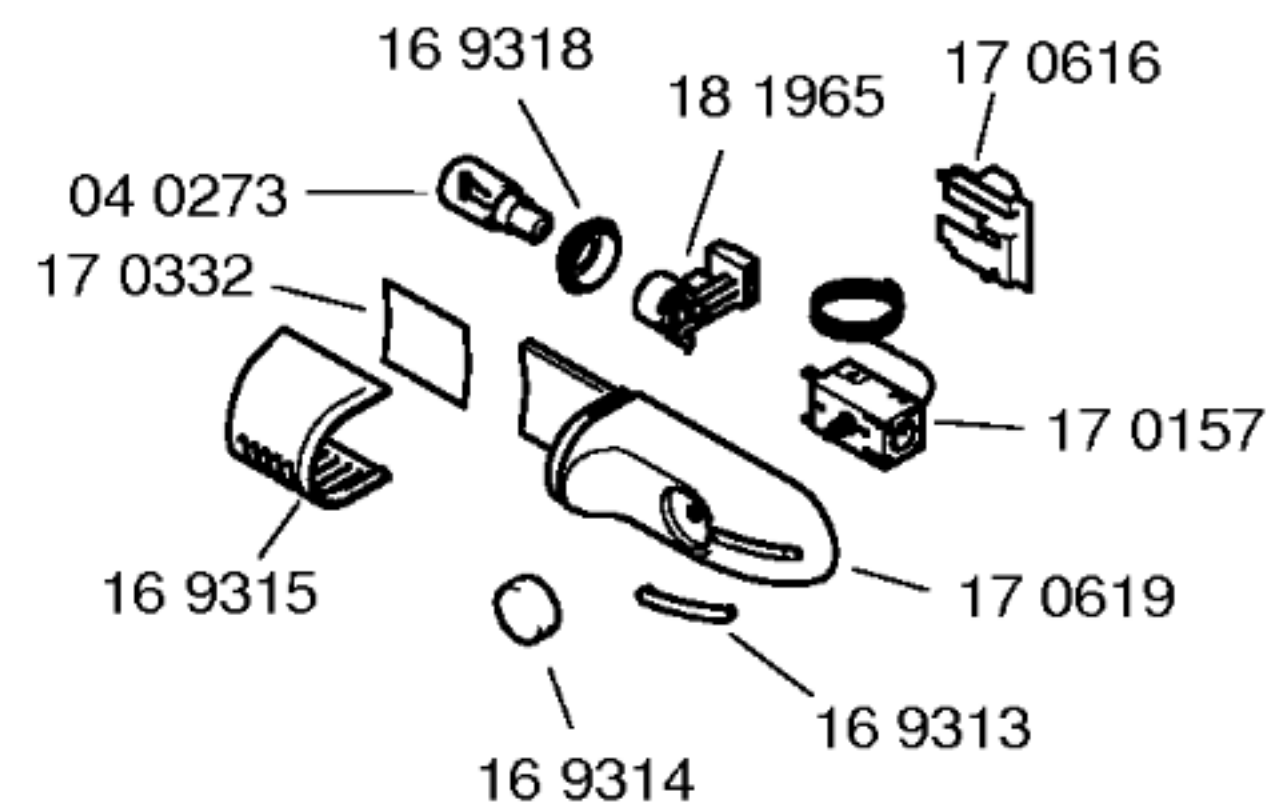


07 4445
V01, V03
09 6325
V02

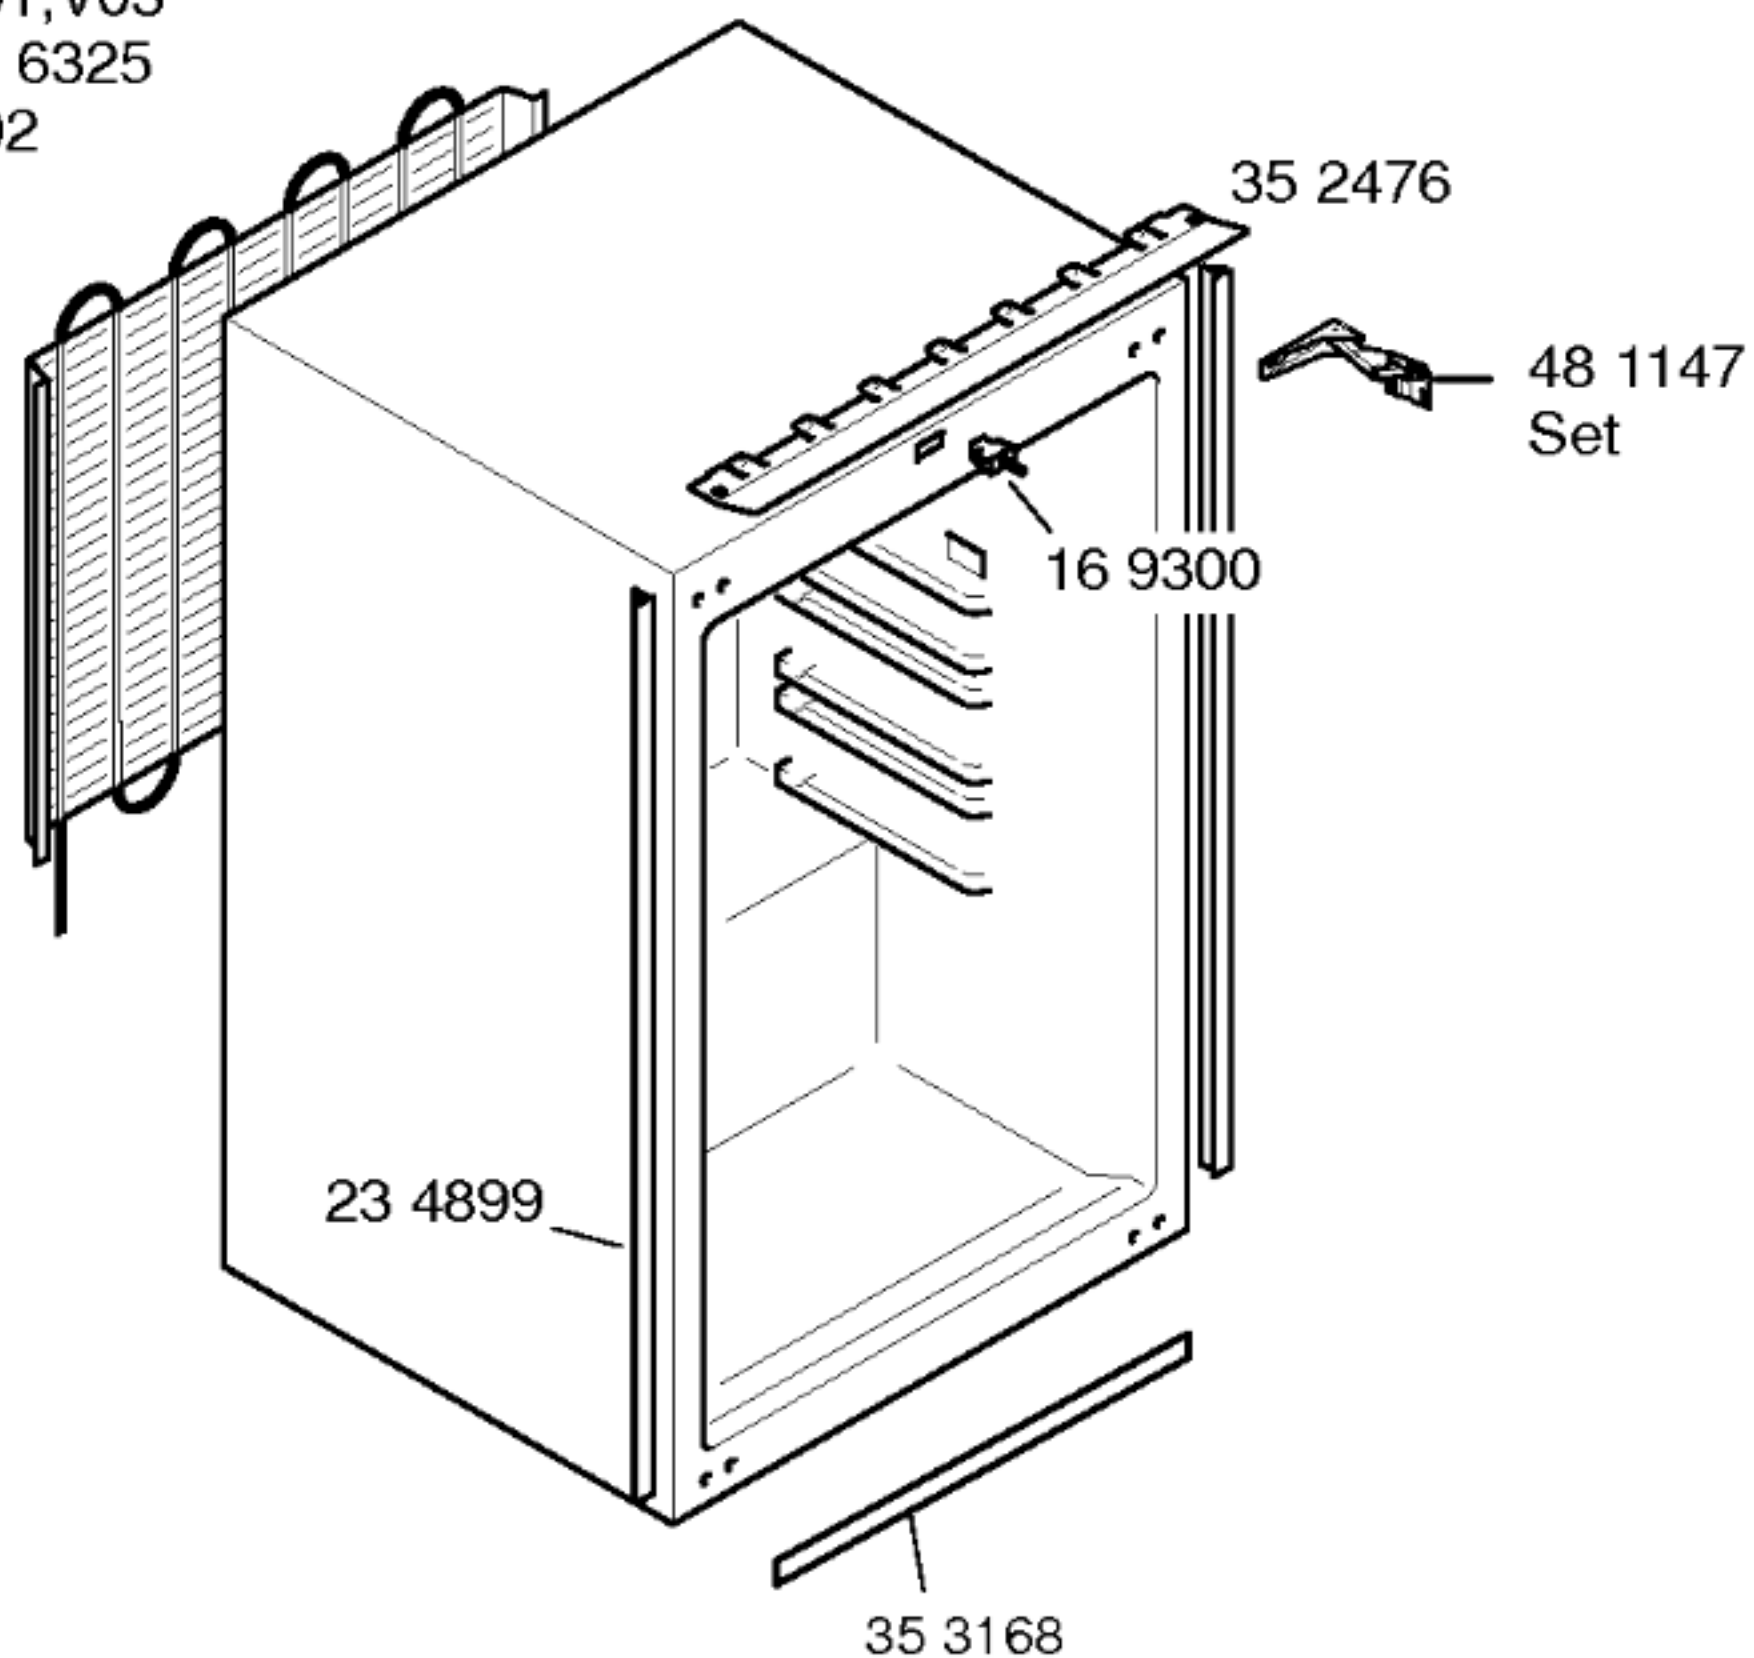


Gebrauchsanweisung
52 2493
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

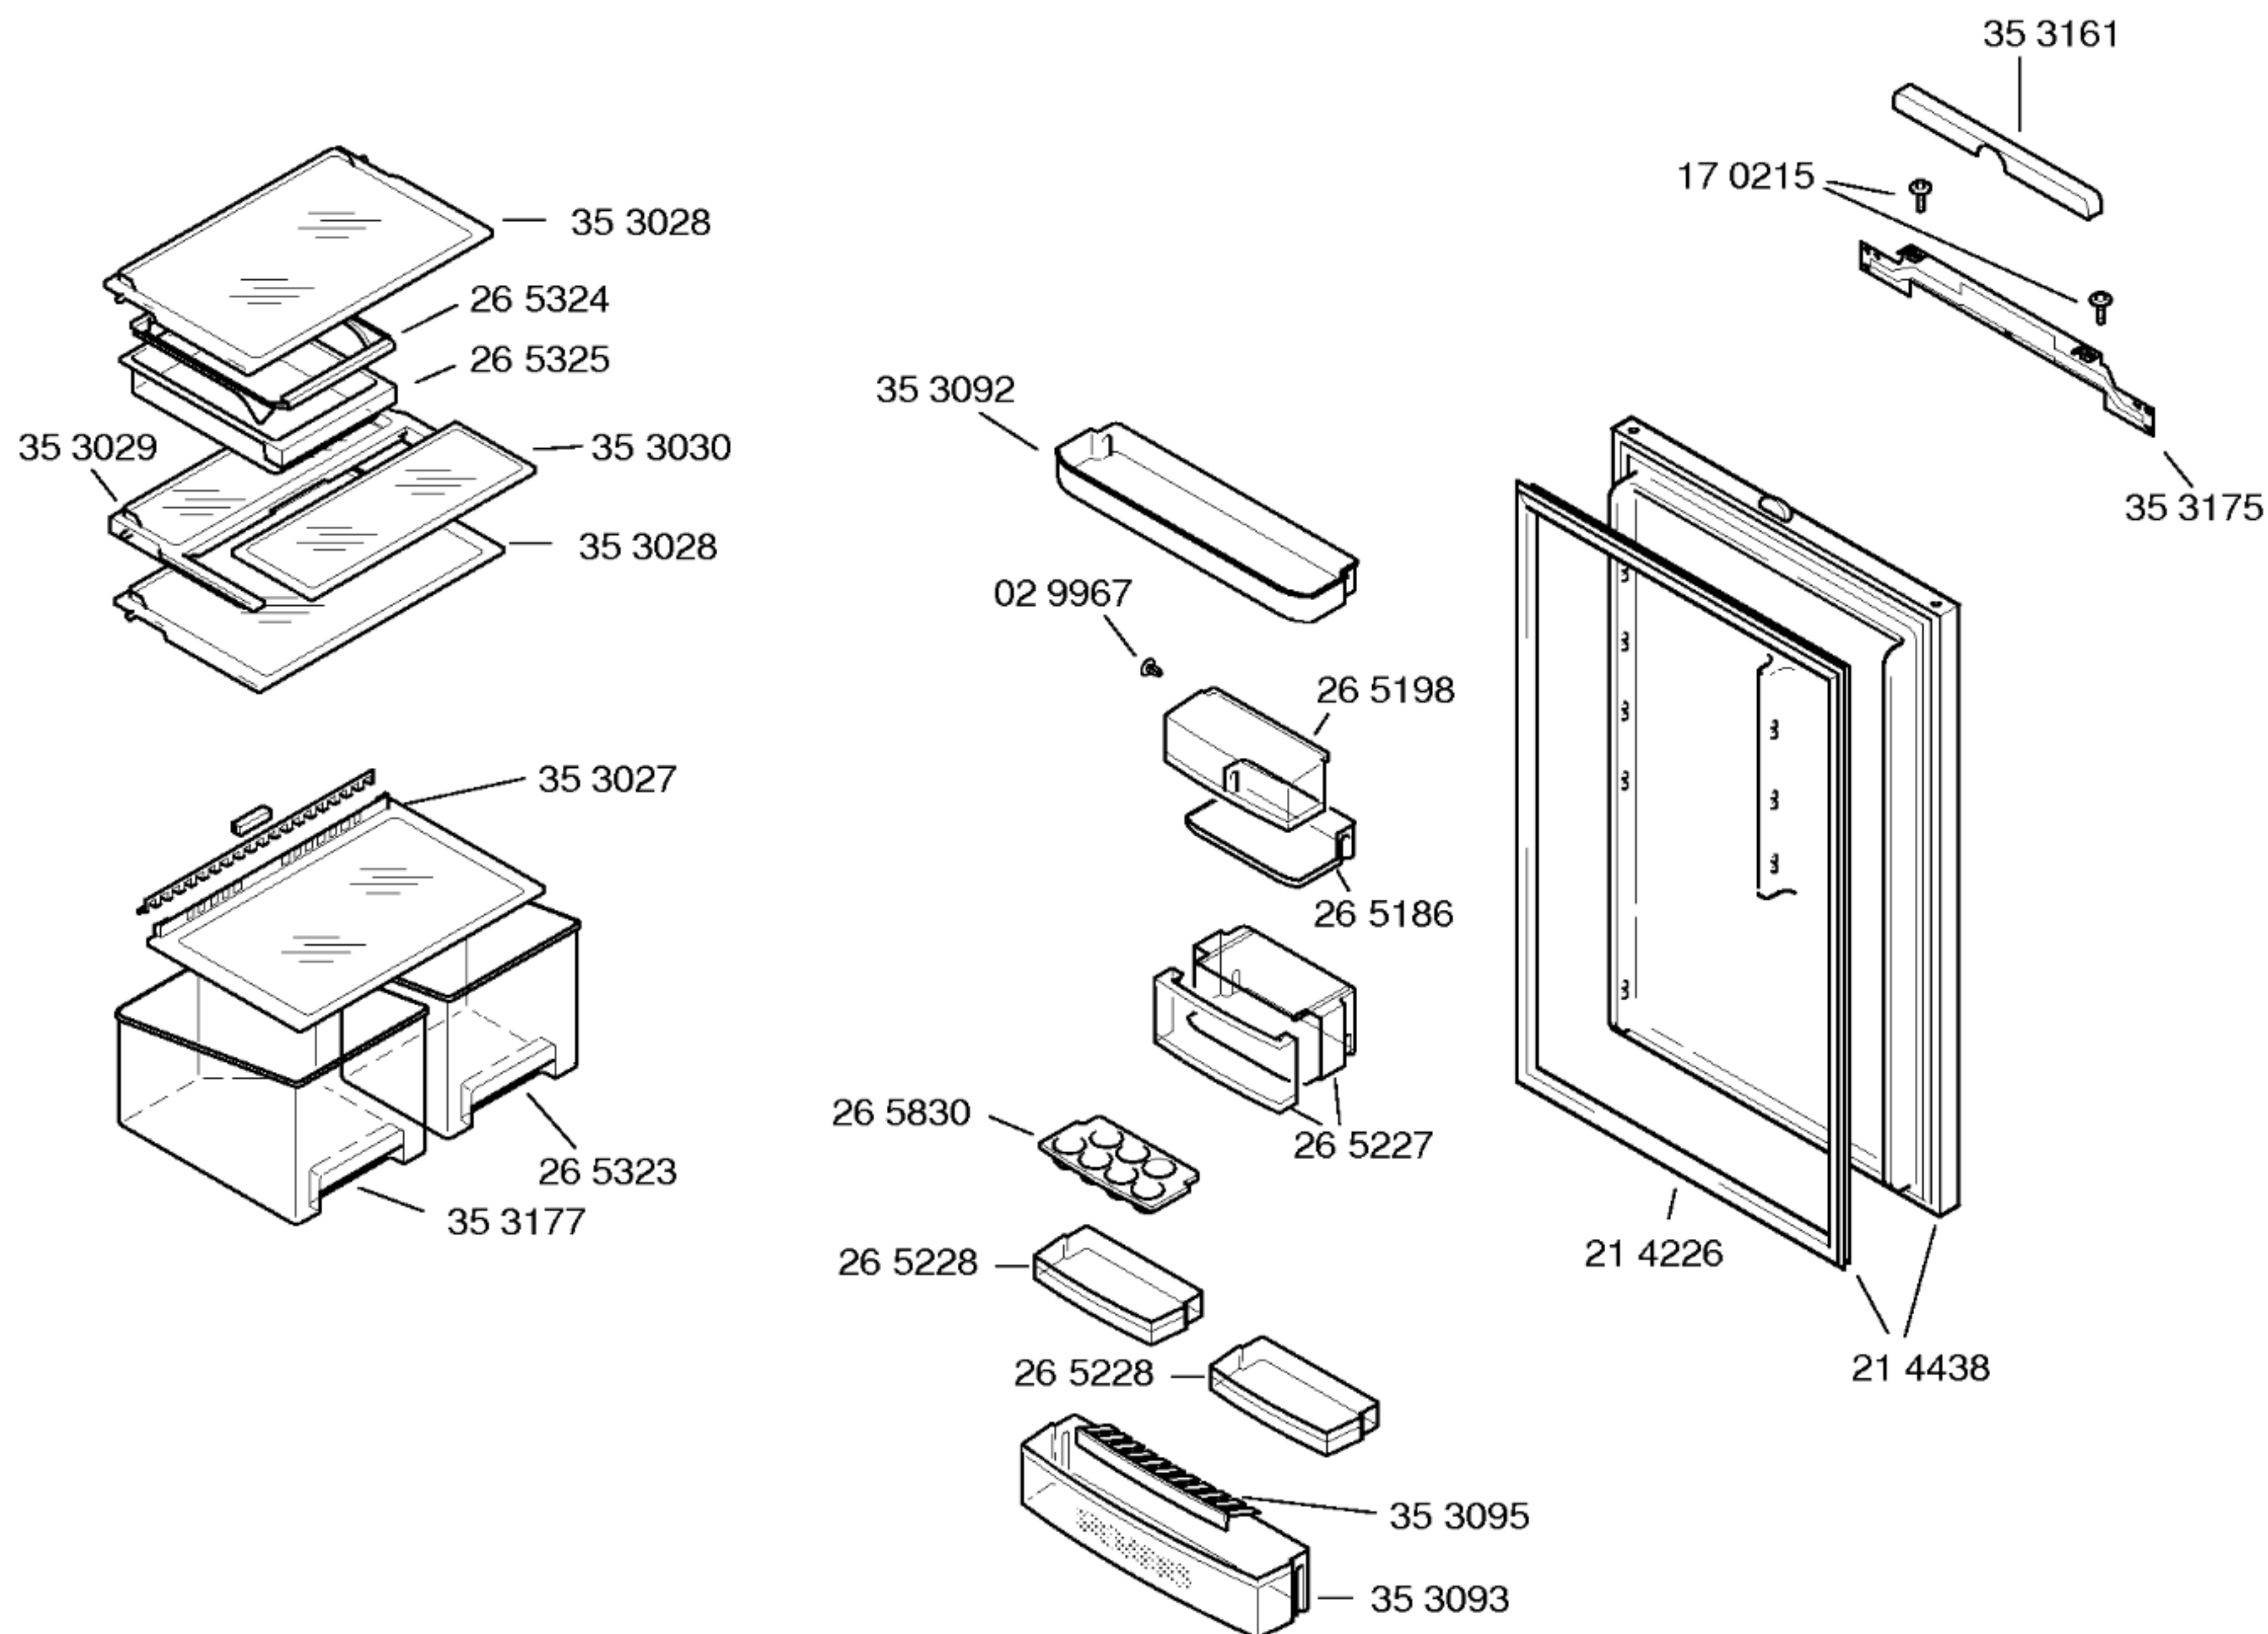

Mat. – Nr. – Konstante
3740

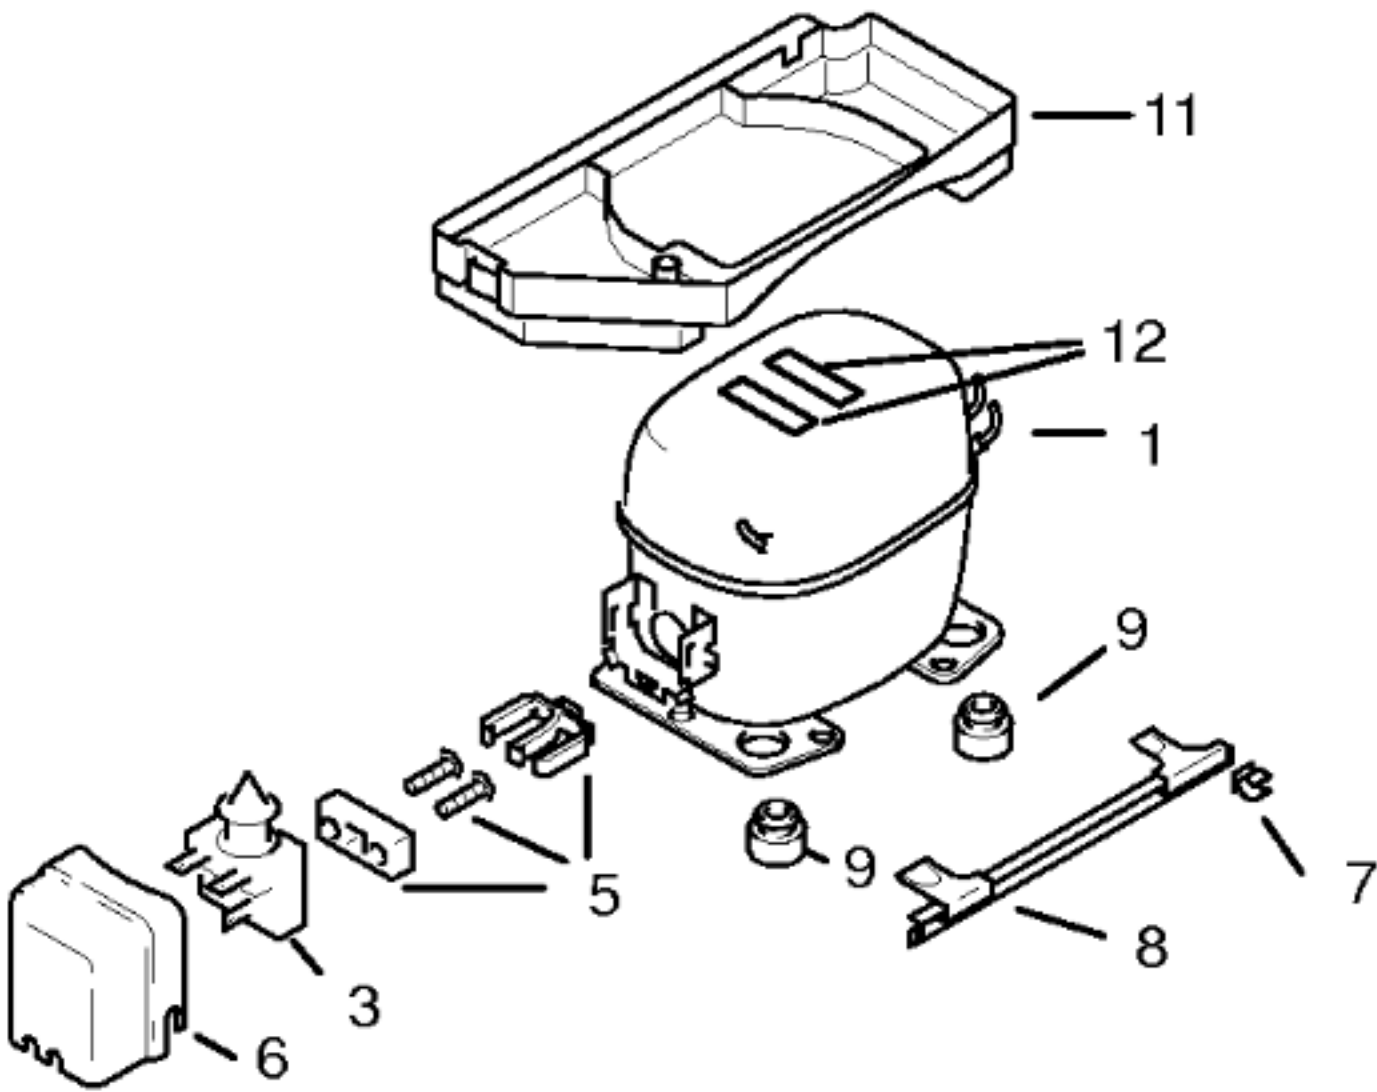

	V01		
	Aspera		
Pos.	BPK1046Y		
1	14 2099		
2			
3	18 0752		
4			
5	17 0882		
6	17 0881		
7	16 9319		
8	26 4879		
9	050166		
10			
11	36 5099		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Aspera		
Typ/Type	BPK1046Y		
Förderleistung/Delivery/Débit	l/h	612	
Anlaufstrom/Starting current/Cour de démarrage	A	3,2	
Widerstand/Resistance/Résistance	Ω	60,9	
Hi/aux	Ω	44,9	
Temp.-Regler/Thermostat	Ranco		
Typ/Type	K59		
Regelstellung/Position	kalt	warm	
Schaltwerte/Switching values	"warm"	+5,0	+5,0
Valeurs de commutation	"kalt"	-25,0	-10,0
"alarm"			
Füllmenge/Fill.quantity/Charge	R600a	+	
Anschlußwert/Conn.load/Puiss. connectée	W	44	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		