
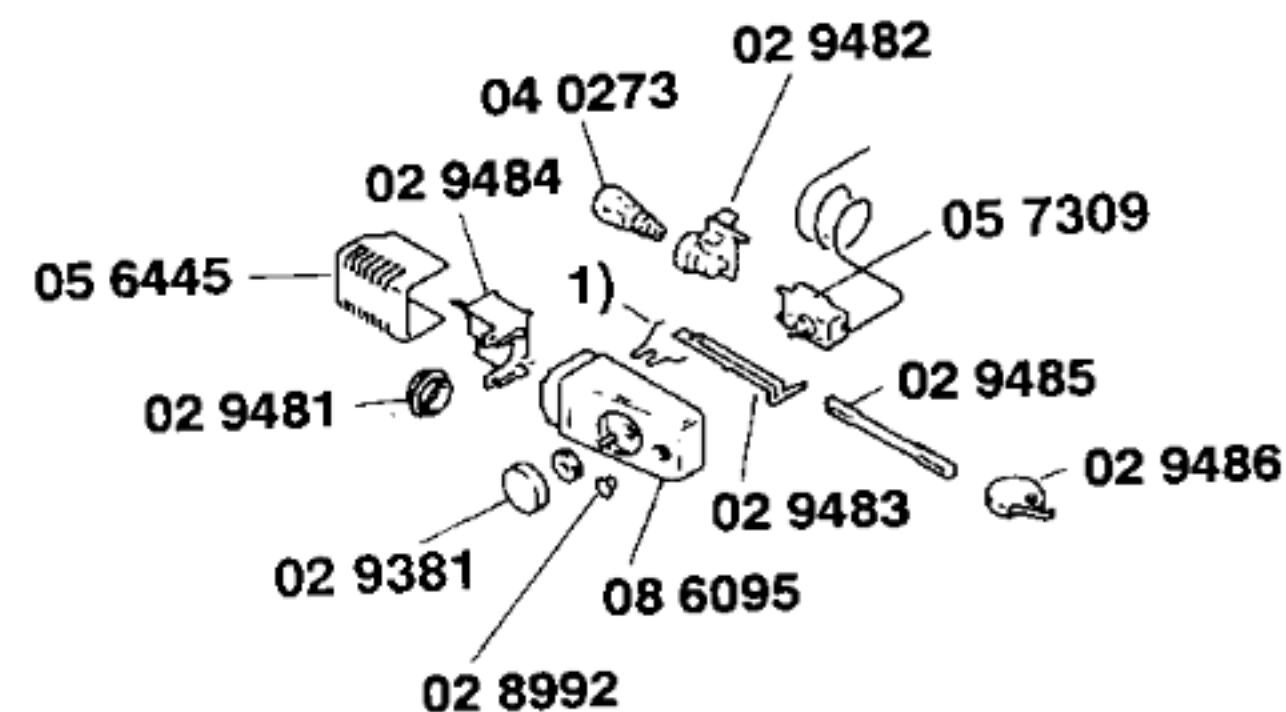


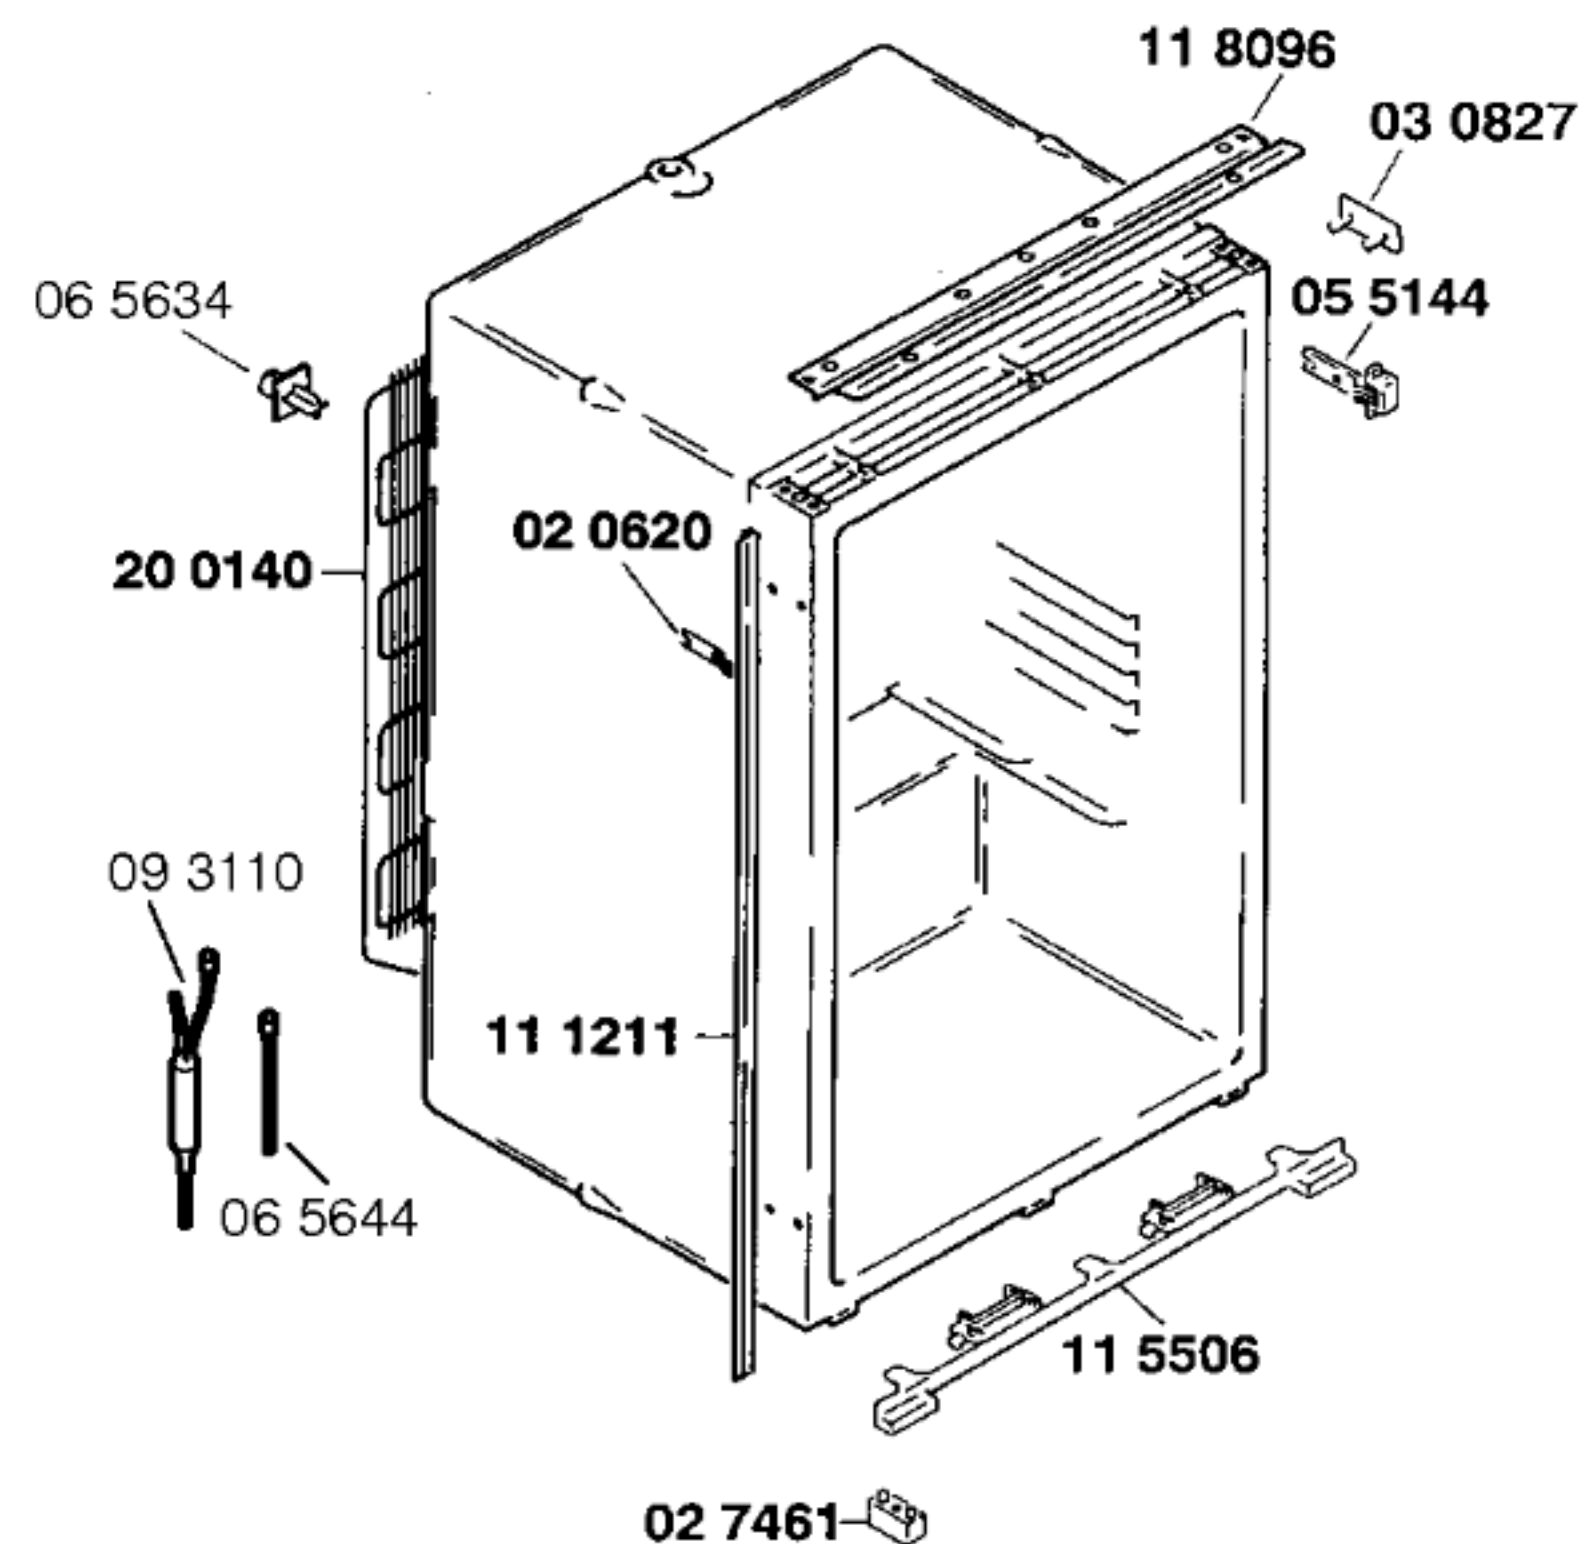

Gebrauchsanweisung
51 2718
(D,GB,F,I,NL,N,DK,SF,E)
Montageanleitung
51 4779
(D,GB,F,I,NL,DK,N,
S,SF,E,P)
Schraubensatz
08 4136


1) 02 9480


Zubehör:

Dekorrahmen
KZ12060, weiß
KZ12170, braun

Ausgleichsblenden
braun:
KZ12080, 37mm
KZ12090, 41mm
KZ12100, 56mm

Alu:
KZ12110, 37mm
KZ12120, 41mm
KZ12130, 56mm

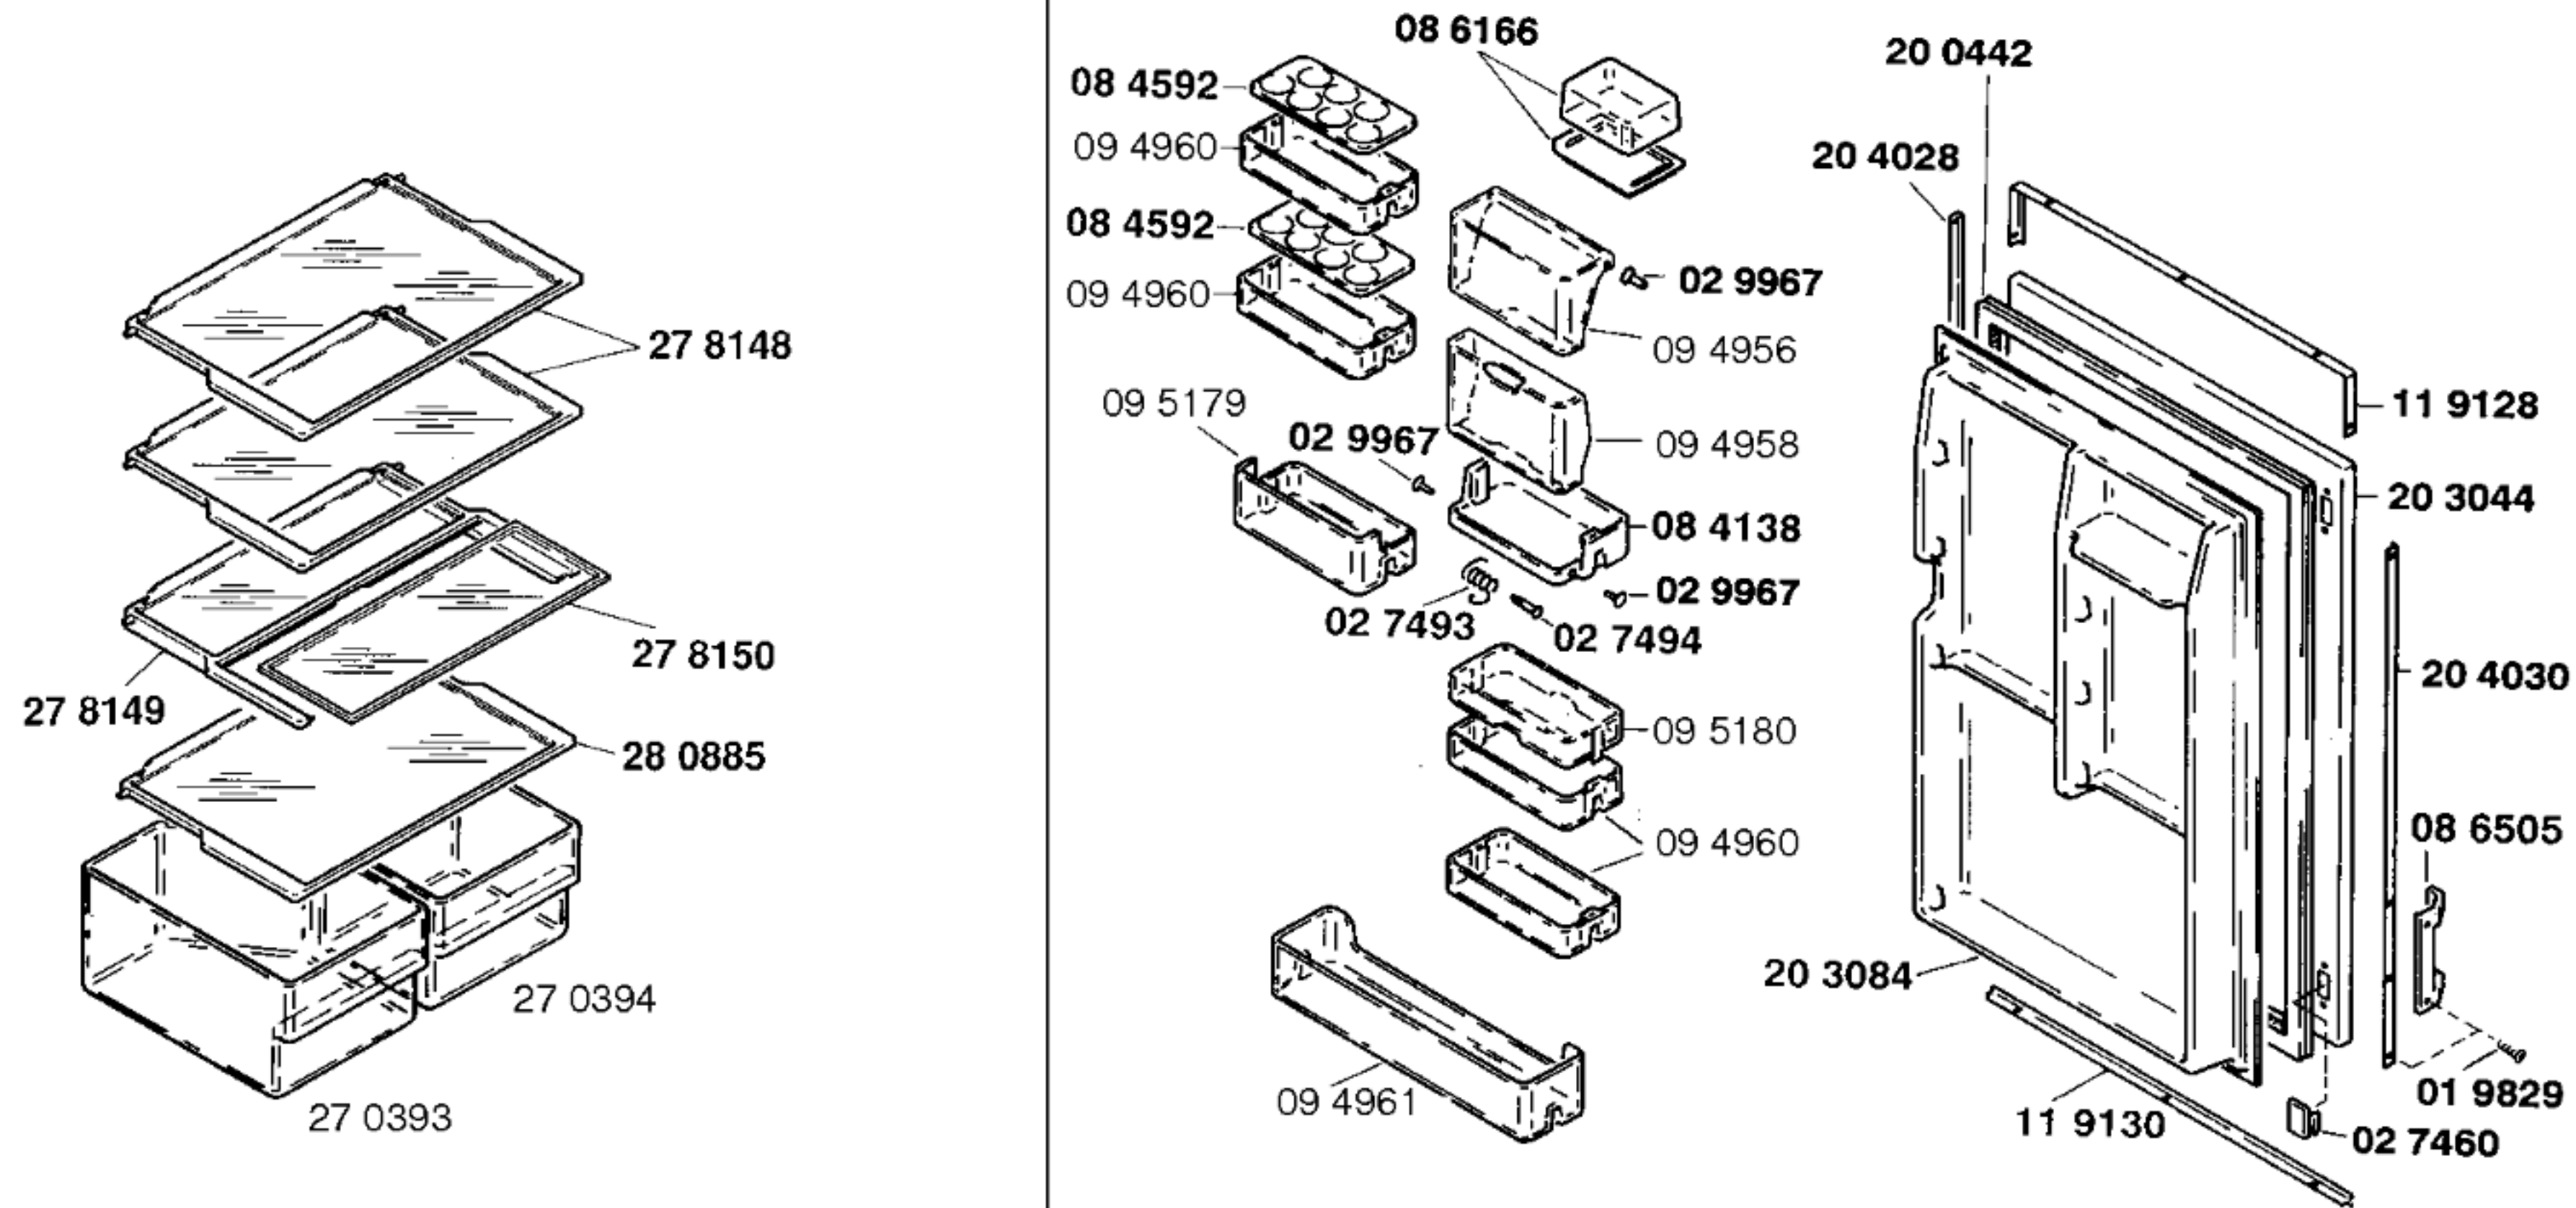

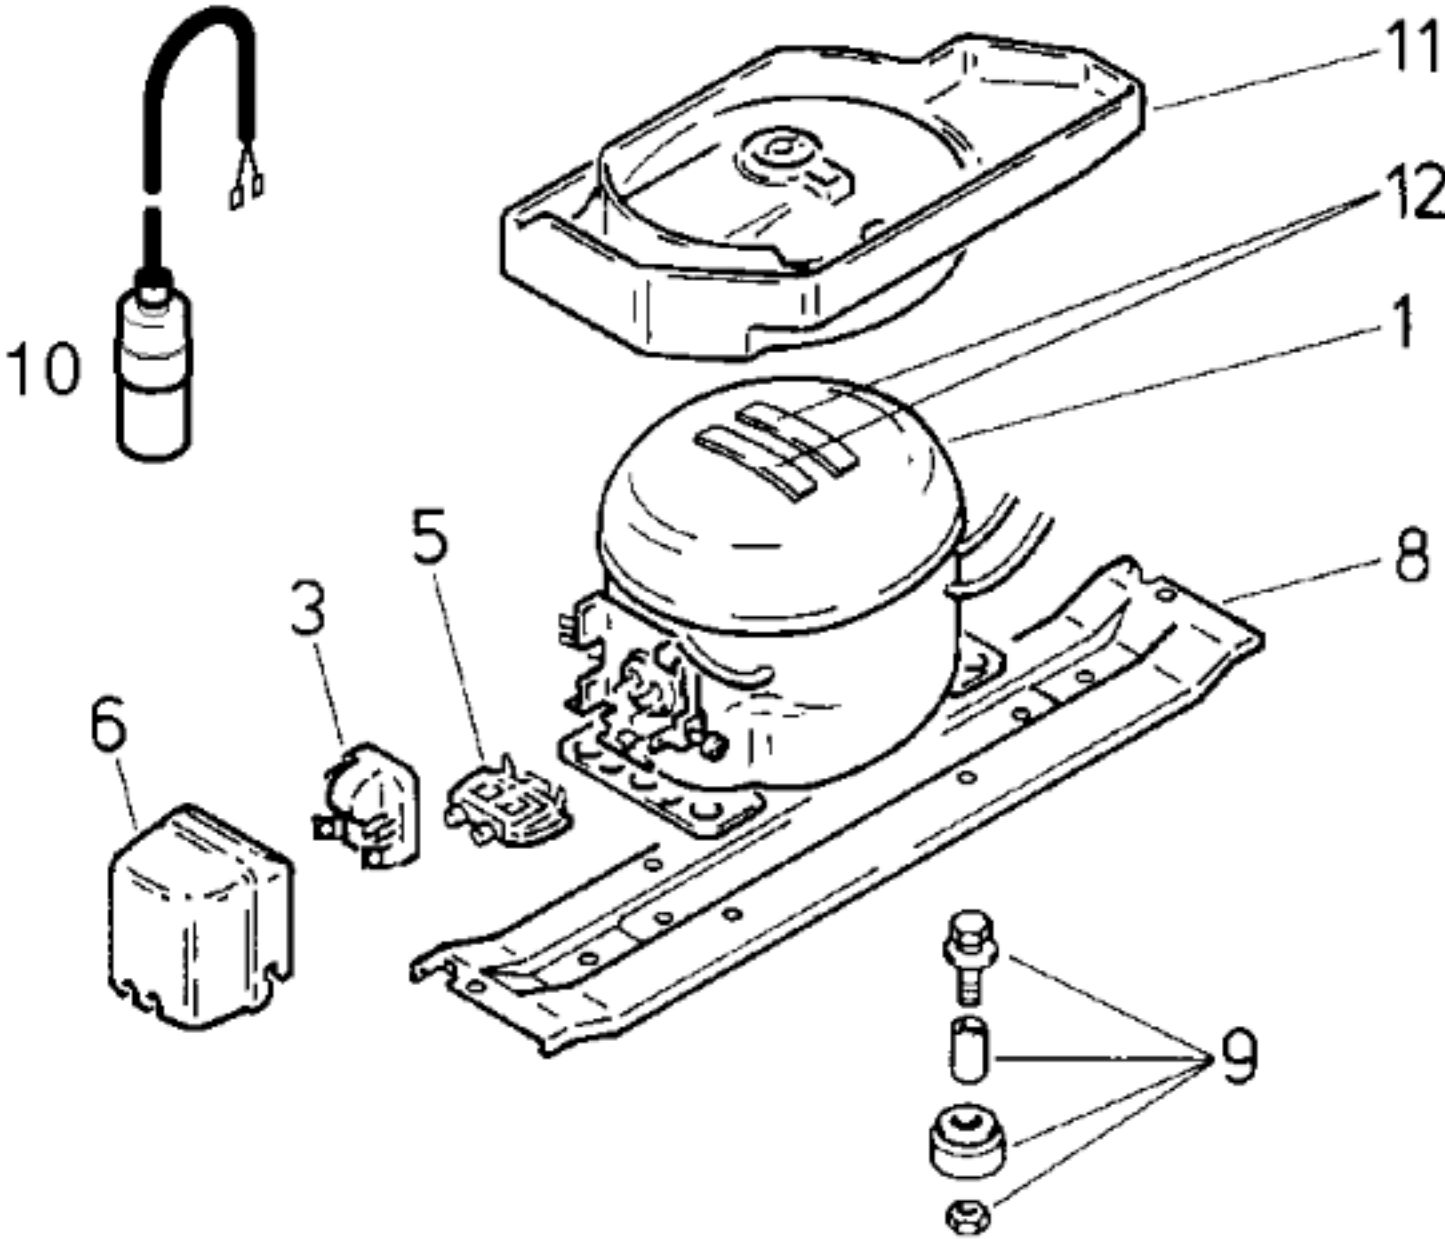

Pos.			
	Danfoss		
	TLES 4 F		
1	14 1244		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	27 8207		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLES 4 F	
Förderleistung/Delivery/Débit	l/h	615	
Anlaufstrom/Starting current/Cour de démarrage	A	2,9	
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	25,7	
	Hi/aux Ω	18,9	
Temp.-Regler/Thermostat		WHF	
Typ/Type		TF 57 F1	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+5	+5
Valeurs de commutation	„aus“	-26	-12
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R134a	g	50
Anschlußwert/Conn.load/Puiss. connectée		W	90
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		