
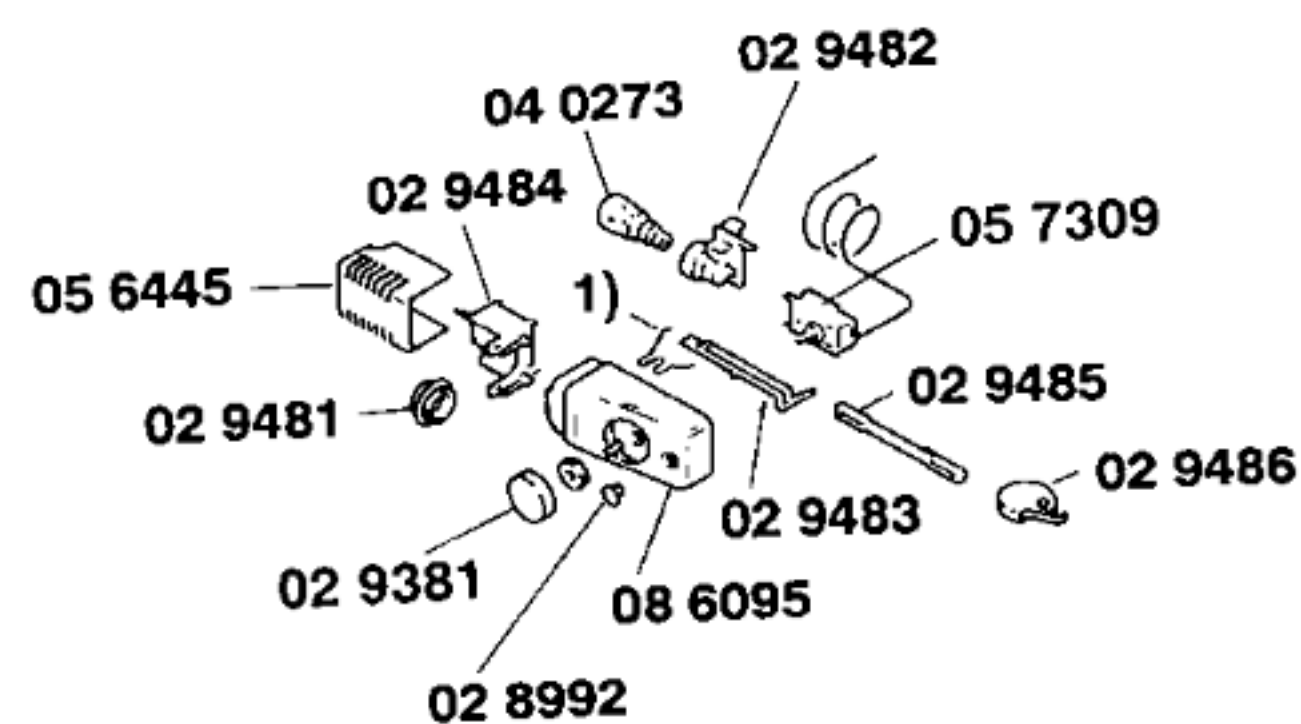


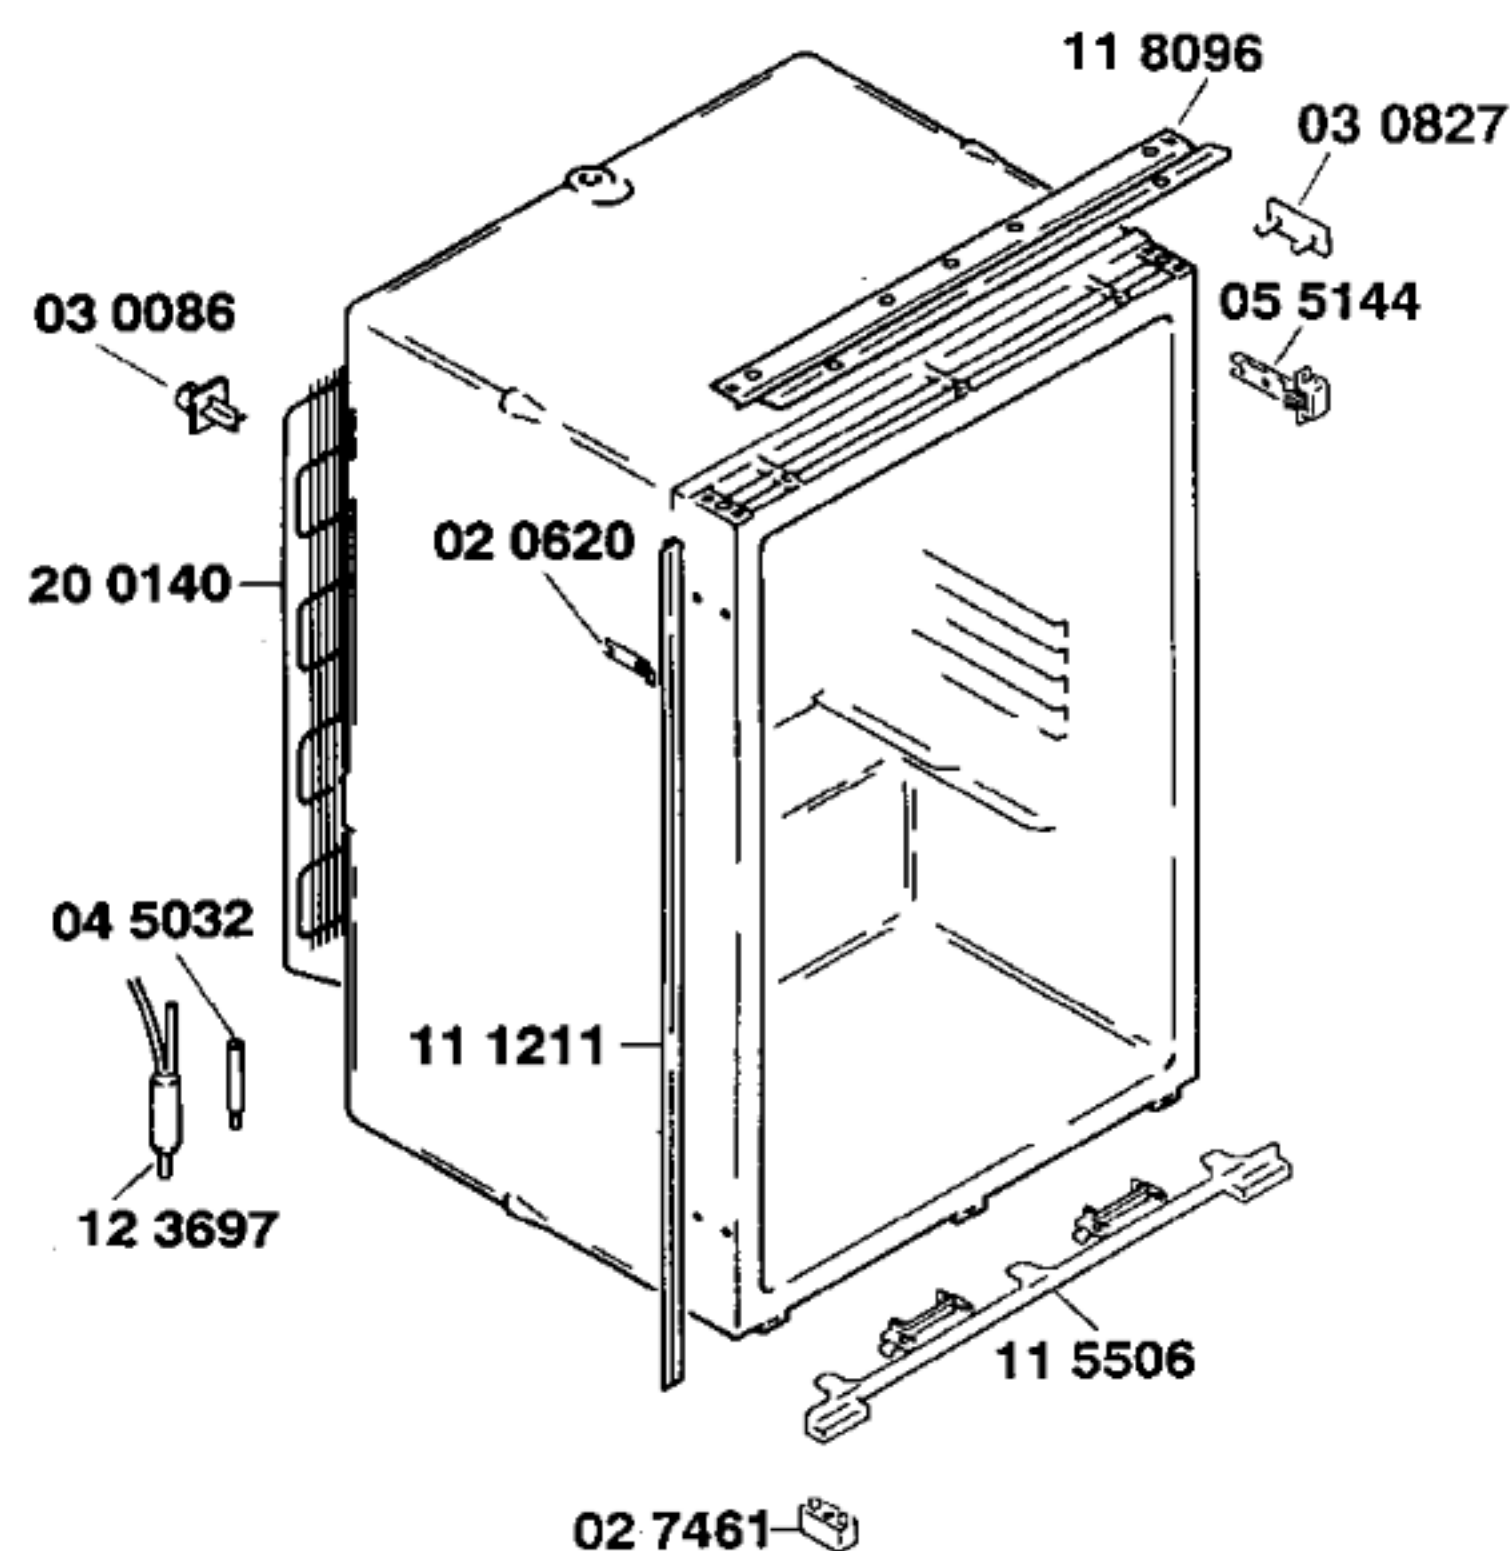

51 2718
Gebrauchsanweisung
(D,GB,F,I,NL,N,DK,SF,E)

51 2304
Montageanleitung
(D,GB,F,I,NL,DK,N,
S,SF,E,P)

08 4136
Schraubensatz



1) 02 9480


Zubehör:

Dekorrahmen
KZ12060, weiss
KZ12170, braun

Ausgleichs-
blenden
braun:
KZ12080, 37mm
KZ12090, 41mm
KZ12100, 56mm

Alu:
KZ12110, 37mm
KZ12120, 41mm
KZ12130, 56mm

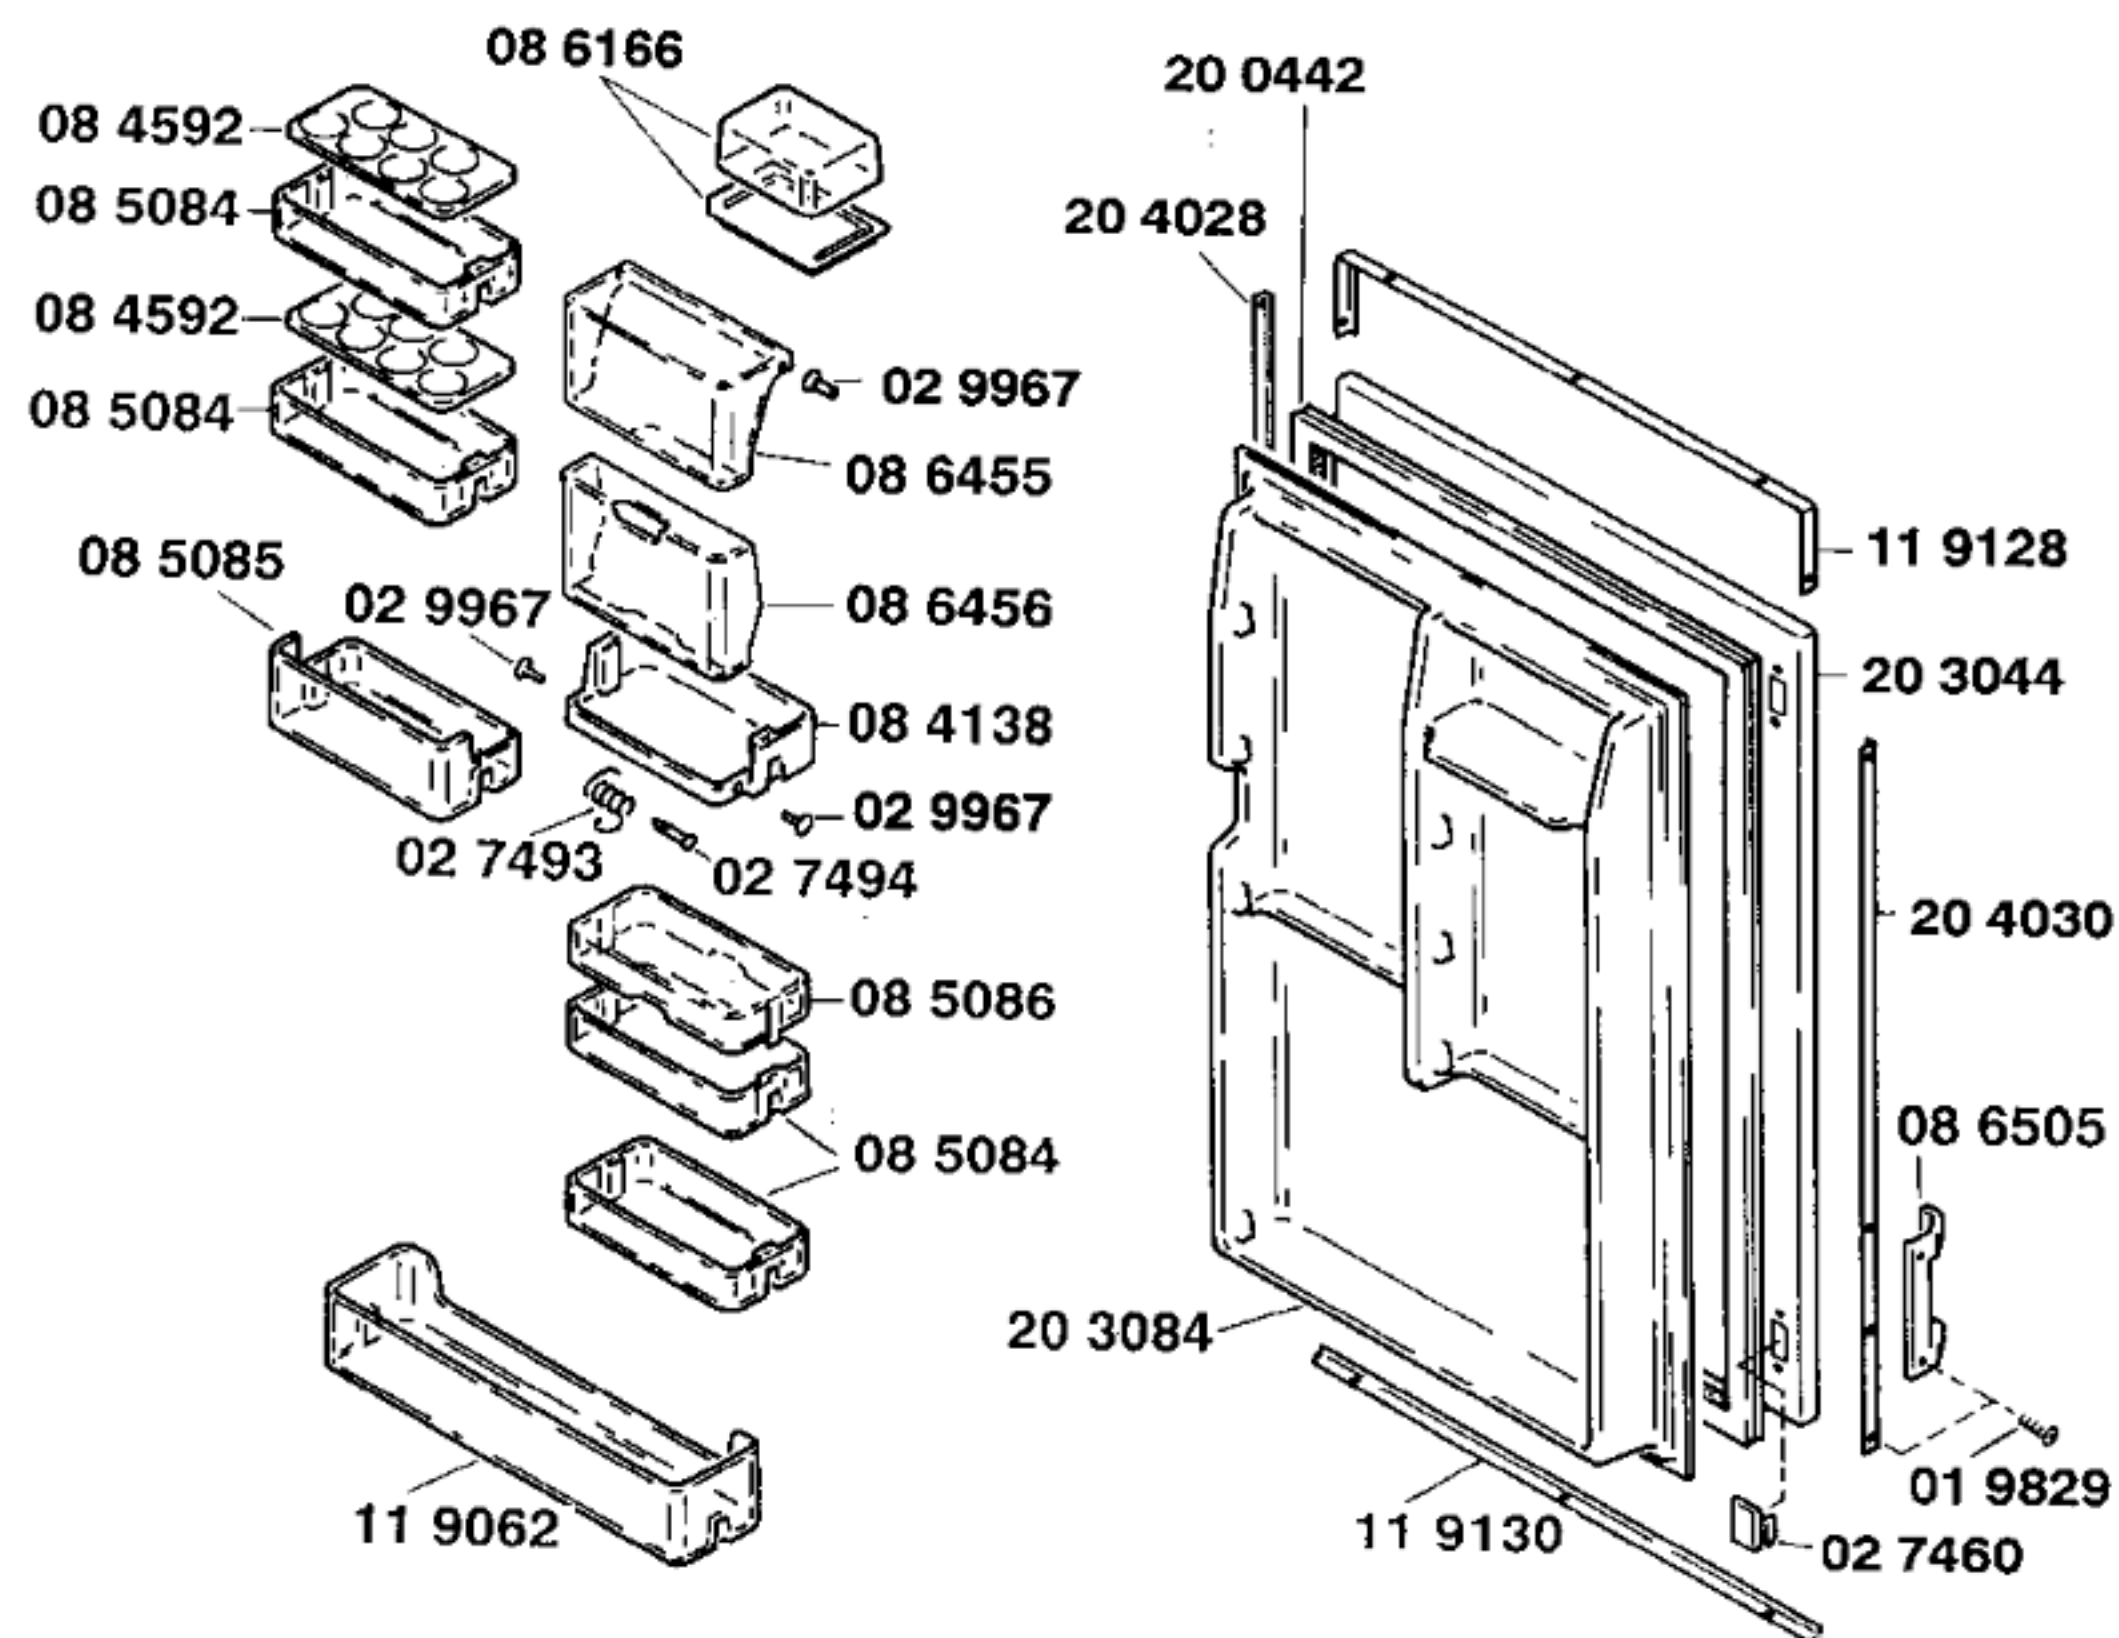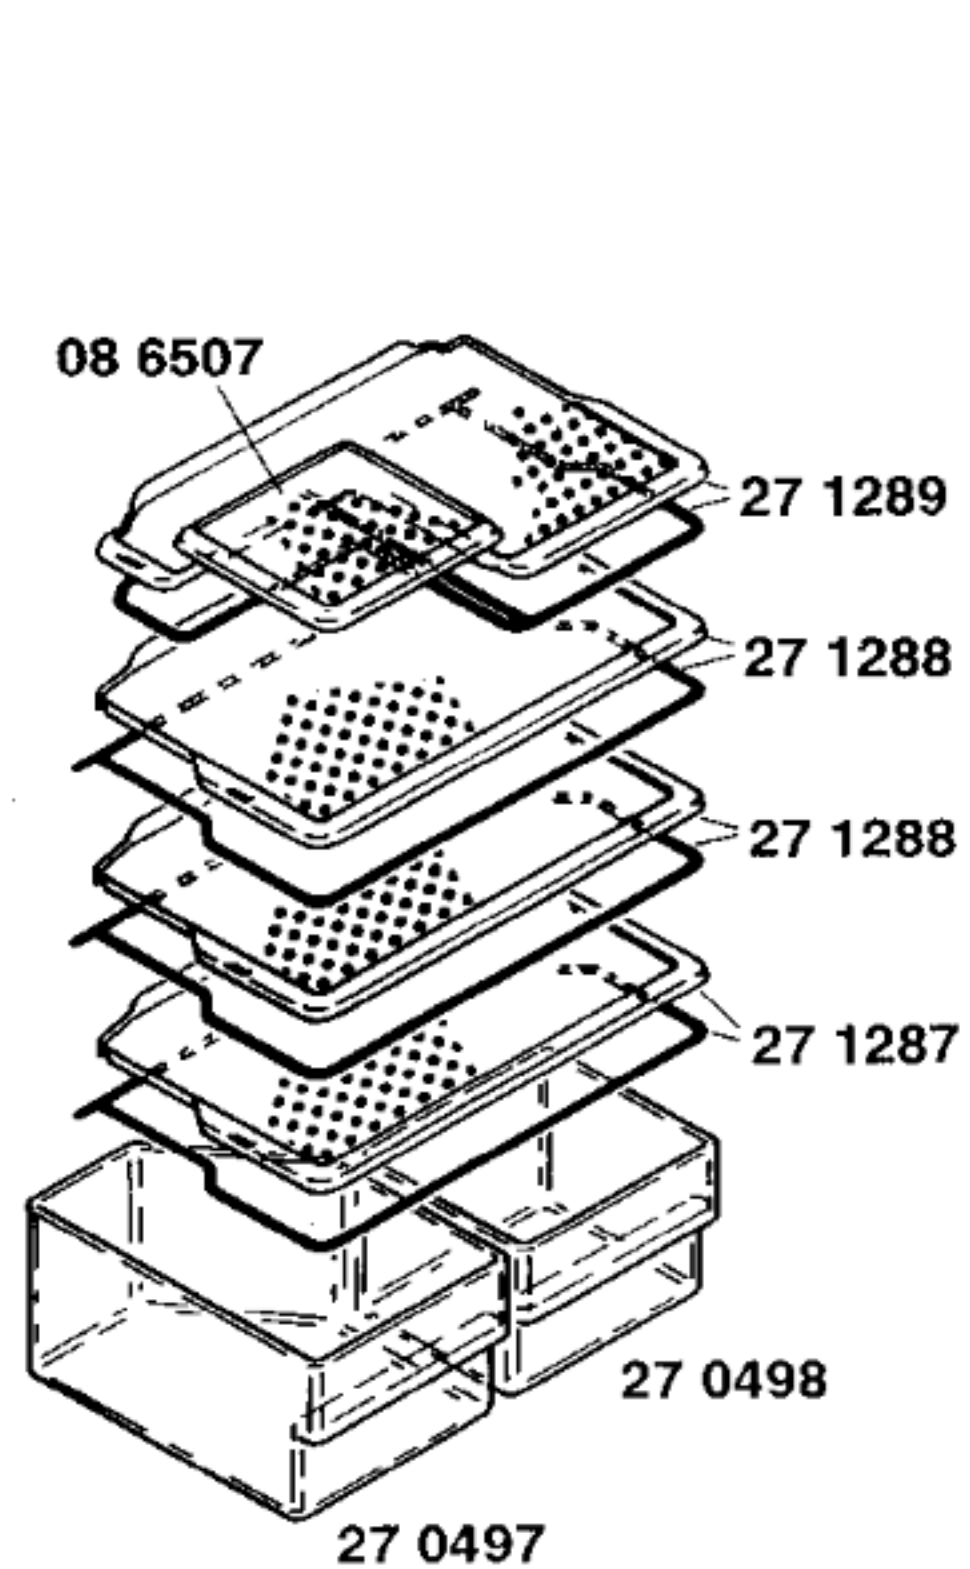

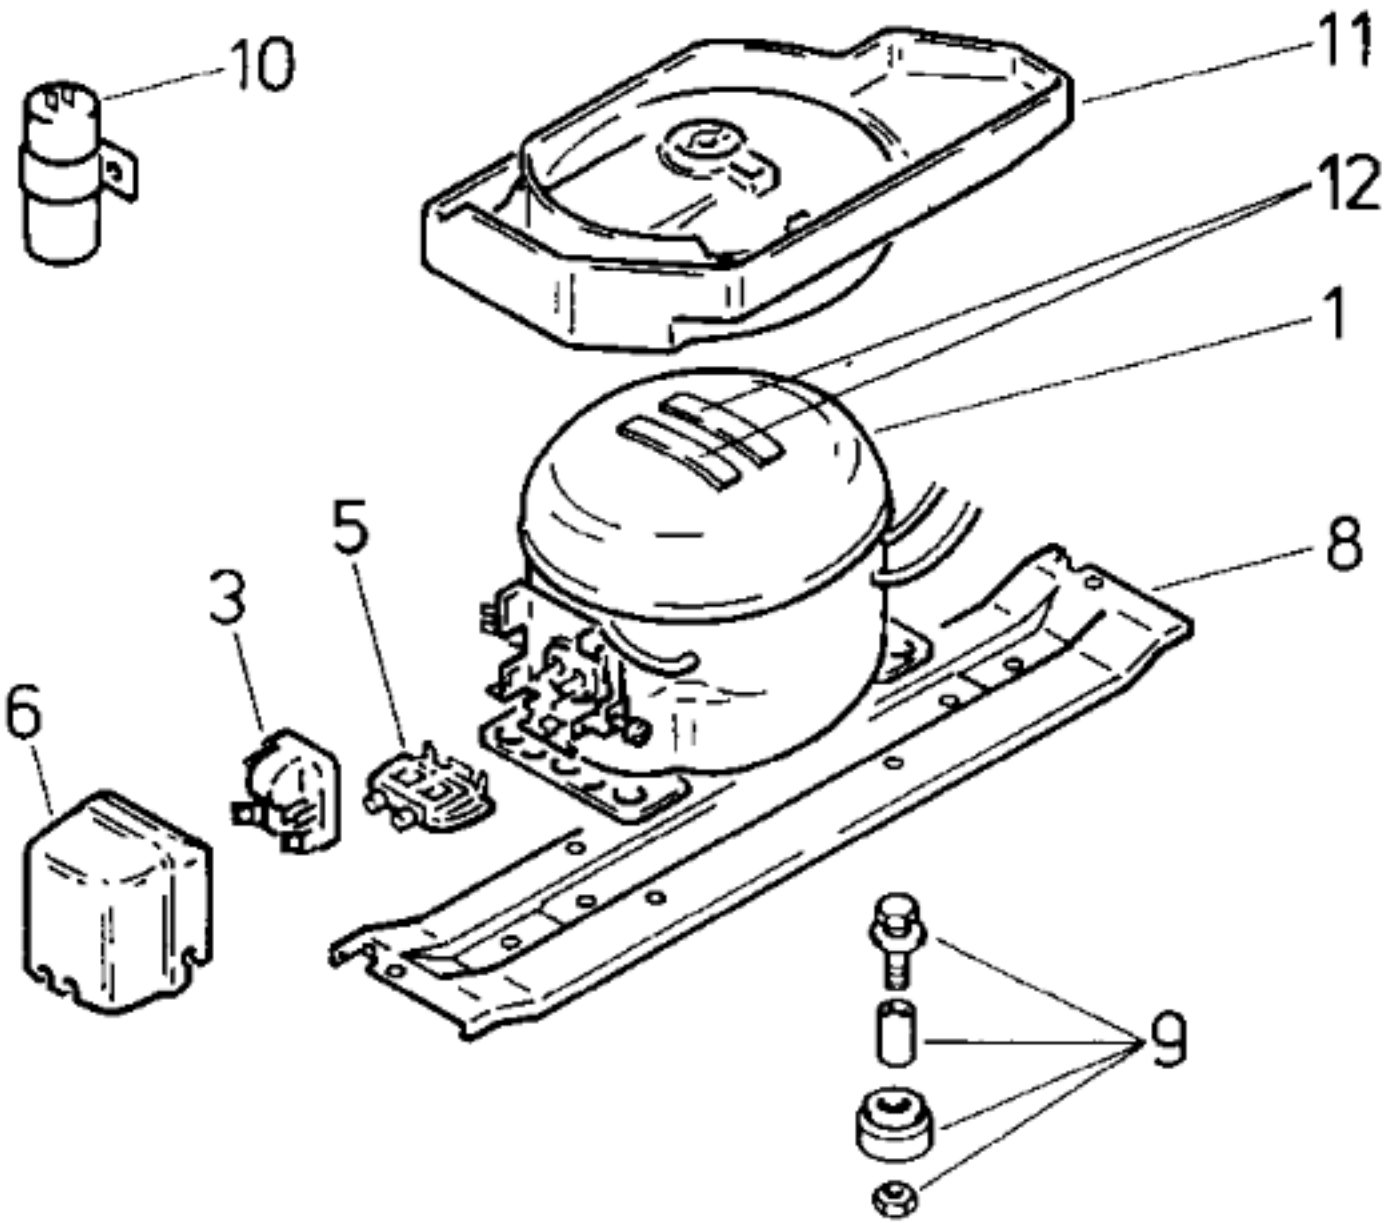

Pos.	EU1		
	Danfoss TL 3 A		
1	14 0080		
2			
3	02 0108		
4			
5	02 7310		
6	05 1413		
7			
8	11 0437		
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TL 3 A		
Förderleistung/Delivery/Débit		l/h	563	
Anlaufstrom/Starting current/Cour. de démarrage		A	7,2	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	31,4	
		Hi/aux Ω	15,5	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 F1		
Reglerstellung/Position			kalt	warm
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	+ 5	+ 5
Valeurs de commutation		„aus“	- 26	- 12
		(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge		R12	g	70
Anschlußwert/Conn.load/Puiss. connectée			W	90
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance			Ω	
Leistung/Power/Puissance			W	
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance			Ω	
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance			Ω	
Spannung/Voltage/Tension			V	